R1.58

14398

Ignition relay

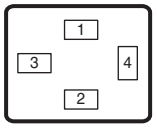

Pin	Circuit	Circuit Function
1	1205 (BK)	Coil ground
2	16 (RD/LG)	Ignition switch to ignition coil "batt" terminal
3	1050 (LG/VT)	Voltage supplied at all times (overload protected)
4	326 (WH/VT)	IGN relay, switched output to Central Junction Box (CJB)

R1.59

14398

Brake applied relay



Pin	Circuit	Circuit Function
1	602 (RD/LG)	Coil ground switched by ABS module
2	10 (LG/RD)	Voltage supplied at all times (overload protected)
3	10 (LG/RD)	Voltage supplied at all times (overload protected)
4	–	not used
5	511 (LG)	Stoplamp (Brake on/off) switch to stoplamps

R2.1

14A067

Indicator flasher relay

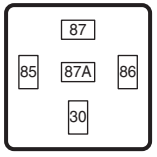

Pin	Circuit	Circuit Function
85	–	Voltage supplied at all times (overload protected)
86	1205 (BK)	Ground
87	44 (LB)	Turn signal flasher, to turn signal switch
87A	385 (WH/RD)	Voltage supplied at all times (overload protected)
30	–	Voltage supplied in start and run (overload protected)

R2.2

14A067

Rear window defrost relay

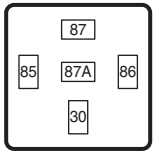

Pin	Circuit	Circuit Function
85	–	Rear window defrost relay, to Central Junction Box (CJB)
86	1009 (OG/YE)	Rear window defrost relay coil
87	186 (BN/LB)	Rear window defrost relay, switched power
87A	–	not used
30	185 (BK)	Voltage supplied at all times (overload protected)

R2.3

14A067

Accessory delay relay

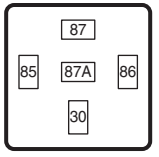

Pin	Circuit	Circuit Function
85	–	Voltage supplied at all times (overload protected)
86	1004 (LB/RD)	Accessory delay relay, contro (Instrument cluster)
87	400 (LB/BK)	Accessory delay relay, switched power,output
	1002 (BK/PK)	Accessory delay relay, switched power,output
87A	–	not used
30	645 (WH/LB)	Voltage supplied at all times (overload protected)

R2.5

14A067

Battery saver relay



Pin	Circuit	Circuit Function
1	–	Voltage supplied at all times (overload protected)
2	1005 (VT/OG)	Coil to switched ground
3	–	Voltage supplied at all times (overload protected)
4	–	not used
5	705 (LG/OG)	Battery saver relay, switched power