C410 (BK)

18C619



F01181

(1) 687 (BK)

14A005

F01031

(1) 186 (BN/LB)

C411

19B113

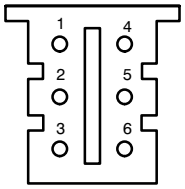

F063535

(1) 822 (BK/LG)
(2) 287 (BK/WH)
(3) 828 (VT/LB)
(4) 822 (BK/LG)
(5) 287 (BK/WH)
(6) 694 (BK/LG)

14A005

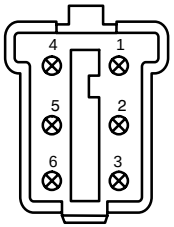

F06353

(1) 822 (BK/LG)
(2) 287 (BK/WH)
(3) 37 (YE)
(4) 822 (BK/LG)
(5) 287 (BK/WH)
(6) 694 (BK/LG)

C423 (BN)

14A005

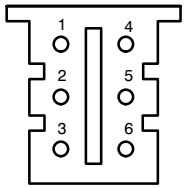

F063535

(1) 828 (VT/LB)
(2) 828 (VT/LB)
(3) 694 (BK/LG)

19B113

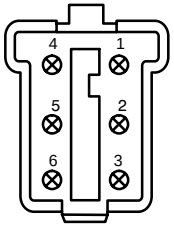

F06353

(4) 829 (WH/VT)
(5) 829 (WH/VT)
(6) 694 (BK/LG)

C428 (WH)

13A625

Luggage compartment lamp (13A756)

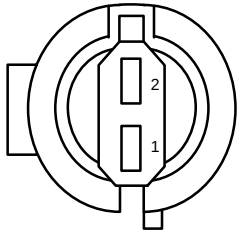

F02647

Pin	Circuit	Circuit function
1	486 (BN/WH)	Luggage compartment lid ajar switch (19A434), signal
2	705 (LG/OG)	on demand, Lighting, Power, signal

C430 (GY)

19B516

Luggage compartment lid release solenoid (5443252)



F03239

Pin	Circuit	Circuit function
1	486 (BN/WH)	Luggage compartment lid ajar switch (19A434), signal
2	84 (VT/YE)	Luggage compartment lid release relay, switched power, output
3	1205 (BK)	Ground

C431

14A005



F04421

(1) 174 (GY/BK)
(2) 172 (LB/RD)
(3) 1205 (BK)
48
(4) 169 (LG/BK)

19B113

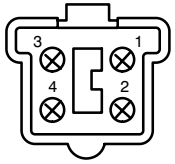

F04423

(1) 174 (GY/BK)
(2) 172 (LB/RD)
(3) 1205 (BK)
(4) 169 (LG/BK)