TRANSMISSION—5R55W—FLUID LEAK FROM CONVERTER HOUSING AREA—VEHICLES BUILT 11/13/2000 THROUGH 4/27/2001	Article No. 01-11-5

FORD: 2002 EXPLORER

MERCURY: 2002 MOUNTAINEER

ISSUE

Some vehicles may exhibit a fluid leak in the converter housing area. This may be caused by an internal issue with the fluid vent assembly.

ACTION

Follow normal diagnosis for fluid leaks as found in the Workshop Manual Section 307-01. Verify that the fluid leak is coming from the vent port located at the inside top of the converter housing. The transmission will have to be removed to determine the leak path. If fluid is found in this area, then the rear vent assembly must be replaced. Follow the procedure as listed below and on the instruction sheet included with the Vent Service Kit (1L2Z-7034-DA), to replace the vent assembly.

SERVICE PROCEDURE

Use the following procedure to determine if fluid is coming from the vent and into the converter housing area.

Remove the transmission as follows.

TRANSMISSION REMOVAL

All Vehicles

NOTE

WHEN THE BATTERY HAS BEEN DISCONNECTED AND RECONNECTED, SOME ABNORMAL DRIVE SYMPTOMS CAN OCCUR WHILE THE VEHICLE RELEARNS ITS ADAPTIVE STRATEGY. THE CUSTOMER NEEDS TO BE NOTIFIED THAT THEY MAY EXPERIENCE SLIGHTLY DIFFERENT UPSHIFTS EITHER (SOFT OR FIRM) AND THIS IS A TEMPORARY CONDITION AND WILL EVENTUALLY RETURN TO NORMAL OPERATING CONDITION.

1. Disconnect the battery ground cable. For additional information, refer to Section 414-01 of the Workshop Manual.

4.6L Vehicles

2. Remove the engine appearance cover.
3. Remove the battery harness bracket nuts. Position the battery harness bracket and battery ground cable from the power steering pump and position aside.
4. Install Engine Lifting Eye (303-D074 LH).

4.0L Vehicles

5. Remove the upper fan shroud bolts.
6. Remove the EGR tube. For additional information, refer to Section 303-08 of the Workshop Manual.
7. Tap the hole located next to the timing chain tensioner on the RH cylinder head (use a 10x1.50 tap and bolt) in order to install the universal lifting eyes.
8. Install the Universal Lifting Eyes (303-D030).

All Vehicles

9. Install a three-bar engine support.
10. Raise and support the vehicle. For additional information, refer to Section 100-02 of the Workshop Manual.

4.0L Vehicles

11. Remove the LH lower fan shroud bolts.
12. Remove the RH lower fan shroud bolts.

4X4 Vehicles

13. Install a jack stand under the transfer case.

4X2 Vehicles

WARNING

SECURE THE TRANSMISSION TO THE TRANSMISSION JACK WITH A SAFETY CHAIN. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.

14. Install the transmission jack under the transmission.

Copyright © 2001 Ford Motor Company

All Vehicles

15. Remove the two (2) heat shield bolts and position RH catalyst heat shield aside.
16. Disconnect the two (2) Heated Oxygen Sensor (HO2S) electrical connectors.
17. Disconnect the two (2) catalyst monitor sensor electrical connectors.
18. Remove the RH heat shield bolts.
19. Remove the RH heat shield bolt and remove the heat shield.
20. Remove the LH heat shield bolt to crossmember.
21. Remove the two (2) plastic shield nuts and the plastic shield on the right side of the crossmember near the fuel tank.

4X2 Vehicles

22. Remove the crossmember-to-transmission tie down cable from transmission bolt.

All Vehicles

23. Remove the two (2) upper crossmember bolts (two on each side).
24. Remove the RH side lower crossmember bolts.
25. Remove the LH side lower crossmember bolts.
26. Remove the transmission support insulator nuts and remove the crossmember.
27. Remove the bolts, springs, flag nuts and separate the muffler from the converter.
28. Using a suitable jack stand, support the exhaust converter assembly.
29. Remove the two (2) bolts and remove the transmission support insulator.
30. Remove the four (4) exhaust converter-to-manifold nuts. Remove the jack stand and lower the converter assembly.
31. Remove the rear driveshaft. For additional information, refer to Section 205-01 of the Workshop Manual.

4X4 Vehicles

32. Remove the front driveshaft. For additional information, refer to Section 205-01 of the Workshop Manual.

All Vehicles

33. Remove the shift cable and bracket.
34. Disconnect the Turbine Shaft Speed (TSS) sensor, Output Shaft Speed (OSS) sensor, and Intermediate Shaft Speed (ISS) sensor electrical connectors.

NOTE
CLEAN THE AREA AROUND CONNECTOR TO PREVENT CONTAMINATION OF THE SOLENOID BODY CONNECTOR.

35. Remove the screw from the solenoid body connector and disconnect the connector.
36. Disconnect the harness retainers.
37. Move the rubber boot back to gain access to the connector.
38. Disconnect the digital Transmission Range (TR) sensor connector.
39. Disconnect the LH Heated Oxygen Sensor (HO2S) and harness clip from transmission.
40. Disconnect the LH catalyst monitor connector from transmission.

4X4 Vehicles

41. If equipped, disconnect the shift motor electrical connector.

All Vehicles

42. Disconnect the RH catalyst monitor connector and the fuel line from the bracket.
43. Disconnect the RH Heated Oxygen Sensor (HO2S) from transmission.

4X4 Vehicles

WARNING
SECURE THE TRANSMISSION TO THE TRANSMISSION JACK WITH A SAFETY CHAIN. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.

44. Support the transmission with a transmission jack.

4X4 Vehicles

45. Remove the jack stand from the transfer case.

4.6L Vehicles

46. Remove front crossmember.

47. Remove the starter.
48. Remove the flexplate access cover.
49. Remove the transmission cover to access the torque converter nuts.

NOTE
MAKE AN IDENTIFYING MARK ON THE NUT, STUD, AND ADAPTER PLATE TO ALLOW FOR CORRECT INSTALLATION.

50. Remove four (4) torque converter nuts.

4.0L Vehicles

51. Remove the two (2) starter bolts and position the starter aside.
52. Remove the flexplate access cover.

NOTE
MAKE AN IDENTIFYING MARK ON THE NUT, STUD, AND ADAPTER PLATE TO ALLOW FOR CORRECT INSTALLATION.

53. Remove four (4) torque converter nuts.
54. Remove the lower transmission-to-engine bolts.

All Vehicles

55. Lower transmission to gain additional access.

NOTE
DO NOT DAMAGE THE COOLER TUBES.

56. Disconnect the transmission cooler tubes.

4.6L Vehicles

57. Remove seven (7) engine-to-transmission retaining bolts.

4.0L Vehicles

58. Remove six (6) engine-to-transmission retaining bolts and position the fuel line bracket out of the way.

All Vehicles

59. Lower the transmission assembly, with transfer case if equipped, from the vehicle.
60. Remove the torque converter and inspect the converter housing for the leak path. If the leak is coming from the converter housing pocket near the front vent port, the rear vent assembly will have to be replaced. Refer to Figures 1, 2, and 3.
61. If the leak is determined to be coming from a location other than the front vent port, follow normal Workshop Manual procedures for diagnosis and repair of the particular component. Refer to Figure 4.
62. To replace the rear vent assembly, order Vent Kit 1L2Z-7034-DA and follow the instruction sheet included with the kit. Use care not to damage the original vent during removal. If damaged upon removal, the extension housing may have to be removed in order to extract the broken pieces.
63. After installing the NEW rear vent assembly, reinstall the converter. Use caution not to damage the converter hub seal, converter or front pump.
64. Using the procedures that follow, reinstall the transmission.

TRANSMISSION INSTALLATION

All Vehicles

WARNING
SECURE THE TRANSMISSION TO THE TRANSMISSION JACK WITH A SAFETY CHAIN. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.

1. Raise and position the transmission.

4.6L Vehicles

NOTE
ALIGN THE FLEXPLATE-TO-CONVERTER MARKS MADE AT REMOVAL.

2. Install seven (7) engine-to-transmission retaining bolts. Torque to 48 N•m (35 lb-ft).
3. Install four (4) torque converter nuts. Torque to 38 N•m (28 lb-ft).
4. Install the transmission cover.
5. Install the flexplate access cover. Torque to 34 N•m (25 lb-ft).
6. Install the starter motor and three (3) bolts. Torque to 24 N•m (18 lb-ft).

4.0L Vehicles

NOTE
ALIGN THE FLEXPLATE-TO-CONVERTER MARKS MADE AT REMOVAL.

7. Position the fuel line bracket; align the marks made during removal and install engine-to-transmission retaining bolts. Torque to 48 N•m (35 lb-ft).
8. Install four (4) torque converter nuts. Torque to 38 N•m (28 lb-ft).
9. Install the starter motor and two (2) bolts. Torque to 24 N•m (18 lb-ft).

All Vehicles

10. Raise the transmission into place.
11. Install the lower transmission-to-engine bolts. Torque to 48 N•m (35 lb-ft).

4.6L Vehicles

12. Install the front crossmember. Torque to 70 N•m (52 lb-ft).

4X4 Vehicles

13. Install a jack stand under the transfer case.
14. Remove the transmission jack.

All Vehicles

NOTE
USE CARE NOT TO BEND OR FORCE THE COOLER TUBES, OTHERWISE DAMAGE TO THE COOLER TUBES AND THE TRANSMISSION MAY RESULT.

15. Install the transmission cooler tubes. Torque to 30 N•m (22 lb-ft).
16. Connect the digital Transmission Range (TR) sensor connector.
17. Move the rubber boot back over the connector.
18. Connect the left side Heated Oxygen Sensor (HO2S) to the bracket.
19. Install the wire harness and install the retainers.

NOTE
DAMAGE WILL OCCUR TO THE SOLENOID BODY ASSEMBLY IF THE SCREW IS TIGHTENED ABOVE SPECIFICATION.

NOTE
ALWAYS INSTALL NEW O-RING SEALS ON VEHICLE HARNESS CONNECTOR.

NOTE
CLEAN THE AREA AROUND CONNECTOR TO PREVENT CONTAMINATION OF THE SOLENOID BODY CONNECTOR.

NOTE
USE PETROLEUM JELLY TO LUBRICATE THE O-RING SEALS TO AID IN THE INSTALLATION PROCESS.

20. Install and lubricate new O-ring seals on the transmission connector and connect the connector. Torque to 5 N•m (44 lb-in).
21. Connect the LH catalyst monitor connector to the transmission.
22. Connect the LH Heated Oxygen Sensor (HO2S) to transmission.
23. Connect the fuel lines and the RH catalyst monitor to the bracket, connector and transmission.
24. Connect the RH Heated Oxygen Sensor (HO2S) to the transmission.
25. Connect the Turbine Shaft Speed (TSS) sensor, Output Shaft Speed (OSS) sensor, and Intermediate Shaft Speed (ISS) sensor electrical connectors.
26. Install the shift cable and bracket. Torque to 40 N•m (30 lb-ft).
27. Install the catalytic converter assembly and RH catalyst heat shield on a jack stand and loosely install the four (4) exhaust converter-to-manifold nuts.
28. Loosely install the transmission support insulator and bolts.
29. Using a new gasket, install the bolts, springs, and flag nuts.
30. Tighten the four (4) exhaust converter-to-manifold nuts. Torque to 40 N•m (30 lb-ft).
31. Tighten the transmission support insulator and bolts. Torque to 90 N•m (66 lb-ft).
32. Remove the jack stand from under the catalytic converter assembly.
33. Connect the two (2) Heated Oxygen Sensor (HO2S) electrical connectors.

34. Connect the two (2) catalyst monitor sensor electrical connectors.
35. Install bolts for RH heat shield. Torque to 20 N•m (15 lb-ft).
36. Position the crossmember in place and loosely install the two (2) nuts to hold up the crossmember.
37. Install the RH side crossmember bolts. Torque to 70 N•m (52 lb-ft).
38. Install the LH side crossmember bolts. Torque to 70 N•m (52 lb-ft).

4X2 Vehicles

39. Install the crossmember-to-transmission tie down cable to transmission bolt. Torque to 48 N•m (35 lb-ft).
40. Install the two (2) upper crossmember bolts (two on each side). Torque to 70 N•m (52 lb-ft).
41. Tighten the rear transmission support nuts. Torque to 90 N•m (66 lb-ft).
42. Remove the transmission jack.
43. Install the RH heat shield and bolts. Torque to 20 N•m (15 lb-ft).
44. Install the LH heat shield bolt. Torque to 70 N•m (52 lb-ft).
45. Install the plastic shield on the right side of the crossmember near the fuel tank. Torque to 20 N•m (15 lb-ft).

4X4 Vehicles

46. If equipped, connect the shift motor electrical connector.
47. Install the rear driveshaft. For additional information, refer to Section 205-01 of the Workshop Manual.

4X4 Vehicles

48. Install the front driveshaft. For additional information, refer to Section 205-01 of the Workshop Manual.

4.0L Vehicles

49. Install the LH lower fan shroud bolts.
50. Install the RH lower fan shroud bolts.

All Vehicles

51. Lower the vehicle.

4.0L Vehicles

52. Install the upper fan shroud bolts.

All Vehicles

53. Remove the three-bar engine support.
54. Remove the lifting hook.

4.6L Vehicles

55. Position the battery harness bracket, battery ground cable at the power steering pump, and install the battery harness bracket nuts. Torque the large nut to 13 N•m (10 lb-ft), torque the small nut to 6 N•m (53 lb-in).
56. Install the engine appearance cover.

4.0L Vehicles

57. Install the EGR tube. For additional information, refer to Section 303-08 of the Workshop Manual.

All Vehicles

NOTE
WHEN THE BATTERY HAS BEEN DISCONNECTED AND RECONNECTED, SOME ABNORMAL DRIVE SYMPTOMS CAN OCCUR WHILE THE VEHICLE RELEARNS ITS ADAPTIVE STRATEGY. THE CUSTOMER NEEDS TO BE NOTIFIED THAT THEY MAY EXPERIENCE SLIGHTLY DIFFERENT UPSHIFTS (EITHER SOFT OR FIRM) AND THIS IS A TEMPORARY CONDITION AND WILL EVENTUALLY RETURN TO NORMAL OPERATING CONDITION.

58. Connect the battery ground cable. For additional information, refer to Section 414-01 of the Workshop Manual.
59. Using the Workshop Manual, perform a fluid level check, adding fluid only if required.

4X4 Vehicles

60. Check the fluid level on the transfer case.
61. Verify that the shift cable is correctly adjusted. For additional information, refer to Section 307-05 of the Workshop Manual.
62. Check the operation of the transmission and inspect for leaks.

Article No. 01-11-5 Cont'd.

PART NUMBER	PART NAME
1L2Z-7034-DA	Vent Kit - Transmission

OTHER APPLICABLE ARTICLES: NONE
WARRANTY STATUS: Eligible Under The Provisions Of Bumper To Bumper Warranty Coverage

OPERATION	DESCRIPTION	TIME
011105A	Replace Rear Transmission Vent Assembly (Includes Time To Remove And Install Transmission) - 4.0L 4X2	4.4 Hrs.
011105B	Replace Rear Transmission Vent Assembly (Includes Time To Remove And Install Transmission And Transfer Case) - 4.0L 4X4	4.7 Hrs.
011105C	Replace Rear Transmission Vent Assembly (Includes Time To Remove And Install Transmission) - 4.6L 4X2	4.4 Hrs.
011105D	Replace Rear Transmission Vent Assembly (Includes Time To Remove And Install Transmission And Transfer Case) - 4.6L 4X4	4.8 Hrs.

DEALER CODING

BASIC PART NO.	CONDITION CODE
7J082	42

OASIS CODES: 504000, 510000

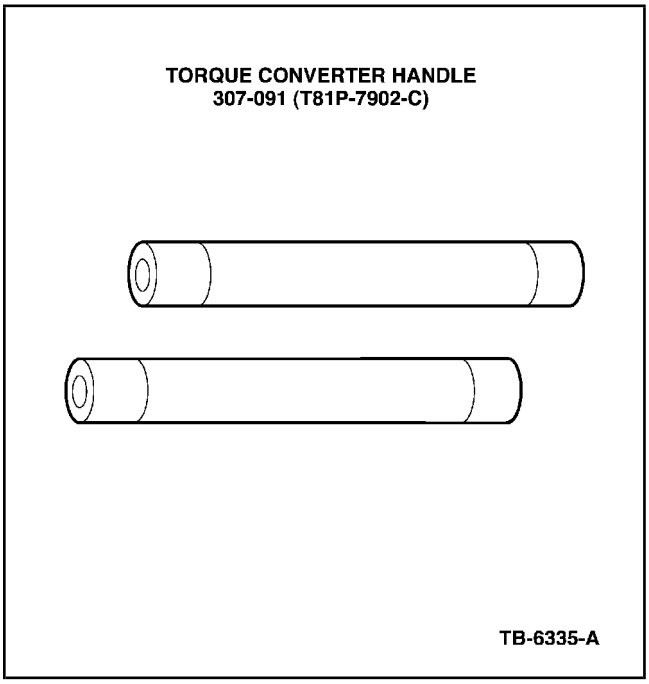

Figure 1 - Article 01-11-5

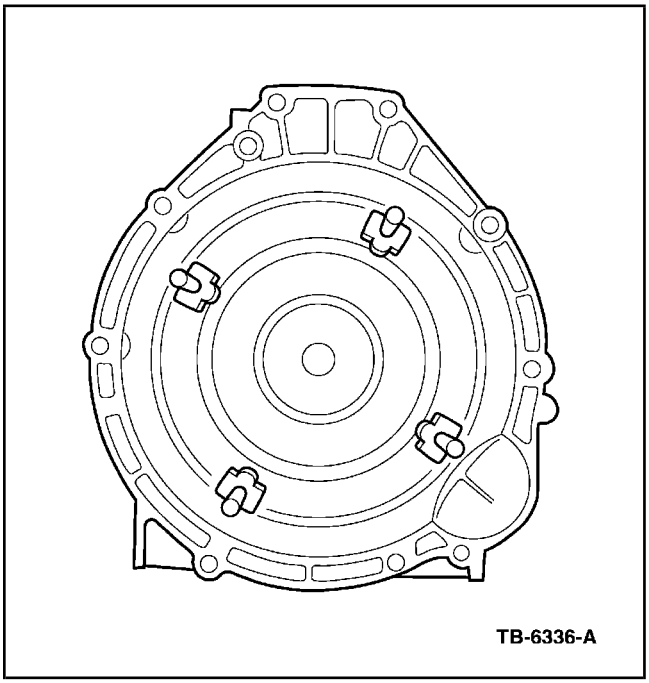

Figure 2 - Article 01-11-5

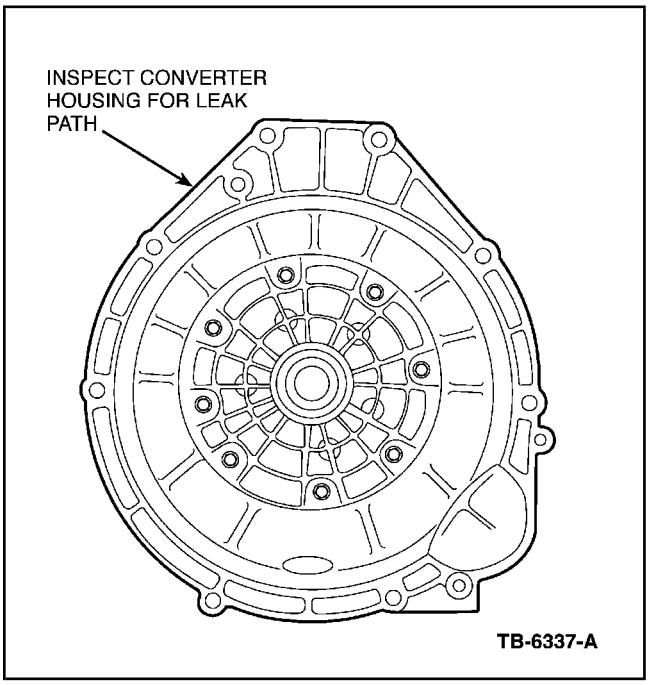

Figure 3 - Article 01-11-5

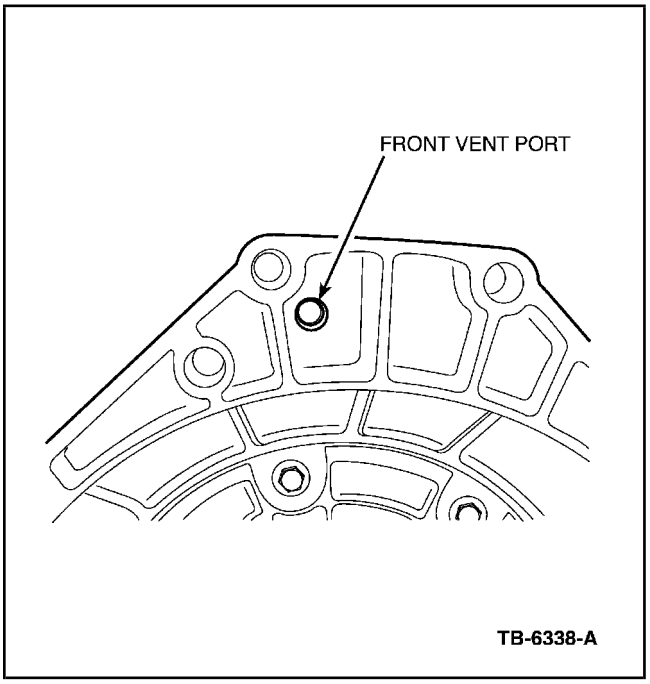

Figure 4 - Article 01-11-5