SPEED CONTROL CABLE INSPECTION AND REPLACEMENT

AFFECTED VEHICLES: **CERTAIN 2000 FOCUS EQUIPPED WITH 2.0L ZETEC ENGINE AND AUTOMATIC TRANSAXLE**

TABLE OF CONTENTS

OVERVIEW ..... Page 1
SPEED CONTROL CABLE INSPECTION ..... Page 2
SPEED CONTROL CABLE REPLACEMENT ..... Page 3


OVERVIEW

Certain Focus vehicles have been assembled with speed control cables that may be too long. This procedure will provide the detail to correctly identify an affected speed control cable and instruct you on how to replace the cable, if required.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/00

SPEED CONTROL CABLE INSPECTION

1. Position the throttle body lever to wide-open throttle. Inspect the end of the speed control cable as shown in the illustration. See Figure 1.
   - If any portion of the cable end slug is flush with or extends past the flat end of the plastic slide cover, the cable must be replaced. Perform the Speed Control Cable Replacement on Page 3.
   - If no portion of the cable end slug is flush with or extends past the flat end of the plastic slide cover, no further service is required.

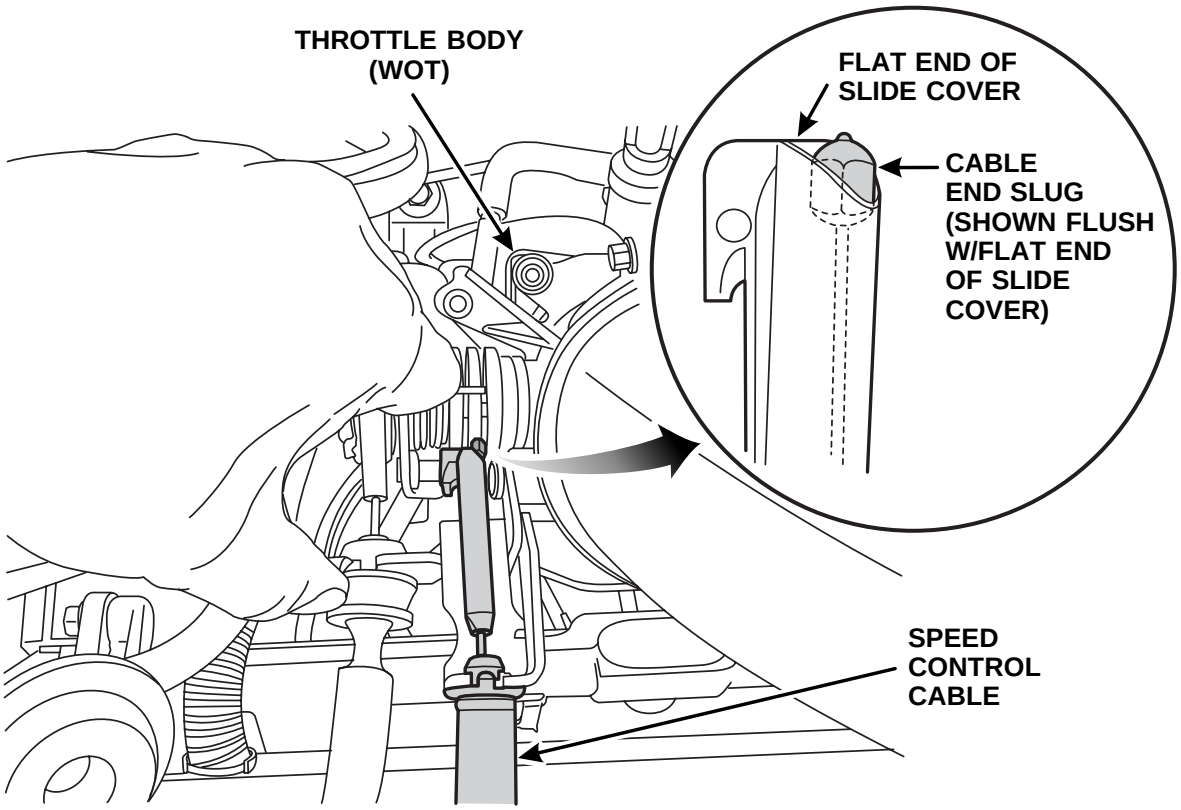

NOTE: THROTTLE BODY MUST BE AT WIDE OPEN THROTTLE (WOT) FOR INSPECTION

00S30A

FIGURE 1

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/00

SPEED CONTROL CABLE REPLACEMENT

1. Remove the air cleaner outlet tube and air cleaner as an assembly.
2. Disconnect the speed control cable from the throttle body and detach the cable from the throttle body bracket. See Figure 2.

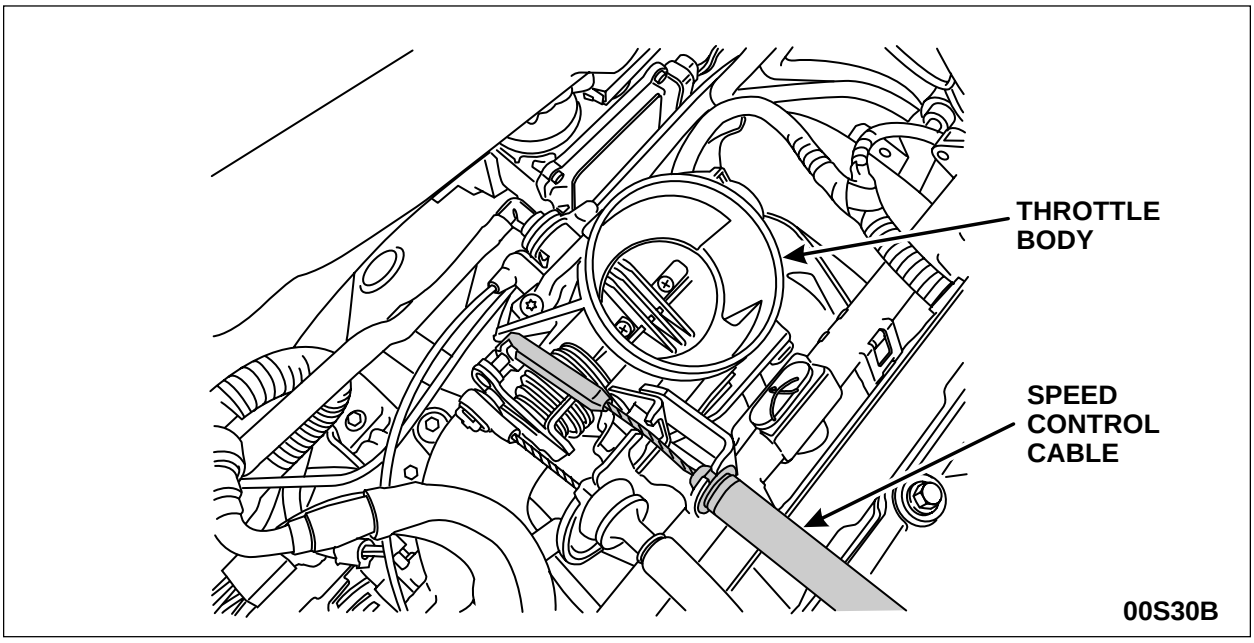


FIGURE 2

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/00

3. Remove the speed control cable cover from the speed control servo. See Figures 3 and 4.
   a. Press the cover locking arm.
   b. Rotate the cover counterclockwise.
   c. Lift up on the cover.

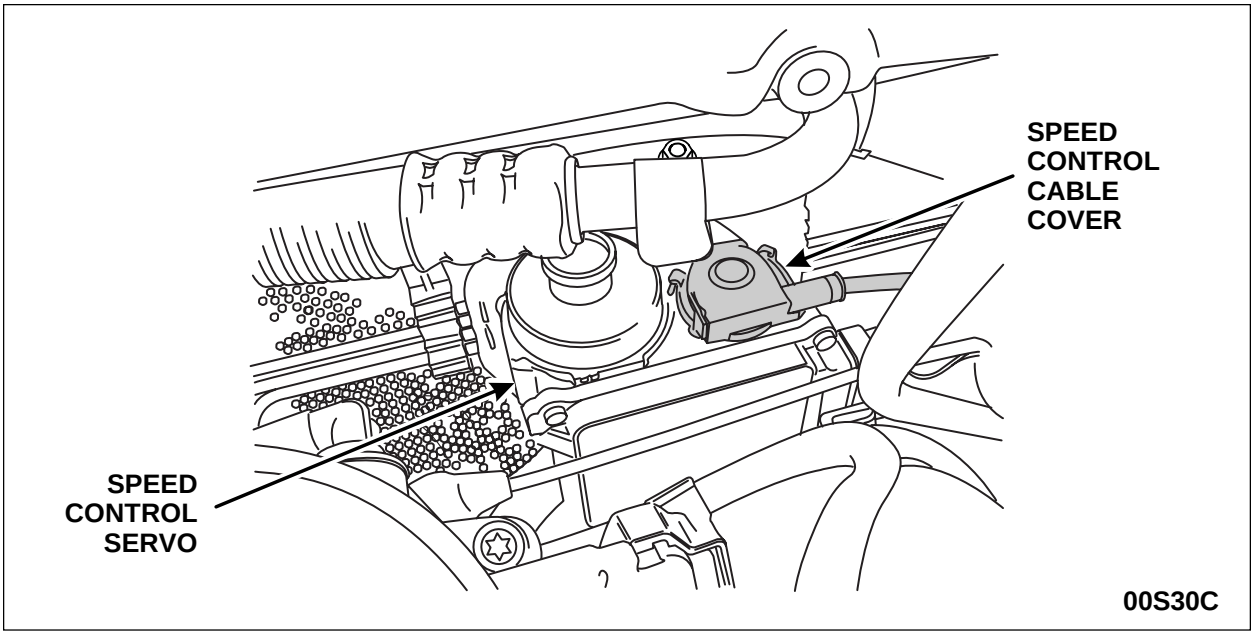


FIGURE 3

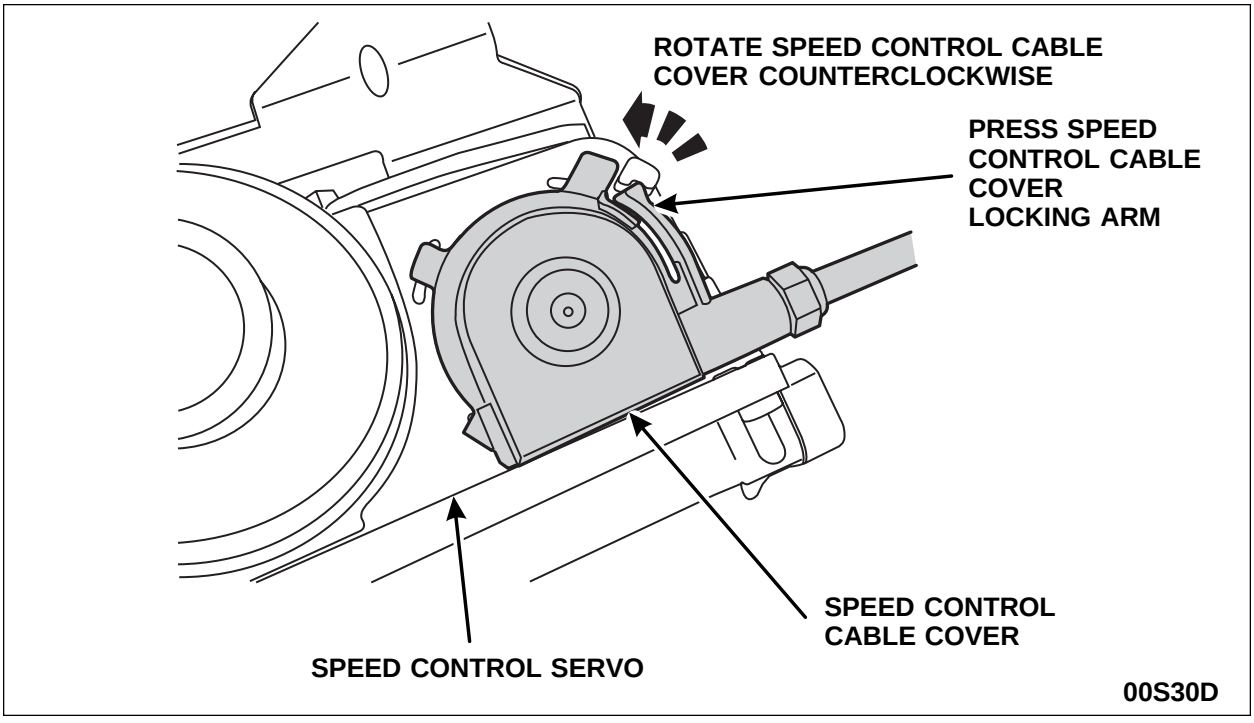


FIGURE 4

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/00

4. Remove the speed control cable from the pulley by pushing the cable out of the pulley. See Figure 5.

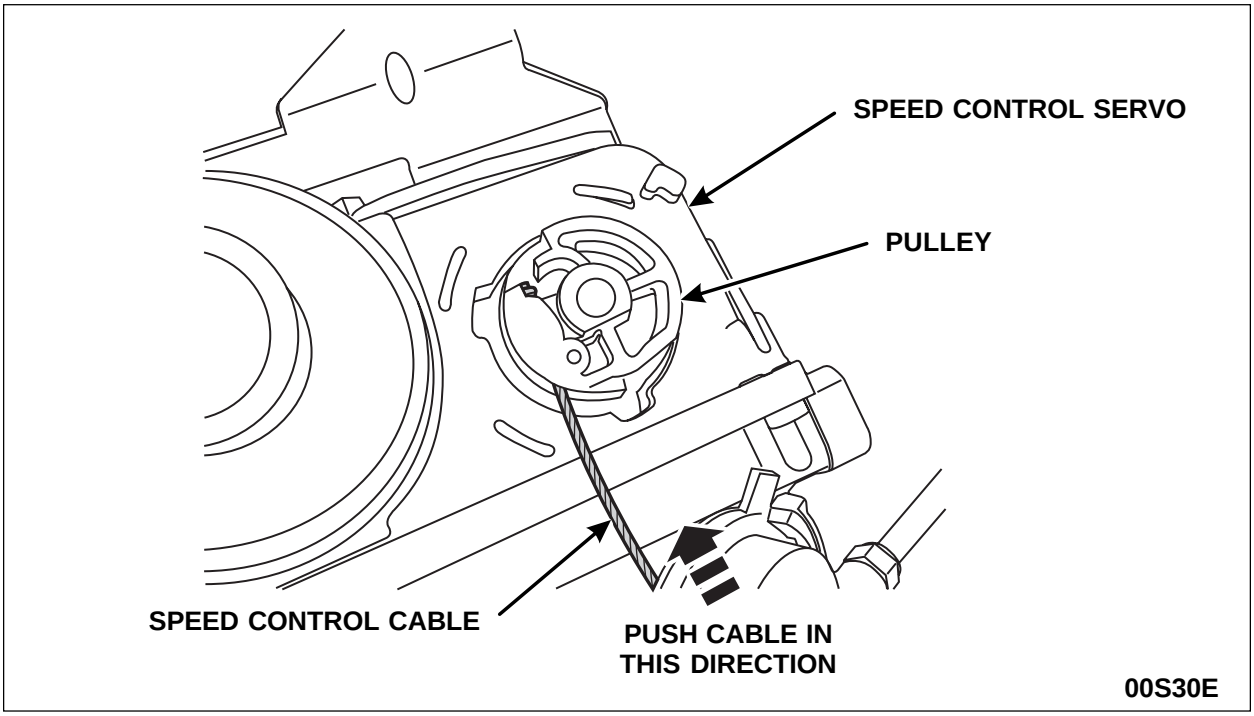


FIGURE 5

5. Insert the ***new*** cable end into the pulley and pull the cable to lock it into position.
6. Align the cable cover tabs with the slots in the servo housing. Insert the cover into the servo, then push down and rotate clockwise until the locking arm engages.
7. Attach the speed control cable to the throttle body bracket and connect the speed control cable to the throttle body.
8. Install the air cleaner outlet tube and air cleaner assembly.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/00