RADIO—REPLACEMENT SPEAKER HAS THREE MOUNTING HOLES INSTEAD OF FOUR—INSTALLATION TIPS

Article No. 02-20-1

FORD: 1995-2000 CONTOUR

MERCURY: 1995-2000 MYSTIQUE

ISSUE

When necessary to replace a door speaker, the new replacement speaker will have three mounting holes instead of four. The four hole speaker is no longer available.

ACTION

When replacing a door speaker, 2 of the original mounting points will align with the new speaker and 1 additional hole will need to be made to mount the new speaker to the door.

SERVICE PROCEDURE

1. Place the window in the up position.
2. Align the two bottom holes on the speaker with the 2 bottom original holes on the inner door panel (Figure 1).
3. Fasten the bottom two screws into position (Figure 1).
4. Using 1 of the original screws, attach the third mounting screw into the top locator hole using a power screw gun. The screw is a metal, self-tapping screw and will cut through the inner door panel sheet metal (Figure 1).
5. Re-assemble the door trim

OTHER APPLICABLE ARTICLES: NONE
WARRANTY STATUS: INFORMATION ONLY
OASIS CODES: 207000, 290000

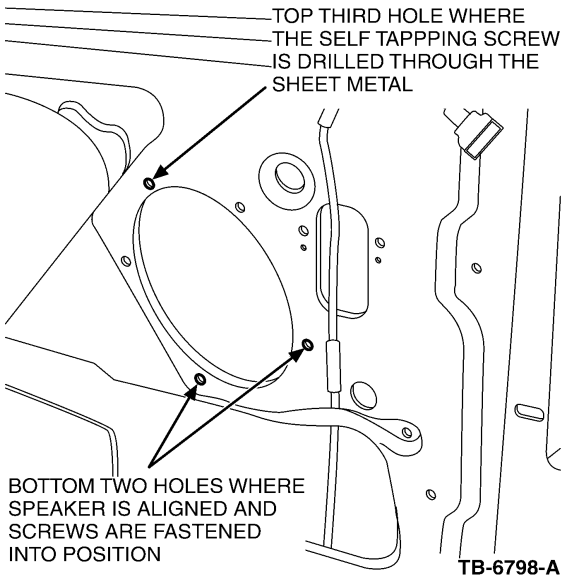

Figure 1 - Article 02-20-1

NOTE: The information in Technical Service Bulletins is intended for use by trained, professional technicians with the knowledge, tools, and equipment to do the job properly and safely. It informs these technicians of conditions that may occur on some vehicles, or provides information that could assist in proper vehicle service. The procedures should not be performed by "do-it-yourselfers". Do not assume that a condition described affects your car or truck. Contact a Ford, Lincoln, or Mercury dealership to determine whether the Bulletin applies to your vehicle.

Copyright © 2002 Ford Motor Company