AIR BRAKE HOSE REROUTING

AFFECTED VEHICLES: **CERTAIN 2000-2002 MODEL YEAR F-650 AND F-750 MEDIUM DUTY TRUCKS BUILT AT THE CUAUTITLAN ASSEMBLY PLANT**

OVERVIEW

This document details the procedure for rerouting the primary (green) and secondary (red) air supply hoses at the tractor protection valve.

SERVICE PROCEDURE

1. Place wheel chocks in front of and behind the driver side rear wheels.

> ***WARNING!***
>
> ***WHEN DRAINING THE AIR SYSTEM, DO NOT LOOK INTO THE AIR JETS OR DIRECT THEM TOWARD A PERSON AS DIRT OR SLUDGE PARTICLES CAN BE CARRIED IN THE AIR STREAM. KEEP HANDS AWAY FROM BRAKE CHAMBER PUSH RODS AND SPRING ACTUATORS AS THE EMERGENCY BRAKES APPLY AUTOMATICALLY FROM LOSS OF PRESSURE. DO NOT DISCONNECT HOSES THAT CONTAIN AIR PRESSURE SINCE THEY WILL WHIP AROUND AS AIR ESCAPES FROM THE LINE.***

2. Drain the vehicle's air system to 0 kpa (0 psi).
   - For vehicles without automatic moisture ejector valves, open the draincocks on the primary and secondary reservoirs.
   - For vehicles with automatic moisture ejector valves, use a suitable tool to depress the stem on the bottom of the valve.

Ford Motor Company

CPR © 2002 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
01/02

3. **WARNING: MAKE SURE THE AIR DELIVERY AND SUPPLY SYSTEMS ARE COMPLETELY EXHAUSTED BEFORE PROCEEDING. THE AIR SYSTEM IS UNDER HIGH PRESSURE AND COULD BLOW DEBRIS AROUND WITH EXCESSIVE FORCE.**

   NOTE: The tractor protection valve is located on the inside of the left side frame rail under the driver seat.

   Remove the 3/8" NPT plug from the primary air port at the top of the tractor protection valve. See Figure 1.

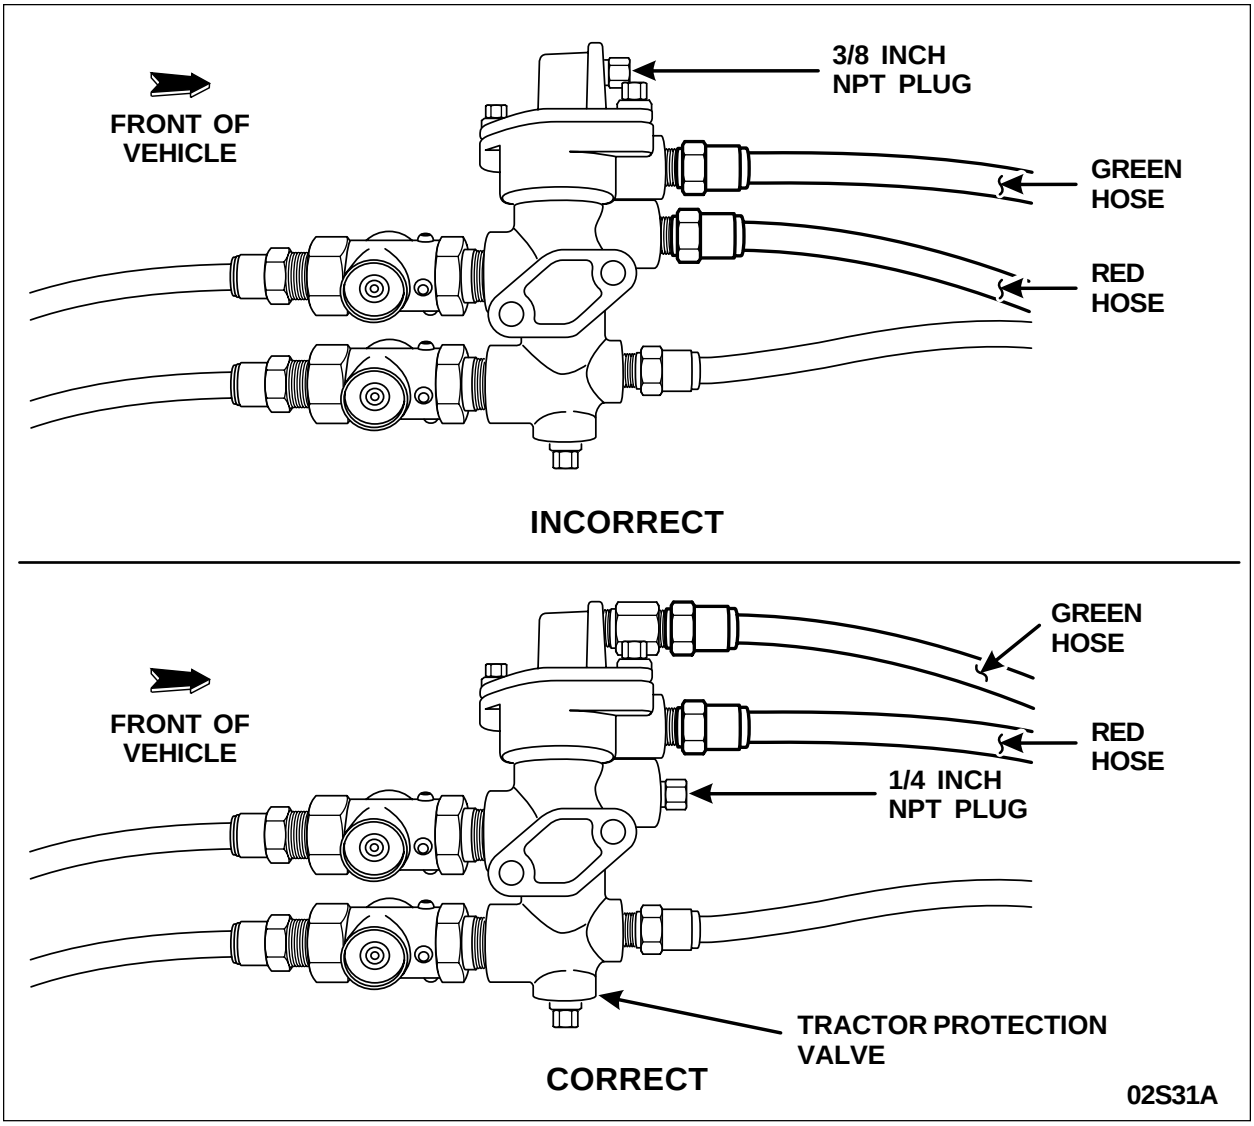

FIGURE 1

Ford Motor Company
CPR © 2002 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
01/02

4. Install the supplied extension into the primary air port. Tighten the threaded extension by hand, and then tighten it an additional two (2) revolutions.
5. Install the supplied quick release fitting into the threaded extension. Tighten the quick release fitting by hand, and then tighten it an additional two (2) revolutions.
6. **CAUTION: If cutting the air hose is necessary for proper fit, do not allow the air hose to become deformed. Use a suitable, sharp hose or tubing cutter.**

   Disconnect the green primary air supply hose from its quick release fitting by pushing in on the quick release collar and pulling the hose out. Then, insert the green hose into the fitting that was just installed in the primary air port. Pull on the hose to make sure it is securely installed. See Figure 2.

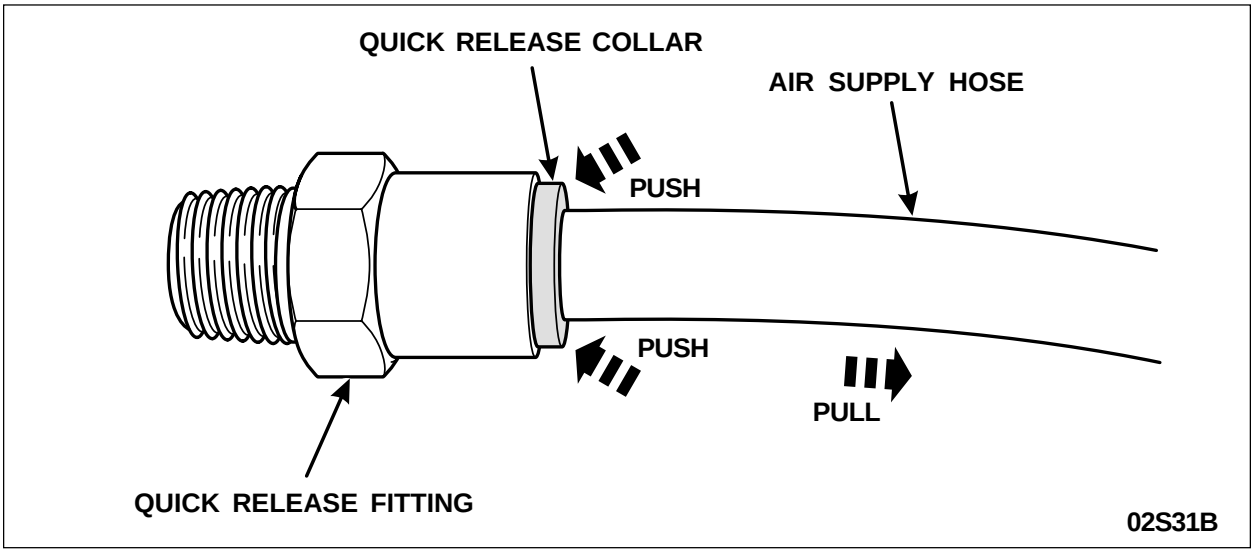

FIGURE 2

7. Disconnect the red secondary air supply hose from its quick release fitting and remove the fitting from the tractor protection valve.
8. Install the supplied 1/4" NPT plug in place of the quick release fitting removed in Step 7. Tighten the 1/4" NPT plug by hand, and then tighten it an additional two (2) revolutions.
9. **CAUTION: If cutting the air hose is necessary for proper fit, do not allow the air hose to become deformed. Use a suitable, sharp hose or tubing cutter.**

   Insert the red hose into the vacant quick release fitting. Pull on the hose to make sure it is securely installed.
10. Start the vehicle, or use compressed air, to fill the air brake system to normal operating pressure. Check the air brake system for leaks.
11. Remove the wheel chocks from the rear wheel.

Ford Motor Company

CPR © 2002 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
01/02