RESISTOR JUMPER HARNESS INSTALLATION AND MULTIFUNCTION SWITCH REPLACEMENT

AFFECTED VEHICLES: **CERTAIN 1999-2000 EXPLORER/MOUNTAINEER A4WD VEHICLES (EXCLUDING VEHICLES WITH LOAD LEVELING AND/OR MEMORY SEAT OPTION)**

TABLE OF CONTENTS

Overview ..... Page 1

Resistor Jumper Harness Installation ..... Page 1

Multifunction Switch Replacement ..... Page 4

OVERVIEW

When performing this service procedure, you will:

- Install a resistor jumper harness to correct a safety issue.
- Replace the multifunction switch to correct a customer satisfaction concern.
- Check the multifunction switch electrical connector pins to make sure they are not loose or pushed out in the connectors.

RESISTOR JUMPER HARNESS INSTALLATION

1. Record the radio stations and disconnect the battery ground cable.
2. Disconnect the ABS electrical connector located on the left-hand fender. See Figure 1.

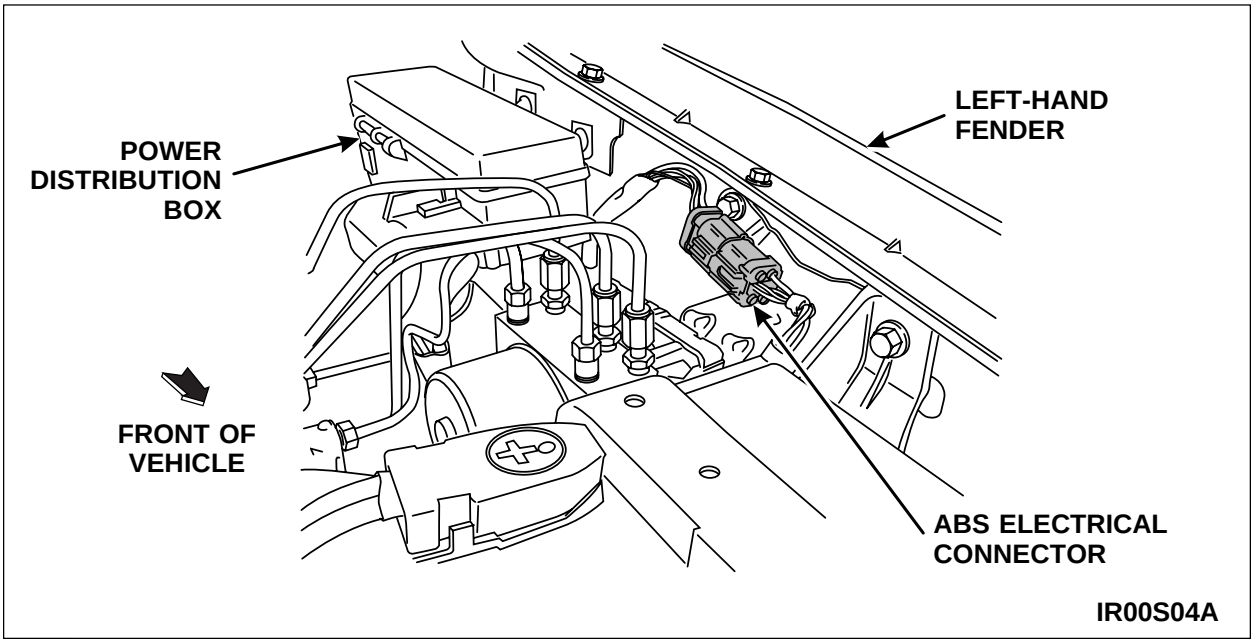


FIGURE 1

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
04/00

3. Insert a tie strap through the locking tab on the power distribution box. See Figure 2.

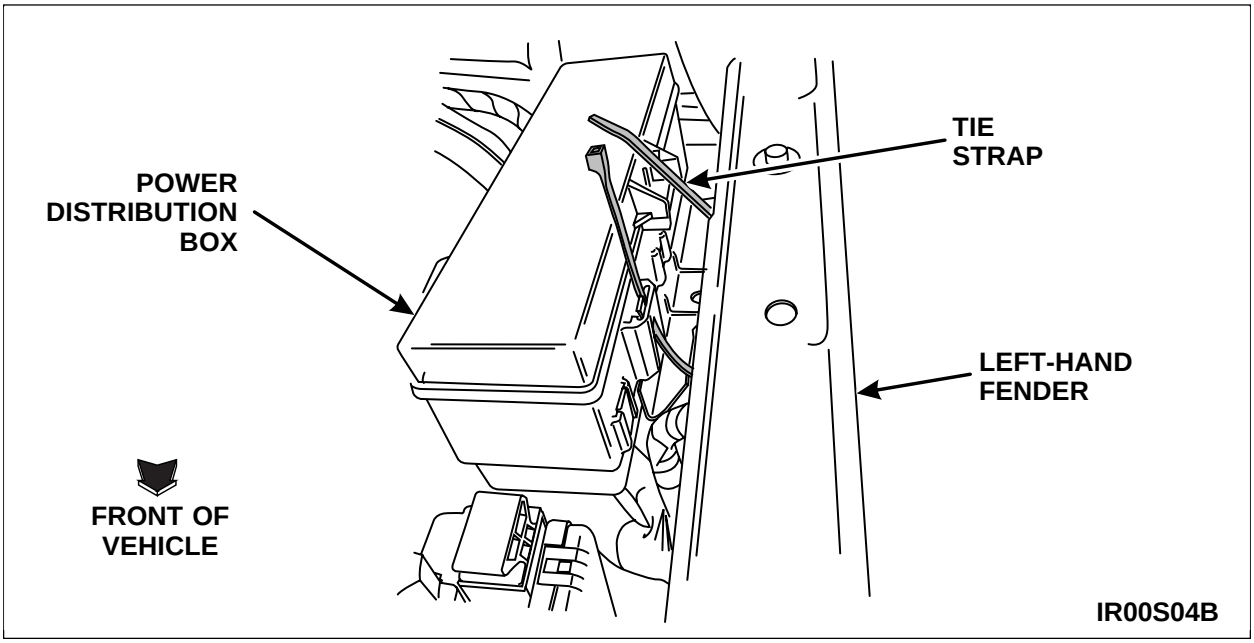


FIGURE 2

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
04/00

4. Connect the resistor jumper harness to the ABS electrical connector and fasten the ABS connector with the tie strap to the power distribution box. See Figure 3.

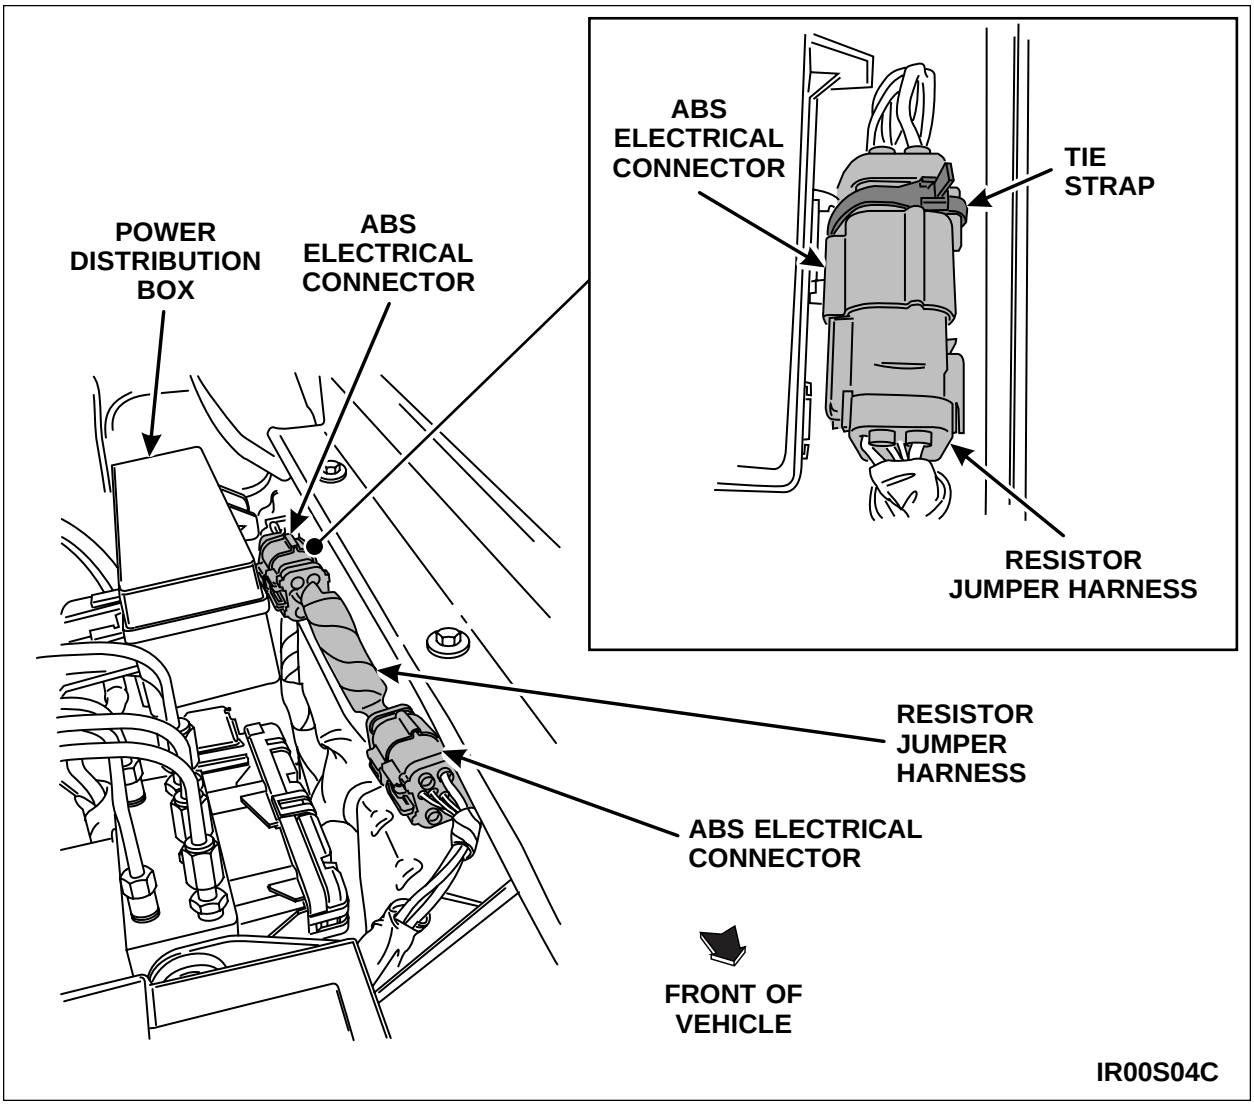


FIGURE 3

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
04/00

MULTIFUNCTION SWITCH REPLACEMENT

1. Turn the ignition switch lock cylinder to the RUN position. Then, push the ignition switch lock cylinder release tab with a punch while pulling out the ignition switch lock cylinder.
2. Remove the tilt wheel handle by turning the handle counterclockwise (if equipped).
3. Remove the upper to lower steering column shroud retaining screws and remove the shrouds.
4. Remove the two (2) multifunction switch retaining screws and disconnect the electrical connectors. See Figure 4.

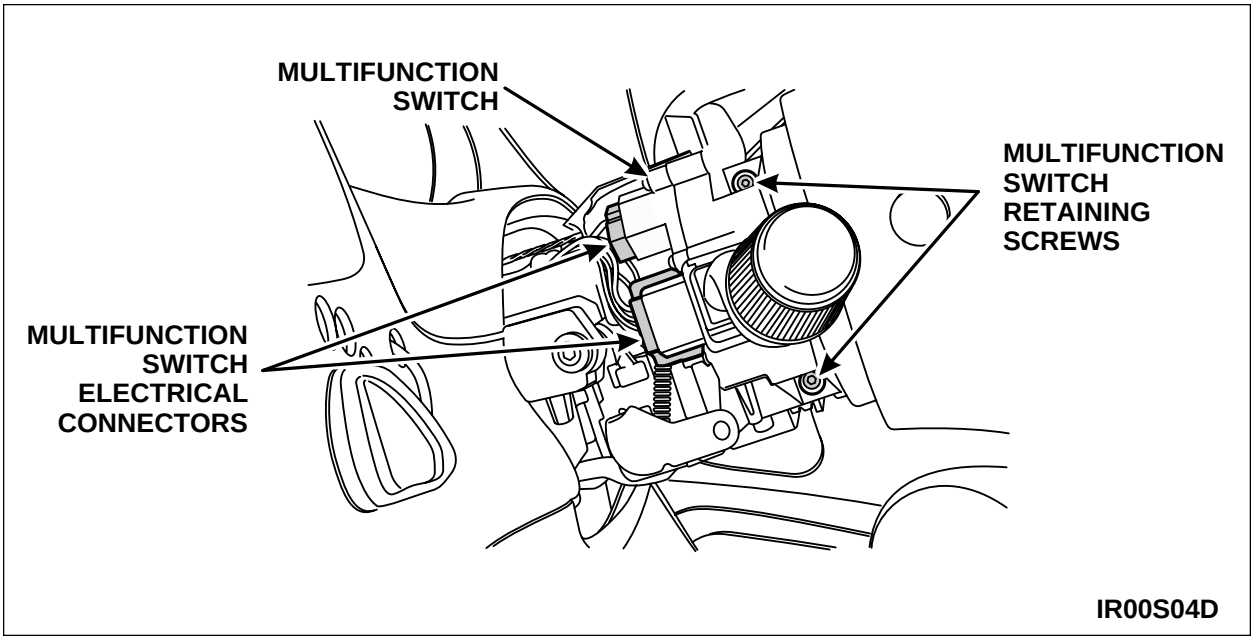


FIGURE 4

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
04/00

5. Inspect the multifunction switch electrical connector pins to make sure they are not loose or pushed out in the connectors. See Figure 5.

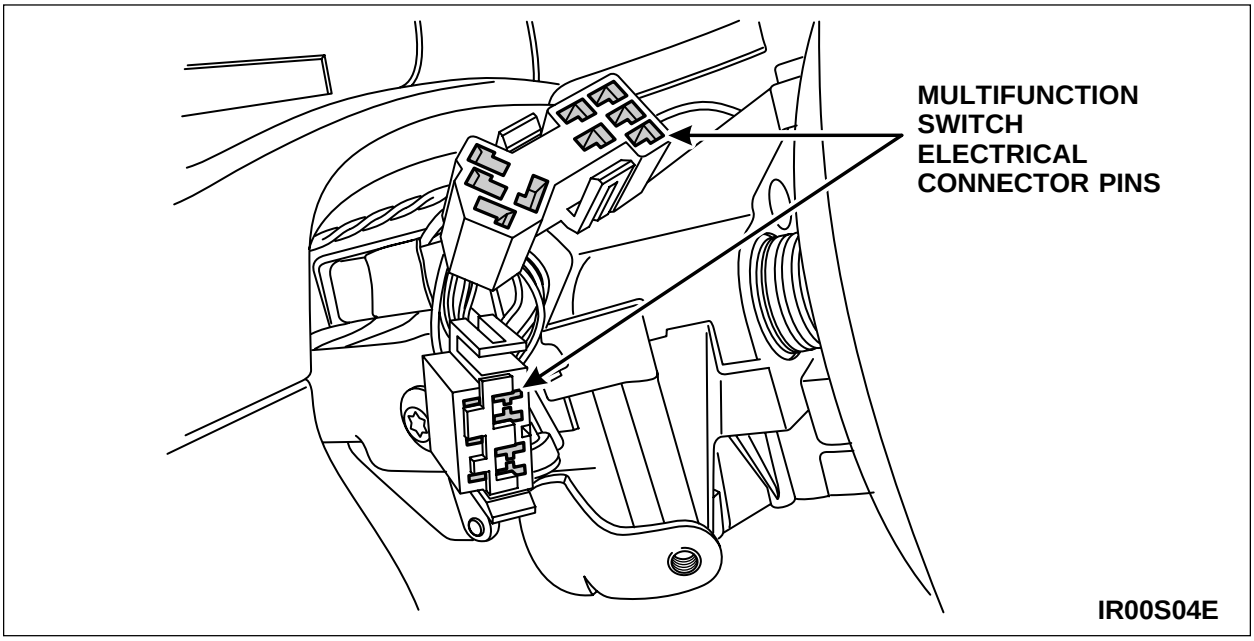


FIGURE 5

6. Connect the ***new*** multifunction switch, making sure the electrical connectors snap into place and are fully seated.
7. Install the ***new*** switch. Tighten the screws to 3 Nm (27 lb-in).
8. Install the upper and lower steering column shrouds. Tighten the screws to 1 Nm (9 lb-in).
9. Install the tilt wheel handle (if equipped).
10. Install the ignition switch lock cylinder.
11. Connect the battery ground cable, reprogram the radio stations and set the clock.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
04/00