FUEL DELIVERY MODULE (FDM) REPLACEMENT

AFFECTED VEHICLES: **CERTAIN 2000 MODEL YEAR TAURUS VEHICLES EQUIPPED WITH 3.0L FFV**

TABLE OF CONTENTS

SERVICE PROCEDURE ..... PAGE 1
PREPARING AUTHORIZED MODIFICATIONS LABEL ..... PAGE 6

SERVICE PROCEDURE

WARNING!

DO NOT SMOKE OR CARRY LIGHTED TOBACCO OR OPEN FLAME OF ANY TYPE WHEN WORKING ON OR NEAR ANY FUEL RELATED COMPONENTS. HIGHLY FLAMMABLE VAPORS ARE ALWAYS PRESENT AND MAY IGNITE. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.

WARNING!

THIS PROCEDURE INVOLVES FUEL HANDLING. BE PREPARED FOR FUEL SPILLAGE AT ALL TIMES AND ALWAYS OBSERVE FUEL HANDLING PROCEDURES. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.

WARNING!

THE FUEL SYSTEM REMAINS PRESSURIZED FOR A LONG TIME AFTER THE IGNITION IS SWITCHED OFF. THE INJECTOR PRESSURE MUST BE RELEASED BEFORE ATTEMPTING ANY REPAIRS. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.

1. Relieve the fuel system pressure by removing the fuel pump fuse from the battery junction box under the hood. Start the engine and allow it to idle, then depress the accelerator pedal to stall the engine. Crank the engine for an additional 5 seconds to make sure the fuel supply manifold pressure has been relieved.
2. Install a memory saver, then disconnect the battery negative cable.
3. Raise and support the vehicle.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
10/00

4. Disconnect the large fuel tank filler pipe hose. See Figure 1.
5. Connect Fuel Draining Tool 310-K013 to a fuel storage tanker hose.
6. Position the Fuel Draining Tool 310-K013 into the large fuel tank filler pipe hose. See Figure 1.
7. Siphon fuel from the tank until it is empty, then remove Fuel Draining Tool 310-K013.
8. Disconnect the remaining fuel tank filler pipe hose and the vapor tube fitting. See Figure 1.

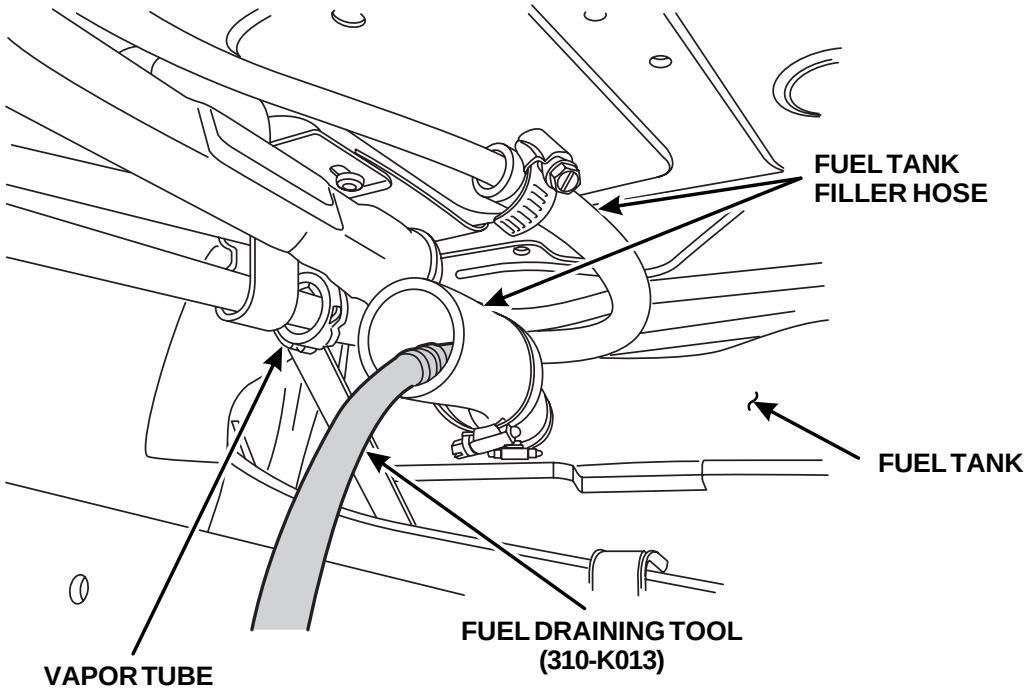


FIGURE 1

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
10/00

FDM — REMOVAL

1. Disconnect the FDM electrical connector. See Figure 2.
2. Disconnect the fuel filter inlet line and discard the locking clip. See Figure 2.

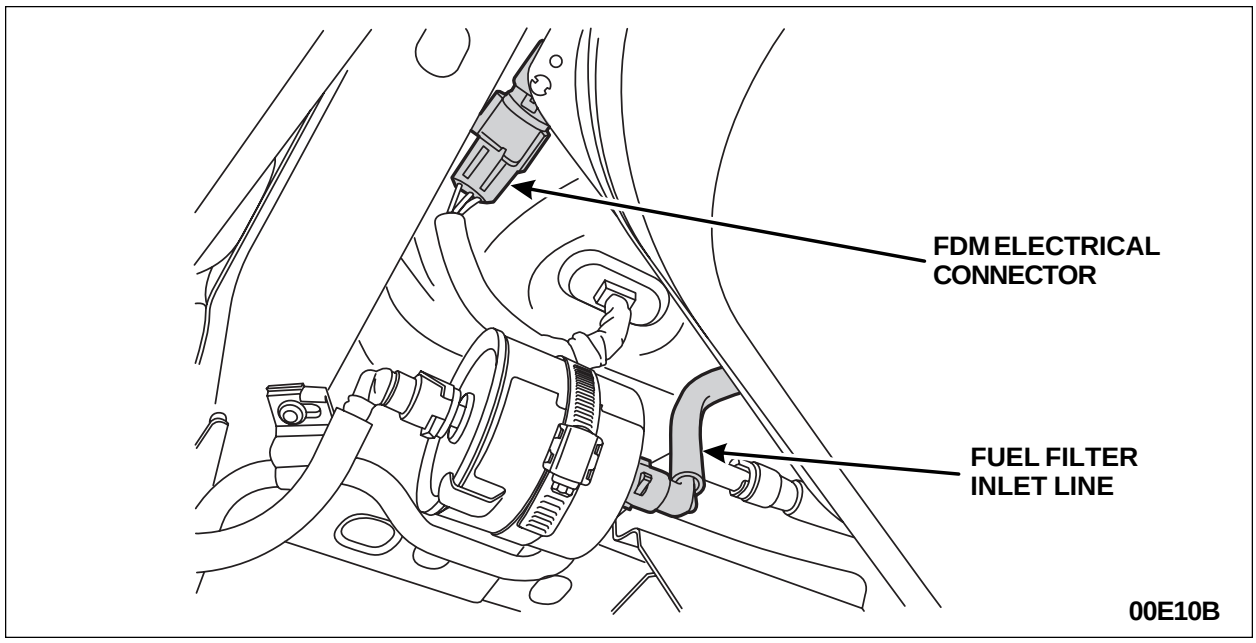


FIGURE 2

3. Support the fuel tank with a suitable jack.
4. Remove the bolts and lower the fuel tank support straps away from the fuel tank.
5. Lower the fuel tank from the vehicle.
6. Clean the area around the FDM mounting flange.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
10/00

7. Disconnect the FDM to fuel filter hose and discard the locking clip. See Figure 3.
8. Disconnect the fuel tank pressure transducer electrical connector. See Figure 3.
9. Unclip the FDM electrical connector from the fuel tank. See Figure 3.

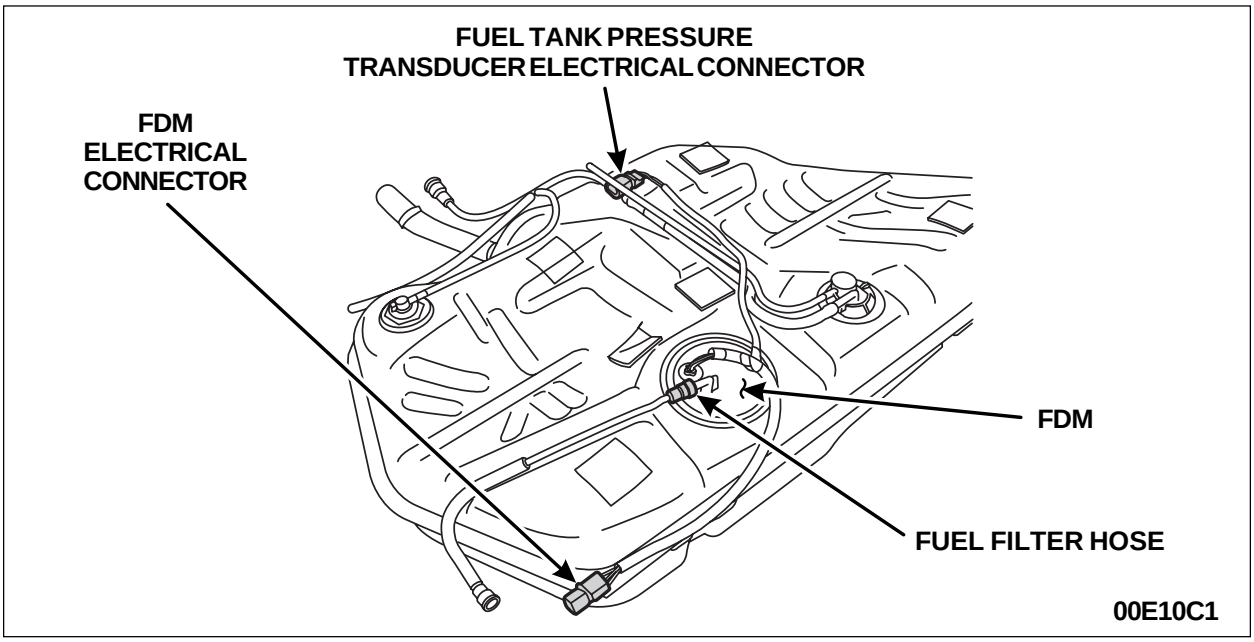


FIGURE 3

10. Remove the FDM lockring with Fuel Tank Lockring Wrench 310-D006. See Figure 4.

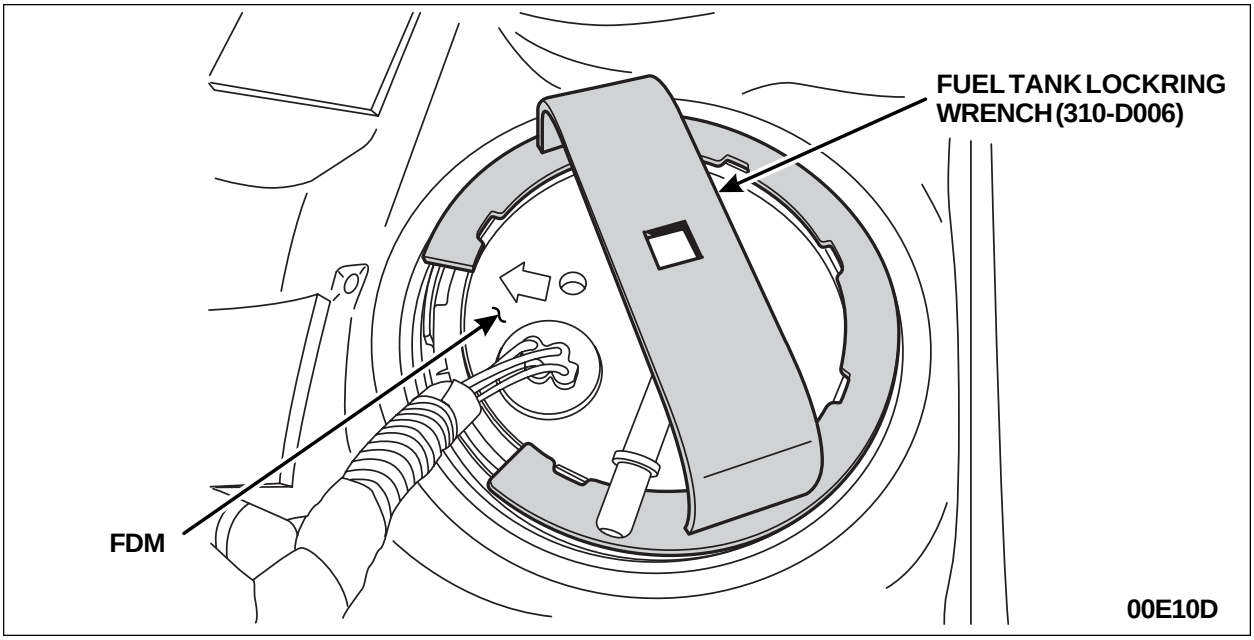


FIGURE 4

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
10/00

11. **CAUTION: The FDM will contain some residual fuel.**

    Remove the FDM and the FDM mounting gasket from the fuel tank and discard.

FDM — INSTALLATION

1. Install the ***new*** FDM mounting gasket included in the kit.
2. NOTE: There are two (2) locating tabs on the rim of the FDM which engage in matching notches in the opening of the fuel tank. Also, the locating dimple on the fuel tank may be covered by a foam spacer block adhered to the top of the tank.

   Install the FDM as follows. See Figure 5.
   - Position the ***new*** FDM into the opening of the fuel tank, aligning the arrow on the FDM with the dimple on the fuel tank.
   - Press the FDM into the opening of the fuel tank to engage the locating tabs, then rotate the FDM slightly clockwise to lock the FDM into position.
   - Install the FDM lockring with Fuel Tank Lockring Wrench 310-D006.

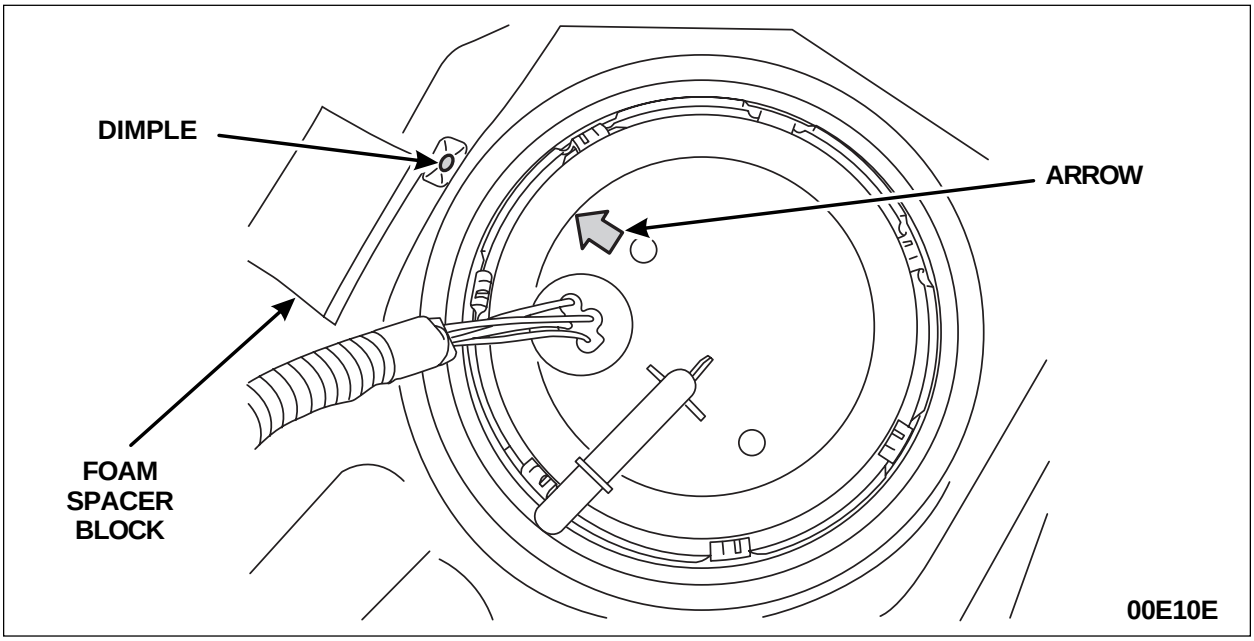


FIGURE 5

3. Clip the FDM electrical connector onto the fuel tank.
4. Connect the fuel tank pressure transducer electrical connector.
5. Connect the FDM to fuel filter hose. Install the ***new*** locking clip included in the kit.
6. Support the fuel tank with a suitable jack.
7. Raise and install the fuel tank in the vehicle.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
10/00

8. Install the fuel tank support straps. Tighten the bolts to 35 Nm (26 lb-ft).
9. Connect the fuel filter inlet line. Install the ***new*** locking clip included in the kit.
10. Connect the FDM electrical connector.
11. Connect the fuel tank filler pipe hoses and vapor tube fitting.
12. Lower the vehicle.
13. Refill the fuel tank.
14. Connect the battery negative cable, then remove the memory saver.
15. Turn the ignition key to the "ON' position to pressurize the fuel system, and check for leaks.

PREPARING AUTHORIZED MODIFICATIONS LABEL

1. Obtain and prepare the Authorized Modifications Label. Write the modification completed, your P&A Code, date of repair and the recall program type and program number. See Figure 6.

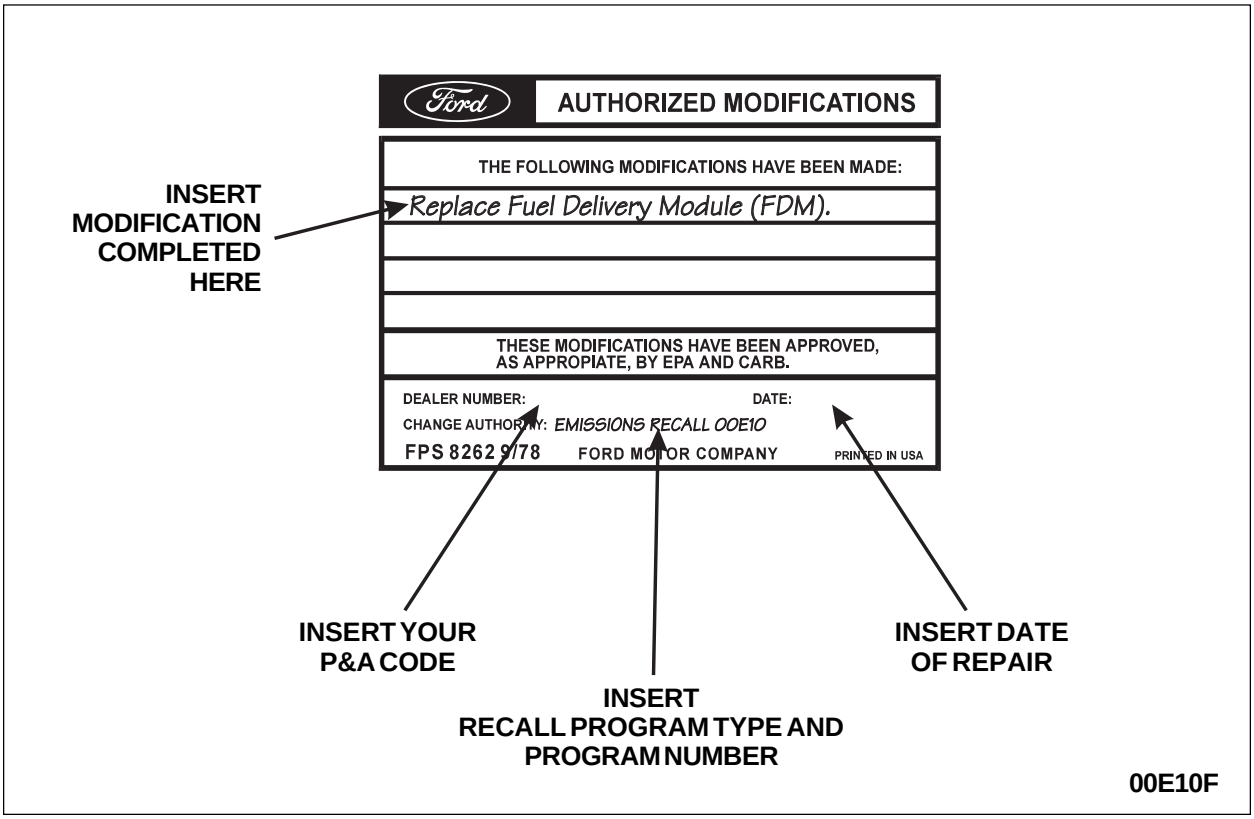


FIGURE 6

2. Apply the label to a clear area of the upper radiator support.
3. Provide California and Massachusetts owners with "Emissions Recall-Proof of Correction" Certificates.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
10/00