ESCAPE FUEL LINE INSPECTION

AFFECTED VEHICLES: CERTAIN 2001 ESCAPE MODELS

INSPECTION

1. Turn the ignition key to the ON position without starting the engine.
2. Raise and support the vehicle on a hoist.
3. Locate the fuel line at the filter outlet near the fuel tank.
4. Grasp the fuel line near the filter outlet tube and wiggle it gently. Check the filter outlet connector for leakage within 30 seconds. See Figure 1.

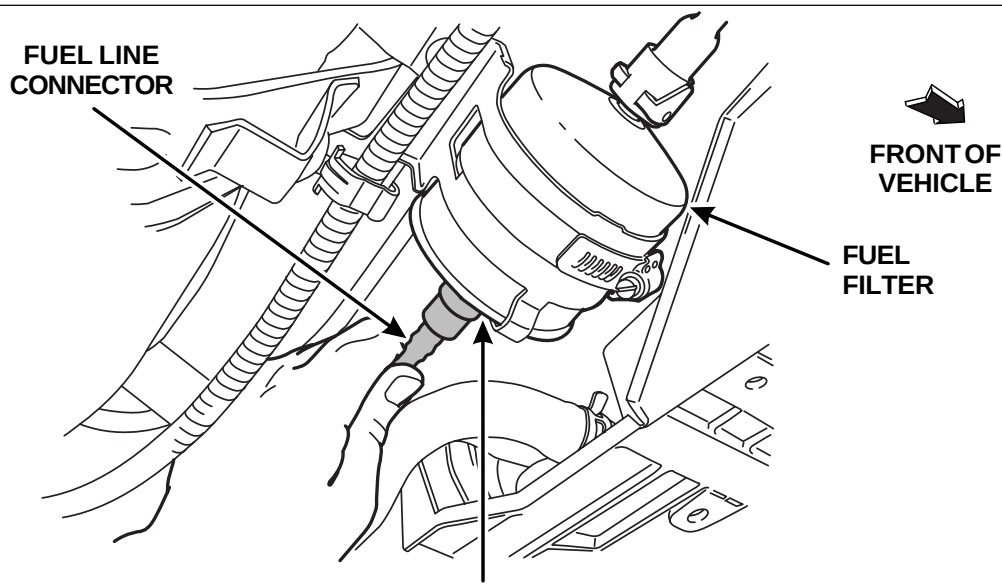


FIGURE 1

5. If no leak is present, no further action is required. Lower and release the vehicle.
6. If a leak appears within 30 seconds, the fuel line assembly must be replaced. Proceed to the Replacement procedure in this Attachment III.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/00

REPLACEMENT

NOTE: A single fuel line has been released for this program. The entire fuel line bundle is not to be replaced during this service.

1. Partially lower the vehicle, then turn the ignition key off.
2. Install a memory saver. Open the hood, disconnect the battery negative cable, then relieve fuel system pressure.
3. Access the fuel pump module as follows:
   a) Open the left rear door.
   b) Position the seat bench forward.
   c) Pull back the carpet to expose the fuel pump module access cover.
   d) Remove the screws and lift the access cover up, then disconnect the two electrical connectors.
4. Disconnect the outboard fuel line (the one closest to the door). See Figure 2.

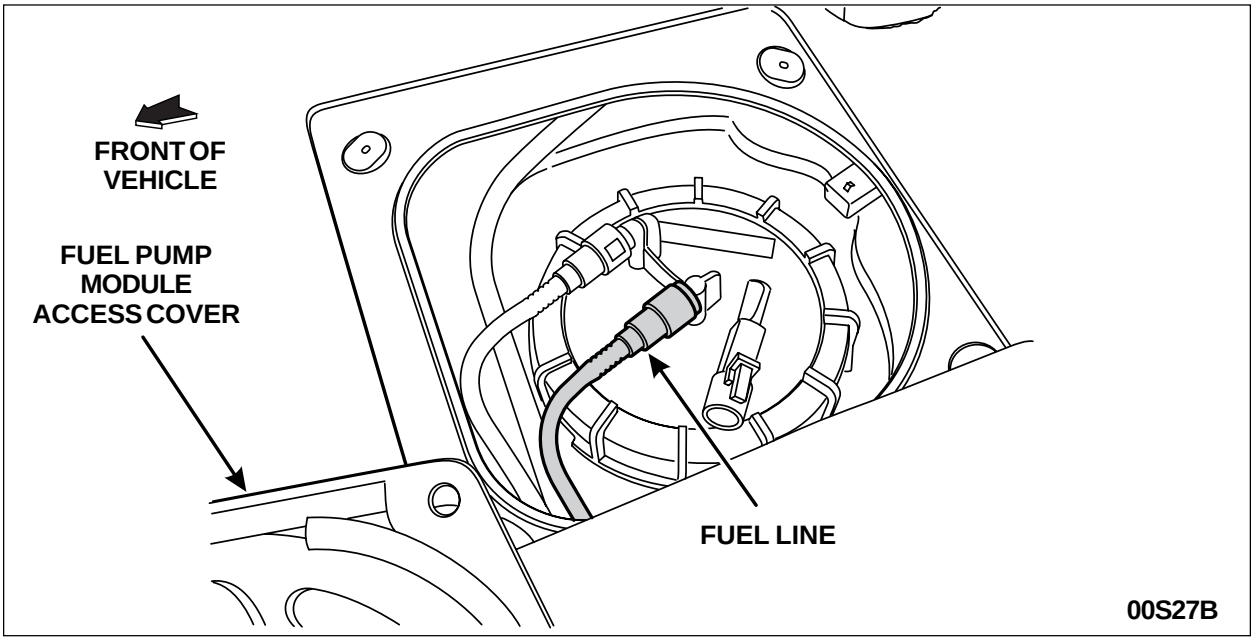


FIGURE 2

5. Raise and support the vehicle.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/00

6. Position a drain pan. Remove the bundle retainer, then disconnect the fuel line at the filter and at the supply line. See Figure 3.

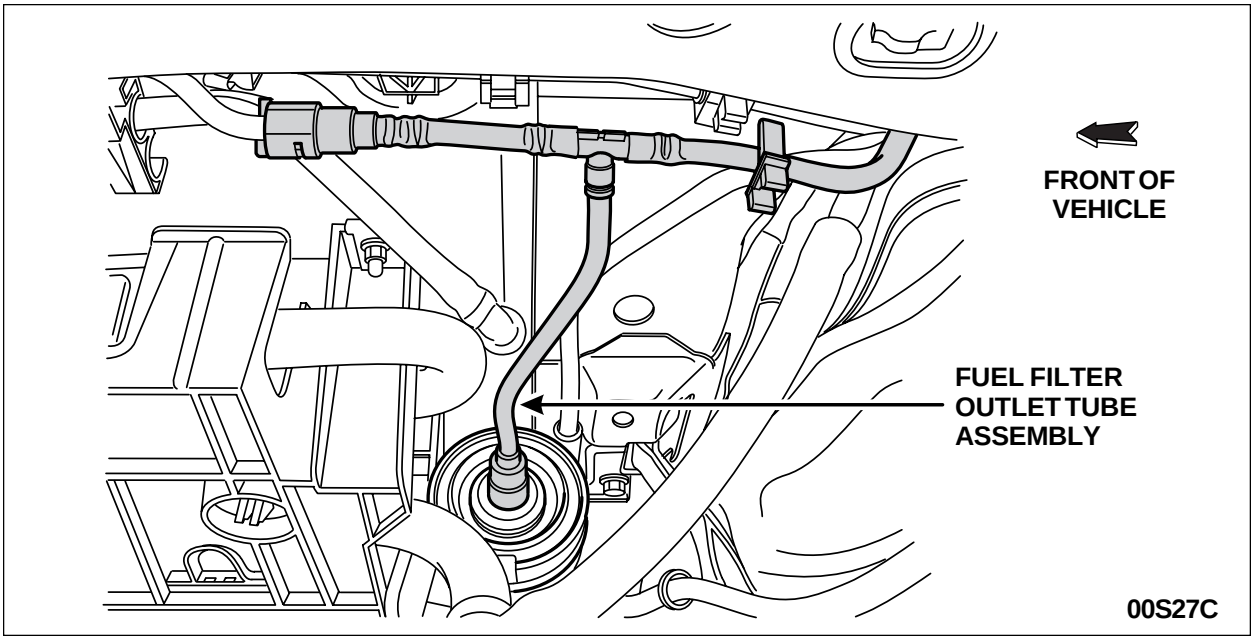


FIGURE 3

7. Remove the line from the vehicle noting the path of the fuel line around other components.
8. Position the ***new*** fuel line in the vehicle.
9. Connect the fuel line to the filter outlet tube and the supply line leading forward toward the engine.
10. Install the bundle retainer.
11. Remove the supports and lower the vehicle.
12. Connect the fuel line to the fuel pump module.
13. Connect the two electrical connectors at the fuel pump module.
14. Connect the battery negative cable and remove the memory saver. Turn the key on without starting the engine to pressurize the fuel system and check for leaks around the ***new*** fuel line connections. Turn the key off.
15. Reinstall the fuel pump access cover. Position back the carpet and seat, then close the door.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/00