REDUNDANT WHEEL RETENTION CAP

AFFECTED VEHICLE: **CERTAIN 2000 MODEL YEAR FOCUS**

OVERVIEW

This procedure involves two parts, an inspection for identifying loose or damaged rear wheel bearings, and the installation of a redundant rear wheel retention cap. Vehicles with loose or damaged rear wheel bearing(s) will require replacement of the wheel bearing and anti-lock brake system (ABS) sensor ring (if equipped) on the affected side(s) of the vehicle. Then, after replacing all loose or damaged bearings, a redundant wheel retention cap will be bolted into place on the end of the left side spindle. The cap will prevent the wheel bearing nut from loosening during wheel rotation. This cap must be installed on all vehicles, even if no wheel bearings are replaced.

INSPECTION

1. Raise and support the vehicle.
2. Check for play in the rear wheel bearings. Grasp the top and bottom of the tire and try to “rock” the wheel on the spindle.
3. **CAUTION: If replacing the wheel bearing, the wheel bearing nut must be tightened while turning the wheel in the opposite direction of the nut a minimum of ten (10) times.**

   If any play in the wheel bearing(s) is found, replace the wheel bearing and ABS sensor ring (if equipped) on the affected side(s) of the vehicle, before proceeding with the redundant wheel retention cap installation. Refer to the service procedures in Section 204-02 of the appropriate Workshop Manual.

REDUNDANT WHEEL RETENTION CAP — INSTALLATION

NOTE: This procedure is to be performed on the left side **only**, after all loose or damaged wheel bearings are replaced.

1. Remove the left rear wheel and tire.
2. Remove and discard the spindle dust cap.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/00

3. NOTE: The drill guide must bottom out on the end of the spindle to ensure correct drilling depth.

   Install the Drill Guide (204-304/1) onto the end of the spindle. Hand-tighten the Drill Guide. See Figure 1.

4. **CAUTION: Do not allow the drill to exceed 1,000 RPM. Liberal use of cutting oil during the drilling operation is essential to avoid overheating of the drill bit.**

   Drill into the end of the spindle using Drill Bit (204-304/2). Continue drilling until the drill bit collar contacts the drill guide. See Figure 1.

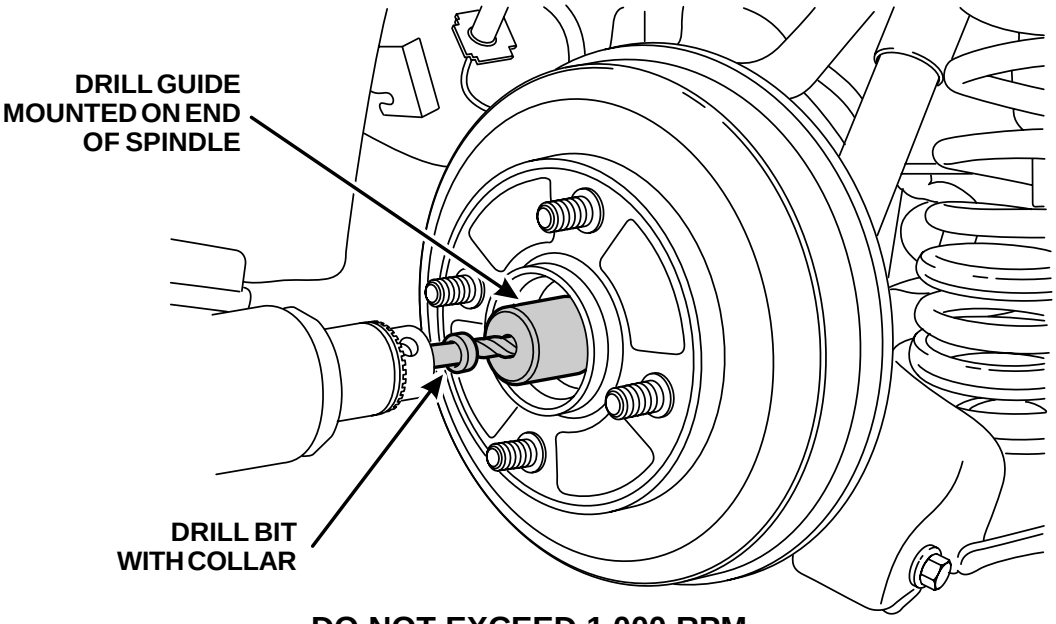

FIGURE 1

5. Remove the drill guide (204-304/1).
6. Clean all the debris from the drill guide threads and wheel bearing area.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/00

7. Place the redundant wheel retention cap onto the wheel bearing nut. See Figure 2.
8. **CAUTION: The M8 bolt included in the kit is self-tapping and has a left-hand thread. Use hand tools only when installing the bolt.**

   Install the bolt into the drilled hole in the end of the spindle. Tighten the bolt to 40 Nm (30 lb-ft). See Figure 2.

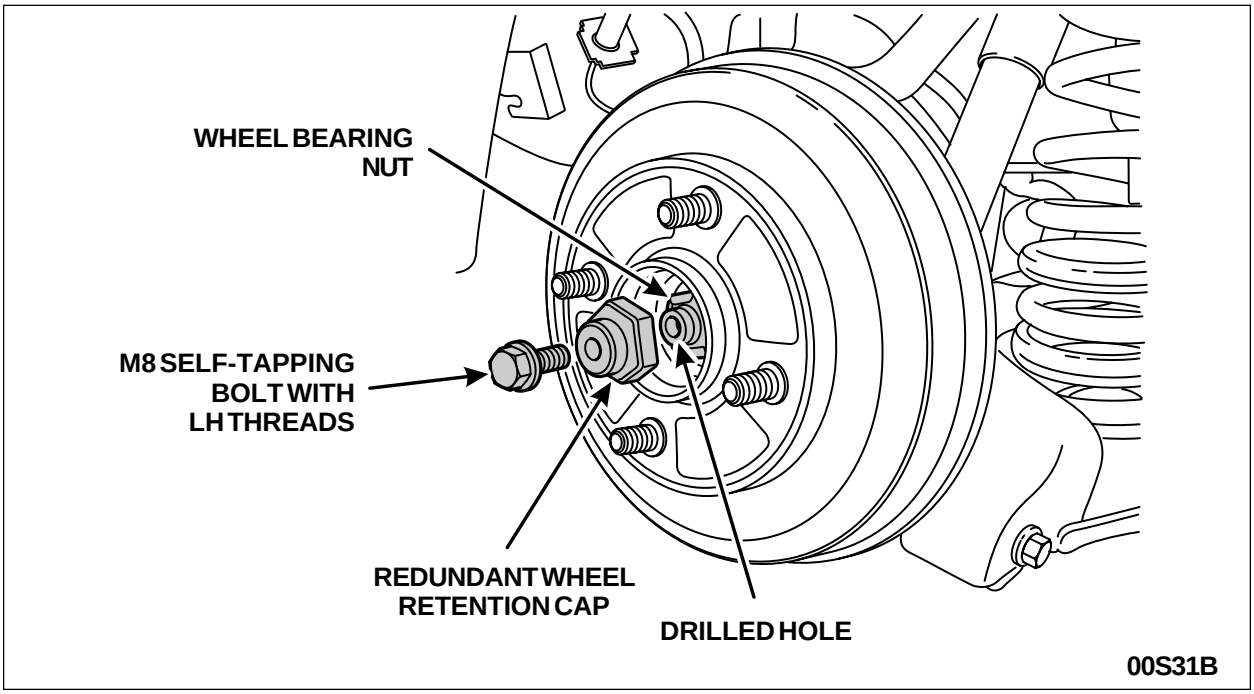

FIGURE 2

9. Install the ***new*** spindle dust cap included in the kit.
10. Install the wheel and tire. Tighten the wheel nuts to 128 Nm (94 lb-ft).
11. Lower the vehicle.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/00