TRANSMISSION—5R55N—CORRECT PROCEDURE FOR CHECKING FLUID LEVEL—SERVICE TIP	Article No. 99-18-9

LINCOLN: 2000 LS

This TSB article is being republished in its entirety to revise the Service Procedure.

ISSUE

Improper checking of transmission fluid level may result in the misdiagnosis of transmission concerns.

ACTION

To properly check the transmission fluid level, use the procedures as found in the current CD-ROM, Workshop Manual, STARS Broadcast, and as listed in this TSB.

SERVICE PROCEDURE

NOTE

THE RECOMMENDED TEMPERATURE TO CHECK THE FLUID IS A SETTING OF 27°-49°C (80-120°F). THE FLUID CAN ALSO BE CHECKED ABOVE 50°C (122°F) USING THIS PROCEDURE.

1. Install diagnostic equipment and monitor the transmission fluid temperature (TFT) using the PID: TFT.
2. Start the engine and let idle (approximately 650 rpm) so that the transmission fluid temperature is between the recommended setting of 27-49°C (80-120°F). The fluid can also be checked above 50°C (122°F) using this procedure.
3. Move the selector lever through all gears (Figures 1 and 2).
4. Place selector lever in Park and set the parking brake.
5. Raise and support the vehicle on a hoist. For additional information, refer to the LS 2000 Workshop Manual, Section 100-02. Set vehicle as close to a visual level as possible (±2-3 degrees) on the hoist. Optionally, a special tool (Figures 3 and 4) can be used to assist with leveling the vehicle.
6. Place a drain pan under the transmission.
7. Do not remove the drain plug (large nut). With the engine running in Park, use a 3/16″ allen wrench and remove the fluid level indicator plug (small inner plug) (Figure 5).
8. Allow the fluid to drain. When the fluid comes out as a thin stream or a drip, it is at the correct level.
9. If no fluid comes out, fluid will have to be added.
10. Remove the fluid fill plug found on the extension housing (Figure 6).
11. Check fluid temperature.
12. Fill the transmission to the correct level (Figure 7). When fluid starts to drain out of the fluid level hole, as a thin stream or drip, reinstall the fluid level plug and tighten to 10 N•m (89 lb-in) (Figure 8). Use MERCON® V Automatic Transmission Fluid (XT-5-QM or equivalent meeting Ford specification MERCON® V). For transmission fluid temperatures above 50°C (122°F), additional fluid must be added, referring to Step 13 and the following chart.

WARNING

FLUID TEMPERATURES ABOVE 50°C (122°F) MAY BE TOO HOT TO HANDLE.

NOTE

DO NOT HEAT FLUID PRIOR TO ADDING TO THE TRANSMISSION.

13. To set the fluid level for TFT temperatures above 50°C (122°F), refer to the following chart for the correct volume of ambient temperature fluid to add for the TFT indicated on the diagnostic equipment.

FLUID TEMPERATURE/FLUID AMOUNT		
PID: Temperature	Add Fluid (ml)	Add Fluid (oz)
50°C (122°F)	232	8
55°C (130°F)	334	11
60°C (140°F)	407	14
66°C (150°F)	501	17
71°C (160°F)	590	20
77°C (170°F)	703	24
80°C (175°F)	762	26
82°C (180°F)	850	29
88°C (190°F)	938	32
93°C (200°F)	1026	35

14. Reinstall the fluid fill plug and tighten to 20 N•m (15 lb-ft) (Figure 9).
15. Lower the vehicle.
16. Check transmission for proper operation and leaks.

PART NUMBER	PART NAME
XT-5-QM	MERCON® V Automatic Transmission Fluid (ATF)

OTHER APPLICABLE ARTICLES: 99-10-6, 99-8-13
SUPERSEDES: 99-17-4
WARRANTY STATUS: INFORMATION ONLY
OASIS CODES: 501000, 502000, 503000, 504000, 510000

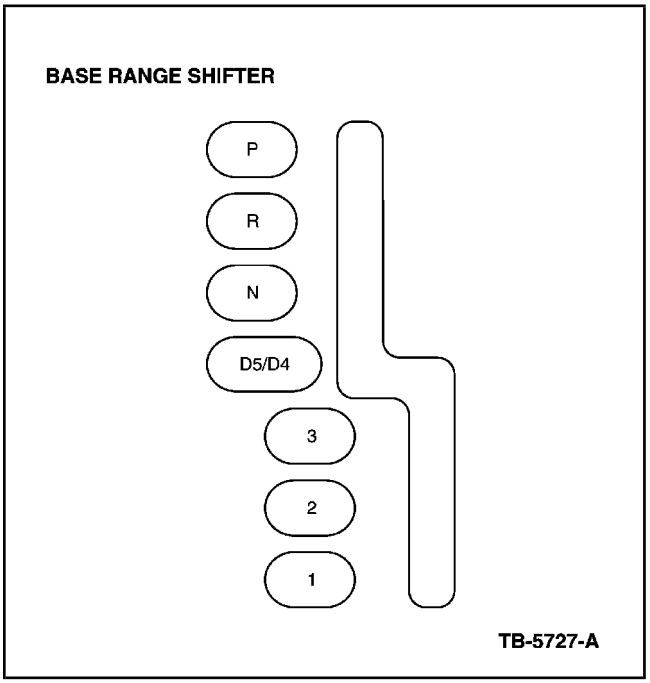

Figure 1 - Article 99-18-9

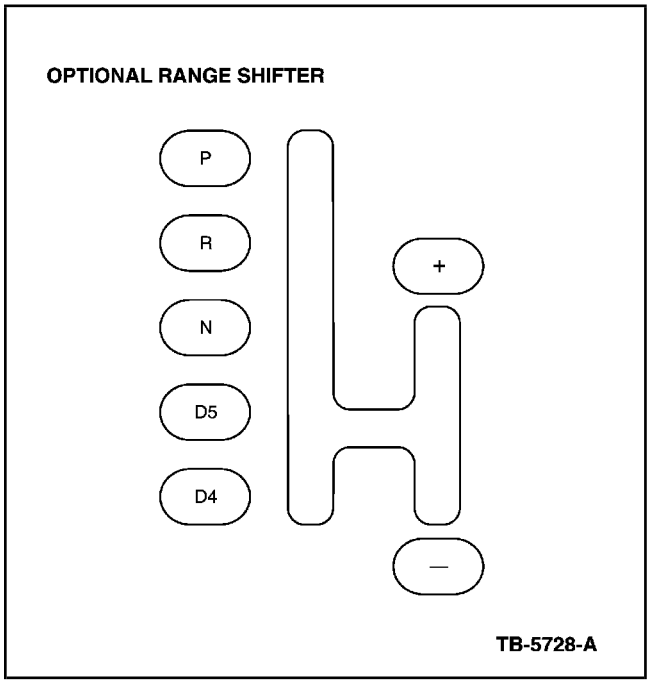

Figure 2 - Article 99-18-9

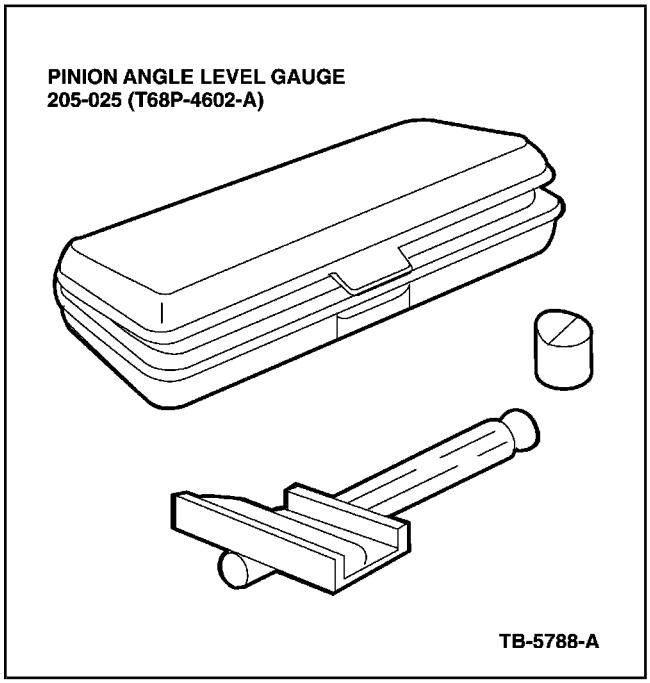

Figure 3 - Article 99-18-9

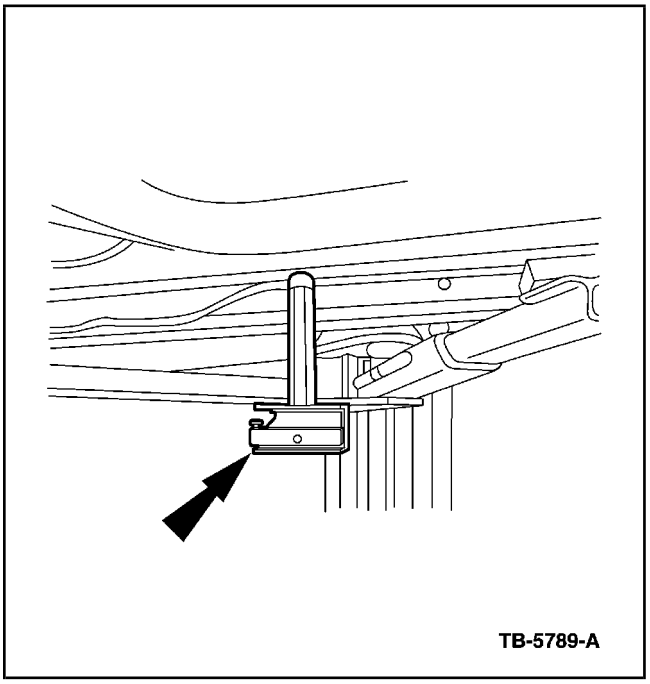

Figure 4 - Article 99-18-9

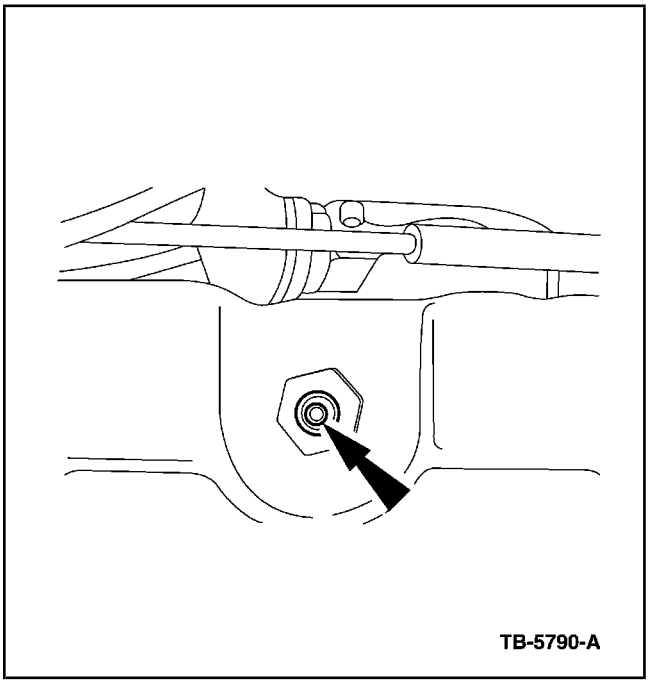

Figure 5 - Article 99-18-9

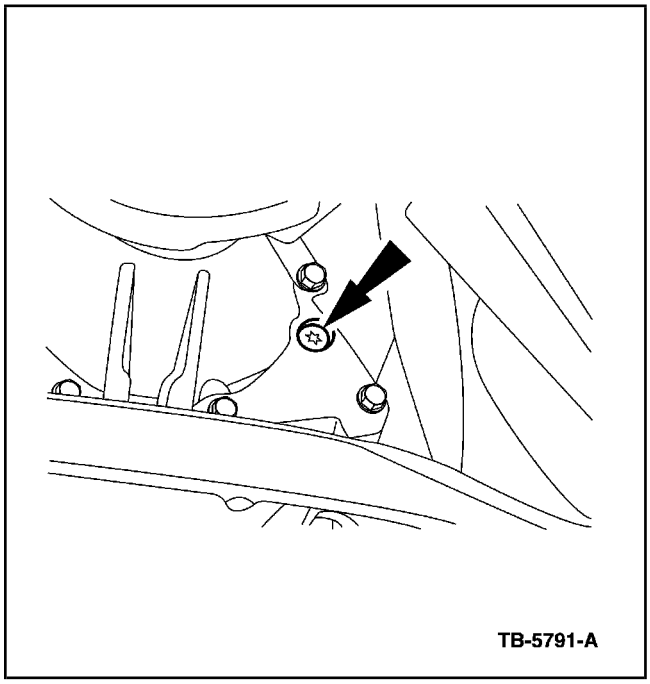

Figure 6 - Article 99-18-9

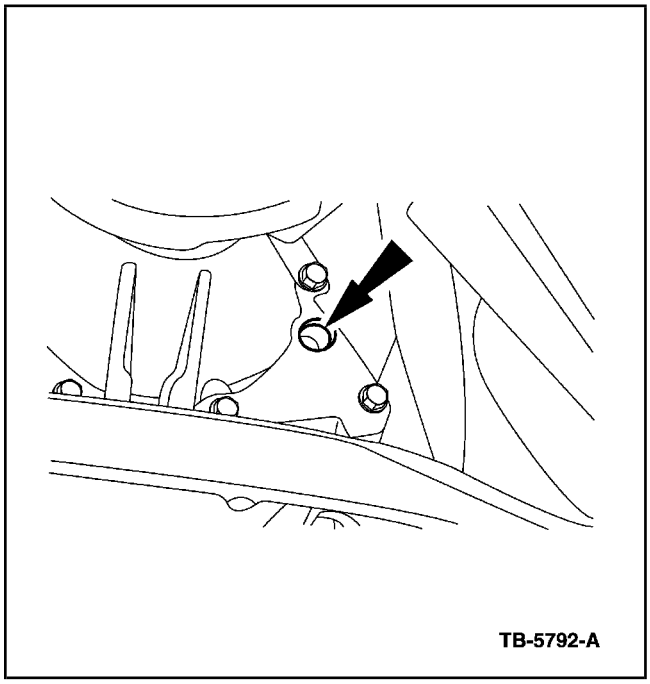

Figure 7 - Article 99-18-9

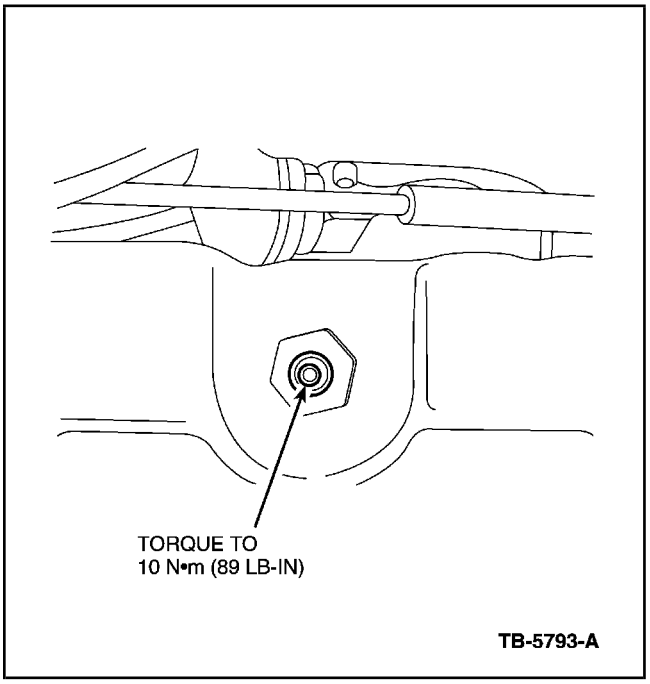

Figure 8 - Article 99-18-9

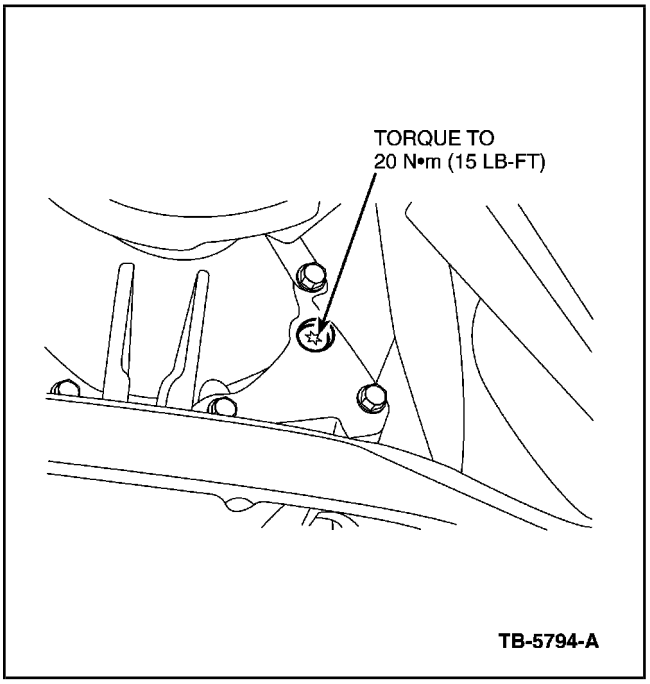

Figure 9 - Article 99-18-9