F-650/750 ANTI-LOCK BRAKE ECU REPLACEMENT

AFFECTED VEHICLES: **CERTAIN 2000-2001 MODEL YEAR F-650 AND F-750 MEDIUM DUTY TRUCKS EQUIPPED WITH ANTI-LOCK AIR BRAKE SYSTEMS**

OVERVIEW

This procedure details the replacement of the anti-lock brake ECU.

REMOVAL

1. Set the parking brake and place chocks behind the rear wheels.
2. Drain the brake's air supply system to 0 kPa (0 psi).
3. Unfasten and disconnect the electrical connectors from the anti-lock brake ECU.
4. Remove the bolts securing the anti-lock brake ECU to the modulator relay valve. See Figure 1.

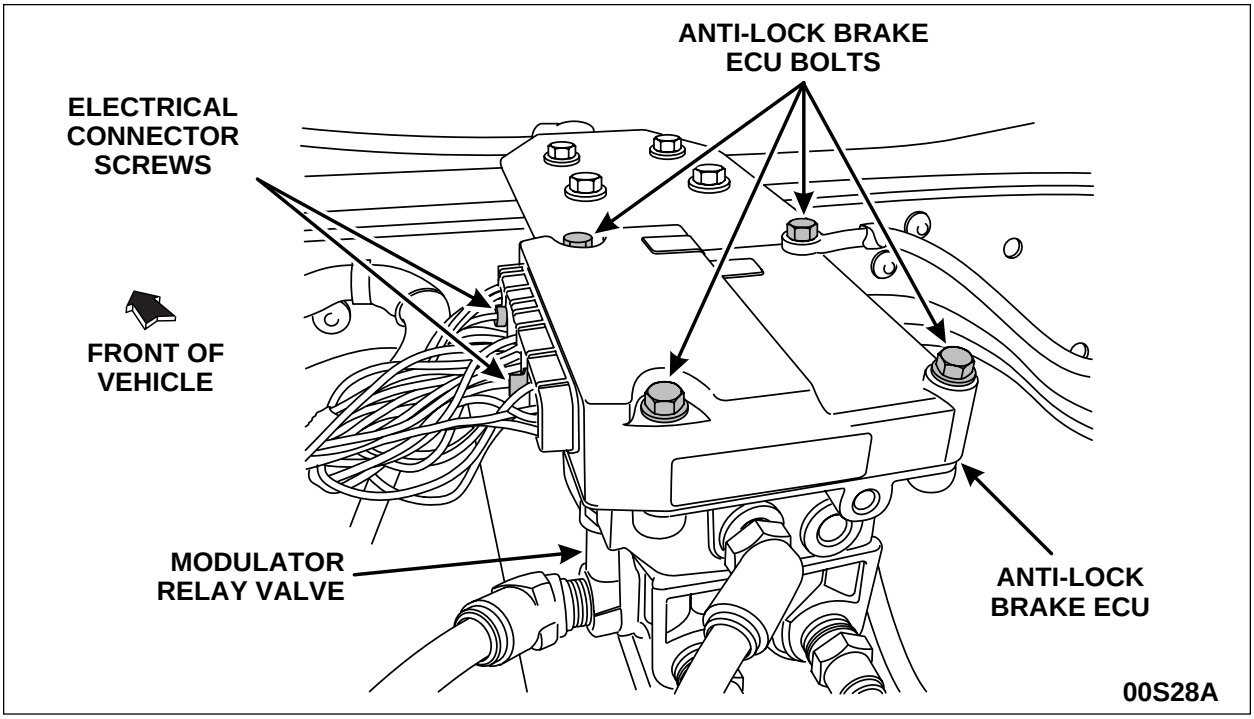


FIGURE 1

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
02/01

5. Remove the anti-lock brake ECU from the modulator relay valve. See Figure 2.

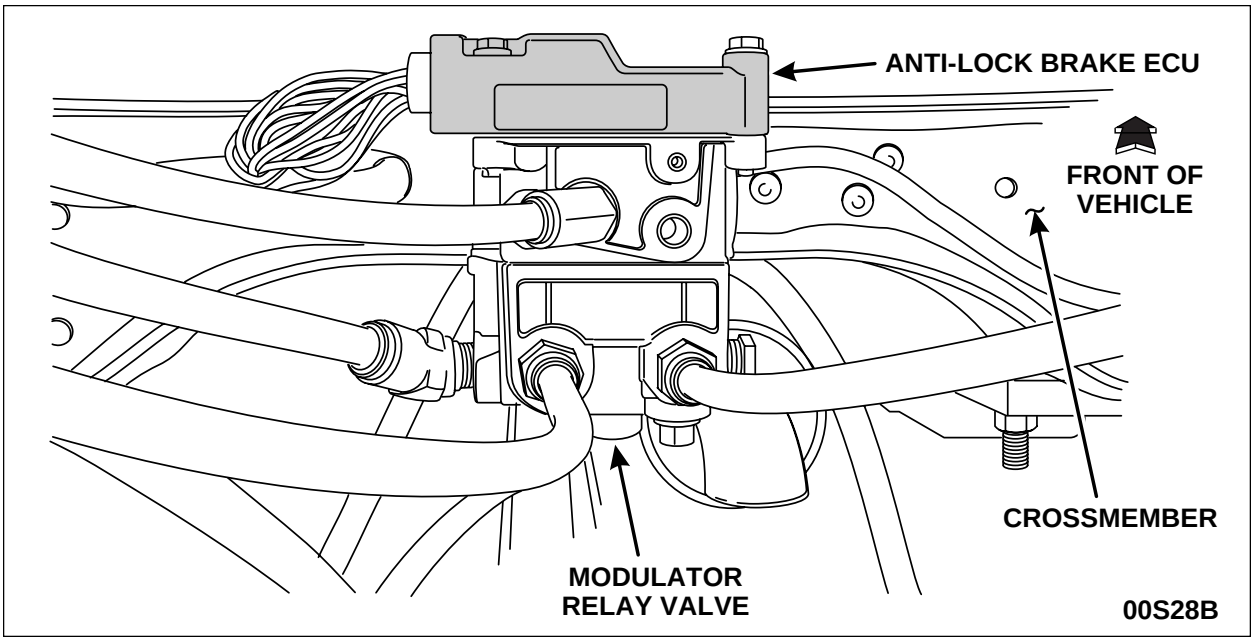


FIGURE 2

INSTALLATION

1. Position the ***new*** anti-lock brake ECU on the modulator relay valve.
2. Install the bolts securing the anti-lock brake ECU to the modulator relay valve and tighten to 7 Nm (62 lb-in).
3. Connect the anti-lock brake ECU electrical connectors and tighten the screws to 5 Nm (44 lb-in).
4. Fill the brake system with air.
5. Remove the chocks from behind the rear wheels and release the parking brake.

Ford Motor Company

CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
02/01