DRIVER SEAT BELT RETRACTOR ASSEMBLY REPLACEMENT

AFFECTED VEHICLE: **CERTAIN 2001 F-SERIES REGULAR CAB PICKUP TRUCKS**

REQUIRED TOOLS

Restraint System Diagnostic Tool 418-F088 (105-R0012) ..... 2 Required
Restraint System Diagnostic Tool 418-133 (40-009) ..... 2 Required

REMOVAL

WARNING: ALWAYS WEAR SAFETY GLASSES WHEN REPAIRING AN AIRBAG SUPPLEMENTAL RESTRAINT SYSTEM (SRS) VEHICLE AND WHEN HANDLING AN AIRBAG MODULE. THIS WILL REDUCE THE RISK OF INJURY IN THE EVENT OF AN ACCIDENTAL DEPLOYMENT.

WARNING: THE SAFETY BELT RETRACTOR PRETENSIONER IS A PYROTECHNIC DEVICE. ALWAYS WEAR SAFETY GLASSES WHEN REPAIRING AN AIRBAG EQUIPPED VEHICLE AND WHEN HANDLING A SAFETY BELT BUCKLE PRETENSIONER OR SAFETY BELT RETRACTOR PRETENSIONER.

WARNING: AFTER DEPLOYMENT, THE AIRBAG SURFACE CAN CONTAIN DEPOSITS OF SODIUM HYDROXIDE, A PRODUCT OF THE GAS GENERANT COMBUSTION THAT IS IRRITATING TO THE SKIN. WASH YOUR HANDS WITH SOAP AND WATER AFTERWARDS.

WARNING: NEVER PROBE THE CONNECTORS ON THE AIRBAG MODULE. DOING SO CAN RESULT IN AIRBAG DEPLOYMENT, WHICH CAN RESULT IN PERSONAL INJURY.

WARNING: THE SAFETY BELT RETRACTOR PRETENSIONER IS A PYROTECHNIC DEVICE. NEVER PROBE A PRETENSIONER ELECTRICAL CONNECTOR. DOING SO CAN RESULT IN PRETENSIONER OR AIRBAG DEPLOYMENT, AND CAN RESULT IN PERSONAL INJURY.

WARNING: AIRBAG MODULES WITH DISCOLORED OR DAMAGED TRIM COVERS MUST BE REPLACED, NOT REPAINTED.

WARNING: THE RESTRAINT SYSTEM DIAGNOSTIC TOOL IS FOR THE RESTRAINT SYSTEM SERVICE ONLY. REMOVE FROM THE VEHICLE PRIOR TO ROAD USE. FAILURE TO REMOVE COULD RESULT IN INJURY AND POSSIBLE VIOLATION OF VEHICLE SAFETY STANDARDS.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
10/00

1. **WARNING: TO AVOID ACCIDENTAL DEPLOYMENT AND POSSIBLE PERSONAL INJURY, THE BACKUP POWER SUPPLY MUST BE DEPLETED BEFORE REPAIRING OR REPLACING ANY FRONT OR SIDE ARE BAG SUPPLEMENTAL RESTRAINT SYSTEM (SRS) COMPONENTS AND BEFORE SERVICING, REPLACING, ADJUSTING OR STRIKING COMPONENTS NEAR THE FRONT OR SIDE AIRBAG SENSORS, SUCH AS DOORS, INSTRUMENT PANEL, CONSOLE DOOR, LATCHES, STRIKERS, SEATS AND HOOD LATCHES.**

   PLEASE REFER TO THE APPROPRIATE VEHICLE SHOP MANUAL TO DETERMINE LOCATION OF THE FRONT AIRBAG SENSORS.

   THE SIDE AIRBAG SENSORS ARE LOCATED AT OR NEAR THE BASE OF THE B-PILLAR.

   TO DEPLETE THE BACKUP POWER SUPPLY ENERGY, DISCONNECT THE BATTERY GROUND CABLE AND WAIT AT LEAST ONE MINUTE. BE SURE TO DISCONNECT AUXILIARY BATTERIES AND POWER SUPPLIES (IF EQUIPPED).

   Disconnect the battery ground cable and wait at least one minute.
2. Remove the central junction box cover located under the left side of the instrument panel.
3. Remove the parking brake release lever retaining bolts.
4. Remove the hood release lever retaining bolts.
5. Remove the six (6) instrument panel steering column cover retaining bolts, then carefully unsnap the cover.
6. Disconnect the clockspring electrical connector at the base of the steering column.
7. Attach the Restraints System Diagnostic Tool 418-F088 (105-R0012) to the vehicle harness side of the clockspring electrical connector at the base of the steering column.
8. Remove the relay cover panel from the top of the passenger side of the instrument panel.
9. Disconnect the passenger side airbag module connector.
10. Attach the Restraints System Diagnostic Tool 418-F088 (105-R0012) to the vehicle harness side of the passenger side airbag electrical connector.
11. Position the seats as far forward as possible to provide access to the retractors.
12. On the passenger side, open the D-ring cover and remove the 15mm retaining bolt. Remove the D-ring from the mounting stud.
13. NOTE: The trim panel pushpins are disengaged by pushing the center button in about 1/4 inch.

    Disengage the pushpins and remove the passenger side upper corner trim panel.
14. Disengage the pushpins and position aside the passenger side lower corner trim panel. It does not have to be removed.
15. Disconnect the passenger side retractor pretensioner connector.
16. Attach the Restraints System Diagnostic Tool 418-133 (40-009) to the vehicle harness side of the passenger side safety belt retractor pretensioner electrical connector.
17. On the driver side, open the D-ring cover and remove the 15mm retaining bolt. Remove the D-ring from the mounting stud.
18. Disengage the pushpins and remove the driver side upper corner trim panel.
19. Disengage the pushpins and position aside the driver side lower corner trim panel. It does not have to be removed.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
10/00

20. Disconnect the driver side retractor pretensioner connector.
21. Attach the Restraint System Diagnostic Tool 418-133 (40-009) to the vehicle harness side of the driver side safety belt retractor pretensioner electrical connector. See Figure 1.

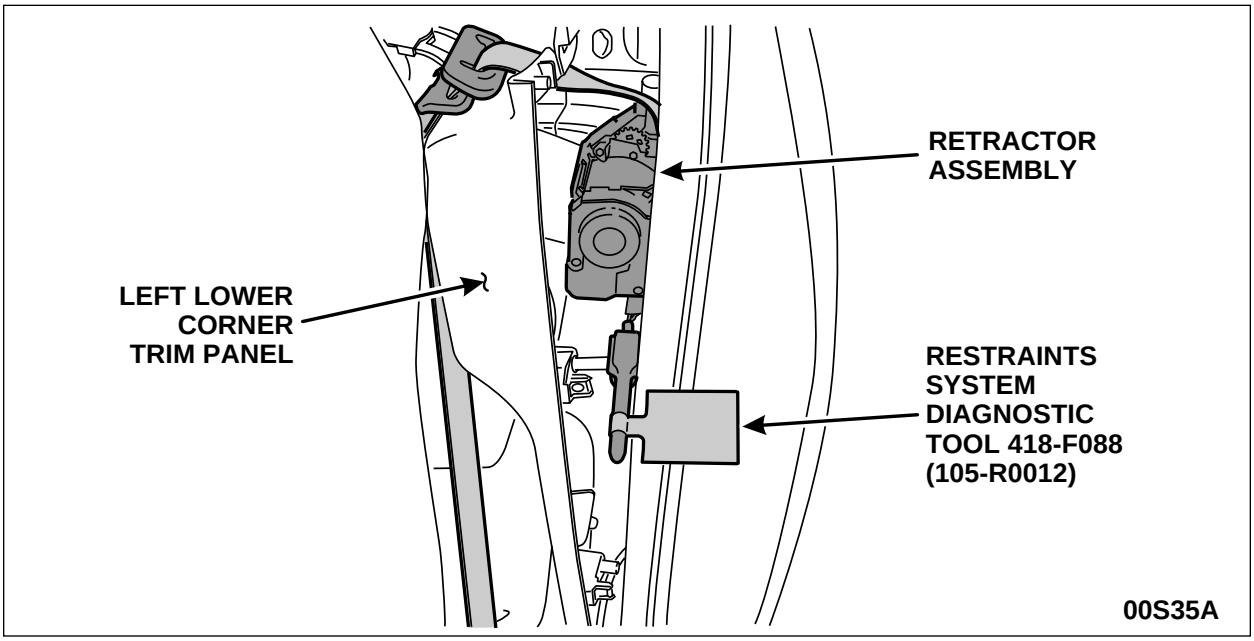


FIGURE 1

22. Connect the battery ground cable.
23. Perform a system proveout by turning the ignition key from OFF to RUN and visually monitoring the airbag readiness light on the instrument panel. The airbag readiness light will illuminate for approximately six (6) seconds and then turn off. If an airbag Supplemental Restraint System (SRS) fault is present, the airbag readiness light will either:
    a) fail to light
    b) remain lit continuously
    c) flash

    The flashing may not occur until after approximately 30 seconds after the ignition switch has been turned from OFF to RUN. This is the time required for the airbag diagnostic monitor to complete the testing of the system.

    If the airbag system requires repair, the repair must be made by a qualified technician. Refer to the appropriate service repair manual for diagnostic procedures.

    If the airbag readiness light remains off and there are no audible tones (beeps) after the proveout, the airbag system is operational.
24. **WARNING: TO AVOID ACCIDENTAL DEPLOYMENT AND POSSIBLE PERSONAL INJURY, THE BACKUP POWER SUPPLY MUST BE DEPLETED BEFORE REPAIRING OR REPLACING ANY AIRBAG SUPPLEMENTAL RESTRAINT SYSTEM (SRS) COMPONENT. TO DEPLETE THE BACKUP POWER SUPPLY ENERGY, DISCONNECT THE BATTERY GROUND CABLE AND WAIT AT LEAST ONE MINUTE. BE SURE TO DISCONNECT AUXILIARY BATTERIES AND POWER SUPPLIES (IF EQUIPPED).**

    Disconnect the battery ground cable and wait at least one minute.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
10/00

25. Remove the driver side seat belt anchor bolt from the floor.
26. Remove the driver side seat belt retractor assembly retainer bolt and remove the assembly from the vehicle.

INSTALLATION

1. NOTE: If the safety belt guide (D-ring) cover is damaged or if it does not remain closed, replace it with a new one.

   Transfer the D-ring cover to the new retractor assembly. Position the new retractor assembly to the left B-pillar and install the retaining bolt. Tighten the bolt to 48 Nm (35 lb-ft).
2. Secure the seat belt anchor bolt to the floor. Tighten the bolt to 48 Nm (35 lb-ft).
3. Remove the Restraint System Diagnostic Tool from the driver side seat belt retractor electrical connector, then connect the harness connector to the retractor connector.
4. Perform a system proveout by turning the ignition key from OFF to RUN and visually monitoring the airbag readiness light on the instrument panel. The airbag readiness light will illuminate for approximately six (6) seconds and then turn off. If an airbag Supplemental Restraint System (SRS) fault is present, the airbag readiness light will either:

   a) fail to light

   b) remain lit continuously

   c) flash

   The flashing may not occur until after approximately 30 seconds after the ignition switch has been turned from OFF to RUN. This is the time required for the airbag diagnostic monitor to complete the testing of the system.

   If the airbag system requires repair, the repair must be made by a qualified technician. Refer to the appropriate service repair manual for diagnostic procedures.

   If the airbag readiness light remains off and there are no audible tones (beeps) after the proveout, the airbag system is operational.
5. NOTE: The trim panel pushpins must be “reset” to make them ready for installation. Push the center button back out so the end of the button is protruding from the face of the pushpin about 1/4 inch.

   Install the driver side lower corner trim panel and secure with pushpins.
6. Install the driver side upper corner trim panel and secure with pushpins.
7. NOTE: If the safety belt guide cover is damaged or if it does not remain closed, replace it with a new one.

   Position the driver side D-ring to the mounting stud and install the retaining bolt. Tighten the bolt to 48 Nm (35 lb-ft). Close the cover.
8. Remove the Restraint System Diagnostic Tool from the passenger side seat belt retractor electrical connector, then connect the harness connector to the retractor connector.
9. Install the passenger side lower corner trim panel and secure with pushpins.
10. Install the passenger side upper corner trim panel and secure with pushpins.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
10/00

11. NOTE: If the safety belt guide cover is damaged or if it does not remain closed, replace it with a new one.

    Position the passenger side D-ring to the mounting stud and install the retaining bolt. Tighten the bolt to 48 Nm (35 lb-ft). Close the cover.

12. Position the seats rearward.
13. Remove the Restraints System Diagnostic Tool from the vehicle harness side of the passenger side airbag electrical connector.
14. Connect the passenger side airbag electrical connector.
15. Install the instrument panel relay cover.
16. Remove the Restraints System Diagnostic Tool from the vehicle harness side of the clockspring electrical connector at the base of the steering column.
17. Connect the clockspring electrical connector at the base of the steering column.
18. Install the instrument panel steering column cover and install the retaining bolts. Tighten the 7 mm screws to 2 Nm (18 lb-in). Tighten the 8 mm screws to 7 Nm (62 lb-in).
19. Position the hood release lever and install the retaining bolts. Tighten the screws to 3 Nm (27 lb-in).
20. Position the parking brake lever and install the retaining bolts. Tighten the screws to 2.5 Nm (22 lb-in).
21. Install the central junction box cover.
22. Connect the battery ground cable.
23. Perform a system proveout by turning the ignition key from OFF to RUN and visually monitoring the airbag readiness light on the instrument panel. The airbag readiness light will illuminate for approximately six (6) seconds and then turn off. If an airbag Supplemental Restraint System (SRS) fault is present, the airbag readiness light will either:

    a) fail to light

    b) remain lit continuously

    c) flash

    The flashing may not occur until after approximately 30 seconds after the ignition switch has been turned from OFF to RUN. This is the time required for the airbag diagnostic monitor to complete the testing of the system.

    If the airbag system requires repair, the repair must be made by a qualified technician. Refer to the appropriate service repair manual for diagnostic procedures.

    If the airbag readiness light remains off and there are no audible tones (beeps) after the proveout, the airbag system is operational.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
10/00