FRONT PASSENGER SEAT TRACK REPLACEMENT

AFFECTED VEHICLES: **CERTAIN 2002 MODEL YEAR F-250 THROUGH F-550 SUPER DUTY, CREW CAB LARIAT AND XLT**

OVERVIEW

This document details the procedure for removing the front passenger seat assembly, replacing the existing manual seat track assembly with a power seat track assembly, and then installing the seat assembly into the vehicle.

SERVICE PROCEDURE

1. Move the front passenger seat to its forward most position.
2. Open the hood and remove fuse 18 from the power distribution box.
3. Remove the two (2) rear seat mounting stud beauty caps, then remove the two (2) rear seat riser support-to-floor pan nuts.
4. Disconnect the seat belt warning indicator electrical connector.
5. Remove the two (2) front seat riser support-to-floor pan bolts.
6. Remove the seat assembly from the vehicle and place it onto a clean work area.
7. Remove the two (2) rear seat riser support-to-floor pan anchor studs from the vehicle and discard them. See Figure 1.

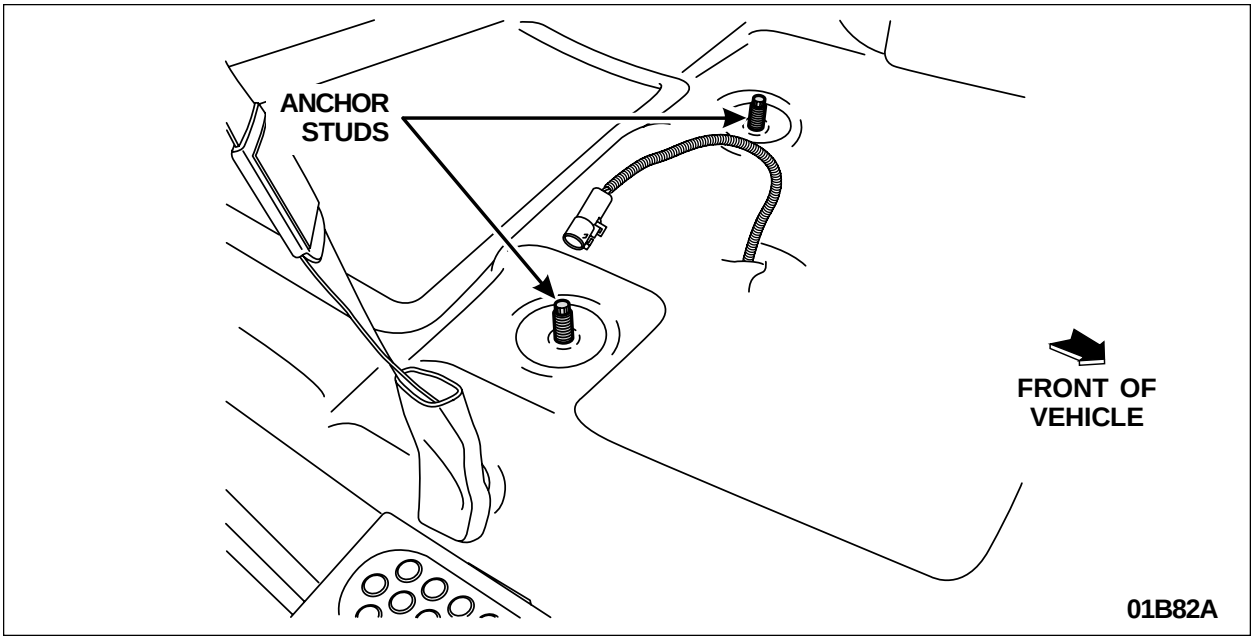


FIGURE 1

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01

8. Remove the seat trim cover as follows:
   a) Remove the lumbar support knob by pulling it from the shaft, then discard the knob.
   b) Remove the recliner handle retaining screw and remove the handle.
   c) Remove the four (4) screws and the one (1) push pin that secure the trim cover to the seat assembly.
   d) Remove the trim cover from the seat assembly and disconnect the heated seat switch electrical connector.
9. Remove the heated seat switch from the seat trim cover by depressing the retaining tabs and pushing the switch through the trim cover. Discard the seat trim cover.
10. Remove the seat belt buckle from the seat track and discard the nut.
11. Remove the four (4) nuts securing the seat track risers to the seat track, then remove and discard the seat track risers, anchor bracket and nuts. See Figure 2.

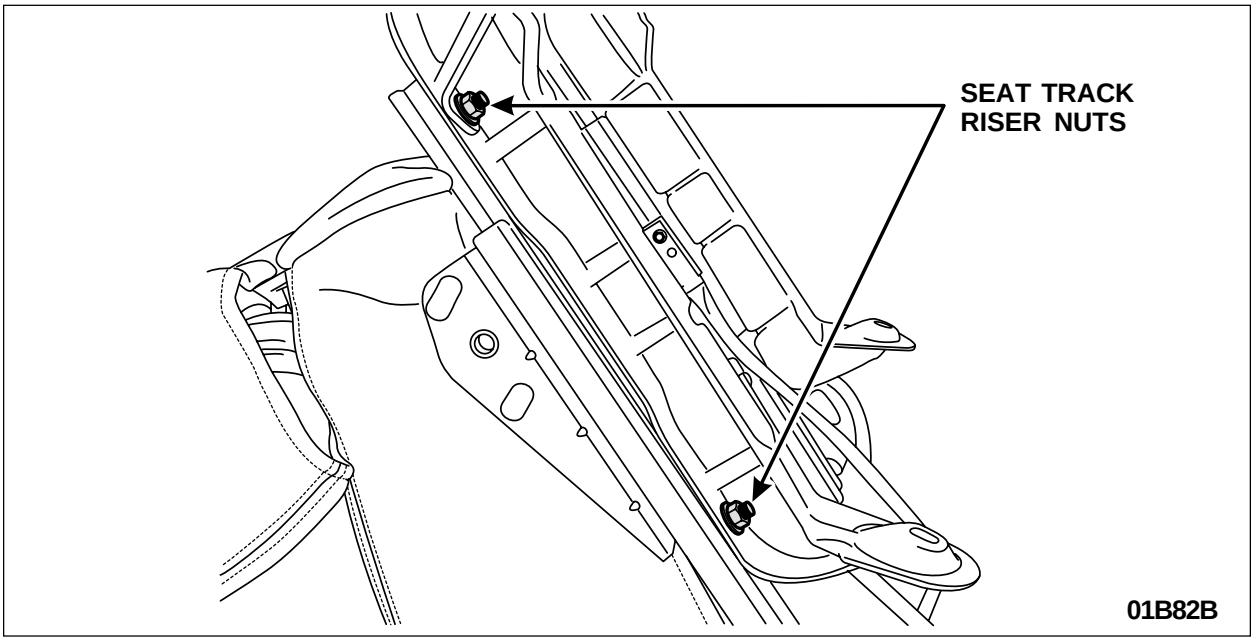


FIGURE 2

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01

12. NOTE: Position the seat track as necessary to gain access to the seat track-to-cushion bolts.

    Remove the four (4) seat track-to-cushion bolts, then discard the bolts and seat track. See Figure 3.

13. Disconnect the heater module electrical connector and the two (2) seat heater element electrical connectors. See Figure 3.

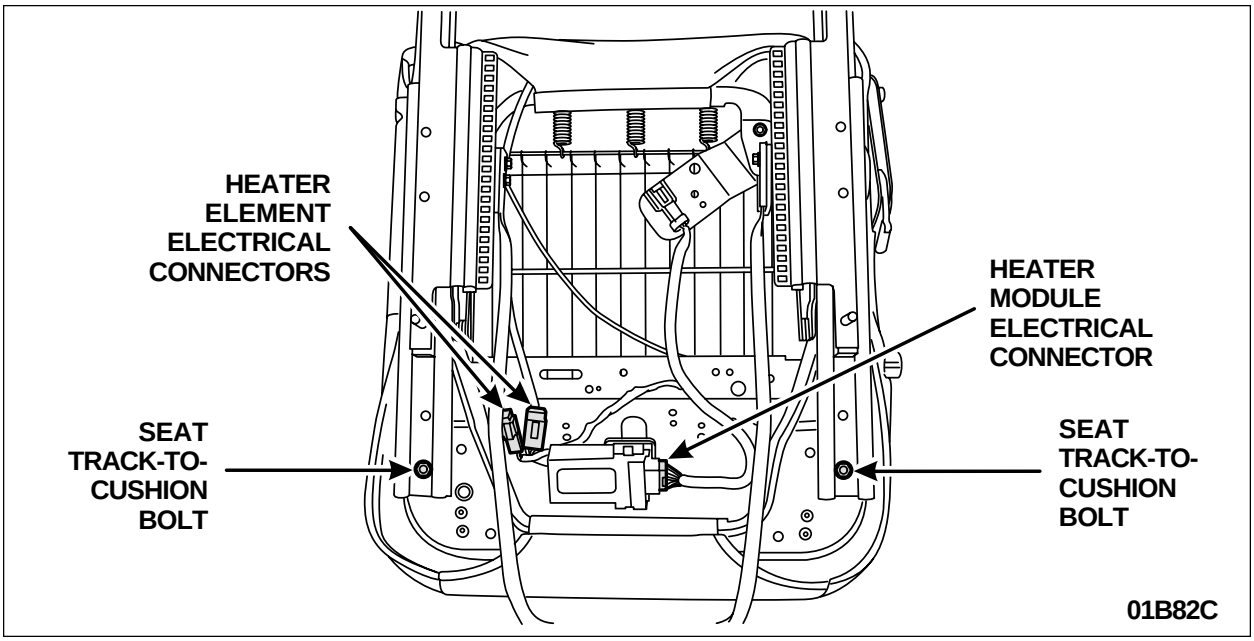


FIGURE 3

14. Remove the wire harness from the seat cushion pan and discard it.

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01

15. Route the provided power seat switch through the existing hole in the cushion pan and seat cover. See Figure 4.

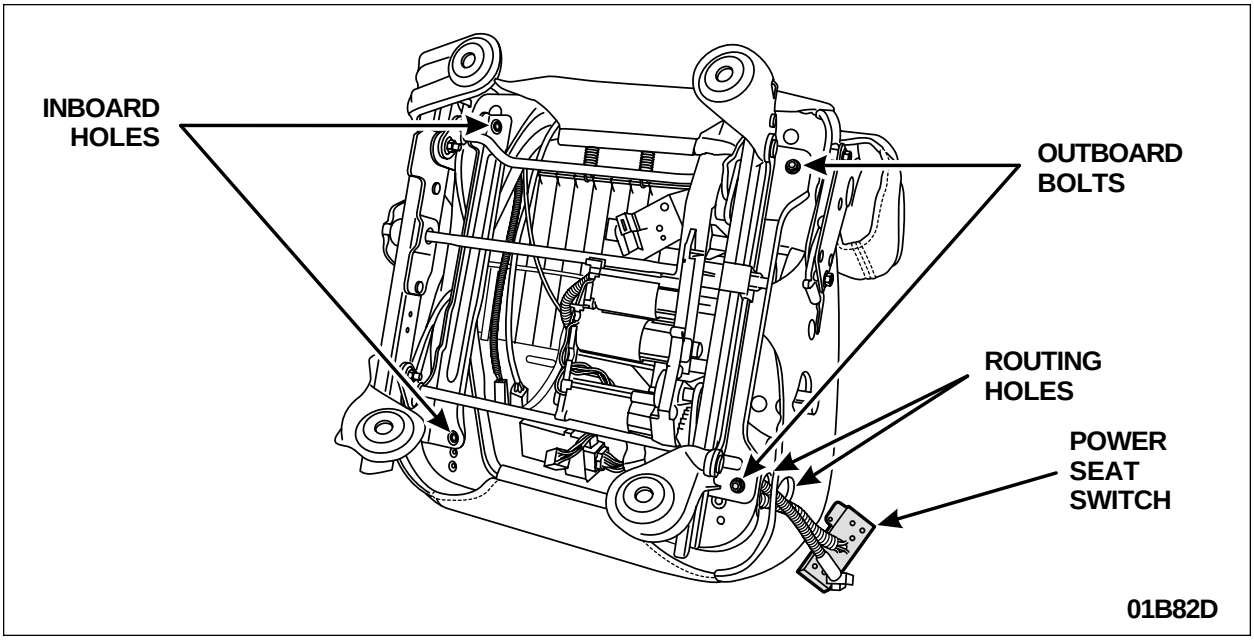


FIGURE 4

16. Install the ***new*** wire harness onto the seat cushion pan and connect the following electrical connectors:
    a) the heater module electrical connector.
    b) the two (2) seat heater element electrical connectors.
    c) the power seat switch electrical connector to the black 8-pin electrical connector.
17. **CAUTION: Make sure the wire harness is properly routed and is not pinched when installing the seat track.**

    Position the ***new*** seat track onto the seat cushion and install two (2) of the ***new*** seat track-to-cushion bolts on the outboard side of the seat cushion pan. Do not tighten the bolts at this time. See Figure 4.
18. NOTE: The power seat track uses different inboard hole locations than the manual seat track. The supplied seat track-to-cushion bolts are designed to be self-tapping. Do not use power or air tools to install the two (2) inboard bolts.

    Install the remaining two (2) ***new*** seat track-to-cushion bolts into the seat cushion pan. Tighten all four (4) seat track-to-cushion bolts to 25 Nm (19 lb-ft).
19. Connect the power seat motor electrical connector to the brown 8-pin electrical connector of the wire harness.
20. Install the power seat switch onto the ***new*** seat trim cover.

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01

21. **CAUTION: The screws for the seat trim cover and seat recliner handle can be easily stripped. Use caution when installing these screws.**

    NOTE: The tab on the seat trim cover must go between the seat cushion and the hinge to be properly installed.

    Install the seat trim cover as follows:

    a) Position the trim cover onto the seat assembly (see Figure 5) and connect the heated seat switch electrical connector.
    b) Install the four (4) screws and one (1) ***new*** push pin that secure the trim cover to the seat assembly.
    c) Position the recliner handle and install the retaining screw.
    d) Install the ***new*** lumbar support knob by aligning the slots inside the knob with those on the shaft and push it into place. The knob will make a "click" noise when properly installed.

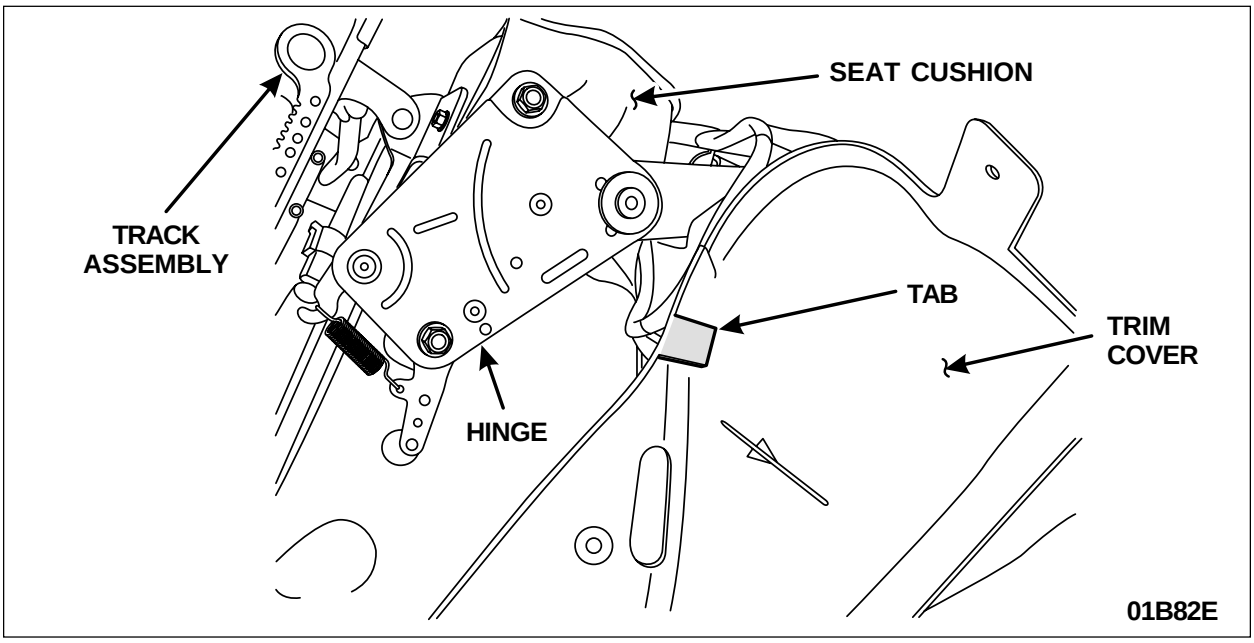


FIGURE 5

22. Position the seat belt buckle onto the stud and install the ***new*** nut. Tighten the nut to 35 Nm (26 lb-ft).
23. Install the one (1) ***new*** rear seat riser support-to-floor pan anchor stud into the inboard hole. The outboard stud is being replaced with the supplied bolt. Tighten the stud to 55 Nm (41 lb-ft).
24. Position the seat assembly into the vehicle.

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01

25. Connect the seat belt warning indicator electrical connector and the gray 4-pin seat harness electrical connector.
26. Install the two (2) ***new*** front seat riser support-to-floor pan bolts. Tighten the bolts to 55 Nm (41 lb-ft).
27. Install the one (1) rear seat riser support-to-floor pan nut and the one (1) rear seat riser support-to-floor pan bolt. Tighten the nut and the bolt to 55 Nm (41 lb-ft).
28. Install one of the rear seat mounting stud beauty caps onto the nut and discard the other cap.
29. Install fuse 18 into the power distribution box and close the hood.
30. Check the power seat and heated seat operation.

Ford Motor Company

CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01