DRIVERS


TF037-1001-D

Dedicated to the Micro Blower TF037 series.

The drivers enable users to vary the speed of the motor by adjusting the control voltage of the external input.

Contents of the kit are Driver board and Harness (2 types).

Wire Harness: for Driver-Blower connection for Driver-Power connection

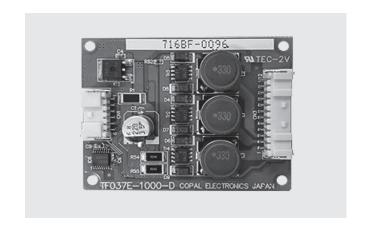


STANDARD SPECIFICATIONS

• Unless otherwise specified, the environmental conditions are 23°C±5°C,normal humidity, and atmospheric pressure range 90 to 106kPa.

No.	Item	Specification										
1	Configuration		Drivers(Dedicated to the Micro Blower TF037 series)									
2	Rotational Speed	40,000 r/min (reference value) at 4.0kPa, 100L/min										
3	Power Consumption		29W max.at 4.0kPa, 100L/min									
4	Rated Voltage	DC 24 V±10%										
5	Max. Input Current	2.0 A max.(DC) 4.0 A max.(Pulse) (Excluding inrush current)										
6	Running Current	1.2 A max.at 4.0kPa, 100L/min										
7	Weight		32 g max.									
8	Operating Temperature		-10∼50 °C									
9	Operating Humidity Range	10∼90 %RH (No condensation)										
10	Storage Temperature	-20∼60 °C										
11	Storage Humidity Range	10~90 %RH (No condensation)										
		To mee	et the Spec after the following test									
		Kind of Vibration	Sweep									
10	Resistance to	Frequency	10 ∼ 22Hz amplitude 1mm	N 6								
12	Vibration	Range	22 ~ 50Hz 19.6m/s² (2G) (acceleration)	Non-operating								
		Sweep	to-and-fro, approx. 5min.									
		Test Time	X, Y, Z directions, 60min. each									
		To mee	et the Spec after the following test									
		Acceleration	294m/s²(30G)	Non-operating								
13	Resistance to Shock	Pulse Width	6ms									
		Shock Waven	emi-sinusoidal wave									
		Number of Shock	X, Y, Z, directions, once per each direction									

TF037-1001-D MICRO BLOWER DRIVERS

■ INTERFACE

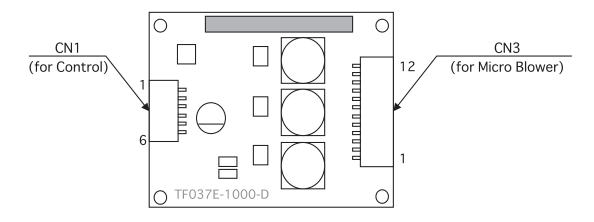

[CN1 : Connector for Control]

Manufacturer	J.S.T. Mfg. Co., Ltd.
Part No.	SM06B-PASS

Pin No.	Symbol	Signal
1	Error	Error Output
2	FG	Rotational Speed Signal Output (FG)
3	BR	Short brake Input
4	CNT	Control Voltage Input
5	Vcc	Power Supply Voltage Input
6	GND	GND

[CN3 : Connector for Micro Blower]

Manufacturer	J.S.T. Mfg. Co., Ltd.
Part No.	SM12B-PASS

Pin No.	Symbol	Signal					
1	U	Motor Coil					
2	W	Motor Coil					
3	V	Motor Coil					
4	TH	Thermistor Input					
5	GND	GND					
6	H1+	Hall Flament 1 Innut					
7	H1-	Hall Element 1 Input					
8	H3+	Hall Flament 2 Innut					
9	H3-	Hall Element 3 Input					
10	H2+	Hall Flomont 2 Input					
11	H2-	Hall Element 2 Input					
12	Vcc	Hall Element Power					

TF037-1001-D

MICRO BLOWER DRIVERS

■ CN1(CONNECTOR FOR CONTROL)SPECIFICATIONS


Pin No.	Symbol		Specification
1	Error	Error Output Undetected Detection	1 Micro-controller Error
2	FG	Rotational Speed Signal Output(FG) 12 pulse / rev. Open Collector Output Max. Voltage : 50V Max. Output Current : 3mA	Z ! FG O Tr1 (RT1N441U) (FG)
3	BR	Short brake Input L=Rotation H=Short brake	$\langle Driver side \rangle$ $\begin{array}{c} 3 \\ BR \\ \hline & 100p \\ \hline & 4.7k\Omega \\ \hline & GND \end{array}$
4	CNT	Control Voltage Input Input Voltage for Standby:0V Input Voltage for Operation: 1.0 to 5.0V	<pre>CDriver side> 4</pre>
5	Vcc	Power Supply Voltage Input DC24V±10%	5 Vcc1 + 17777 220μF
6	GND	GND	1 11111 220μF 6 0

PROTECTIVE FUNCTIONS

Attached Driver Board is featured with the following protective functions.


Protective Functions	Description
High Temperature	Power will be turned off when the thermistor inside the Blower exceeds 86°C.
High rotational	Power will be turned off when the rotational speed exceeds 45,000 r/min.
Overcurrent	Power will be turned off when the coil current exceeds 1.9A (except start-up).
Motor Lock 1	Power will be turned off when coil current and rotational speed are in the "Motor Lock Protection Area" shown in Graph 2 below.
Motor Lock 2	Power will be turned off when the Blower does not operate even when the PRODUCT is giving command to operate.

PROTECTIVE AREA

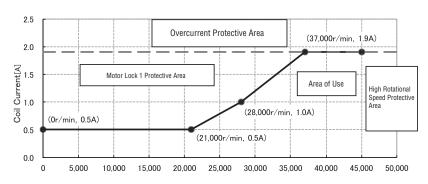

Rotational Speed[r/min]

[Monitor / Control Flow]

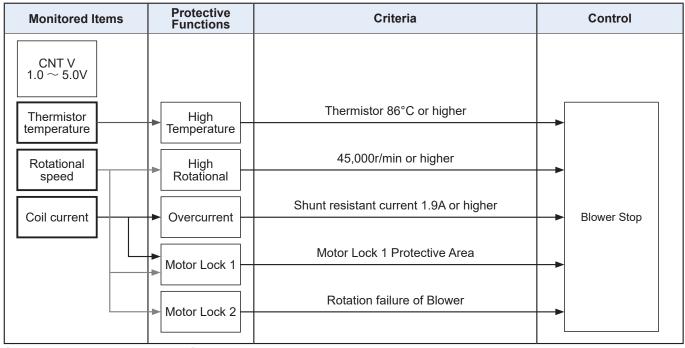


《Restart Conditions After Blower Stop》 Restart with turning the power on again.

TF037-1001-D


MICRO BLOWER DRIVERS

OUTLINE DIMENSIONS

Unless otherwise specified, tolerance: ± 0.5(Unit: mm)

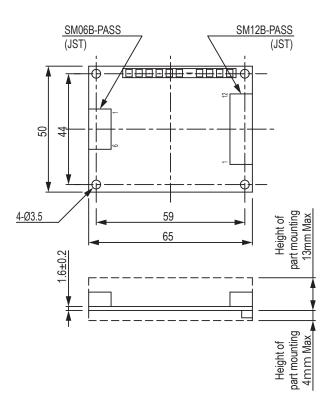

MARKING

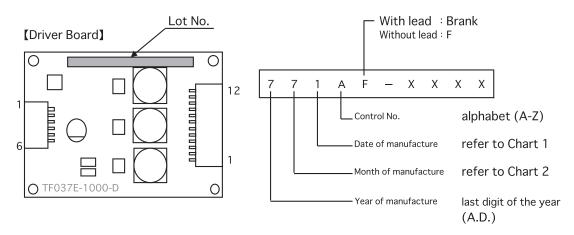

[Chart 1]

Date	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Code	1	2	3	4	5	6	7	8	9	Α	В	С	D	Е	F	G	Н	J	K	L

Date	21	22	23	24	25	26	27	28	29	30	31
Code	М	N	Р	Q	R	Т	U	V	W	Χ	Υ

[Chart 2]

Month	1	2	3	4	5	6	7	8	9	10	11	12
Code	1	2	3	4	5	6	7	8	9	0	N	D