

Bluwash Bidet

USER GUIDE

**BW-101
BW-102
BW-103**

Preparation

Installation

Operation

Maintenance & Cleaning



 **DYNE GLOBAL CO.,LTD.**

178-50 Myeonmok2-dong
Jungnang-gu Seoul, 131-820, Korea.
Tel:+82-2-432-2639 Fax:+82-505-242-2067



This user guide contains the product warranty certificate.

Be sure to read this user guide carefully before use.

■ 220V ~ 240V, 50Hz C E Ver 1.0

 **DYNE GLOBAL**

CONTENTS

Preparation	Installation	Operation	Maintenance & Cleaning
1. Safety Instructions	4		
2. Product Characteristics	8		
3. Designation of Each Component	9		
4. Installation	11		
5. Trial Operation	13		
6. Disassembly of Product	14		
7. How to Use the Product	16		
8. User Settings	20		
9. Maintenance & Cleaning	22		
10. Before requesting repair	24		
11. Product Specifications	25		
12. Comparison Chart	26		
13. Warranty Information	27		

Bluwash...

THIS UNIT WAS MANUFACTURED FOR HOUSEHOLD USE ONLY.
READ ALL OPERATING INSTRUCTIONS BEFORE INSTALLATION.

Notes

- 1.This product should be installed according to this manual.
- 2.Please read this manual carefully and install properly.
- 3.Please save this manual and place it at an easily accessible place.
- 4.Do not attempt to service this appliance yourself. Doing so could void warranty.

CONTENTS

1. Safety Instructions	4	Preparation
2. Product Characteristics	8	Installation
3. Designation of Each Component	9	Operation
4. Installation	11	Maintenance & Cleaning
5. Trial Operation	13	
6. Disassembly of Product	14	
7. How to Use the Product	16	
8. User Settings	20	
9. Maintenance & Cleaning	22	
10. Before requesting repair	24	
11. Product Specifications	25	
12. Comparison Chart	26	
13. Warranty Information	27	

Bluwash...

THIS UNIT WAS MANUFACTURED FOR HOUSEHOLD USE ONLY.
READ ALL OPERATING INSTRUCTIONS BEFORE INSTALLATION.

Notes

- 1.This product should be installed according to this manual.
- 2.Please read this manual carefully and install properly.
- 3.Please save this manual and place it at an easily accessible place.
- 4.Do not attempt to service this appliance yourself. Doing so could void warranty.

01.Safety Instruction

● Each symbol refers to the followings:

- ⚠ Warning** Risk of death or lethal damage when violating the instructions
⚠ Caution Risk of injury or material damage when violating the instructions

● Each pictorial indication means the followings:

 means prohibition


-  Disassembly is not allowed  Don't touch with wet hand  Use of fire prohibited
 Don't spray water  General prohibition

 means obligation


-  Obligatory Instruction  Grounding Connection

⚠ Warning

Disassembly, modification or repair is not allowed.
► Risk of electric shock or fire.

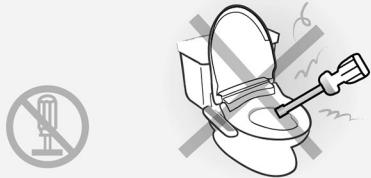

Don't plug or touch the power cord with wet hands.
► Risk of electric shock.

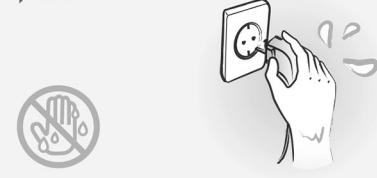

Don't spray water on the main body of product or power plug.
► Risk of electric shock or fire



Don't use the damaged power cord or outlet.
► Risk of electric shock or fire



⚠ Warning


Don't fail to do grounding.

- Always use the outlet that encloses the earth electrode (Earth terminal mounting outlet-check if there is earth or not).
► In case there is no earth electrode, do grounding separately.
► When it is not grounded, it causes the failure and electric shock.



Insert the power plug correctly in 220~240V exclusive outlet.

- Risk of heat or fire.

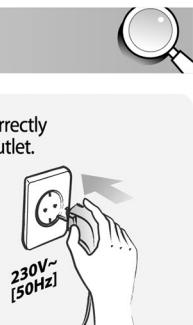


Don't locate the cigarette or flammable materials near the product; Don't throw the cigarette into the product.



Don't connect the product to the water pipe of industrial use.

- Risk of causing dermatitis of user.

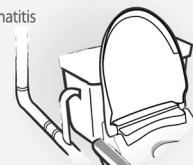

Don't connect power to the product before its complete installation on the toilet.



When the power cord or plug is damaged, always inform the service center, and replace if required.



Don't block the hot air hole nor put any object or hand on the hole.

- Risk of burn or electric shock.
(DIB-1300, 1500' only)



When removing the product from toilet, always release the power plug first.

- Risk of electric shock.



01.Safety Instruction

⚠ Caution



Don't stand on the product ; don't put heavy object on it.

► Risk of injury or damage to the product.



Don't force to lean against the cover of toilet.

► Risk of failure.



Don't bend the connecting hose ; don't force to pull it out.

► It may cause stoppage of water supply or leakage.



Don't force to close the cover of toilet.

► Risk of failure.



When cleaning, don't use toilet-use detergent, benzene, thinner, etc.

► Risk of damage to the product or crack.



Be cautious low temperature burn.

► When the skin has been in contact with a seat for a long time, it may cause low temperature burn. The seat temperature should be set on Low or off when the unit is used for children, elderly persons, persons who cannot control the temperature by themselves.



⚠ Caution



When the product is not used an extended period of time, remove the power plug and drain the water out of the product tank.

► It may cause the water rotten and result the skin disease.



Don't use with the product out of order.

► When it is out of order, remove the plug from the outlet and inform the service center.

► Otherwise, it may cause fire or electric shock.



Preparation


When installing, push it in until it sounds 'Click'.

► It may cause water leakage or mal-operation.



Don't place the removed product upside down.

► Risk of the product failure.

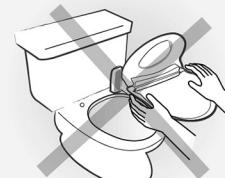

dib

02. Product Characteristics

Bluwash bidet has the following characteristics:

Continuous Warm Water Supply

Enjoy continuous warm water throughout the wash cycle.



Bubble Wash

Aerated water wash adds cleaning comfort.



Pulse

Pulsating wash repeatedly cycles from weak to strong.



Energy Saving Function

It finds out the time frame when used frequently, realizing the maximum energy saving effect.



Power wash

Soft but powerful water wash for added cleansing benefit.



Massage

Nozzle moves back and forth for massage effect.



Deodorization Function (BW-103 Only)

Semi-fundamental deodorizing filter provides odor-free during use.




Kids Settings

Specialized nozzle position and water pressure for children.



03. Designation of Each Component


Main Body

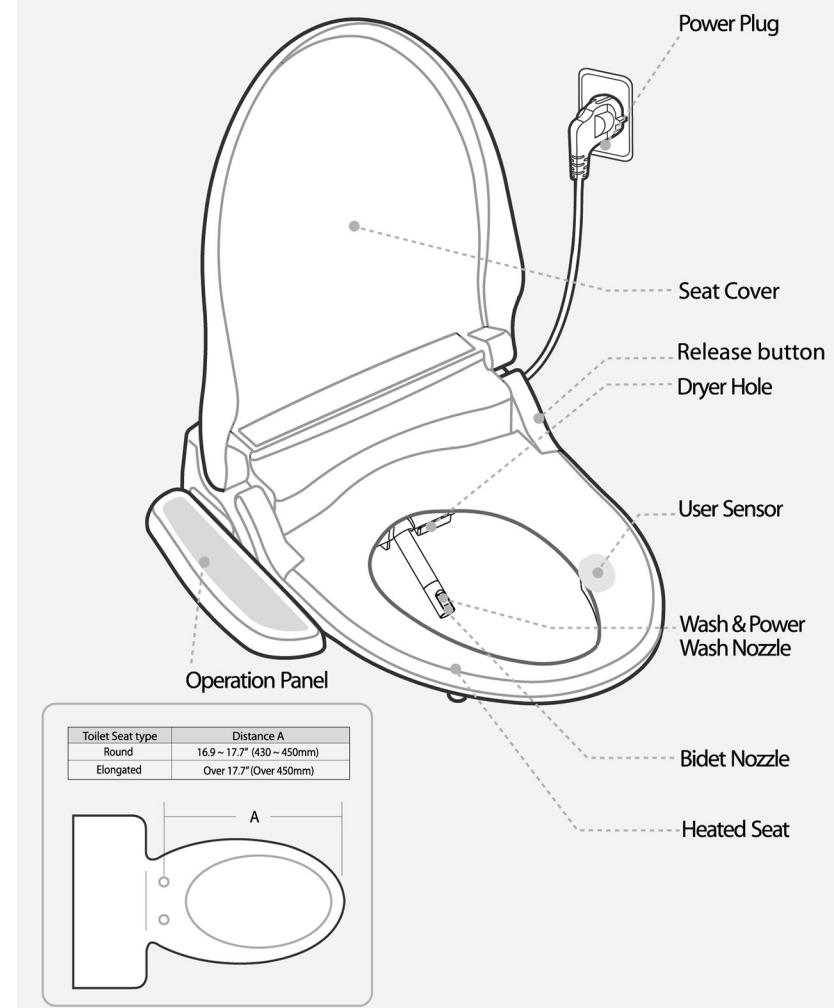


Preparation

03.Designation of Each Component

Operation Panel

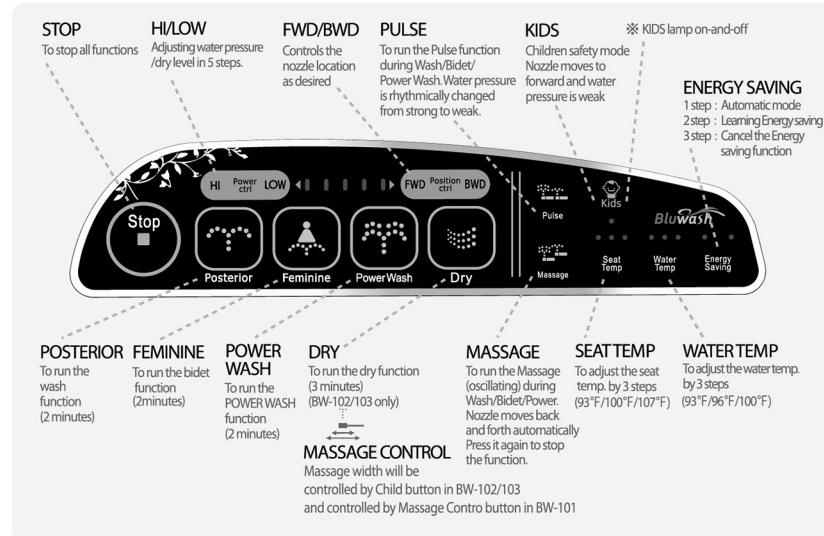

Accessories

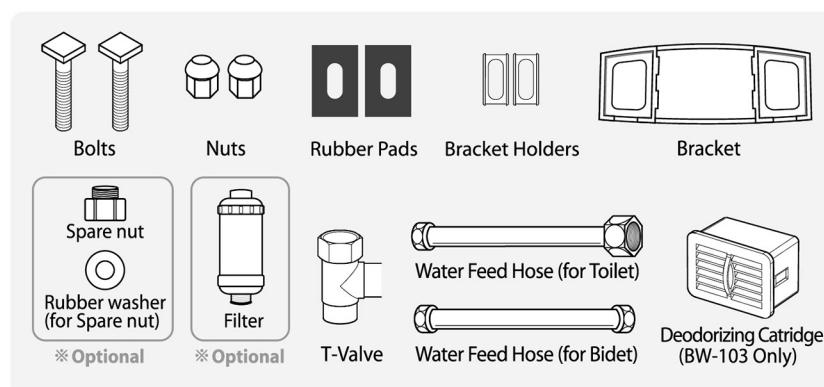


04.Installation

Order of Installation

- 1 Remove the seat from the existing toilet body.
 - ▶ Release the nuts, and then remove the seat and cover from it.
 - ▶ Keep the removed seat, cover and nuts well in a proper place.




- 2 Close the water feed valve by turning it clockwise, and then drain the toilet water tank out.

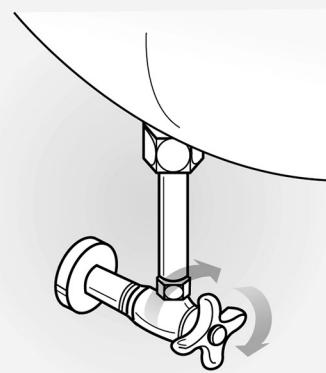

- 3 Remove the water feed pipe and then install T-valve.
 - ▶ Keep the removed water feed pipe well in a proper place. It may be useful when moving house to other place later.




- 4 Connect the toilet-use hose.

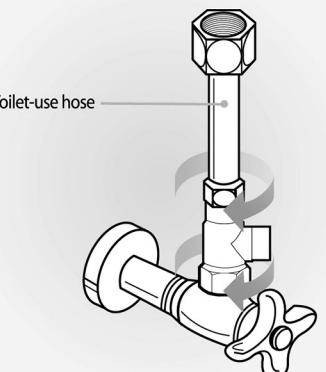

Installation


04. Installation

- 5 Fix the bracket onto the toilet first.

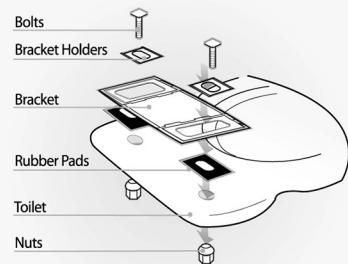


▶ Adjust the seat and the front part of toilet back and forth so that they can correspond with before fastening the nuts.

- 6 Push the main body toward the bracket completely.

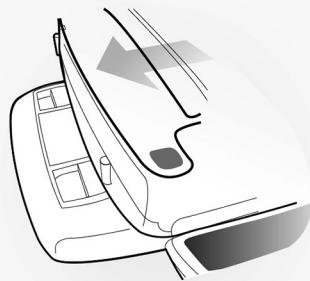


▶ Push it in until it sounds 'click'.
▶ When the product is not installed well, it may cause leakage.

- 7 After installing the filter onto the T-valve, connect the bidet-use hose to the bidet body.

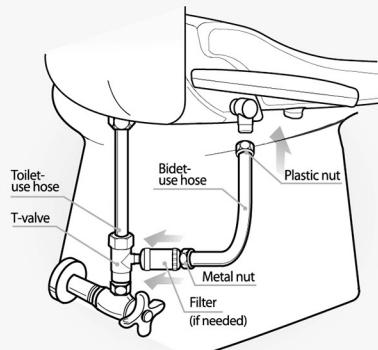


- 8 Insert the deodorizing cartridge into the bidet body.
(BW-103 Only)

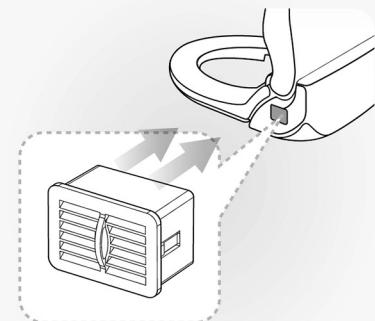


05. Trial Operation

Order of Trial Operation

- 1 Open the water feed valve by turning it anti-clockwise.

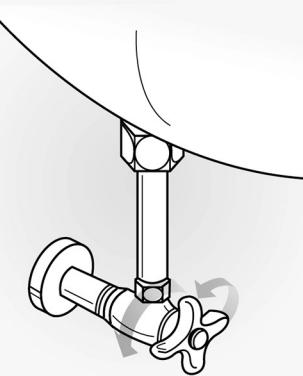

- 2 Be sure of no leakage around the hose connection.

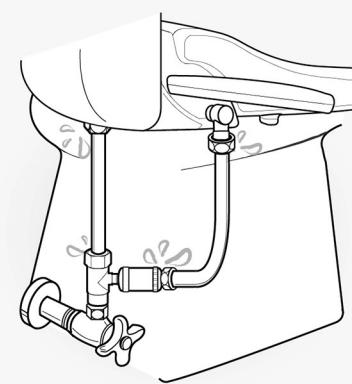


- 3 Be sure that logo light on the top turns on and nozzle comes and retracts when powered on.

▶ Don't plug the power cord with wet hands. Risk of electric shock.



- 4 When the unit is powered on, water tank will be filled immediately. Check if water comes out from drain hole for 1~2 seconds.

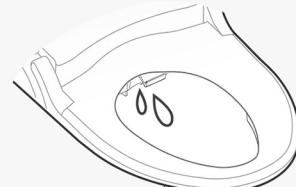


06. Disassembly of Product

Order of Disassembly


- 1 Remove the power plug from the outlet.




- 2 Close the water feed valve by turning it clockwise, completely drain out the toilet water tank, release the nuts at bidet body of the bidet hose, and then remove them from main body.

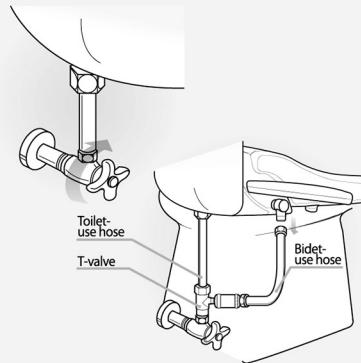


- 3 Press the release button on the side of bidet, completely drain the water from the water tank. After drain the water throughly, pull the main body forward, and then remove it from the toilet.

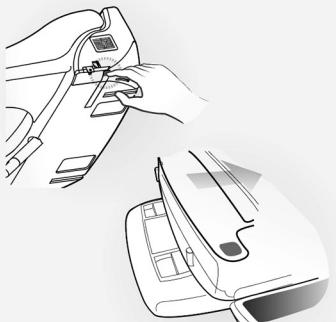


- 4 Release the nuts, and then remove the brackets from the toilet.

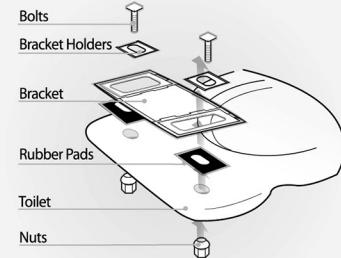


- 5 Remove bidet hose, toilet-use hose and T-valve.

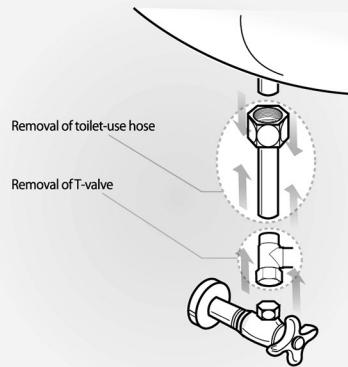

- 6 Connect the water feed pipe that was removed when the bidet was installed.

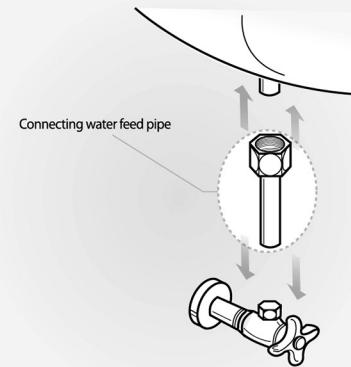

- 7 Open the water feed valve by turning it anti-clockwise. Be sure of no leakage around the water feed connection.

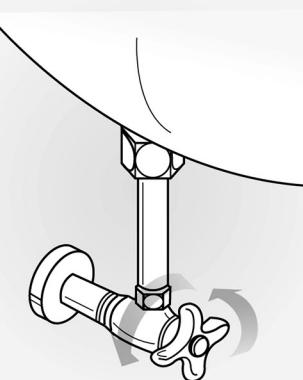

- 8 Attach to the toilet the seat and cover that were removed when the bidet was installed.




Installation

07. How to Use the Product

Basic Operation Method

1 Sit on the toilet seat.

- Be sure to sit on the user sensor of seat. If the sensor is not occupied, functions will not work. Deodorizing function starts automatically.

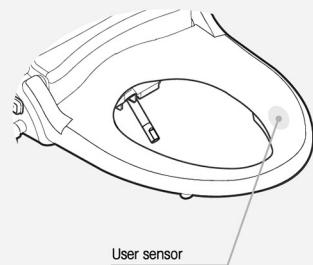

3 Press the DRY Button(BW-102/103 only).

- Hot air indicator lamp will lights on. (5 levels available)
- Selected function may be used for three (3) minutes.
- Drying effect will be improved if you wipe the moisture lightly before operating the drying function.



Dry

2 Press Posterior, Feminine, Power Wash Buttons.

- Selected function can be used as desired.
- After Posterior/Feminine/Power Wash, automatically dryer works. (Automatic dry BW-102/103 only)
- For sitz bath, press "Posterior" again. Sitz bath works for 5 minutes at set temperature.



Power Wash Feminine Posterior

4 Press the STOP Button.

- Selected functions stop.
- Press "STOP" on the side control panel for 3 seconds to turn off the unit.



5 MASSAGE Wash

- When Pressing the MASSAGE button, nozzle location will be changed back and forth to wash the wider range.
- When pressing the "Kids" button during the operation of MASSAGE, the moving distance can be adjusted within 5 steps.

Massage



6 PULSE Wash

- When the pressing PULSE button during the operation of Posterior/Feminine/Power Wash, water pressure will repeat HIGH/LOW level for smooth pulsating wash.

Pulse



7 Water Pressure Control

- Pressing HIGH/LOW button enables the control of water pressure.
- When any foreign material blocks the water pipe filter, it may cause the low water pressure. Regularly check it for its stable use.



Power ctrl



8 Nozzle Position Control

- Nozzle position can be controlled by pressing FWD/BWD



Position ctrl



Consult your doctor before using Power Wash function in situations of anal disease/surgery.

07. How to Use the Product

Basic Operation Method

9 Kids Function

- ▶ For child use, press the "Kids" button first (Kids lamp will light on), nozzle position, water pressure and seat temp. will be adjusted.
- ▶ Nozzle moves forward more than adult wash.
- ▶ Water pressure is weaker than adult wash.
- ▶ Seat temp. drops down by 4°C from set level.



11 WATER TEMP CONTROL

- ▶ When pressing the WATER TEMP.CONTROL button, the temperature of water can be controlled within the range of room temperature, 34°C/36°C/38°C



10 Seat Temperature Control

- ▶ When pressing the SEAT TEMP.CONTROL button, the temperature of seat can be controlled within the range of room temperature, 34°C/38°C/42°C
- ▶ If the seat temperature reaches 34°C or more, the seat temperature indicator turns in RED. If not (under 33°C), it remains in BLUE.



12 ENERGY SAVING Function

- ▶ Automatic Energy Saving Function
 - # When pressing the button once, it enters into automatic energy saving mode.
 - # Seat temperature will be kept at 32°C.
 - # When sitting on the seat to use bidet, it turns to the pre-designated temperature; When getting out of the seat, it returns to the automatic energy saving mode.
- ▶ Learn Energy Saving Function
 - # When pressing the button twice, it enters into the learn energy saving mode.
 - # Learn energy saving enables MICOM to detect the time frame used by the users. It releases the energy saving function at the higher-frequency time frame to set the temperature of seat at the pre-designated level, while setting it at 32°C when the using frequency is lower, enabling the excellent energy saving effect.
 - # When using it at the lower frequency time frame, the preset temperature will increase during the time the user sits on the seat.
 - ▶ When pressing the button three times, the energy saving mode will be released.
- * This product adopts the rapid water-heating method, and therefore doesn't consume the unnecessary power to operate the heater for the purpose of keeping the water temperature. It means its power consumption is far less than the electronic bidet seats of other suppliers.

13 Deodorizing function(BW-103 only)

- ▶ When sitting on the seat, the deodorizing function starts automatically.
- ▶ Speed of deodorizing fan can be controlled. (refer to the User setting facilities, P.22)
- ▶ After the usage of bidet, the deodorizing function will operate for one (1) minute.



Consult your doctor before using Power Wash function in situations of anal disease/surgery.

14 Nozzle Cleaning

- ▶ While not sitting on the seat, and pressing the WASH button three seconds, the nozzle will move forward at its maximum distance so that the user can clean it easily (it will return after 2 minutes)
- ▶ When pressing STOP button, the nozzle will return and operate self-cleaning operation.



User Instructions

- ① Instructions and caution statements for cleaning, user maintenance, operations recommended by the manufacturer, such as lubrication or nonlubrication, and a warning to the user that any other servicing should be performed by an authorized service representative or that the product has no user serviceable parts. The manual or other literature packaged with the product shall also indicate the product is for household use.
- ② Specific instructions for the proper method of cord storage, total product storage, and the like when the product is not in use; and for cord care while in use, such as for hand supported products, untwisting, and the like.

08.User Settings

● : Seat Switch 'Off' Status ○ : Seat Switch 'On' Status ◯ : Regardless of On/Off

No	Function	Seat Status	Switch Operation	Description	Initial Status								
1	Automatic Massage Preset/Release	○	Press MASSAGE button for 3 sec. or longer while in standby status (Same in case of releasing)	When pressing WASH, BIDET, POWER WASH button, MASSAGE will operate automatically even if not press the MASSAGE button.	CANCEL								
2	Automatic Pulse Preset/Release	○	Press PULSE button for 3 sec. or longer while in standby status (Same in case of release)	When pressing WASH, BIDET, POWER WASH button, PULSE will operate automatically even if not pressing the PULSE button.	CANCEL								
3	Operating Signal Cancel	●	Press MASSAGE for 3 sec.	Use when turning off the operating signal	Operating Signal is turned on								
4	Selecting the operating time of WASH, (BIDET, POWER WASH) and DRY	●	Press 'Backward' and 'Low' buttons for longer than 3 sec. Preset Mode: Selecting the desired time by the buttons of High/Low, Forward/Backward.	<ul style="list-style-type: none"> Using High/Low button, select the desired washing time. <table border="1"> <tr> <td>High</td> <td>Low</td> </tr> <tr> <td>5M 3M 2M 1M 30S</td> <td></td> </tr> </table> <ul style="list-style-type: none"> Using Forward/Backward button, select the desired drying time <table border="1"> <tr> <td>Forward</td> <td>Backward</td> </tr> <tr> <td>5M 4M 3M 2M 1M</td> <td></td> </tr> </table>	High	Low	5M 3M 2M 1M 30S		Forward	Backward	5M 4M 3M 2M 1M		Washing 2 Min. Drying 3 Min.
High	Low												
5M 3M 2M 1M 30S													
Forward	Backward												
5M 4M 3M 2M 1M													
5	Selecting the speed of deodorizing fan:	○	While pressing the STOP button, press the Water Temp button	Press the Water Temp button to select the desired speed.	High speed while seated, High speed while unseated.								


No	Function	Seat Status	Switch Operation	Description	Initial Status
6	Saving the washing water pressure /nozzle position	○	Pressing WASH button for 3 sec. during the operation of WASH	Saving the present operating condition. Even if other user uses the different pressure and position, when he gets out of the seat, it will automatically return to preset level.	Water pressure 3 steps Nozzle 3 steps.
7	Saving the bidet water pressure and nozzle position	○	Pressing BIDET button for 3 sec during the operation of BIDET	Saving the present operating condition. Even if other user uses the different pressure and position, when he gets out of the seat, it will automatically return to preset level.	Water pressure 3 steps Nozzle 3 steps.
8	Saving the Power Wash water pressure and nozzle position	○	Pressing Power Wash button for 3 sec during the operation of Enema Wash	Saving the present operating condition. Even if other user uses the different pressure and position, when he gets out of the seat, it will automatically return to preset level.	Water pressure 3 steps Nozzle 3 steps.
9	Turning off	●	Press STOP button for 3 sec.	Press one of STOP, WASH, BIDET and POWER WASH to turn on the unit.	
10	Initialization	●	Press STOP button for 5 sec.	Initializing all the functions to the initial status.	

Operation

09.Maintenance & Cleaning

Cleaning of Water pipe filter

- ① Close the water feed valve by turning it clockwise.
- ② Disconnect the water supply hose. Take the screen filter out and clean it with soft brush. (e.g. toothbrush)
- ③ After cleaning, place it back. Then connect the water supply hose.
- ④ Open the water feed valve by turning it anti-clockwise.

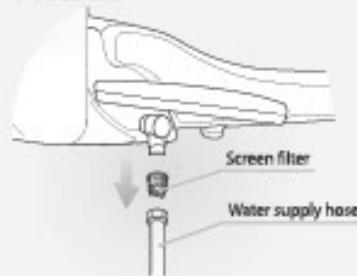

Cleaning of Bidet Body

- ① Exterior surface of bidet is made of plastic material, which may be damaged by scrubbers, chemicals, etc.
- ② Wipe the surface with a soft cloth wet and squeezed completely. Don't spray water directly onto the surface with the bath-use shower device.
- ③ Clean the body after removing the power plug from the outlet. Be sure no water splash to the power plug or outlet.
- ④ Don't touch the power outlet with wet hand. Risk of electric shock.




Cleaning of Nozzle

- ① Press the WASH button for 3 seconds, and then the nozzle will move forward and stop (for 2 minutes).
- ② Clean the nozzle with a unused toothbrush, etc., and press the STOP button, then it will return to the original place for self cleaning.



Drainage of Hot Water Tank

- ① Remove the power plug from the outlet.
- ② Close the water feed valve by turning it clockwise.
- ③ Press the release button on the side of main body.

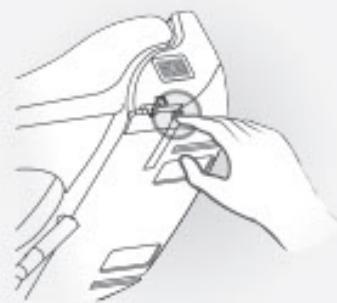


Maintenance during winter season

- ① Insert the power plug into the outlet and be sure if the power is supplied.
- ② When it is not used for a long time, drain the water from the water tank.



Do not throw away


We are committed to protect the environment. Please help us by disposing of this product in a responsible way when it reaches the end of its service life, to prevent certain substances contained in electric and electronic products from harming public health or the environment. The symbol means that the products may not be thrown away with other household waste: at the end of its service life, it may be taken at no charge to you to the waste-collection centers provided for the purpose by the authorities in your country. It may be taken to the distributor from whom you purchase a new product that is equivalent to or that performs the same functions as this product. This latter option may not be available in some countries.

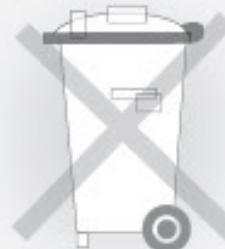

09.Maintenance & Cleaning

Cleaning of Water pipe filter

- ① Close the water feed valve by turning it clockwise.
- ② Disconnect the water supply hose. Take the screen filter out and clean it with soft brush. (e.g.toothbrush)
- ③ After cleaning, place it back. Then connect the water supply hose.
- ④ Open the water feed valve by turning it anti-clockwise.

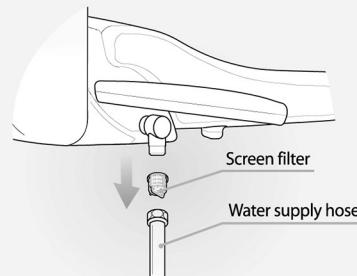


Cleaning of Bidet Body

- ① Exterior surface of bidet is made of plastic material, which may be damaged by scrubber, chemicals, etc.
- ② Wipe the surface with a soft cloth wet and squeezed completely. Don't spray water directly onto the surface with the bath-use shower device.
- ③ Clean the body after removing the power plug from the outlet. Be sure no water splash to the power plug or outlet.
- ④ Don't touch the power outlet with wet hand. Risk of electric shock.




Cleaning of Nozzle

- ① Press the WASH button for 3 seconds, and then the nozzle will move forward and stop (for 2 minutes)
- ② Clean the nozzle with a unused toothbrush, etc., and press the STOP button, then it will return to the original place for self cleaning.

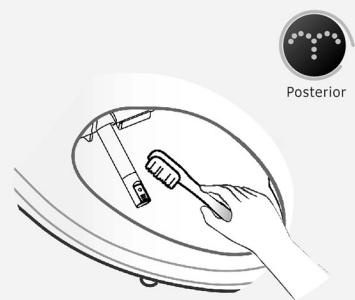


Drainage of Hot Water Tank

- ① Remove the power plug from the outlet.
- ② Close the water feed valve by turning it clockwise.
- ③ Press the release button on the side of main body.

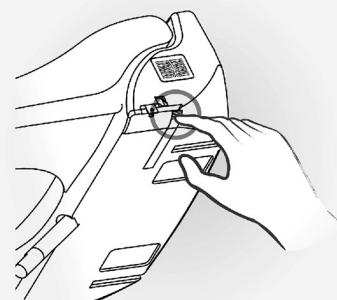

Maintenance during winter season

- ① Insert the power plug into the outlet and be sure if the power is supplied.
- ② When it is not used for a long time, drain the water from the water tank

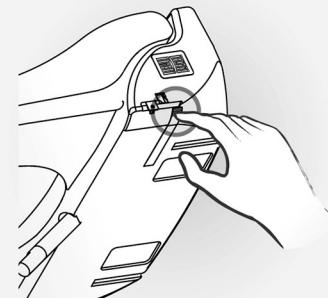

Do not throw away

We are committed to protect the environment. Please help us by disposing of this product in a responsible way when it reaches the end of its service life, to prevent certain substances contained in electric and electronic products from harming public health or the environment. The symbol means that the products may not be thrown away with other household waste: at the end of its service life, it may be taken at no charge to you to the waste-collection centers provided for the purpose by the authorities in your country. It may be taken to the distributor from whom you purchase a new product that is equivalent to or that performs the same functions as this product. This later option may not be available in some countries.



10. Before requesting repair

* Please check the following points before requesting the repair of the product.

Signs to occur	Matters to be checked
Completely out of operation	<ul style="list-style-type: none"> Check if the power plug is not connected. Check the power failure.
Water does not spray out	<ul style="list-style-type: none"> Check if the water supply is suspended. Check if water feed valve is locked Check if nozzle is blocked by foreign material Check if connection hose is bent
Water pressure is low	<ul style="list-style-type: none"> Check if water pipe filter is blocked by foreign material. Check if the water pressure is set at too low level
Water is not warm enough	<ul style="list-style-type: none"> Check if its temperature is set at 'Off' or 'Low'.
Seat is not warm enough	<ul style="list-style-type: none"> Check if its temperature is set at 'Off' or 'Low'

Self-Diagnosis Table

* When any abnormal phenomenon occurs, please refer to the following table, and inform the exact status at the time of requesting A/S service.

No	Self-Diagnosis Phenomenon	Way of Indication
1	Inlet hot water sensor disconnected or not inserted	LED Hot Water Temp. Med & Low blinked simultaneously
2	Inlet hot water sensor short-circuited and temperature excessively increased.	LED Hot Water Temp. Med & High blinked simultaneously
3	Outlet hot water sensor disconnected or not inserted	LED Hot Water Temp. Med & Low blinked separately
4	Outlet hot water sensor short-circuited and temperature excessively increased.	LED Hot Water Temp. Med & High blinked separately
5	Seat sensor disconnected or not inserted	LED seat temperature Low blinked
6	Seat sensor short-circuited and temperature excessively increased	LED seat temperature High blinked
7	Air Pump motor disconnected or not inserted	WASH, BIDET, POWER WASH are out of operation
8	Air pump motor short-circuited	
9	Deodorizing motor: Check the cycle of rotation at low speed	
10	Stoppage of motor due to the over-current of deodorization motor	Buzzer sounds. Abnormal condition is differently indicated by symptoms
11	Heat stops in case of low speed rotation of drying motor	
12	Heater and drying motor simultaneously stop in case of the over-current of drying motor.	


11. Product Specifications

Item	BW-101	BW-102	BW-103	
Rated Voltage	AC 220V~240V,50Hz			
Max. Consumption Power	1670W			
Power Cord Length	1.8M			
Water Feed Method	Directly Connected to Water Pipe			
Water Pressure	0.7~7.5kgf/cm ²			
Feeding Volume				
Wash	Wash	0.7 l/min		
	Bidet	0.7 l/min		
	Power Wash	0.6 l/min		
Water Pressure Control		5-Step Control		
Temp. Control		Room temp. ~ 38°C		
Heat Capa.		1600W		
Safety Device		Temp.Fuse,Thermo Switch		
Heated Seat	Temp.Control	Room temp. ~ 50°C		
	Heater Capa.	55W		
	Safety Device	Temp.Fuse		
Dry	Temp.Control	Room temp. ~ 50°C	-	
	Heater Capa.	250W	-	
	Safety Device	Temp.Fuse,Bi-metal	-	
Deodorization	Catalytic Deodorization	-		
Product Dimension	Elongated	486 X 532 X 145mm		
	Round	486 X 503 X 145mm		
Product Weight	Elongated	4.9kg [7.9kg]	4.8kg [7.8kg]	4.6kg [7.6kg]
	Round	4.8kg [7.8kg]	4.7kg [7.7kg]	4.5kg [7.5kg]

12. Comparison Chart

	Function	BW-103	BW-102	BW-101
Wash/Dry Function	Posterior	●	●	●
Convenient /Comfort Function	Feminine	●	●	●
Power Wash	●	●	●	
Dry	●	●		
Deodorization	●			
Bubble Wash	●	●	●	
Continuous Warm Water Supply	●	●	●	
Automatic Energy Save	●	●	●	
Learning Energy Save	●	●	●	
Massage	●	●	●	
Pulse	●	●	●	
Remote control unit	●	●	●	
Warm Seat	●	●	●	
Soft Closing Lid & Seat	●	●	●	
Detachable Main Body	●	●	●	
Kids	●	●	●	

■ Dimension diagrams

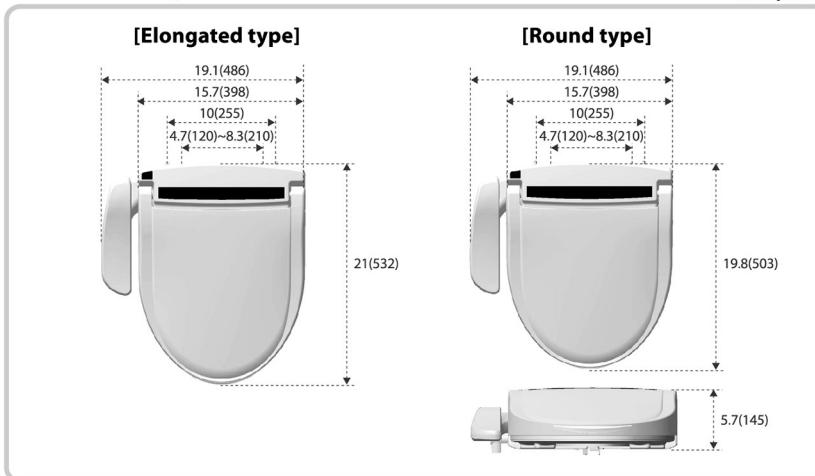

13. WARRANTY INFORMATION

- WARRANTY -

- We hereby guarantee the product as follow in accordance with the regulation of consumer damage compensation.
- In case of failure of the product, please inform the distributor where you purchased the product.
- Product warranty will be effective for 5 years since the product has been discontinued.

Product Name		Warranty Period
Model Name		One (1) year since the date purchased
Date Purchased		
SER.No.		
Customer's Address		Name Tel.No
Distributor's Address		Name Tel.No

Regarding Product Warranty Regulation...

- We will repair the product at free of charge in case it was failed under the normal operating condition in accordance with the user guide during the warranty period.
- Although it is within the warranty period, we will charge the repair service fee etc. (repair + product + travel expense) if it falls under the following cases.

Voiding warranty

- Defects occurred from the user's careless handling
- Defects occurred from the usage with incorrect power voltage (E.g., 220V was used to the 120V product)
- Defects occurred from the improper repair done by the person other than our service engineer.
- Defects occurred from Force Majeure (fire, salt, flood, etc.)
- Failure or damage due to the drop, etc. (user's mis-handling) during the operation after installed
- Defect occurred from the interior modification at user's discretion
- In case the life cycle of the part expired

Mail, email or fax the warranty form to:
YOUR LOCAL DEALER FIRST where you bought this appliance

If your dealer is unable to assist you

Memo

Memo

Maintenance
& Cleaning

Memo

Memo

Maintenance
& Cleaning

Memo

Memo

Maintenance
& Cleaning

Memo

Memo

Maintenance
& Cleaning