ENSTALL

Project plan

Windesheim, Gebouw T



Location: Campus 2, 8017 CA Zwolle, Netherlands

Calculation date: 01-10-2026

Connect

Table of contents

Overview 4
- General 4
- Roof specification 4
- System specification 4

Complete list of materials 5
- Total roof bill of materials 5
- Number of ballast units 5

Assembly 6
- Roof overview 6
- Side view 6

Segment 1, 9, 11 8
- Ballast distribution in number of units 9
- Materials 10

Segment 2 11
- Ballast distribution in number of units 12
- Materials 13

Segment 3, 4 14
- Ballast distribution in number of units 15
- Materials 16

Segment 5 17
- Ballast distribution in number of units 17
- Materials 17

Segment 6 18
- Ballast distribution in number of units 18
- Materials 18

Segment 7 19
- Ballast distribution in number of units 20
- Materials 21

Segment 8 22
- Ballast distribution in number of units 23
- Materials 24

Segment 10 25
- Ballast distribution in number of units 26
- Materials 27

Disclaimer 28

Scan the code for the product manual.

Overview

General

Customer	Windesheim
Generated by	Sem Drost (drost.sem@gmail.com)*
Address	Campus 2, 8017 CA Zwolle, Netherlands
Wind zone	3**
Terrain category	II
Wind pressure	741.53 N/m²
Characteristic value of snow on the ground	0.7 kN/m²
Snow load on the roof	420.43 N/m²
Consequence class	CC1
Reference period	15 years

* This person can open this project in the calculator via https://calculator.eu.enstall.com/3552050/4667000.

** Automatically determined based on the address.

Roof specification

Roof height	20.0 m
Parapet height	0.3 m
Roof orientation from north	17.0°
Roof pitch	0.0°
Roofing material	Bitumen insulated
Friction Coefficient	0.57
Gravel on roof	Yes

System specification

Panel model	DMEGC DM360~375M6-B60HBB (375 - 375Wp) M6-B60HBB
Panel dimensions	1755 mm x 1038 mm x 35 mm
Panel weight	24.0 kg
Panel count	398
Panel angle of inclination landscape	13.2°
Configuration	Dual - Landscape
Row distance	2,450 mm
Segment count	11
Panel power	375 Wp
Total power	149.250 kWp
Chosen LPS class	NONE

Complete list of materials

Total roof bill of materials

Article number	Description	Amount
500013	Connect 1320 coupler	234
500050	Connect East West	136
500170	Connect landscape basic element*	468
500530	Connect ballast box, landscape, pl=1663-1778, L=1901, blank	216
500810	Connect uplift block	936
500901BL	Plating screw Connect Black**	624
860135	Easy end clamp 35mm - BLACK	280
873540	Easy centre clamp 35-40 mm - BLACK	656

* Item no longer available.


** Discontinued article, will be replaced by 500901

Number of ballast units

Number of bricks (210 mm x 105 mm x 80 mm, 4.0 kg/pc)	2596

Assembly


Roof overview

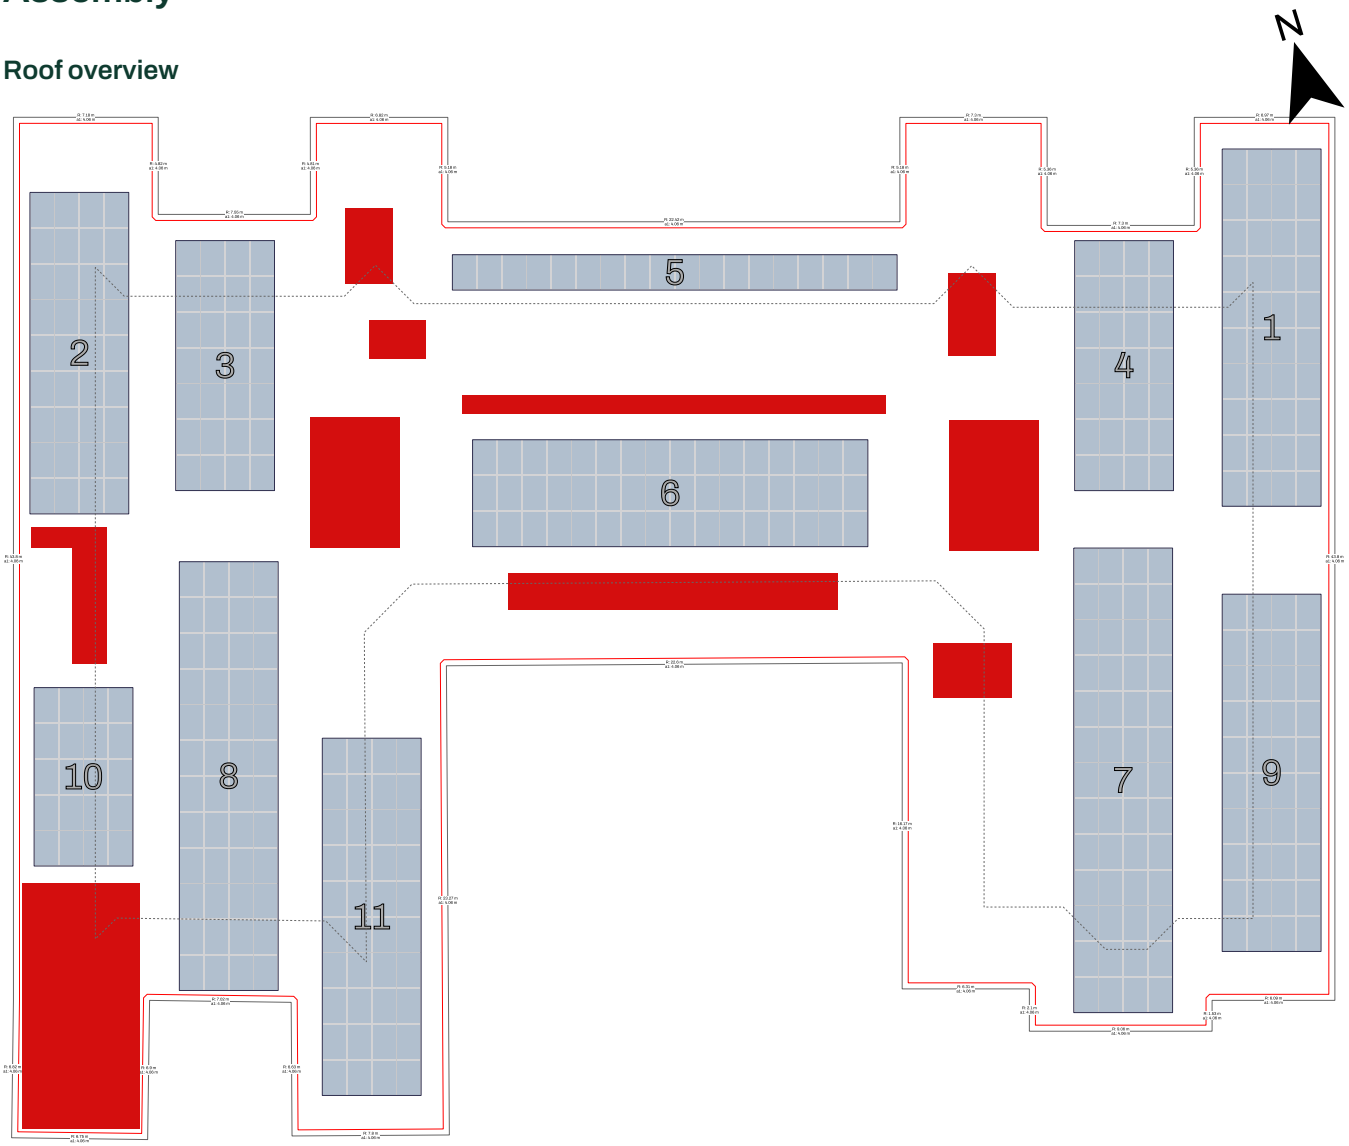

R: XXm	Length of outer roof side
	No-Go zone width (30cm)
a1: XXm	Edge zone width from roof edge


Edge zone depth	4.06 m

Dual landscape configuration with row distance of 2,450 mm

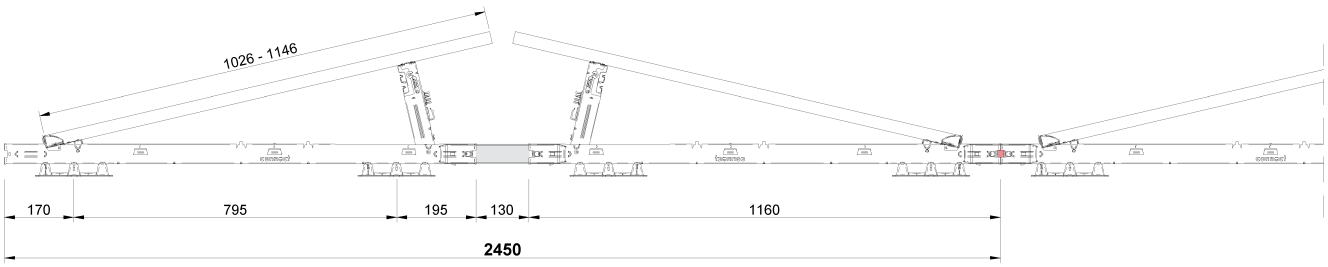


Segment 1, 9, 11

Panel count	40
Total power	15.000 kWp
Configuration	Dual
Orientation	Landscape
Row distance	2,450 mm

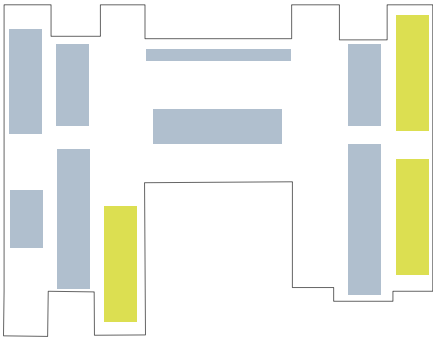

This assembly plan is applicable for the highlighted segments

Ballast distribution in number of units

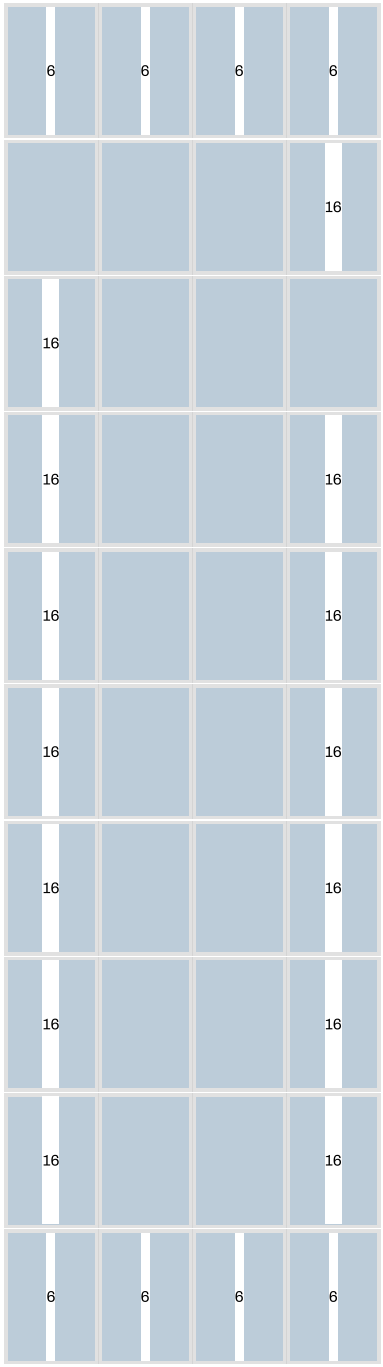


Weight per ballast unit	4.0 kg
Number of ballast units	272

Materials

Article number	Description	Amount
500013	Connect 1320 coupler	22
500050	Connect East West	11
500170	Connect landscape basic element	44
500530	Connect ballast box, landscape, pl=1663-1778, L=1901, blank	22
500810	Connect uplift block	88
500901BL	Plating screw Connect Black	60
860135	Easy end clamp 35mm - BLACK	16
873540	Easy centre clamp 35-40 mm - BLACK	72


Segment 2

Panel count	36
Total power	13.500 kWp
Configuration	Dual
Orientation	Landscape
Row distance	2,450 mm

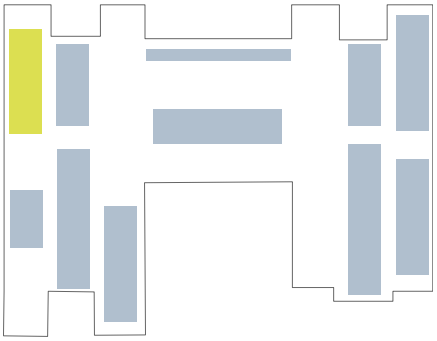

This assembly plan is applicable for the highlighted segments

Ballast distribution in number of units

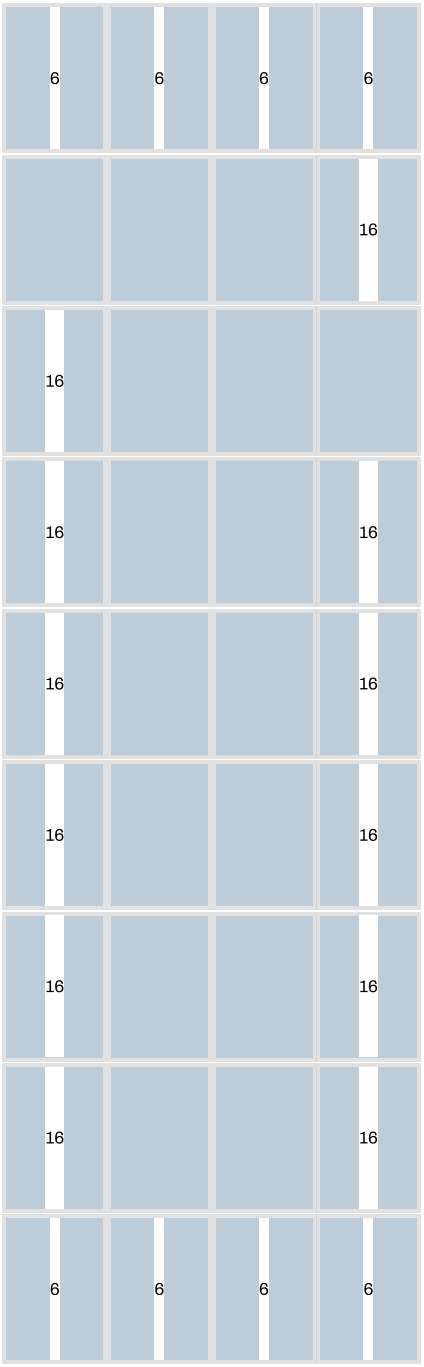


Weight per ballast unit	4.0 kg
Number of ballast units	240

Materials

Article number	Description	Amount
500013	Connect 1320 coupler	20
500050	Connect East West	10
500170	Connect landscape basic element	40
500530	Connect ballast box, landscape, pl=1663-1778, L=1901, blank	20
500810	Connect uplift block	80
500901BL	Plating screw Connect Black	56
860135	Easy end clamp 35mm - BLACK	16
873540	Easy centre clamp 35-40 mm - BLACK	64


Segment 3, 4

Panel count	28
Total power	10.500 kWp
Configuration	Dual
Orientation	Landscape
Row distance	2,450 mm

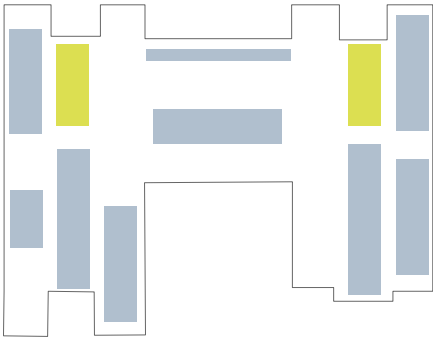

This assembly plan is applicable for the highlighted segments

Ballast distribution in number of units

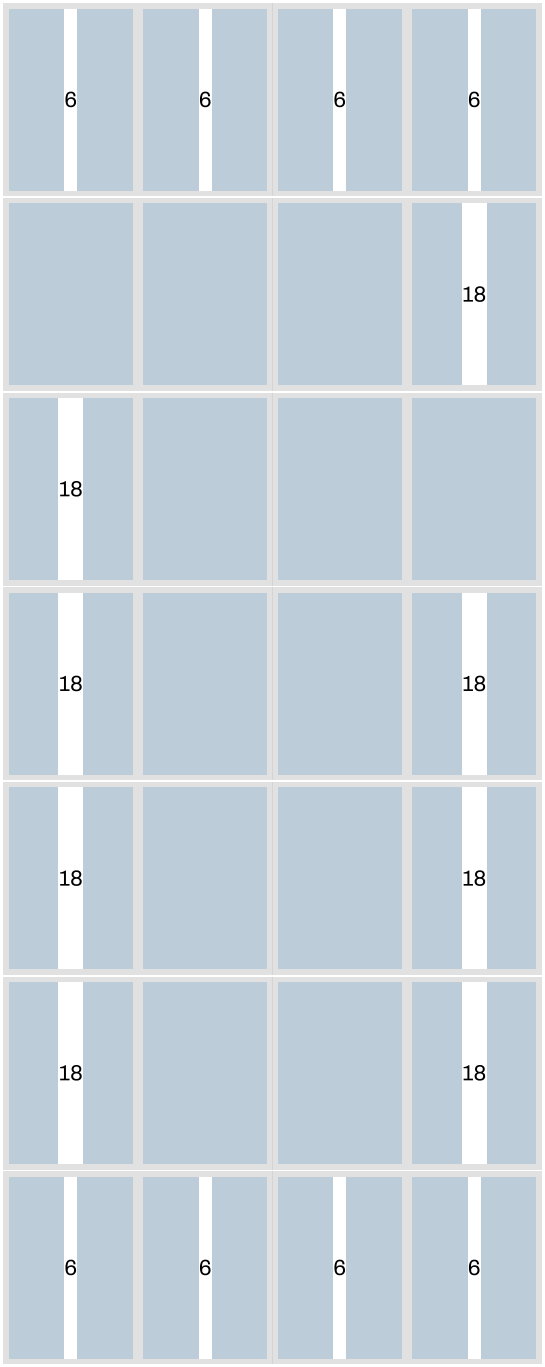


Weight per ballast unit	4.0 kg
Number of ballast units	192

Materials

Article number	Description	Amount
500013	Connect 1320 coupler	16
500050	Connect East West	8
500170	Connect landscape basic element	32
500530	Connect ballast box, landscape, pl=1663-1778, L=1901, blank	16
500810	Connect uplift block	64
500901BL	Plating screw Connect Black	48
860135	Easy end clamp 35mm - BLACK	16
873540	Easy centre clamp 35-40 mm - BLACK	48

Segment 5

Panel count	18
Total power	6.750 kWp
Configuration	Dual
Orientation	Landscape
Row distance	2,450 mm

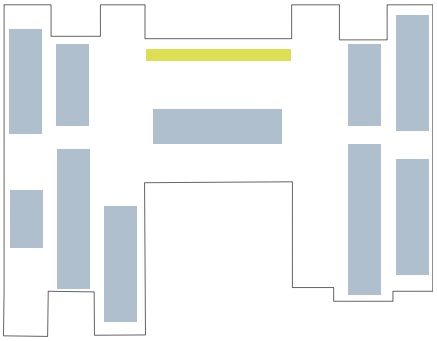

This assembly plan is applicable for the highlighted segments

Ballast distribution in number of units


Weight per ballast unit	4.0 kg
Number of ballast units	120

Materials

Article number	Description	Amount
500013	Connect 1320 coupler	18
500050	Connect East West	16
500170	Connect landscape basic element	36
500530	Connect ballast box, landscape, pl=1663-1778, L=1901, blank	10
500810	Connect uplift block	72
500901BL	Plating screw Connect Black	40
860135	Easy end clamp 35mm - BLACK	72


Segment 6

Panel count	48
Total power	18.000 kWp
Configuration	Dual
Orientation	Landscape
Row distance	2,450 mm

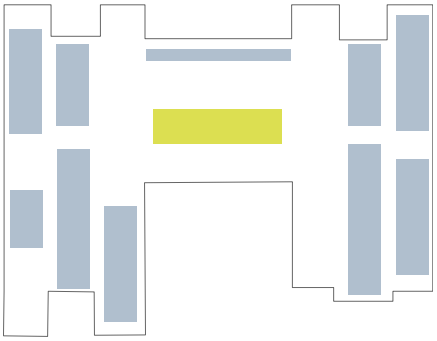

This assembly plan is applicable for the highlighted segments

Ballast distribution in number of units

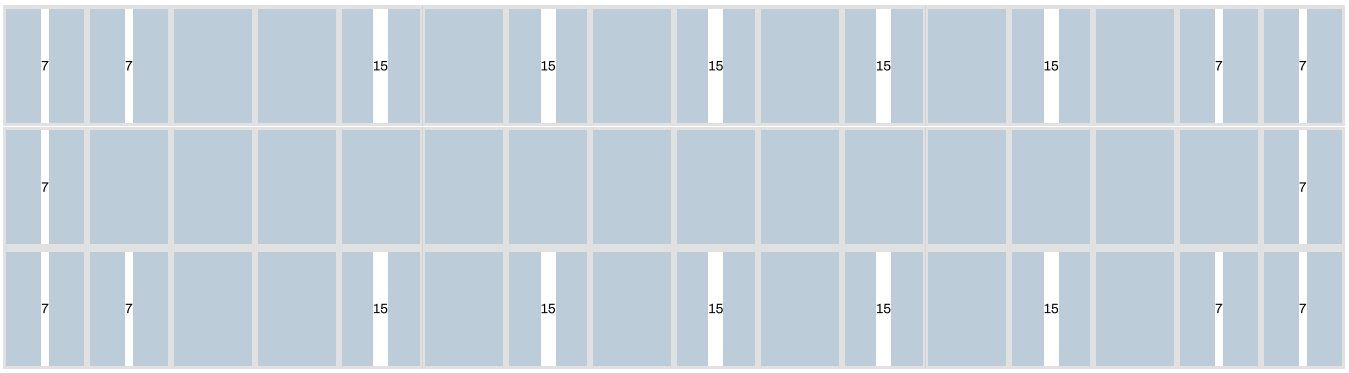


Weight per ballast unit	4.0 kg
Number of ballast units	220

Materials

Article number	Description	Amount
500013	Connect 1320 coupler	32
500050	Connect East West	28
500170	Connect landscape basic element	64
500530	Connect ballast box, landscape, pl=1663-1778, L=1901, blank	20
500810	Connect uplift block	128
500901BL	Plating screw Connect Black	72
860135	Easy end clamp 35mm - BLACK	64
873540	Easy centre clamp 35-40 mm - BLACK	64


Segment 7

Panel count	52
Total power	19.500 kWp
Configuration	Dual
Orientation	Landscape
Row distance	2,450 mm

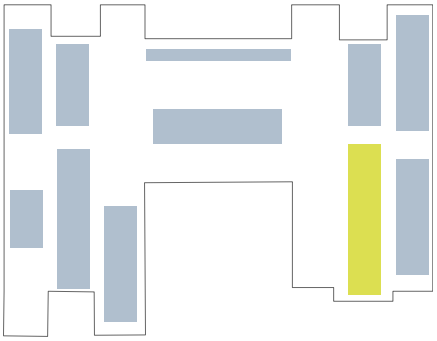

This assembly plan is applicable for the highlighted segments

Ballast distribution in number of units

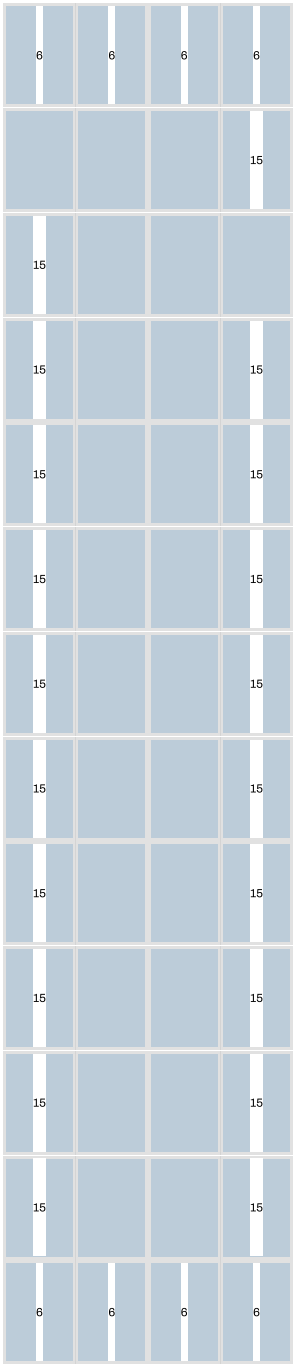


Weight per ballast unit	4.0 kg
Number of ballast units	348

Materials

Article number	Description	Amount
500013	Connect 1320 coupler	28
500050	Connect East West	14
500170	Connect landscape basic element	56
500530	Connect ballast box, landscape, pl=1663-1778, L=1901, blank	28
500810	Connect uplift block	112
500901BL	Plating screw Connect Black	72
860135	Easy end clamp 35mm - BLACK	16
873540	Easy centre clamp 35-40 mm - BLACK	96


Segment 8

Panel count	48
Total power	18.000 kWp
Configuration	Dual
Orientation	Landscape
Row distance	2,450 mm

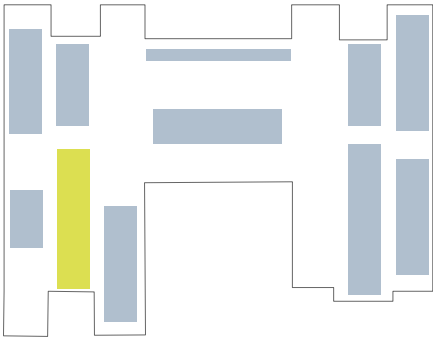

This assembly plan is applicable for the highlighted segments

Ballast distribution in number of units

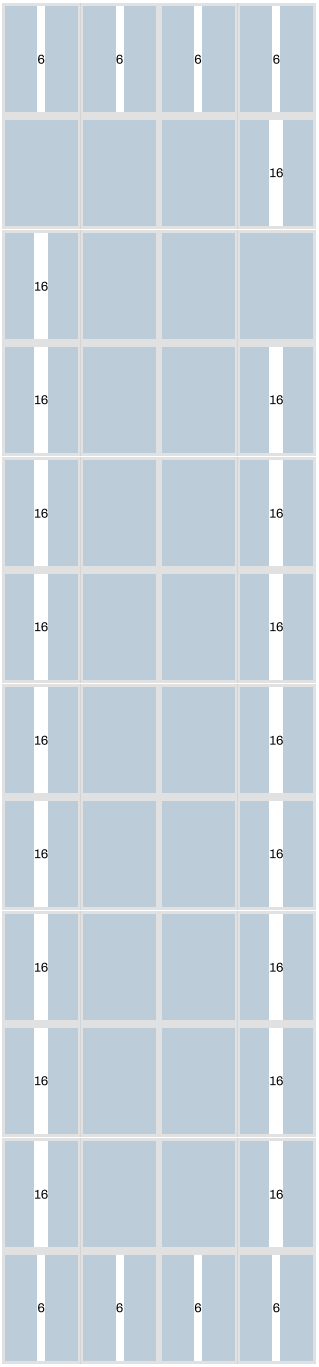


Weight per ballast unit	4.0 kg
Number of ballast units	336

Materials

Article number	Description	Amount
500013	Connect 1320 coupler	26
500050	Connect East West	13
500170	Connect landscape basic element	52
500530	Connect ballast box, landscape, pl=1663-1778, L=1901, blank	26
500810	Connect uplift block	104
500901BL	Plating screw Connect Black	68
860135	Easy end clamp 35mm - BLACK	16
873540	Easy centre clamp 35-40 mm - BLACK	88


Segment 10

Panel count	20
Total power	7.500 kWp
Configuration	Dual
Orientation	Landscape
Row distance	2,450 mm

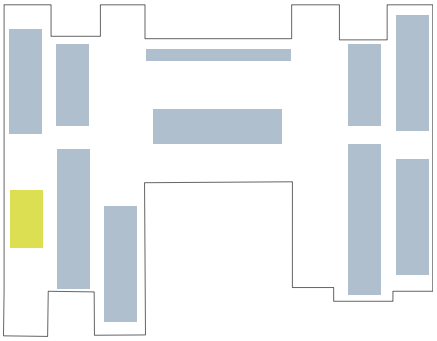

This assembly plan is applicable for the highlighted segments

Ballast distribution in number of units

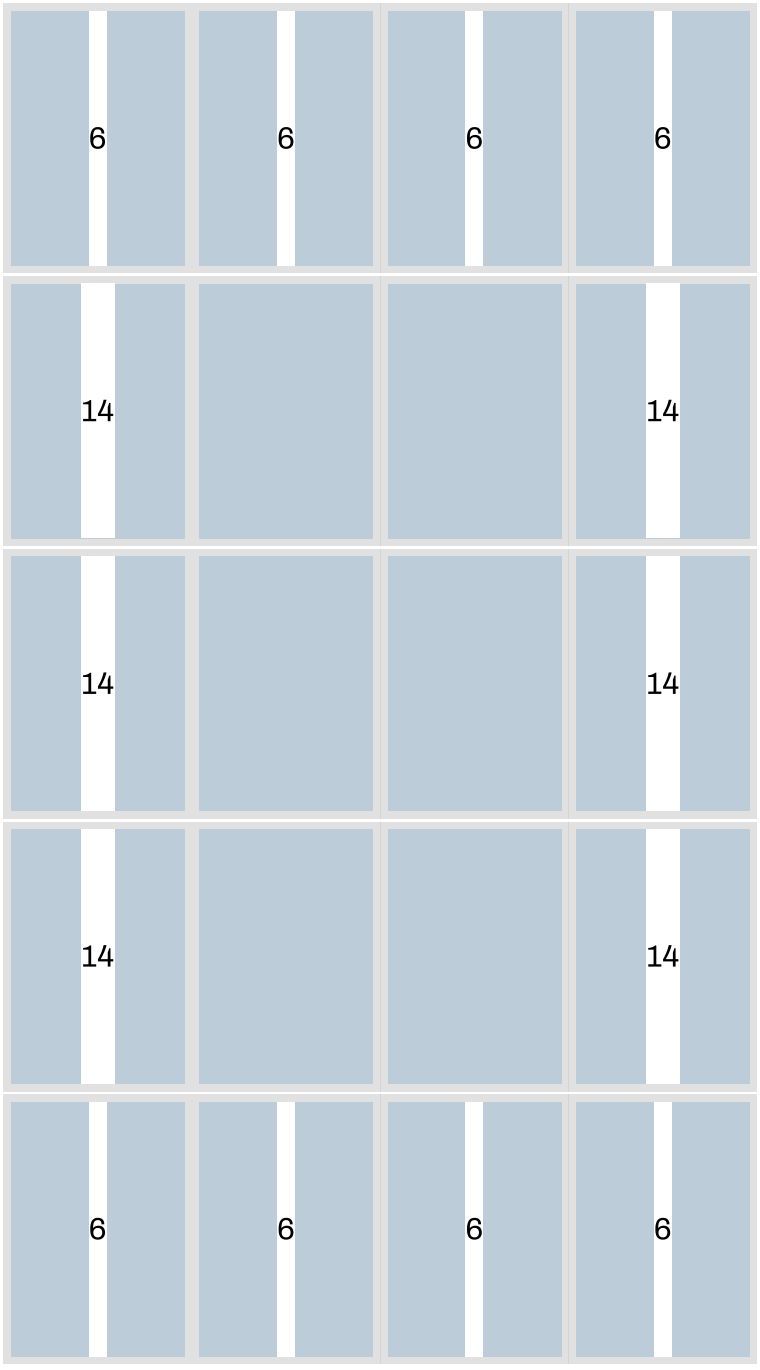

Weight per ballast unit	4.0 kg
Number of ballast units	132

Materials

Article number	Description	Amount
500013	Connect 1320 coupler	12
500050	Connect East West	6
500170	Connect landscape basic element	24
500530	Connect ballast box, landscape, pl=1663-1778, L=1901, blank	14
500810	Connect uplift block	48
500901BL	Plating screw Connect Black	40
860135	Easy end clamp 35mm - BLACK	16
873540	Easy centre clamp 35-40 mm - BLACK	32

Disclaimer

Please read this information carefully before starting with the design and installation of the PV system.

The output for the design of the PV system is generated by using the calculator tool made available through the website of Enstall Europe B.V. ("**Enstall**") at www.enstall.com (the "**Calculator**"). The responsibility for the correct application of the output derived from the Calculator lies with the user of the Calculator and/or the installer or any other person responsible for the installation of the PV system, which output may be subject to or impacted by many different variables and factors. The installation of a PV system onto an existing building can for example impact the existing building loads (e.g., as a result of snow and wind) or the building construction. To avoid personal injury and/or property damages, the installer or any other person responsible for the installation of a PV system should ensure that the static calculations applicable to the existing building are reviewed and confirmed beforehand by a qualified technician. Any applicable regulations, including (but not limited to) NEN 7250, EN 1990, EN 1991-1-3, EN 1991-1-4 and relevant national annexes, should be observed and adhered to. Failure to obtain such confirmation or observe and adhere to applicable regulations may, amongst others, lead to failure of the roof load-bearing structure of the building. It is advisable to consult with the insurer of the building in case of the intention to install a PV system or in case of any other intended changes to the building.

The installer or any other person responsible for the installation of a PV system should also consider, confirm or control applicable design elements which include (but are not limited to):


a. changes as a result of the additional weight of the complete PV system on the building;
b. changes as a result of the changed geometry of the building's roof;
c. changes as a result of the dynamic wind pressure and possible accumulation of rain or any other precipitation on the building;
d. the loads occurring during installation on the building, roofing material and insulation;
e. the compatibility of the insulation and roofing material at the location of the contact points of the long-term PV-system's support structure, as a result of the pressure point;
f. the compatibility of the roofing material in combination with the support structure at the location of the contact points;
g. the effect of thermal performance of the building on the PV system and vice versa; and/or
h. the effect of any movement and vibrations of the roof on the PV system and vice versa.

In addition, the installer or any other person responsible for the installation of a PV system should confirm the compatibility of any third party products, components or materials (including PV panels) used in conjunction with Enstall's products, if such third party products, components or materials have not been provided for such use by or on behalf of Enstall or the use of which has not been expressly authorized by Enstall. Reference to a third party product in the Calculator should not be deemed an express or implied authorization by Enstall. Enstall's products should always be used in accordance with instructions set out in the most recent version of the applicable manual, available via www.enstall.com.

Prices in the Calculator are indicative and are subject to change resulting from, amongst others, fluctuations in commodity prices.

To generate output from the Calculator Enstall relies solely on the input and information that was submitted by the user of the Calculator. Enstall is under no obligation to confirm or verify such input or information. Enstall assumes no responsibility or liability of any kind in relation to, or resulting from, such input and/or information, and/or any risks, consequences or damages (including, but not limited to, indirect or consequential losses) resulting from incorrect, inaccurate, or incomplete input and/or information that was submitted through the Calculator or resulting from the improper use of Enstall's products. Any such responsibilities and liabilities are solely for the account of the user of the Calculator and/or any other person responsible for the installation of a PV system, as applicable.

No rights can be derived from any designs (including drawings and dimensions), calculations or other output that is generated through the Calculator. Enstall provides no representations, warranties or guarantees in relation to any designs (including drawings and dimensions), calculations or other output that is generated through the Calculator. Any warranty provided by Enstall is limited to its solar rooftop mounting products, as set out in Enstall's Warranty Conditions (and subject to the limitations and exclusions set out therein) which are available via www.enstall.com. Nothing contained in this output, the Calculator, the Calculator Terms of Use, on any Enstall website or otherwise should be construed differently.

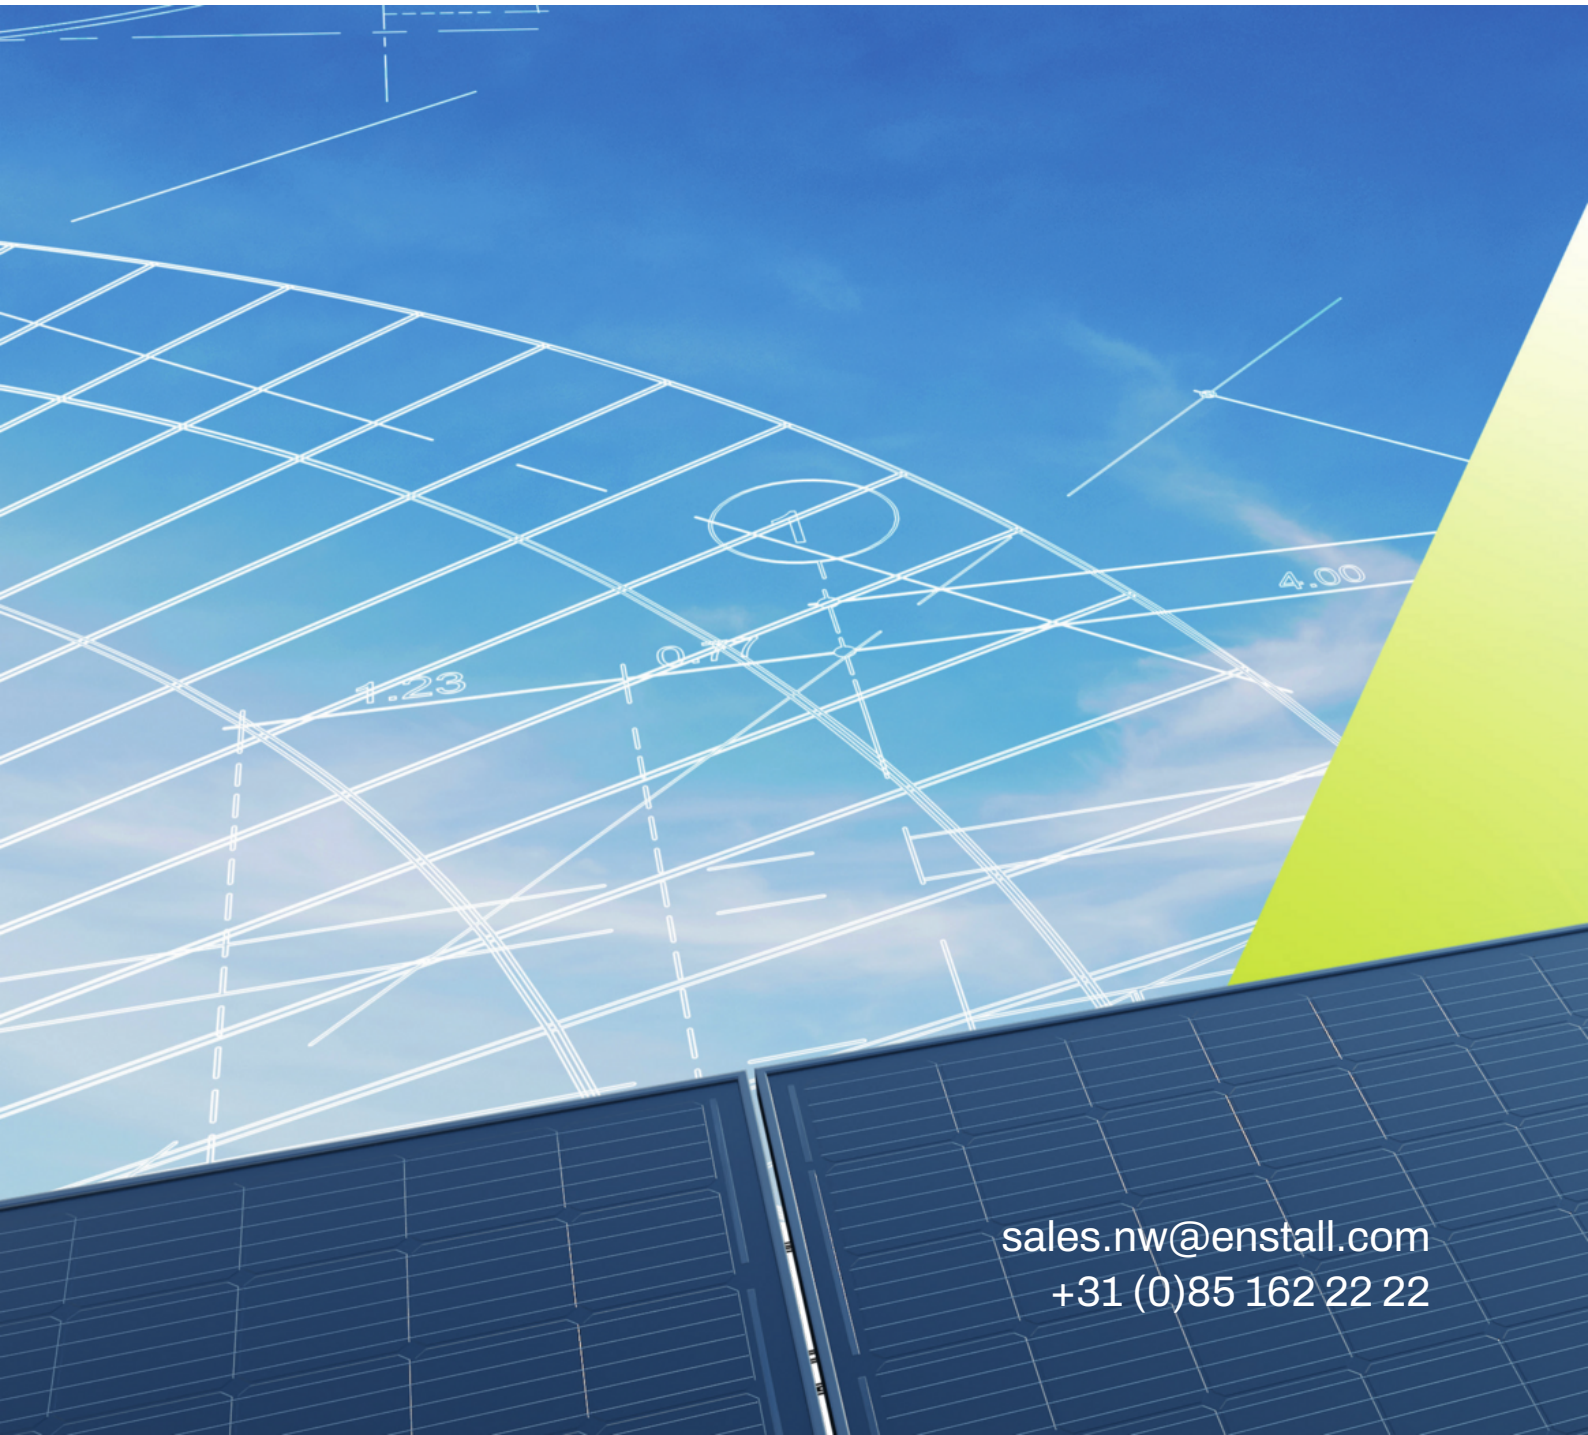

sales.nw@enstall.com
+31 (0)85 162 22 22