

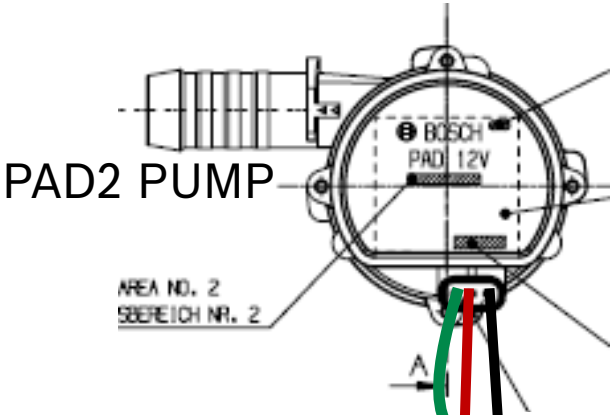


OPERATING THE PAD2 PUMP WITH PWM/LIN BOX

PAD2 PUMP CONNECTION DIAGRAM

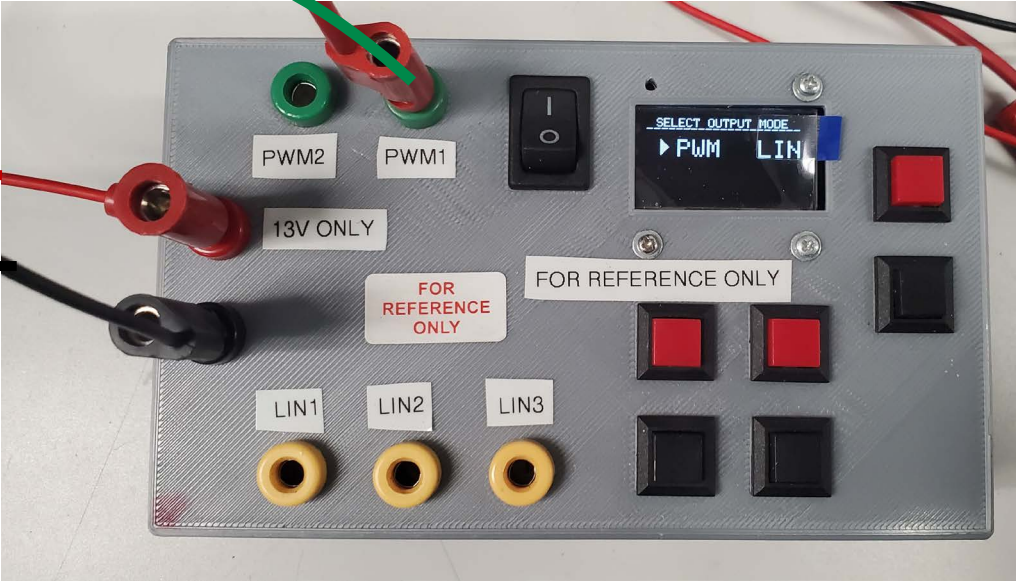


PAD2 PUMP CONNECTION DIAGRAM

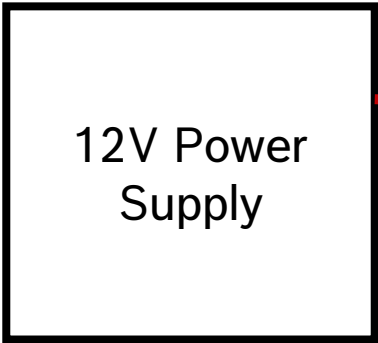

1. INITIAL POWER ON STATE →

2. Click red button
upper right to enter
PWM mode.

3. PWM MODE STATE →

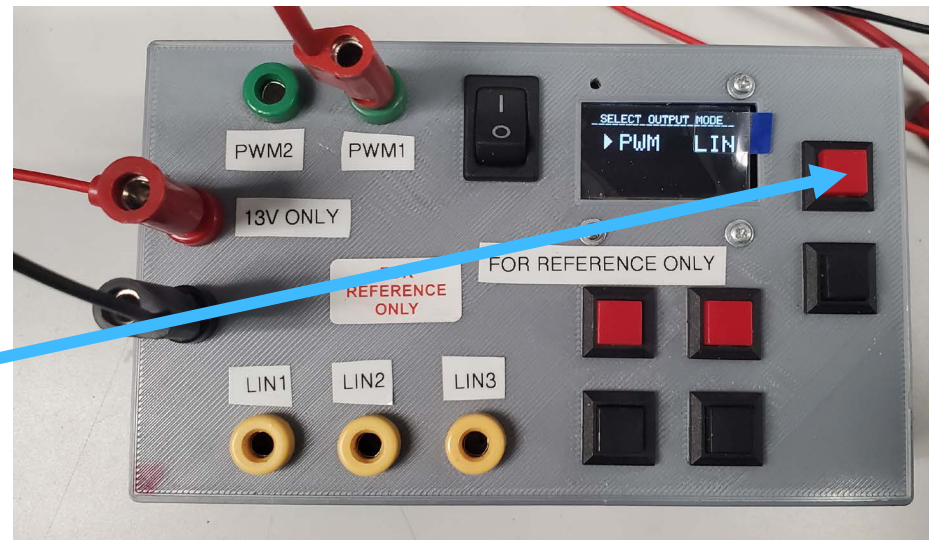




4. Adjust duty cycle percentage up (red) and down (black).

Other functions of the PWM/LIN Box in PWM Mode (for reference)

Not used.

Not used.

Not used.

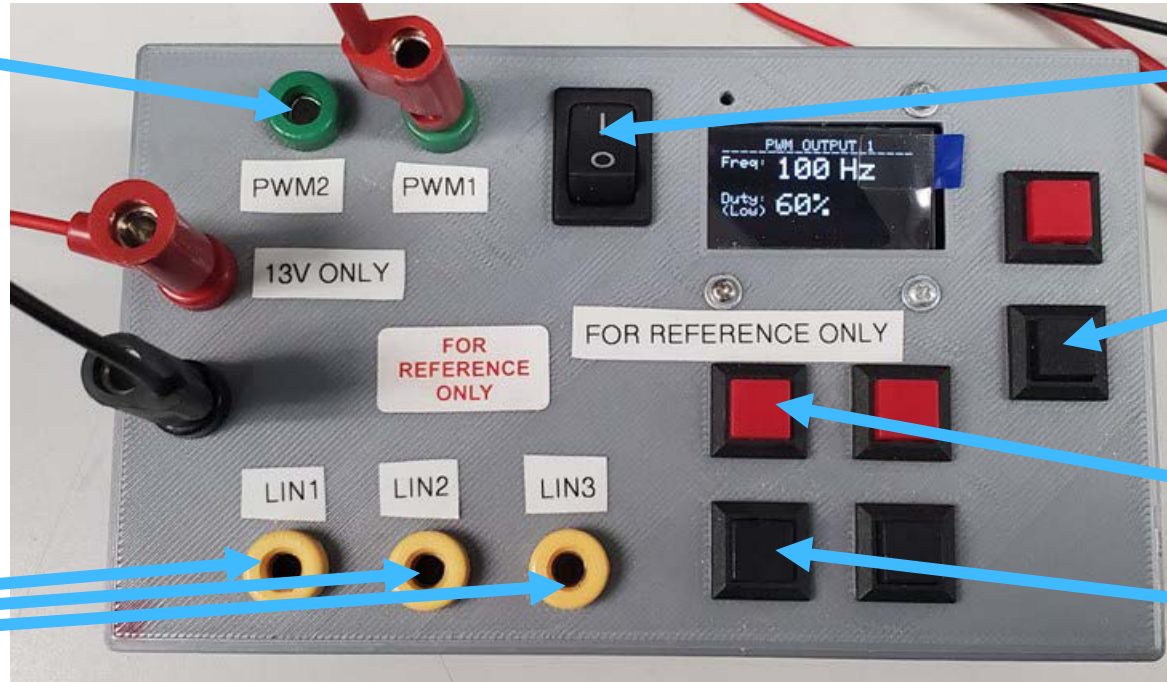

Side ports on box are also not used.

Activates sleep mode.

These adjust the frequency up (red) and down (black). Should not be needed to run pump.