VOYIS VSLAM POWERED BY EIVA NAVISUITE

INSTALLATION GUIDE

Last update: 17/02/2026
Version: 1.5

Contents

1 System requirements 3

2 Compatibility matrix 4

3 Install Voyis VSLAM Powered by EIVA NaviSuite 5

3.1 Install Discovery Powered by NaviSuite 5

3.2 Install NaviSuite VSLAM 8

3.3 Install NVIDIA CUDA version 12

3.4 Enabling firewall permissions manually on Windows clients 18

4 Licence activation 19

1 System requirements

Minimum recommended system requirements:

- Operating system: Windows 11 Business
- CPU: Intel® Core™ i7-10875H, CPU @ 2.30 GHz or similar
- CPU RAM: 32 GB
- GPU: NVIDIA Quadro T2000 or similar NVIDIA GPU, CUDA® Compute Capability of 7.5
- GPU (dedicated) RAM: 4 GB
- Disk space: 1 TB (depending on the size of the survey)
- Network: Ethernet bandwidth of at least 500 Mbps

Optimal recommended system requirements:

- CPU: AMD Ryzen Threadripper PRO 5975WX 32-Cores, 3600 Mhz, 32 Core(s), 64 logical processors
- CPU RAM: 128 GB
- GPU: NVIDIA GeForce RTX 4090 or similar NVIDIA GPU, CUDA® Compute Capability of 8.9
- GPU (dedicated) RAM: 24 GB
- Disk space: 1 TB (depending on the size of the survey)
- Network: Ethernet bandwidth of 1 Gbps

Note: While CUDA® Compute Capability 6.1–8.9 are supported, only versions 7.5–8.9 have been tested for optimal performance.

2 Compatibility matrix

The following compatibility matrix shows software compatibility between different components that are needed to run Voyis VSLAM Powered by EIVA NaviSuite.

Discovery Powered by NaviSuite	NaviSuite VSLAM	Voyis Discovery Stereo Camera Firmware	Voyis Discovery GUI	NVIDIA CUDA
Version				
1.00	1.00	1.0.9	1.1.4	12.1
1.10	1.10	1.0.9	1.1.4	12.4
1.20*	1.20	2.0.1	2.0.1*	12.4
1.30*	1.30	2.0.1	2.0.1*	12.4
1.40*	1.40	2.1.1	2.1.0*	12.4
1.50*	1.50	2.2.0	2.2.0*	12.4

* Voyis Discovery GUI 2.0.1 or higher should not be used concurrently with Discovery Powered by NaviSuite.

Voyis Discovery GUI contains many camera settings independent of Voyis VSLAM Powered by EIVA NaviSuite. Set up your camera configuration using Voyis Discover GUI before starting Voyis VSLAM Powered by EIVA NaviSuite.

Note: For best results, use only NaviSuite VSLAM and Discovery Powered by NaviSuite for piloting the vehicle while generating real-time 3D reconstructions.

3 Install Voyis VSLAM Powered by EIVA NaviSuite

To download the software packages needed to run Voyis VSLAM Powered by EIVA NaviSuite, please go to: https://download.eiva.com/.

The executable software to be installed are:

- Discovery Powered by NaviSuite
- NaviSuite VSLAM

3.1 Install Discovery Powered by NaviSuite

The installer for the program package is named *Discovery Powered by NaviSuite* with the extension .EXE.

Clicking on the .EXE extension will start the installer. Follow the software installation prompts to automatically install NaviSuite VSLAM on your computer.

The following screenshots illustrate the expected installation process.

Figure 1 Discovery Powered by NaviSuite Setup – Welcome screen, click Next

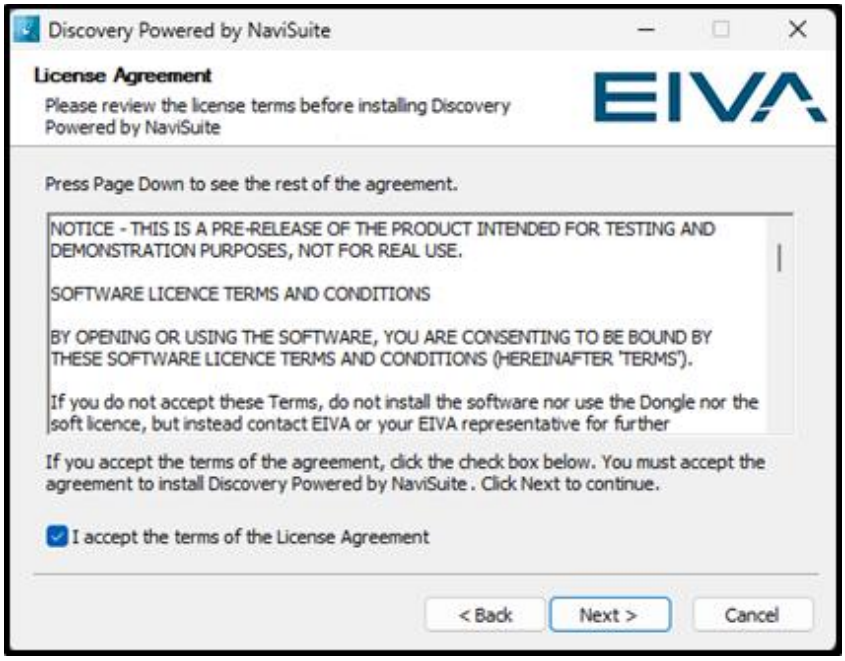

Figure 2 Discovery Powered by NaviSuite Setup – Licence Agreement

You need to accept the terms of the licence agreement. Proceed with **Next**.

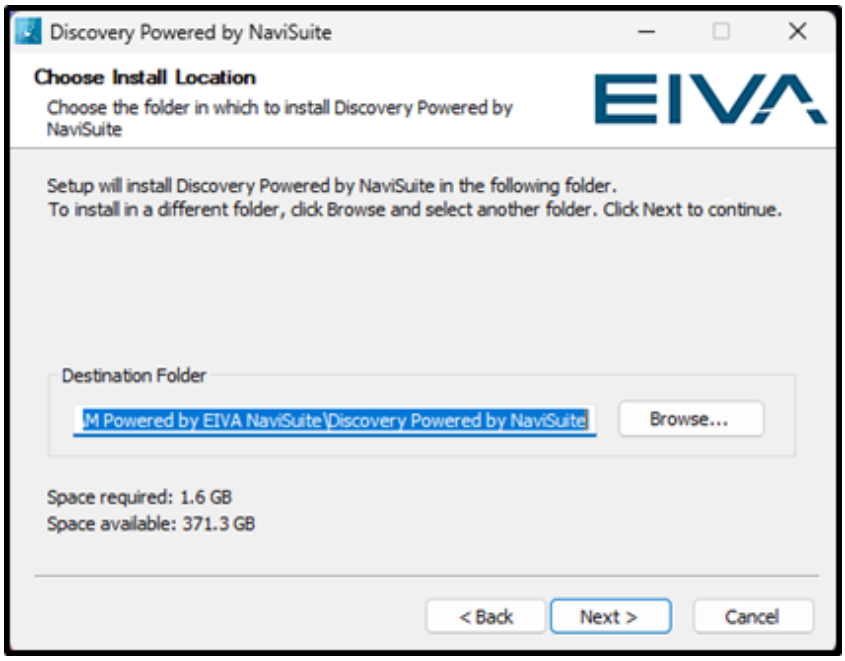

Figure 3 Discovery Powered by NaviSuite Setup – Install location

Here you must choose the location to install the software. After the install location is chosen, proceed with **Next**.

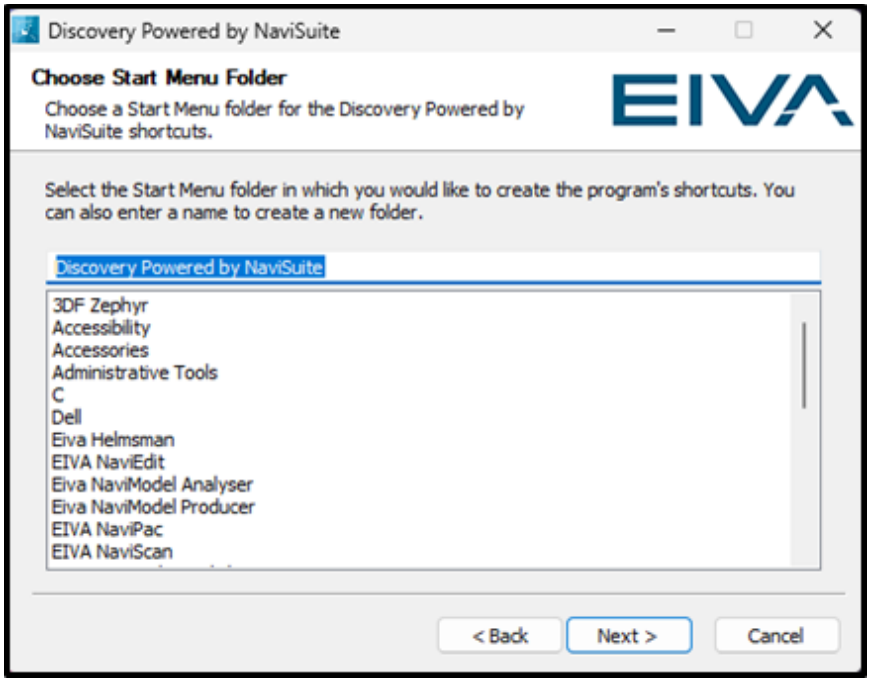

Figure 4 Discovery Powered by NaviSuite Setup – Start Menu folder

You can choose the Start Menu folder in which the application shortcuts will be located. After you have chosen the location for the shortcuts, proceed with **Next**.

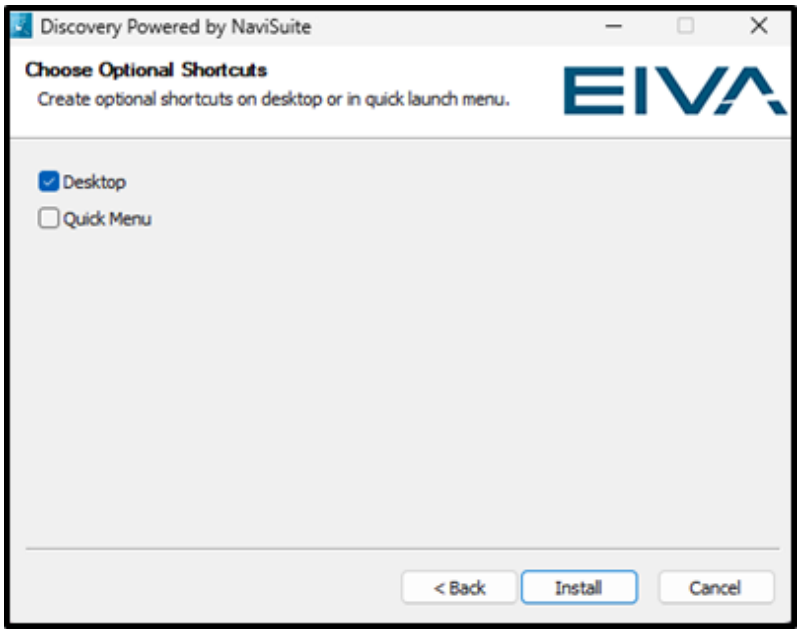

Figure 5 Discovery Powered by NaviSuite Setup – Optional shortcuts

If you want optional shortcuts installed on your system, select the optional shortcuts with the tick box. Click **Install** to start installation of the software package.

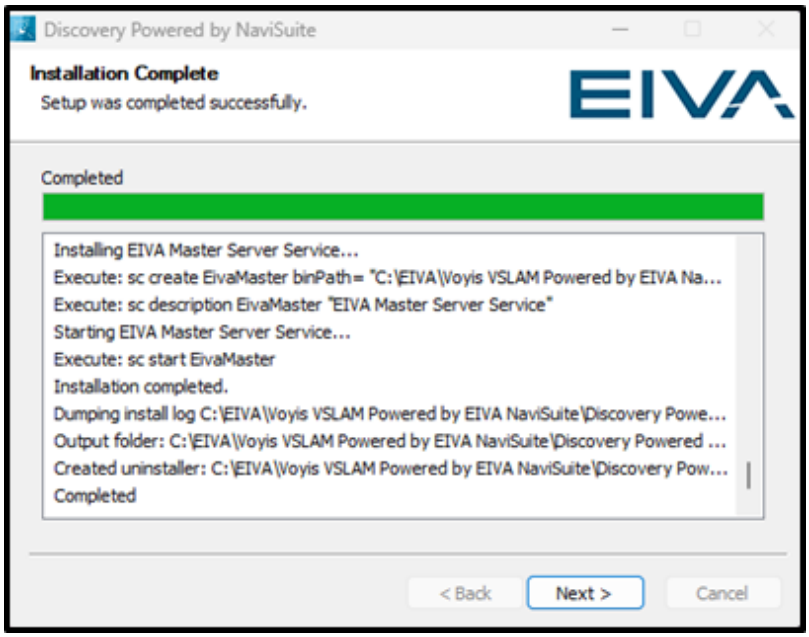

Figure 6 Discovery Powered by NaviSuite Setup – Installation process

The installation wizard will tell you the installation has completed. Click on **Next** to finish the installation. Discovery Powered by NaviSuite can now be opened.

It is recommended to install NaviSuite VSLAM before opening Discovery Powered by NaviSuite.

3.2 Install NaviSuite VSLAM

Note: The most recent version of NaviSuite VSLAM is not compatible with older versions of the Voyis API. See the Compatibility matrix for more information.

Discovery Powered by NaviSuite and NaviSuite VSLAM are compatible with the Voyis Discovery Stereo camera 2.0.1 and Voyis API 2.0.1.

The installer for the program package is named *NaviSuiteVSLAM.exe*.

Clicking on the executable will start the installer. Follow the software installation prompts to automatically install NaviSuite VSLAM on your computer.

The following images illustrate the expected installation process.

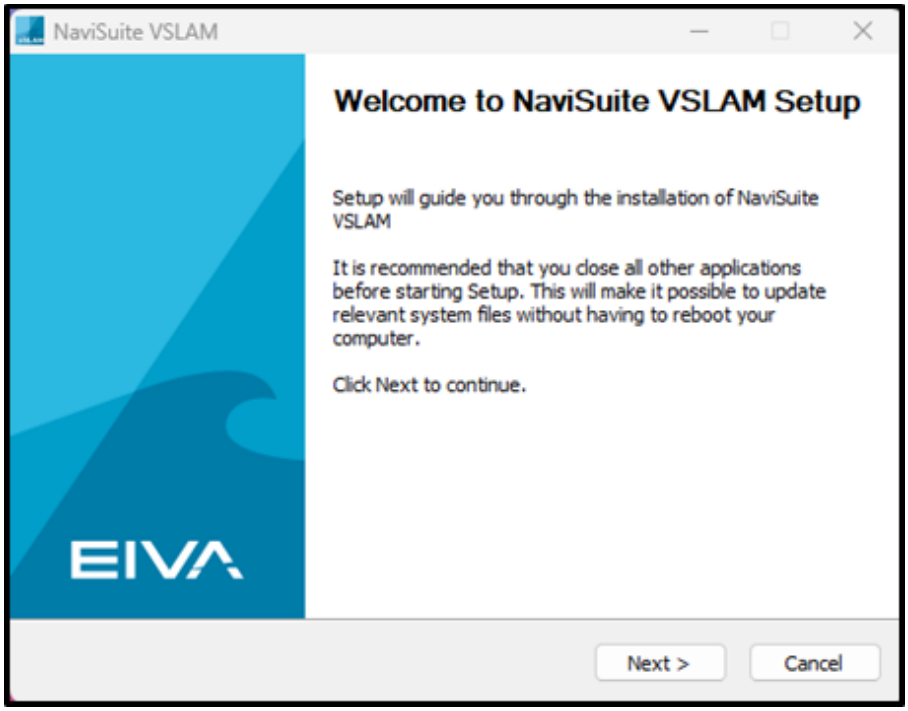

Figure 7 NaviSuite VSLAM Setup installation wizard – Welcome screen, proceed with Next

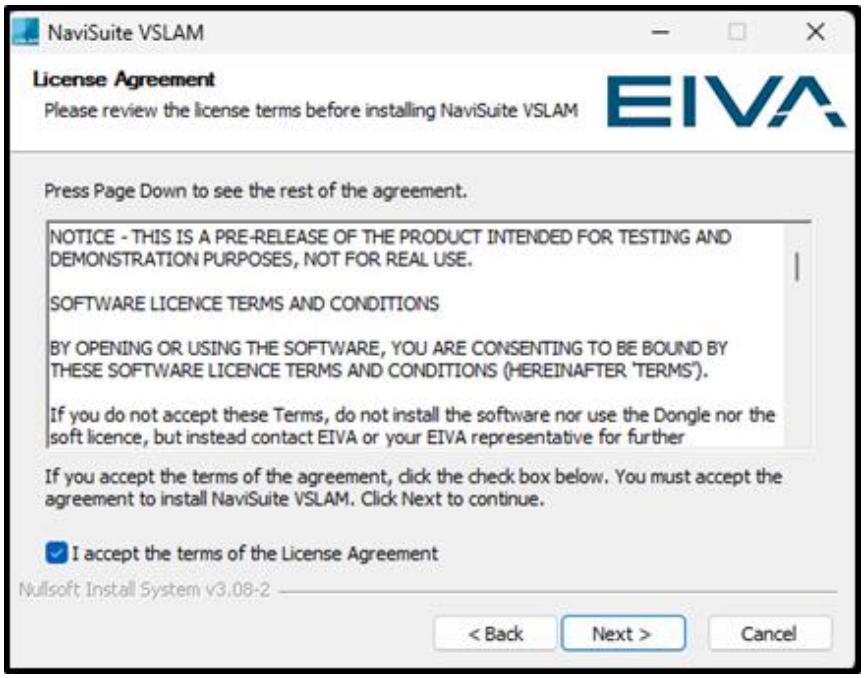

Figure 8 NaviSuite VSLAM installation wizard – Licence agreement

You need to accept the terms of the licence agreement here. After accepting the terms of the licence agreement, you can continue by clicking **Next**.

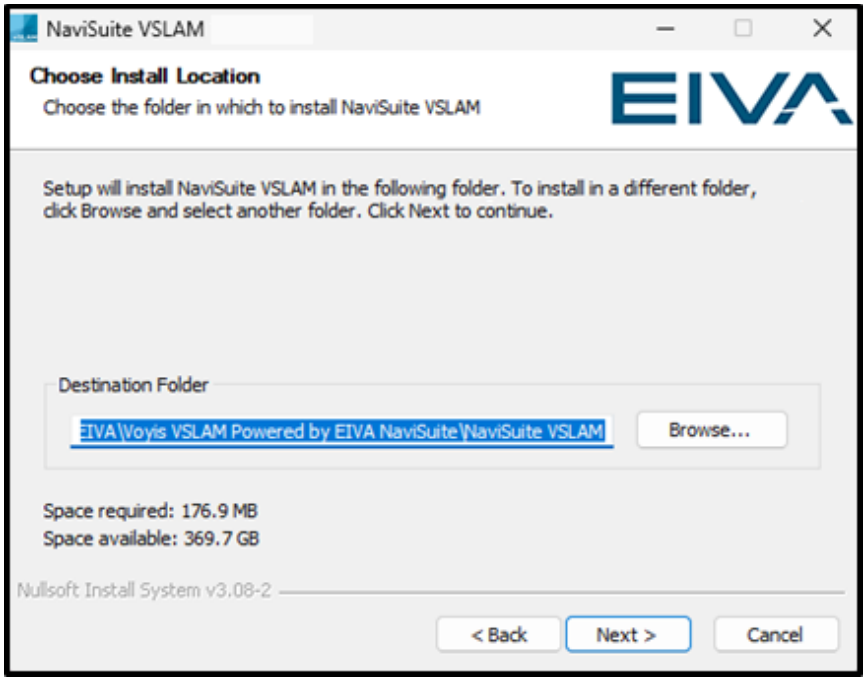

Figure 9 NaviSuite VSLAM installation wizard – Install location

Now choose the location to install NaviSuite VSLAM. Continue by clicking **Next**.

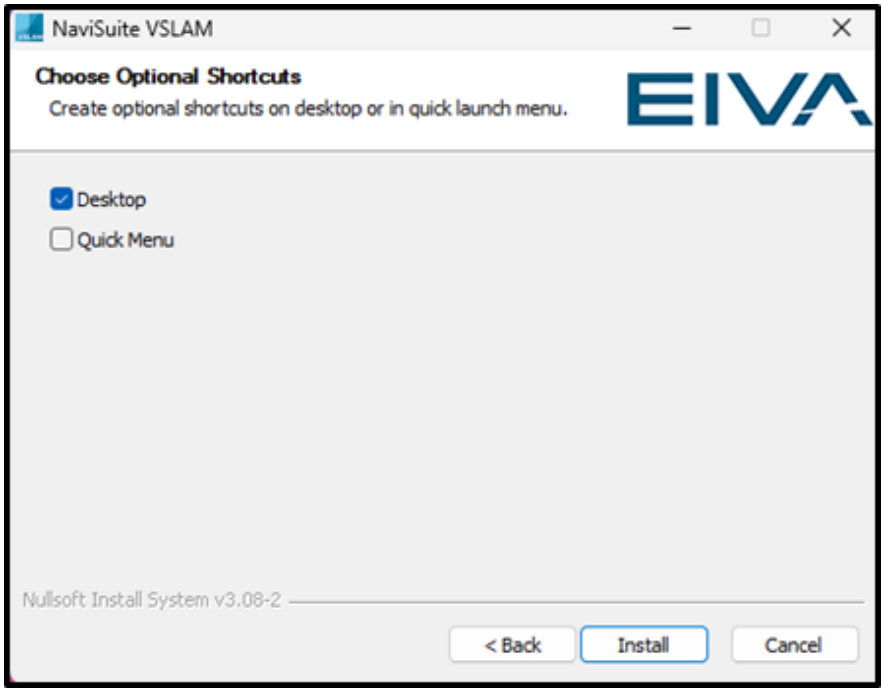

Figure 10 NaviSuite VSLAM installation wizard – Installing shortcuts

This step is optional and depends on the user if they want optional shortcuts installed on their system. Select the optional shortcuts with the toggle. Click **Install** to start installation of the software package.

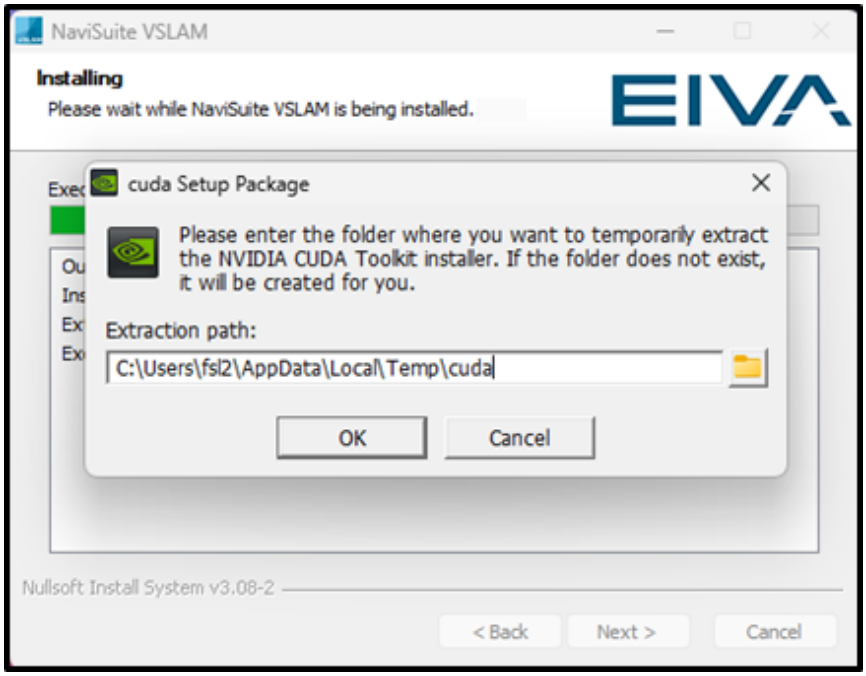

Figure 11 NaviSuite VSLAM installation wizard – Prompt for installing CUDA Setup Package

During installation, you will see a prompt window asking for a temporary location to extract the NVIDIA CUDA Toolkit installer. It is recommended to use the default location. Continue with **Next**.

Note: Please refer to Section 2.3 Install latest NVIDIA CUDA version for more information on how to install NVIDIA CUDA on your system.

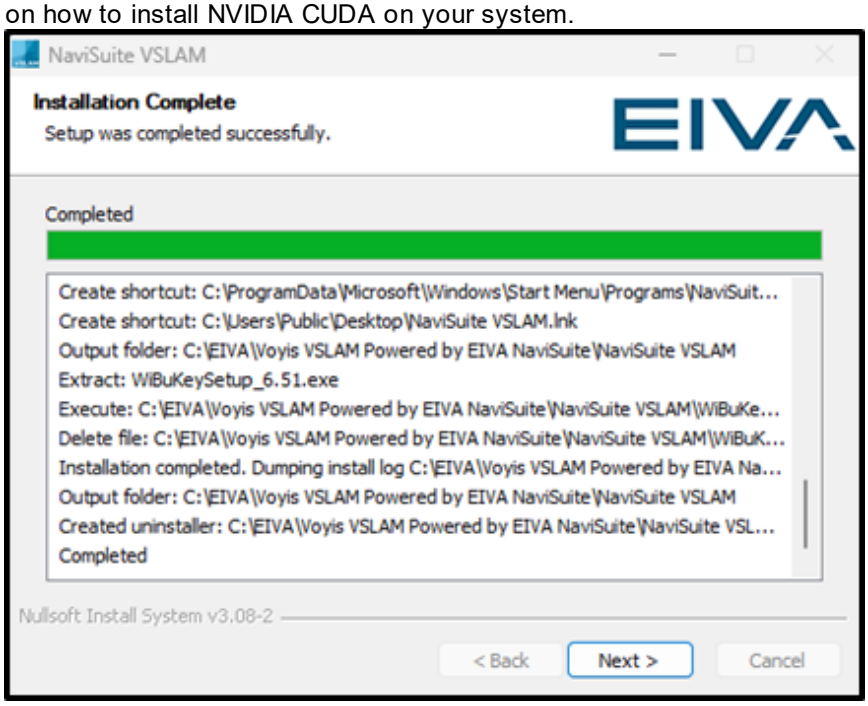

Figure 12 NaviSuite VSLAM installation wizard – Installation process

The installation wizard will show *Completed* when it has finished installing. Click **Next** to finish the installation. NaviSuite VSLAM can now be used inside Discovery Powered by NaviSuite.

3.3 Install NVIDIA CUDA version

Following the software installation prompts will automatically install the correct NVIDIA version.

This process is done only once, and it does not need to be done again if a newer version of NaviSuite VSLAM is being installed.

The following screenshots illustrate the expected installation process.

Note: If you had NVIDIA CUDA 12.1 version installed on your computer, you may need to manually remove it from the operating system as the NVIDIA installer will complain that you are trying to install an older version. Go to **Apps** > **Installed apps** and uninstall all the NVIDIA CUDA 12.1 related applications. Only uninstall NVIDIA 12.1 applications, as deleting other NVIDIA applications will cause nothing showing on your screen as NVIDIA is also a graphic card engine.

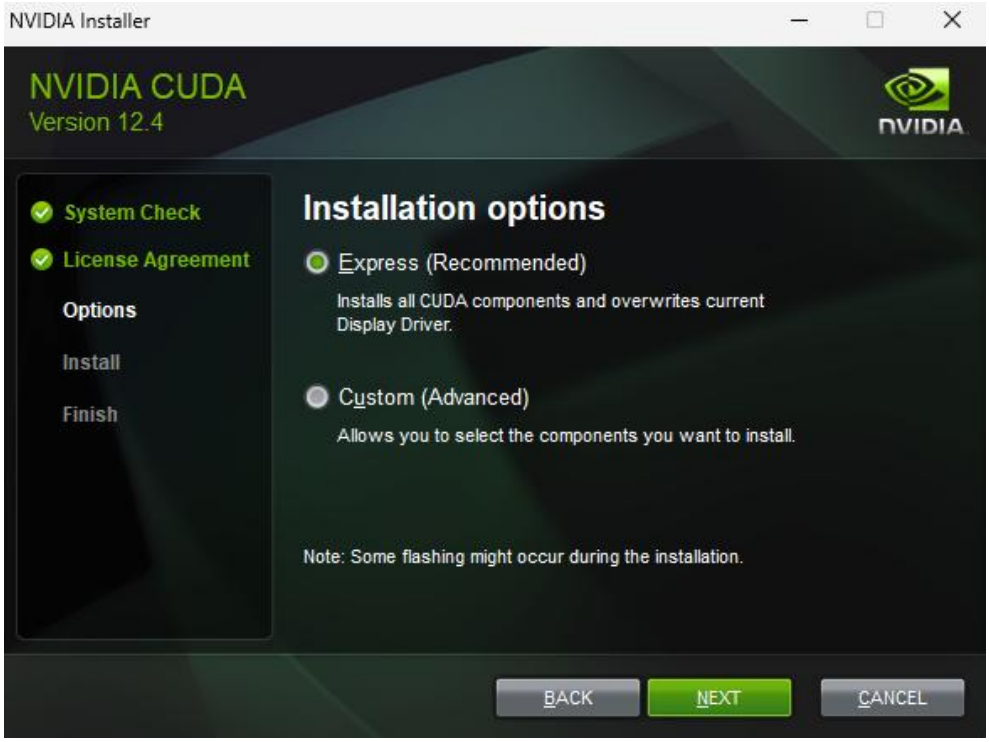

Figure 13 NVIDIA installation wizard – Select Express installation

During installation, Express is recommended. It will install all the components that are needed to run NaviSuite VSLAM.

Figure 14 NVIDIA installation wizard – Accept limited CUDA Toolkit functionality

During this step, Visual Studio does not need to be installed as NaviSuite VSLAM will work without the program in question.

Read and toggle the box and select NEXT to continue installation.

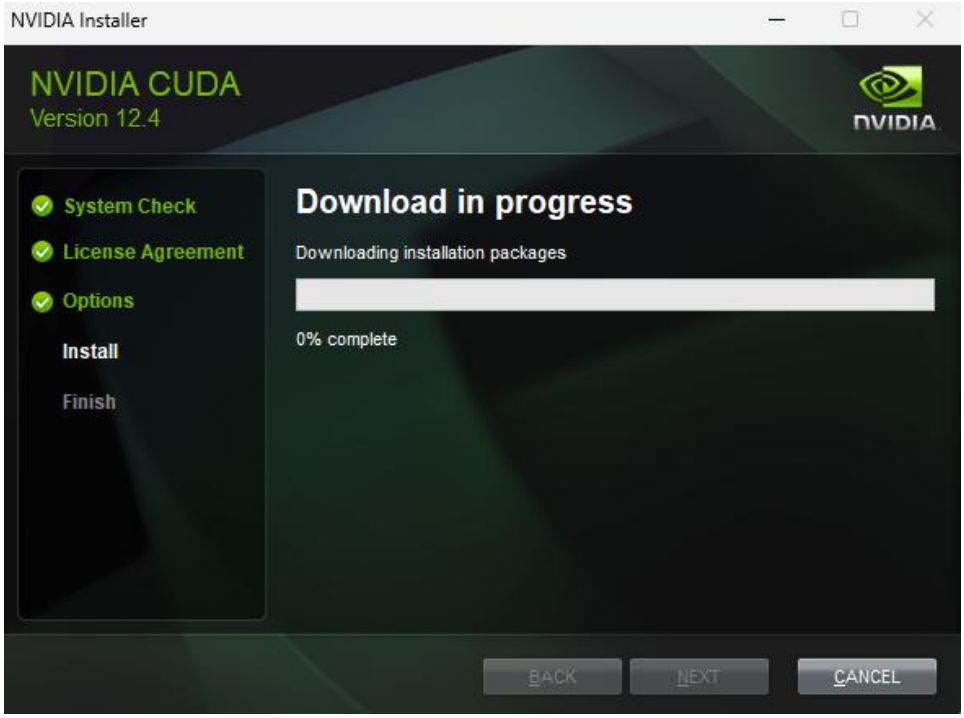

Figure 15 NVIDIA installation wizard – Installing packages

This page shows us that Download of the installation package is in progress. Internet connection is needed for this step.

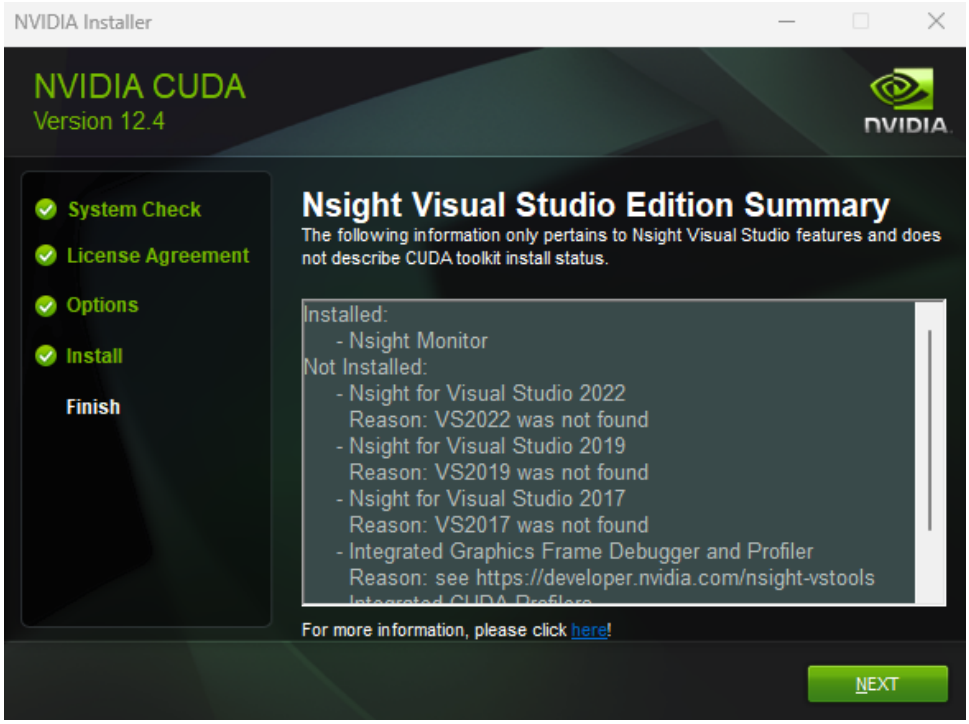

Figure 16 NVIDIA installation wizard completed

Installation page that lists all the components that were installed.

Type *environment* in your Windows search bar (open with the Windows key) and select **Edit environment variables for your account** to check your Windows environment variables.

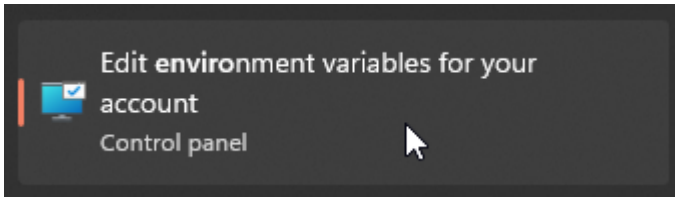

Figure 17 Open the Control Panel from the menu

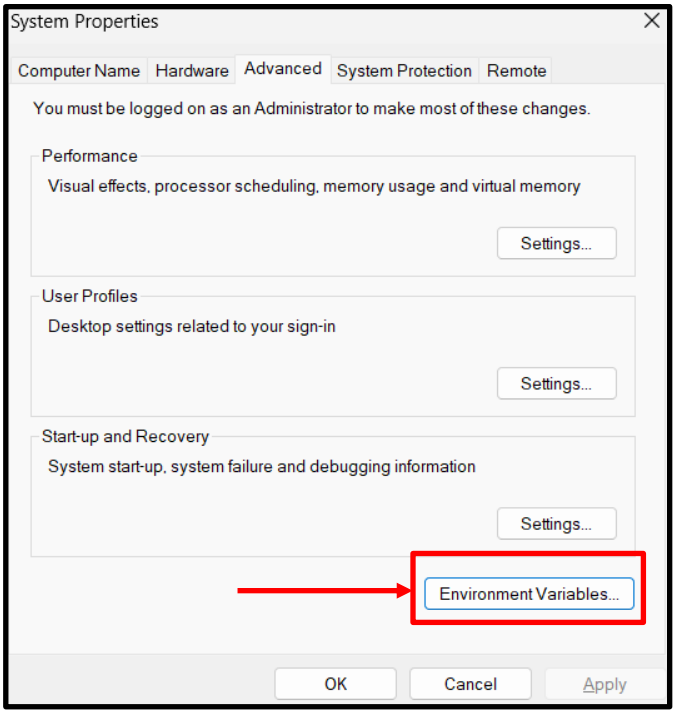

Figure 18 Open Environment Variables

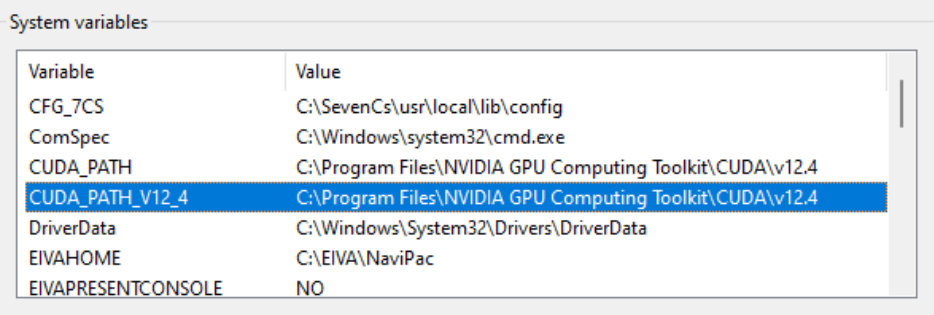

Figure 19 Check the NVIDIA CUDA version is at least 12.4

Confirm you are using NVIDIA CUDA version 12.4.

Alternatively, type *echo %CUDA_PATH%* in Windows command prompt.

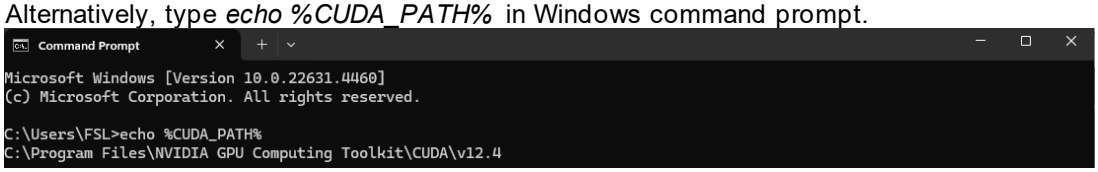

Figure 20 Using command prompt to check CUDA version installed and used

3.4 Enabling firewall permissions manually on Windows clients

Before running the program, it is recommended to enable all Windows firewall permissions for both Discovery Powered by NaviSuite AND NaviSuite VSLAM.

This link shows you how to allow programs to communicate through the Microsoft Windows firewall.

It is recommended to restart your computer after you have enabled the permissions. After restart, check that the firewall permissions are still enabled.

4 Licence activation

After software installation, the Voyis VSLAM Powered by EIVA NaviSuite licence needs to be activated. This can be done through the Discovery Powered by NaviSuite program.

1. Open Discovery Powered by NaviSuite
2. Select **Help** > **Licence Activator**

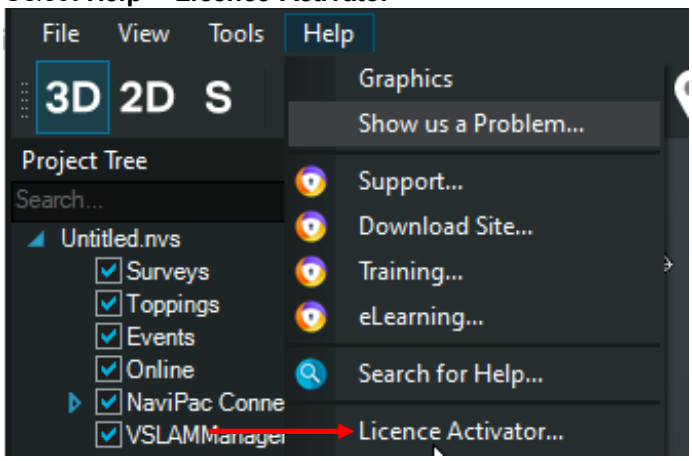

Figure 21 Licence Activator in Discovery Powered by NaviSuite

3. Type your 9-digit licence key and click on **Activate**

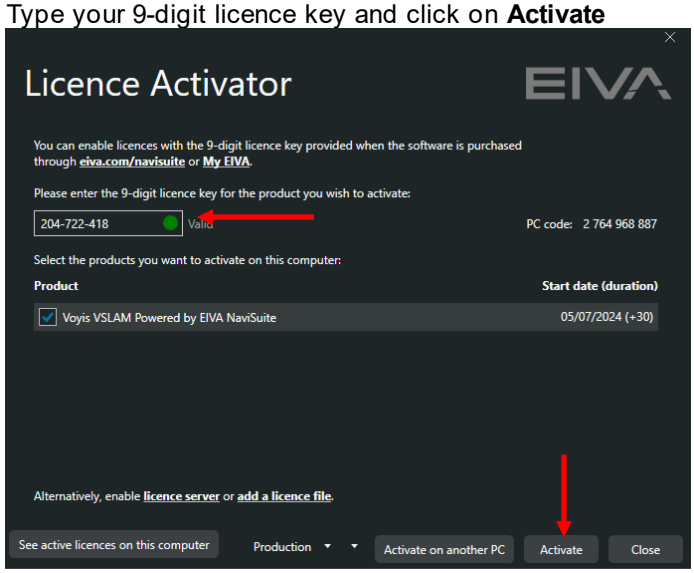

Figure 22 Activate licence in the Licence Activator

4. Check the licence is activated by selecting **Help** > **About**

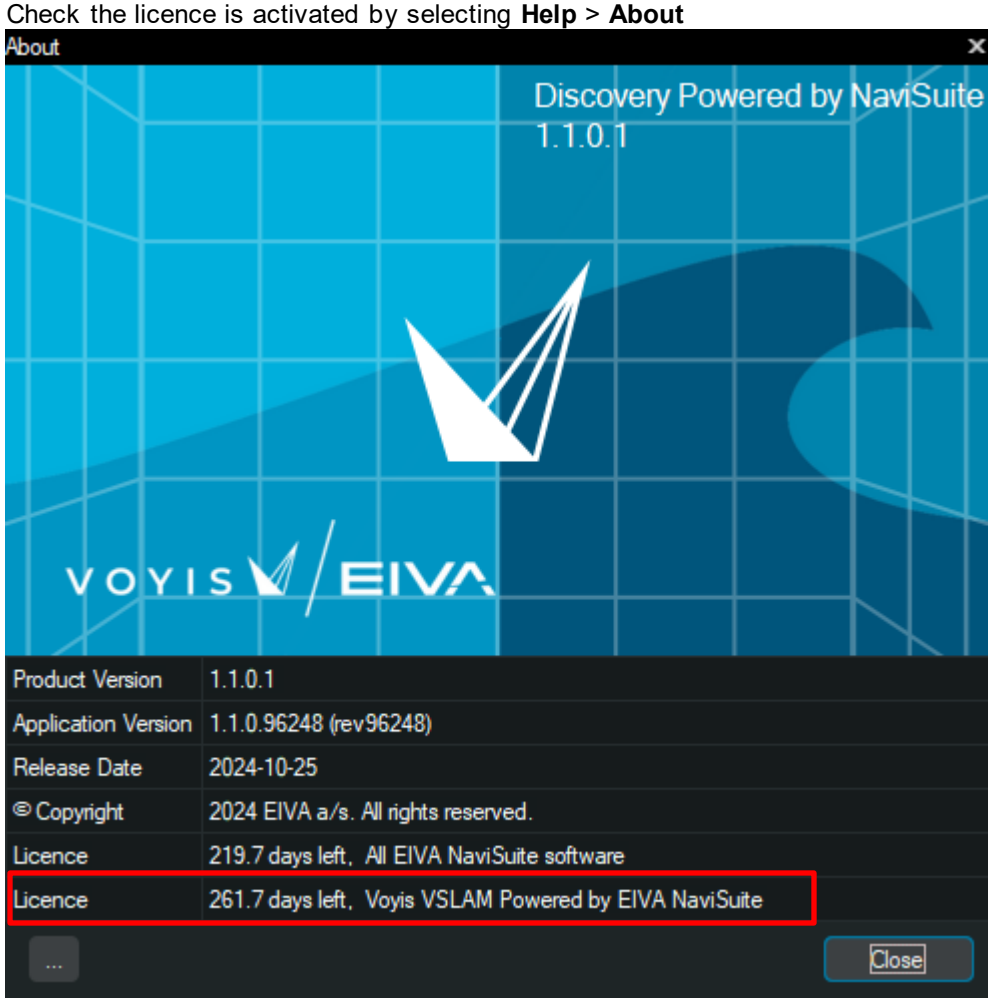

Figure 23 Activated VSLAM solution licence

More information on how to activate the license can be found on FreshDesk FAQ section: [Introduction to the NaviSuite Licence Activator : EIVA Support (freshdesk.com)]

More information on how to renew licence through My EIVA self-service portal can be found on FreshDesk FAQ section: [Requesting a licence via the My EIVA self-service portal as a company holding a special EIVA Enterprise agreement : EIVA Support (freshdesk.com).]