1. Important Safety Instructions

1.1 Safety Tips

1.1.1 User Risks



Improper use of the coffee machine may result in minor injuries.
Please observe the following precautions:
1- Read the user manual carefully before use.
2- Do not use the coffee machine if it is malfunctioning or damaged.
3- Do not modify or tamper with the built-in safety devices.
4- Avoid contact with high-temperature parts of the machine.
5- Children under 8 years of age and individuals with physical, sensory, or mental impairments, or those lacking experience, may only use the appliance under supervision or after receiving safety instructions from a responsible adult.
6- Children must not play with or operate the appliance. Children under 15 years should only use it under adult supervision.
7- Children under 8 years should be kept away from the machine and power cord.
8- Install the coffee machine in a monitored location and ensure it is maintained regularly.
9- Only whole coffee beans may be placed in the hopper. Do not add ground coffee.

Failure to follow safety instructions may result in serious injury.
Observe the following:
1-Comply with all relevant low-voltage directives and local regulations.
2-Ensure proper grounding is established to prevent electrical shock.
3-Follow the equipment nameplate instructions for voltage requirements.
4-Do not touch any live parts.
5-Turn off the main switch and disconnect the power supply before performing maintenance work.
6-Only authorized technical personnel may replace the power cord.

Improper use of the coffee machine may result in minor injury
1- The beverage outlet, hot water, and steam preparation areas pose a burn hazard. Do not place your hand under the coffee outlet during preparation or cleaning.
2- The outlet and brewing device may become extremely hot. Only touch the designated handle during operation, and clean the brewing unit only after the coffee machine has fully cooled down.

1.1.2 Machine Risks

Improper use of the machine may result in damage or contamination.
Follow these guidelines:
1- Do not power on the machine if the water tank is empty.
2- After prolonged non-use (e.g., vacation), clean the machine before switching it on.
3- Protect the machine from environmental factors such as moisture, frost, and dust.
4- Only trained technicians may resolve malfunctions.
5- Use only genuine parts supplied by the manufacturer.
6- In case of visible damage or leakage, stop use and contact customer service.
7- Do not clean the machine with water or a steam cleaner.
8- Do not place the machine on wet surfaces or near water sources.
9- Only coffee beans may be added to the bean container. Do not add ground coffee.
10- If the machine is transported and exposed to temperatures below 10°C, let it sit at room temperature for at least 3 hours before use.

1.1.3 Hygiene Regulations

Using unsuitable water can pose health risks.
Ensure the following:
1-Use clean, uncontaminated water only.
2-Do not add corrosive substances to the water tank.
3-Maximum chlorine content in the water must not exceed 100 mg/L.
4-Water pH should be between 6.5 and 7 (neutral).


2. Get to Know Your INCAPTO Duo


2.1 Components



1. Screen
2. Hopper
3. On/Off button
4. Water tank
5. Drip tray
6. Dispenser

2.2 Button Functions

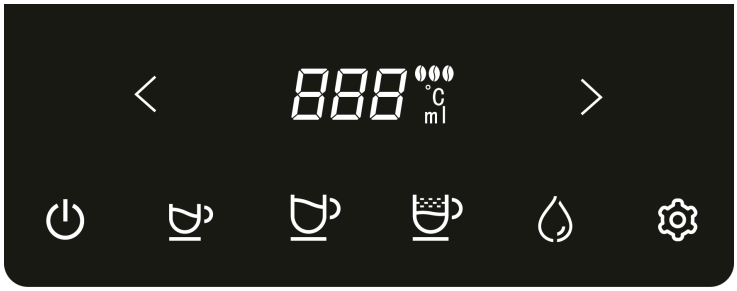

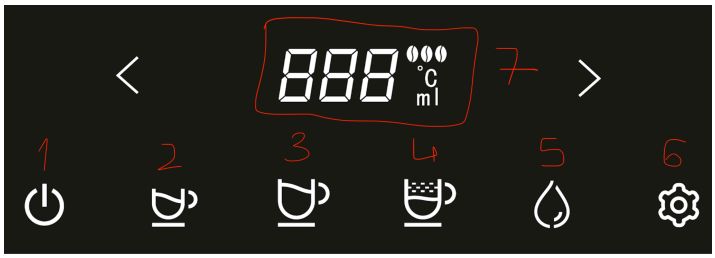

1-On/Off
2-Espresso
3-Lungo
4-Americano
5-Hot water
6-Settings
7-Display

2.3 Alerts

During operation, the following alerts may appear. Please follow the recommended actions:

A malfunction has occurred. Contact customer service for assistance.

The brewer is not correctly inserted. Open the side door and press the brewer firmly into place following the “PUSH” mark.

The water tank is not inserted properly, or the water level is too low. Refill or reposition as needed.

Coffee beans have run out. Refill the hopper with whole beans only.

The coffee grounds container is full. Empty it regularly (a reminder appears every 10 uses).

Ensure the side door is properly closed to resume operation.

Follow the descaling procedure as outlined in the Cleaning and Maintenance section.


The grinder cover is not properly locked. Rotate it to the locked position.


Refill the system with water and restart the machine to continue operation.

2.4 Technical parameters

2.4.1 Beverage parameters

Drink		Coffee volume	Extraction temperature
Espresso	3 different intensities	25-60ml (Default: 30ml)	86-95°C (Default: 92°C)
Lungo	3 different intensities	40-120ml (Default: 80ml)	86-95°C (Default: 92°C)

Drinks		Coffee volume	Hot water volume	Extraction temperature
Americano	3 different intensities	60-125 ml (Default: 70ml)	0-100ml (Default: 80ml)	86-95°C (Default: 92°C)

Drinks	Hot water volume	Extraction temperature
Hot water	10-150ml (Default: 150 ml)	>80°C

2.4.2 Intensity parameters

Intensity level	Powder (g)

1	9g
2	10g
3	11g

2.4.3 Specifications

Model	CM01-BP
Rated Voltage/Frequency	AC220-240V 50/60Hz
Power	1350W
Water tank capacity	1.2L
Bean box capacity	Double hopper, 100g each (100g+100g)
Ground box capacity	10 servings
Coffee Machine Weight	8.0 kg
Dimensions	L425mm*W181mm*H345.5mm

2.5 Accessories

1x Power cord
1x Manual
1x Cleaning brush

3. How to use INCAPTO Duo

3.1 Installation requirements

To ensure safe and optimal operation of the coffee machine, please follow these guidelines when selecting an installation location:
1- Allow sufficient space above the machine for refilling coffee beans and water.
2- Maintain a minimum distance of 8 cm between the back of the machine and the wall to ensure adequate air circulation.

Climate conditions
The machine must be placed in a suitable environment to avoid damage:
1- Ambient temperature should be between +10°C and 40°C.
2- Relative humidity should not exceed 80% RH.
3- The machine is designed for **indoor use only**. Do not expose to adverse weather conditions (e.g., rain, snow, frost).

Power supply conditions
Electrical connections must comply with national regulations. The supply voltage at the installation site must match the rating indicated on the machine's nameplate.

Caution: risk of electric shock



Please observe the following precautions:

1. Do not operate the machine if the power cord is damaged. A damaged cord must be replaced immediately by a qualified service technician.
2. Extension cords are not recommended. If absolutely necessary, use only cords with a minimum cross-sectional area of 1 mm².
3. Do not run the power cord over sharp edges, suspend it in the air, or allow it to touch high-temperature areas. Protect the cable from oil, corrosion, and chemical exposure.
4. Do not pull or lift the machine by the power cord. Remove the plug by grasping it firmly, not by pulling the cord. Do not insert or remove the plug with wet hands.

3.2 Power Connection

Plugging in the coffee machine

1. Insert one end of the power cord into the socket on the back of the coffee machine.
2. Insert the other end into a suitable power outlet.

3.3 Adding Water and Coffee Beans

Filling the water tank

Lift and remove the water tank cover. Detach the water tank and fill it with fresh water. Do not exceed the "Max" level marking. Reinsert the water tank securely into the machine.

Adding coffee beans

Open the bean hopper lid. Add coffee beans to either the A or B compartment. Close the lid after filling.

3.4 First Power On / Off

1- Switch on the main power at the back of the machine to connect it to the power supply.

2- Lightly touch the on/off button  on the control panel. The machine will begin preheating, and the display will indicate the process. 

3- The machine automatically checks whether the water tank is empty, whether the brewer is correctly inserted, whether the side door is securely closed, and whether the waste water box is properly in place. If any issue is detected, the corresponding icon will blink on the control panel as a reminder. Please address each alert accordingly.

4- After the machine is preheated, it automatically pumps water to clean the brewer.
5- After the cleaning process is completed, the machine enters the ready state, and coffee can be brewed at any time.

If the machine has not been used for an extended period or is being powered on for the first time, it is possible that the water pump may be loud, and water may not be drawn immediately during the initial pumping process. This is normal. After power on is complete, press the hot water button again to initiate water flow. If pressing the hot water button once does not result in water output, try several times until the water begins to dispense normally.

6- If you need to power off, please long press the on/off button  for 3 seconds. The machine will perform automatic cleaning, and after the cleaning process is completed, it will automatically shut down.

4. Preparation

4.1 Hopper selection (A, B, or mix)

The coffee machine has two bean hoppers (A and B). With the selector knob, you can choose:

1. Position **A** → only beans from hopper A are used.



2. Position **B** → only beans from hopper B are used.



3. Position **AB** → beans from both hoppers are used and mixed.



4.2.1 How to clean residue when switching coffee

When switching between hopper A and B, press and hold the **Espresso**  button for 3 seconds. This clears any remaining beans from the previous hopper (the grinder will run, but no coffee will be dispensed).

4.2 How to make an espresso

1. Press the Espresso button. It will begin blinking.
2. The grinder will activate, and the display will show the intensity level.
   Before grinding is complete, adjust the intensity using the **<** or **>** buttons:



   - Level 1: mild
   - Level 2: medium
   - Level 3: strong (recommended default)
3. Once grinding finishes, the extraction process will begin.



   During extraction, you can adjust the coffee volume (25–60 ml) using the < or > buttons.

4.2 Hot water

1. Press the Hot Water button. It will begin blinking.
2. The machine will automatically dispense hot water.
   - You can adjust the water volume during dispensing using the **<** or **>** buttons.
   - Pressing the Hot Water button again will stop the flow.

5. Settings

5.1 Set Coffee Parameters

1. Press and hold the **Settings** button for 3 seconds. The **Settings** button will blink once per second (settings mode).
2. Select the recipe button you wish to configure (e.g.: Espresso)
3. The selected beverage button will blink. Choose the intensity using the < or > buttons (Levels 1, 2, or 3).



4. Press **Settings** to confirm.

- Next, set the **extraction temperature** (options: 86°C, 89°C, 92°C, or 95°C → 92°C recommended):



5. Press **Settings** again to confirm.
    - Then, set the **coffee volume** using < or >:



6. Press **Settings** to confirm and exit.

5.2 Set Standby time

1. Press and hold the **Settings** button for 3 seconds. The power on/off button will blink (standby mode).
2. The digital display will blink. Set the standby time (in minutes) using the < or > buttons.



3. Press **Settings** to confirm

5.3 Set Descaling Level

1. Press and hold **Settings** button for 3 seconds to enter settings mode.
2. Press and hold **Settings** again for 5 seconds. The descaling icon will blink.
3. Adjust the **descaling level** using < or >, then press **Settings** to confirm.


Descaling Level (Hardness Value)	Water volume	Notes
OFF	-	Do not execute descaling
1	80 L	
2	60 L	
3	40 L	
4	20 L	Default value
5	10 L	
ON	-	Execute descaling immediately

5.4 Cup Count Query

1. Press and hold the **Settings** button for 3 seconds to enter settings mode.

2. Press and hold **Settings**  again for 8 seconds. All beverage buttons will illuminate.

3. Select the beverage you want to check (e.g., Espresso ).
    - The digital display will show 3 digits: the last three digits of the cup count.

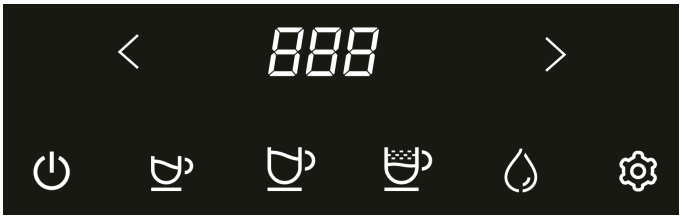

4. Press the > button → it displays H + two digits, which represent the **first two digits** of the count.



5. To check other beverages, press the corresponding beverage button.

5.5 Grind Size Adjustment

⚠ The machine is pre-adjusted at the factory and is ready to brew coffee.
If your coffee is too weak with little crema, or too strong and dripping slowly, you can adjust the grind size:

1. Open the bean hopper lid.

2. Start brewing a coffee. While the grinder is running, turn the grind size knob:
    - Level 1: finest grind
    - Level 5: coarsest grind



3. Check the coffee flow:
    - If the flow is very slow or no coffee is dispensed: turn toward level 5.
    - If you want richer crema: turn toward level 1.

⚠ Do not adjust more than one level at a time. Changes in grind size take effect after brewing at least two cups.

6. Cleaning and maintenance

6.1 Machine Cleaning

The following components require regular cleaning:

Coffee grounds container: when the icon lights up  , it indicates the container is full. Empty and clean after each use.
Drip tray: when the float (red pin inside the tray) rises, the tray is full. Empty and clean it.

Water tank: clean once a month using a damp cloth and neutral detergent.

Coffee spout: clean regularly with a soft cloth or sponge. If clogged, use the included cleaning brush.

Bean hopper: wipe clean with a dry cloth once a month.

Coffee powder dispensing channel: clean monthly or when visibly blocked.

⚠ To clean the dispensing channel:

1. Switch off and unplug the machine.
2. Open the side door.
3. Use the brush to clean the channel.
4. Remove any visible coffee powder with a vacuum cleaner if necessary.
5. Clean any coffee residue and stains inside the drip tray.

6.2 Brewer Simple Cleaning

1. Press the on/off button to shut down the machine. It will automatically perform a cleaning cycle.
2. Once the cleaning is finished, you may resume brewing coffee.

6.3 Brewer Deep Cleaning

Recommended every 2 weeks:

1. With the machine turned off, open the side door.
2. Press both orange-red buttons on the brewer (in the PUSH direction) and remove it. Soak the brewer in clean water for 5 minutes, then rinse thoroughly under running water. *(Do not use a dishwasher or detergent.)*
3. Use the cleaning brush to remove any visible residue inside the brewer.
4. Reinsert the brewer by aligning the **Insert** mark with the chamber bottom and press until you hear a click.



⚠ Ensure the orange-red buttons return to their original position. Failure to do so may damage the machine.

6.4 Descaling

When the descaling level is reached, the descaling icon will blink  .

Procedure:

1. Add a descaling agent (powder or tablets) and water into the water tank.
2. Place a large cup under the outlet.
   Press and hold the **>** button for 3 seconds to start the descaling program.
   - The descaling icon will blink, and water will begin flowing.

3. Monitor the cup to prevent overflow. You may pause the cycle by pressing  and resume with the **>** button.
4. Once the tank is empty, the machine will stop.
5. Remove, rinse, and refill the tank with clean water.
6. The cycle will automatically resume and complete.

6.5 Grinder Blade Removal and Cleaning

If the grinder malfunctions (e.g. does not grind properly, gets stuck, or emits unusual noise), follow these steps:

1. Lift the grinder cover lock.



2. Turn the cover ring counterclockwise to the unlock position and remove the cover.





3. Set the grind size knob to Level 5, lift it upwards, and turn clockwise to unlock the burr disc.





4. Lift the burr disc handle to remove the blade.



5. Clean the grinding chamber thoroughly using a vacuum cleaner. A small screwdriver may be used for stubborn residues.



6. Replace the burr disc and return the grind knob to the recommended setting (Level 3).
    - If the burr sleeve does not lock, repeat the adjustment until it is securely installed.





7. Reinstall the grinder cover. Turn it clockwise to the locked position and ensure it is secured.







7. Transportation and disposal

7.1 Transportation

1. Retain the original packaging of the coffee machine for future transport.
2. Before transportation, empty all internal water. Failure to do so may result in machine damage.
3. Empty the water tank and drip tray, then clean the interior and exterior of the machine thoroughly.

7.2 Waste disposal

The coffee grounds generated are **pure organic waste** and can be disposed of as general household waste.

7.3 Wastewater treatment

The wastewater produced during brewing and cleaning has the same characteristics as household wastewater. It can be discharged through the standard sewer system.

7.4 Machine handling

1. This machine contains **high-quality recyclable materials** and should be collected for recycling and reuse.

2. **Do not dispose of this machine as ordinary household waste.** Always follow local and national regulations regarding the disposal of electronic waste.

8. Troubleshooting


Fault	Method	Treatment Method
Coffee machine cannot start	Power plug disconnected or power switch is in the OFF position	Plug in the power cable and set the power switch to ON
Error message or buttons unresponsive	Internal hardware or software error	Turn off the machine, unplug it, wait 30 seconds, then restart. If the issue persists, contact INCAPTO.
Grinder makes abnormal noise	Foreign objects inside grinder	Contact INCAPTO.
Coffee does not flow or flows too slowly	Coffee grind is too fine	Adjust the grind knob one level coarser. The change will be noticeable after brewing two cups.
	Circuit lacks water supply	Run one cup of hot water before brewing coffee.
	Brewer is too dirty	Clean the brewer.
Coffee flows too fast or quality is poor	Coffee grind is too coarse	Adjust the grind knob one level finer. Changes take effect after two cups.
Brewer cannot be removed	Brewer is not in the starting position	Power cycle the machine. It will return the brewer to the correct position.
Coffee dispenses as clear water	Coffee beans are not grinding smoothly	Adjust the grind setting to a coarser level and retry.
	Beans are damp	Try dry beans. If the problem continues, contact INCAPTO.
Machine still shows brewer error after placement	Brewer not inserted properly	Insert the brewer and press firmly at the PUSH mark until you hear a “click.”
Coffee volume is insufficient	Internal pipe leakage	Contact the manufacturer or distributor.

	Waterway is blocked by scale	Run the descaling program according to the instructions.

8.1 Detection of Missing Beans During Grinding

1. Open the bean hopper lid and check if the beans are stuck.

2. If not, adjust the **bean detection sensitivity**:
   a) Open the side door and remove the drip tray.
   b) Press and hold the **Settings** button for 5 seconds (entering settings mode).
   c) Press the espresso button repeatedly until **S04** appears.

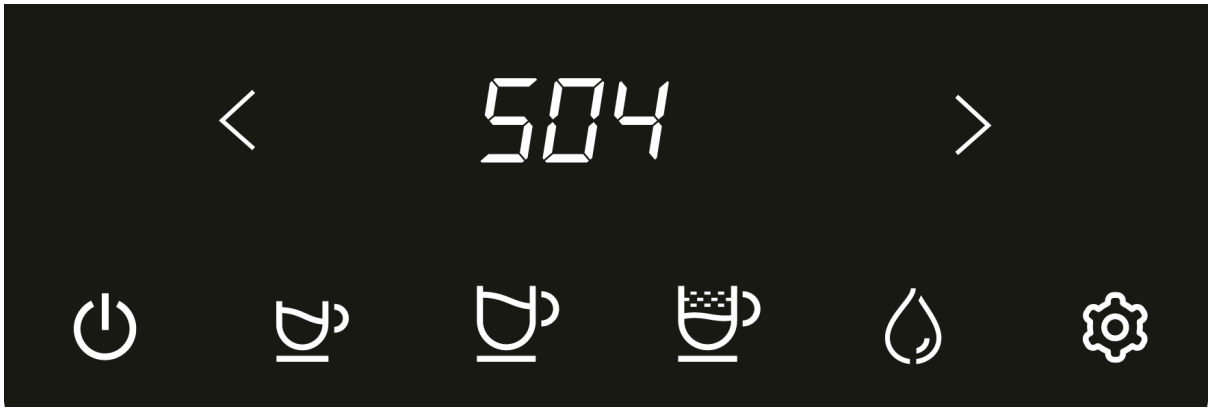


   d) Press **<** to **lower** the value (begin by reducing it by 1).
   e) Press the hot water button to save.
   f) Press **Settings** again to exit.
   g) Close the side door, replace the drip tray, and brew coffee.
   h) If the issue persists, reduce **S04** further and repeat.

8.2 No Bean Shortage Reported When Hopper is Empty

1. Adjust the **bean shortage detection sensitivity**:
   a) Open the side door and remove the drip tray.
   b) Press and hold the **Settings** button for 5 seconds (settings mode).

c) Press the espresso button  button repeatedly until S04 appears.

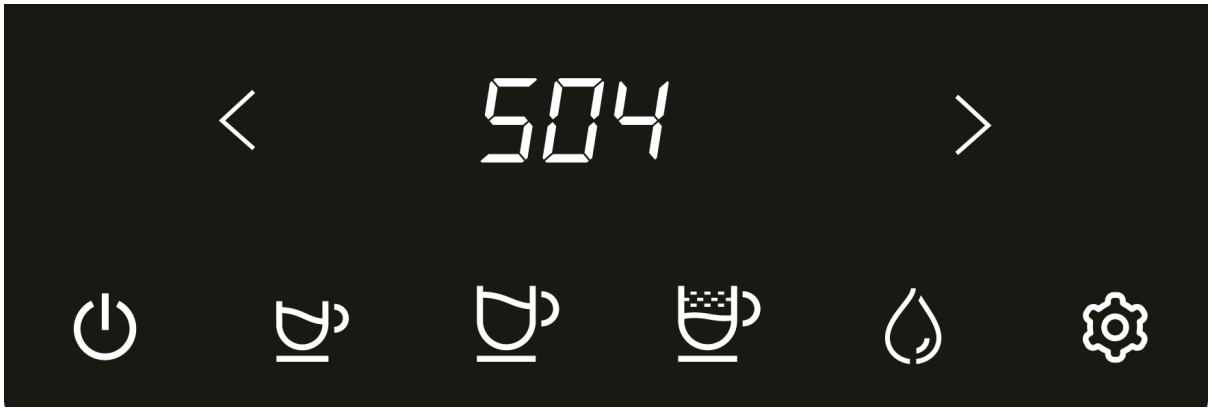

d) Press **>** to **increase** the value (begin by increasing it by 1).

e) Press the hot water  button to save.

f) Press **Settings**  to exit.

g) Close the side door, replace the drip tray, and brew coffee.

h) If still unresolved, further increase the **S04** value and try again.

9. Responsibility and Warranty

If personal injury or property damage occurs due to any of the following reasons, **our company will not assume responsibility nor provide warranty coverage**:

1. Improper use of the machine not in accordance with the instructions in this manual.
2. Incorrect installation, adjustment, operation, cleaning, or maintenance.
3. Failure to follow the safety and usage guidelines outlined in this manual.
4. Operation of the machine under unsuitable or abnormal conditions.
5. Use of non-original or unauthorized spare parts.
6. Damage caused by foreign objects, accidents, intentional misuse, or force majeure events.