

CAD Viewer — User Manual

Version: v0.2 · **URL:** <http://localhost:4322/>

CAD Viewer is a real-time collaborative browser app for viewing CAD geometry (GLBs from SolidEdge, FreeCAD, Fusion 360, OpenCascade..., plus STEP files converted on the server). Create a session, share a model, and everyone on your LAN follows your camera and part visibility live — or just use it as a plain local viewer.

1. Starting the app


Portable zip (Windows, no installs):

1. Unzip `cad-viewer-portable.zip` anywhere.
2. Double-click `start.bat`. It launches the server and opens the browser.
3. The app is served at **<http://localhost:4322/>**

From source: `node server.js` in the project folder, then open the same URL.

STEP files (.step/.stp) additionally need Docker + the `chair-cq:local`

OpenCascade image. Run `install-docker-opencascade.bat` once to set that up. GLB/GLTF files work without any of it.

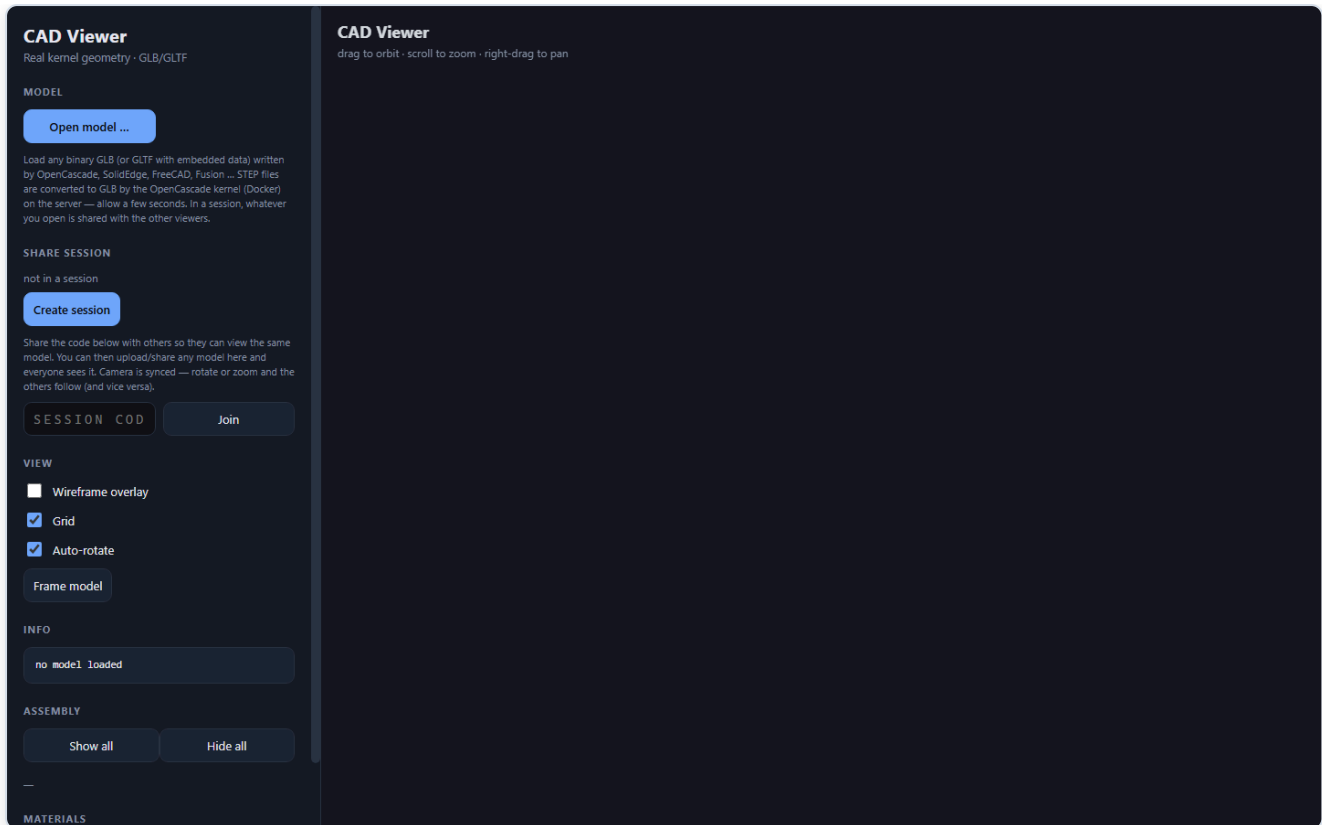


Empty start — the viewport is blank until you open a model

2. Opening a model

1. Click **Open model...** in the left sidebar.
2. Choose a `.glb`, `.gltf`, `.step` or `.stp` file from your computer.

GLB/GLTF loads instantly. STEP files are converted to GLB by the OpenCascade kernel on the server (a blocking overlay shows progress — a few seconds).

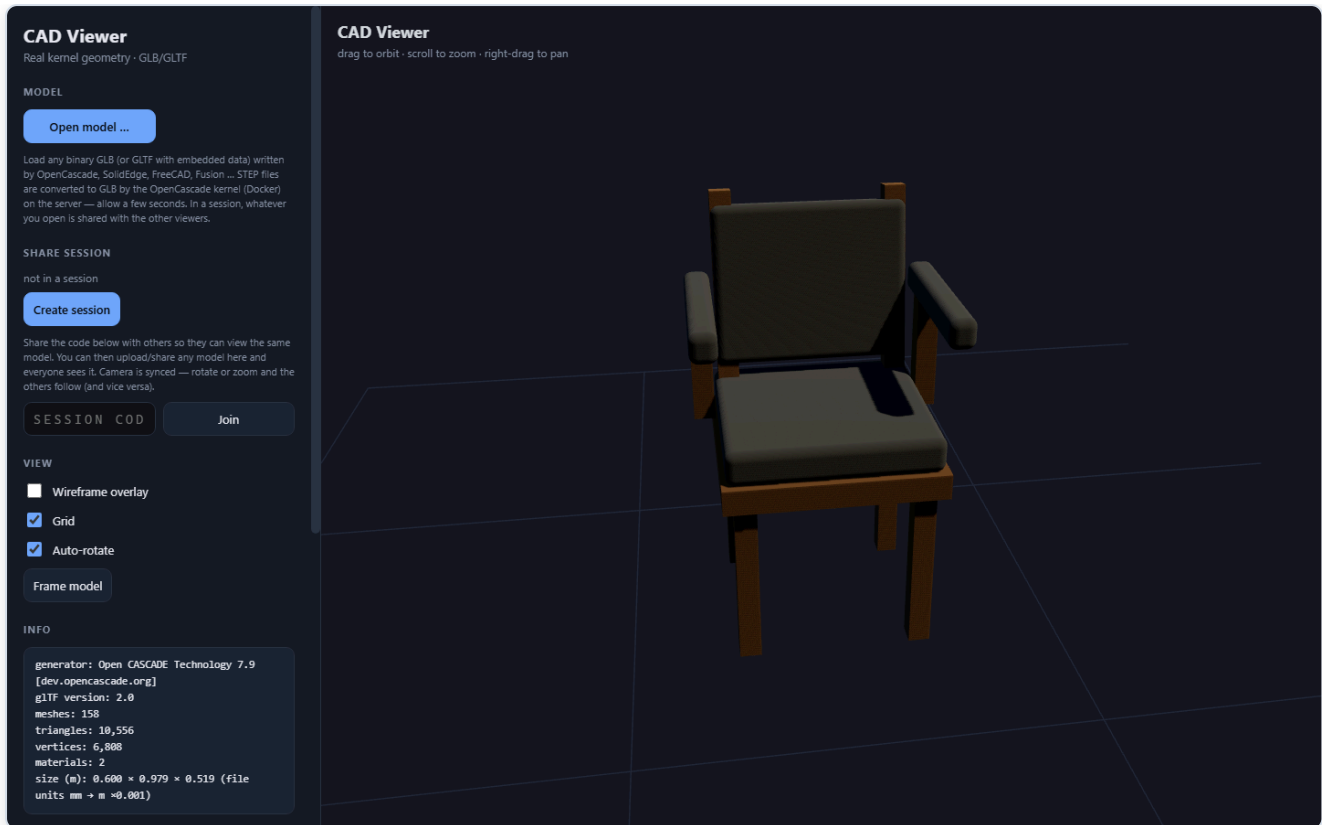

A model loaded in the viewport, with Info, Assembly and Materials panels


The sidebar shows you:

- **Info** — generator, mesh/triangle counts, dimensions and units
- **Assembly** — the part tree (see §3)
- **Materials** — swatches of every colour in the model

3. The Assembly panel — parts and visibility

Every part of the model appears in the **Assembly** tree. Use the checkboxes

to show or hide individual parts, or **Show all / Hide all** for the whole model.

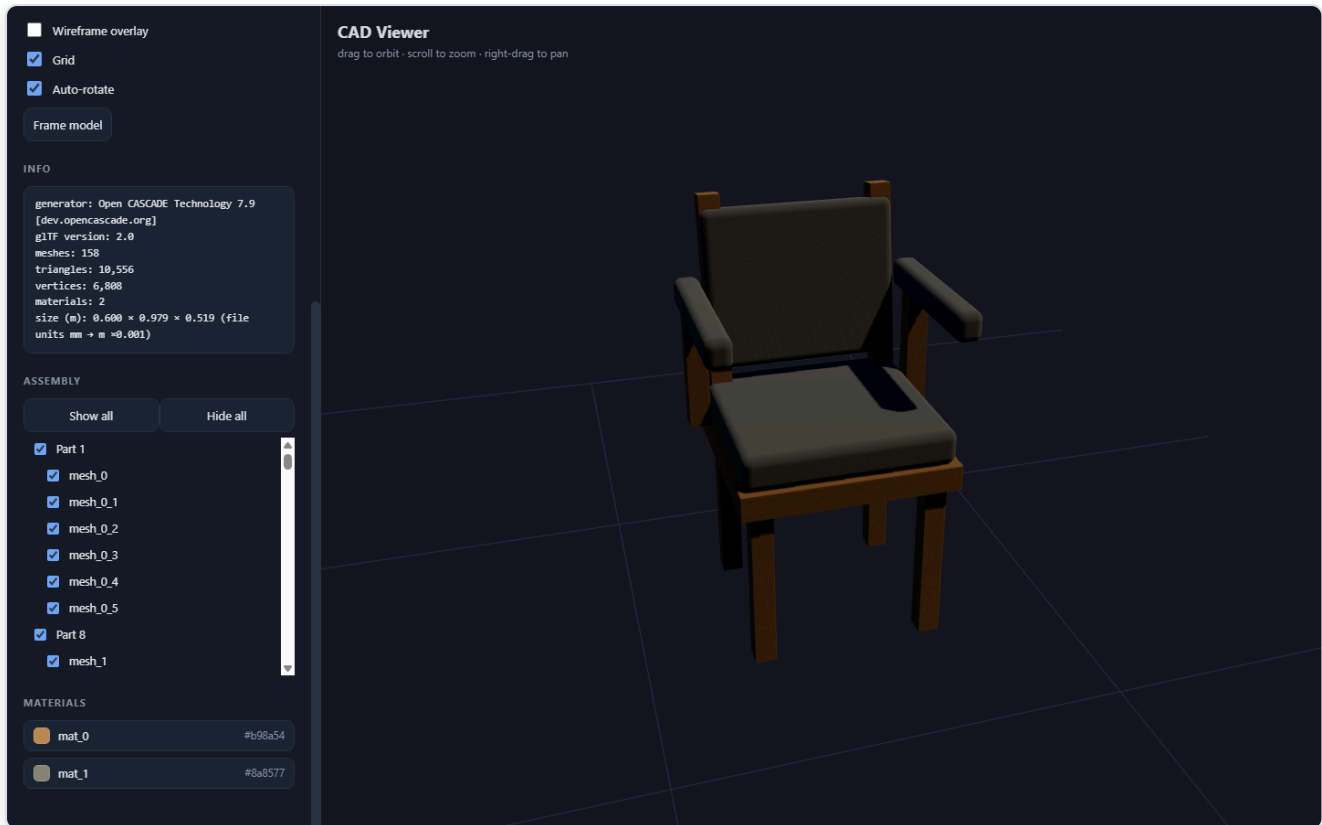

Assembly tree with the part list

Tip: toggling a part hides it in the viewport only for you — unless you're in a session (see §5), where show/hide syncs to everyone.


4. Navigating the viewport

Action	Effect
Drag (left button)	Orbit the camera
Scroll	Zoom
Right-drag	Pan
Frame model button	Reset the view to fit the model
Wireframe overlay	Toggle wireframe on all parts
Grid	Toggle the ground grid
Auto-rotate	Slow turntable spin (disabled in a session)

5. Collaborative sessions (host)

Sessions let other people on your LAN view the same model and follow your camera and part visibility.


1. Click **Create session** — a 5-character code appears.
2. **Open a model** (or re-share one you've already loaded).
3. Share the **join link** shown under the code, or the code itself, with the other users.

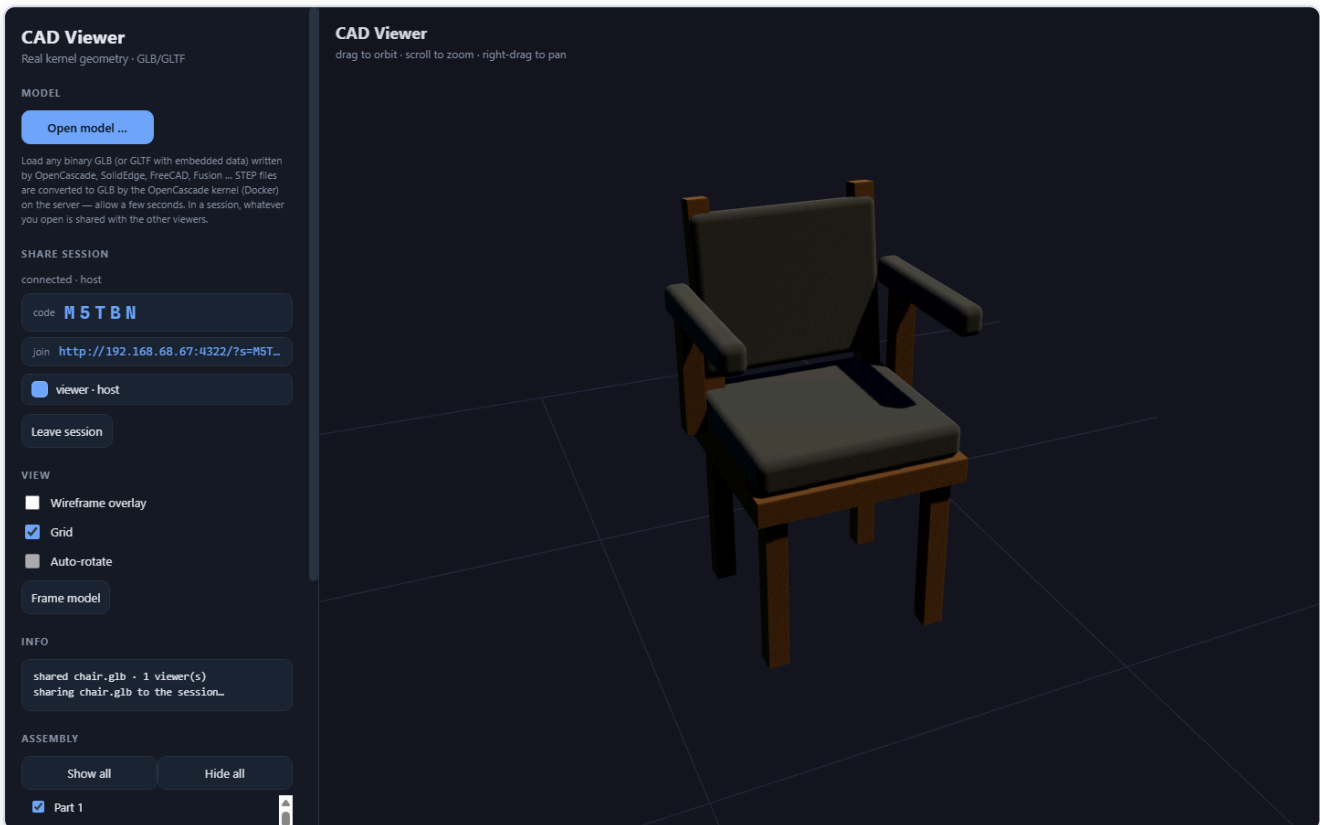

A session created — code and LAN join link shown


While the model is being handed to guests you'll see a blocking

“Sending model to guest(s)...” overlay; control is restored automatically once every connected guest confirms receipt.

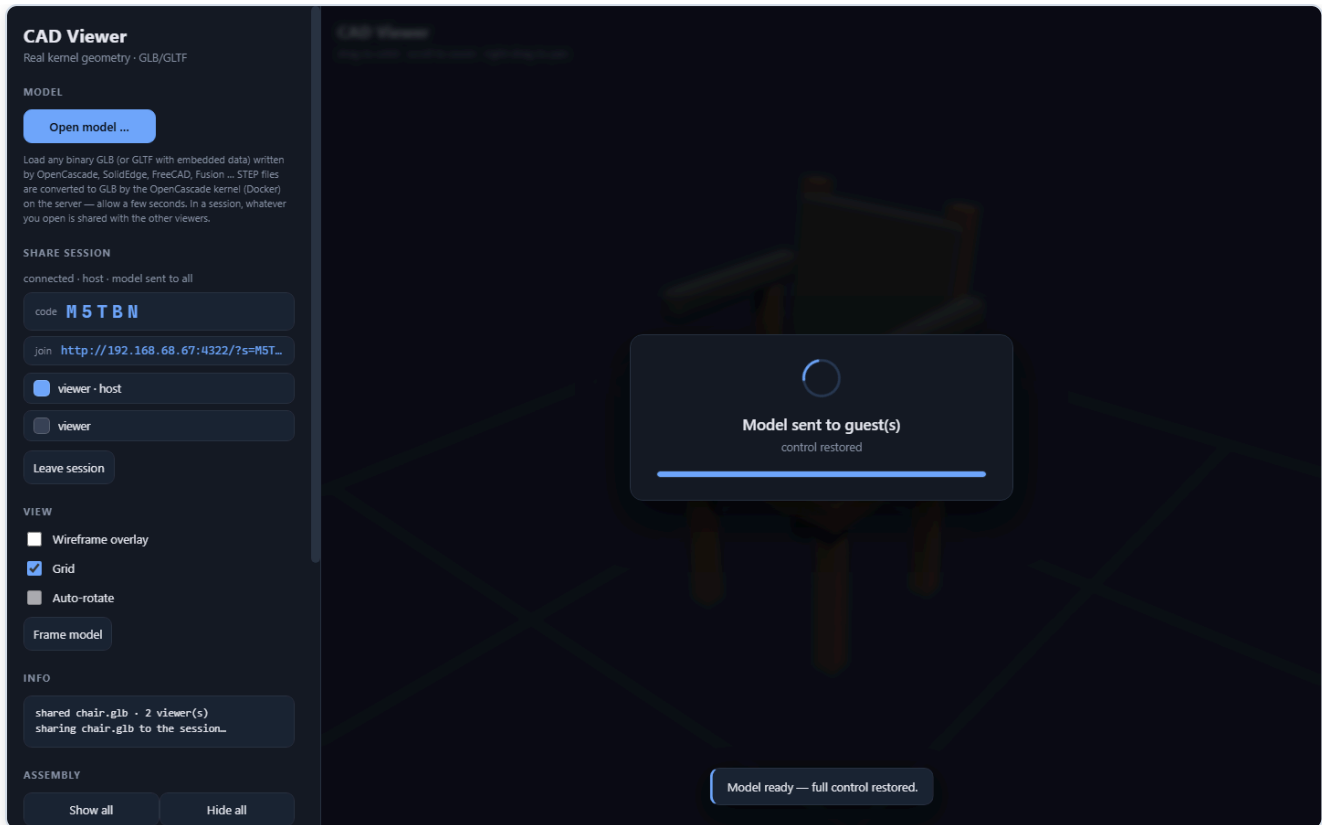

The host's "Sending model to guest(s)" overlay

The roster under the code shows who is connected.

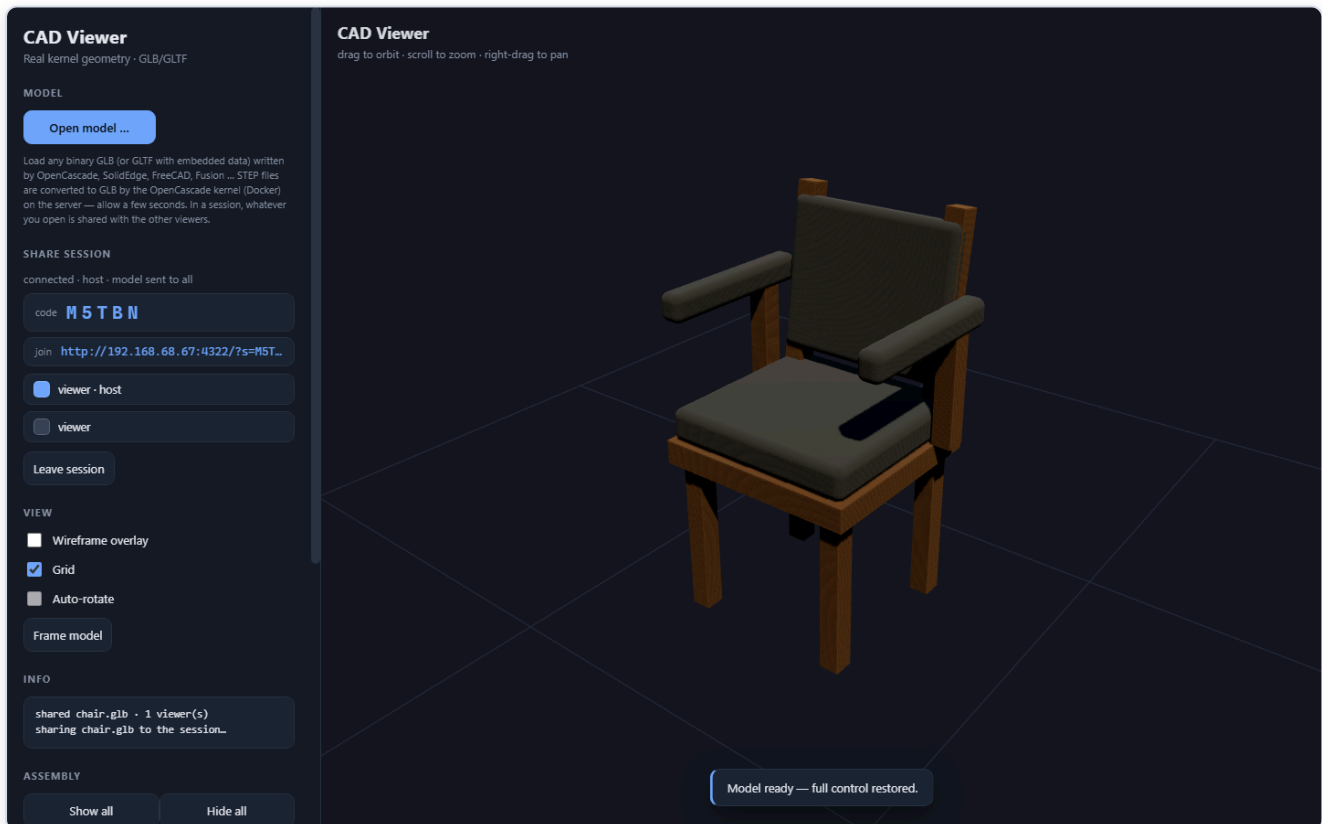


Host view: guest connected in the roster

6. Joining a session (guest)

On another computer (same network):

1. Open the **join link** the host sent you, **or**
2. Open the app, type the code into **session code** and click **Join**.

You'll see a **"Receiving model..."** overlay with byte progress, then the model appears — same view, same parts, same visibility as the host.

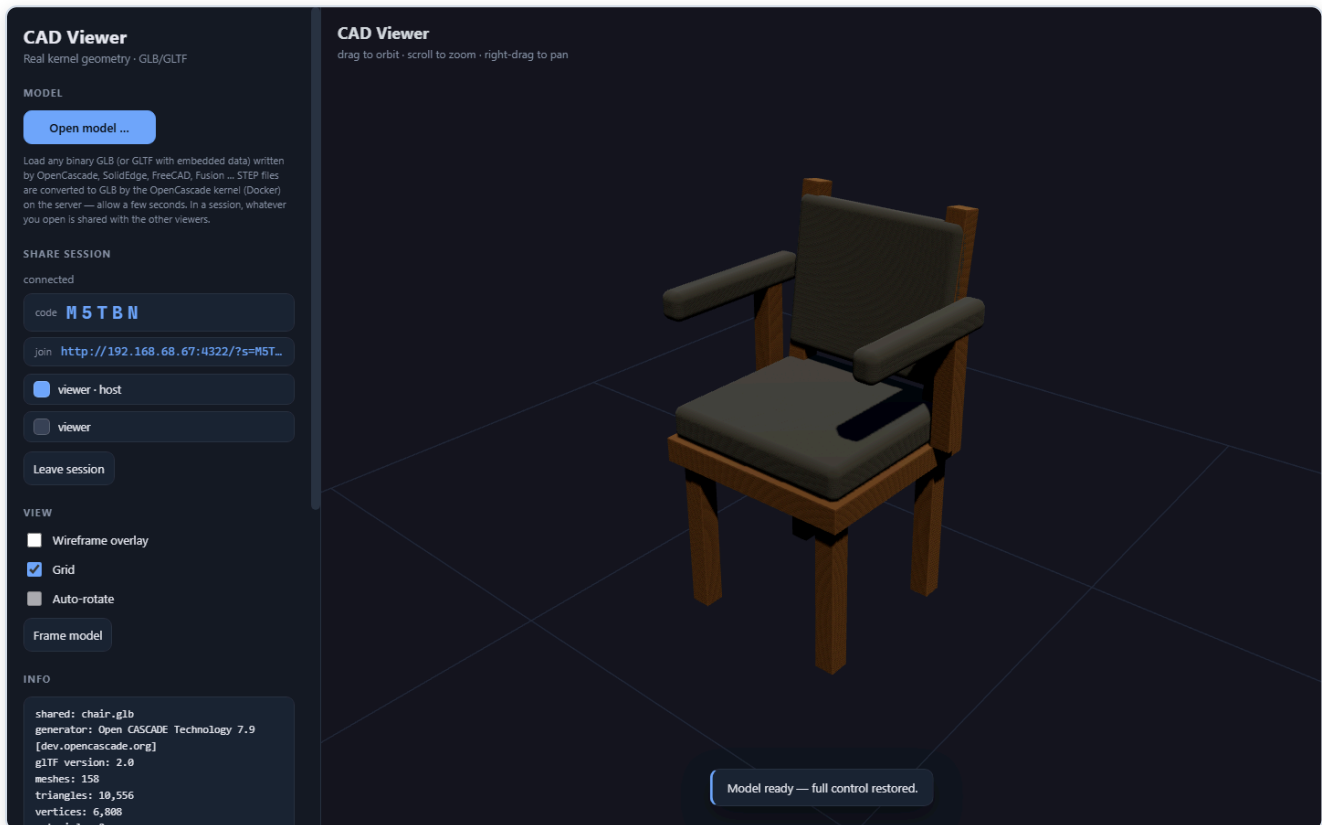


Guest view after receiving the shared model


What stays in sync

- **Camera** — whoever orbits/zooms/pans, everyone follows (both directions)
- **Part visibility** — show/hide any part and it changes for all members
- **The model itself** — late joiners automatically receive the current model

and visibility state

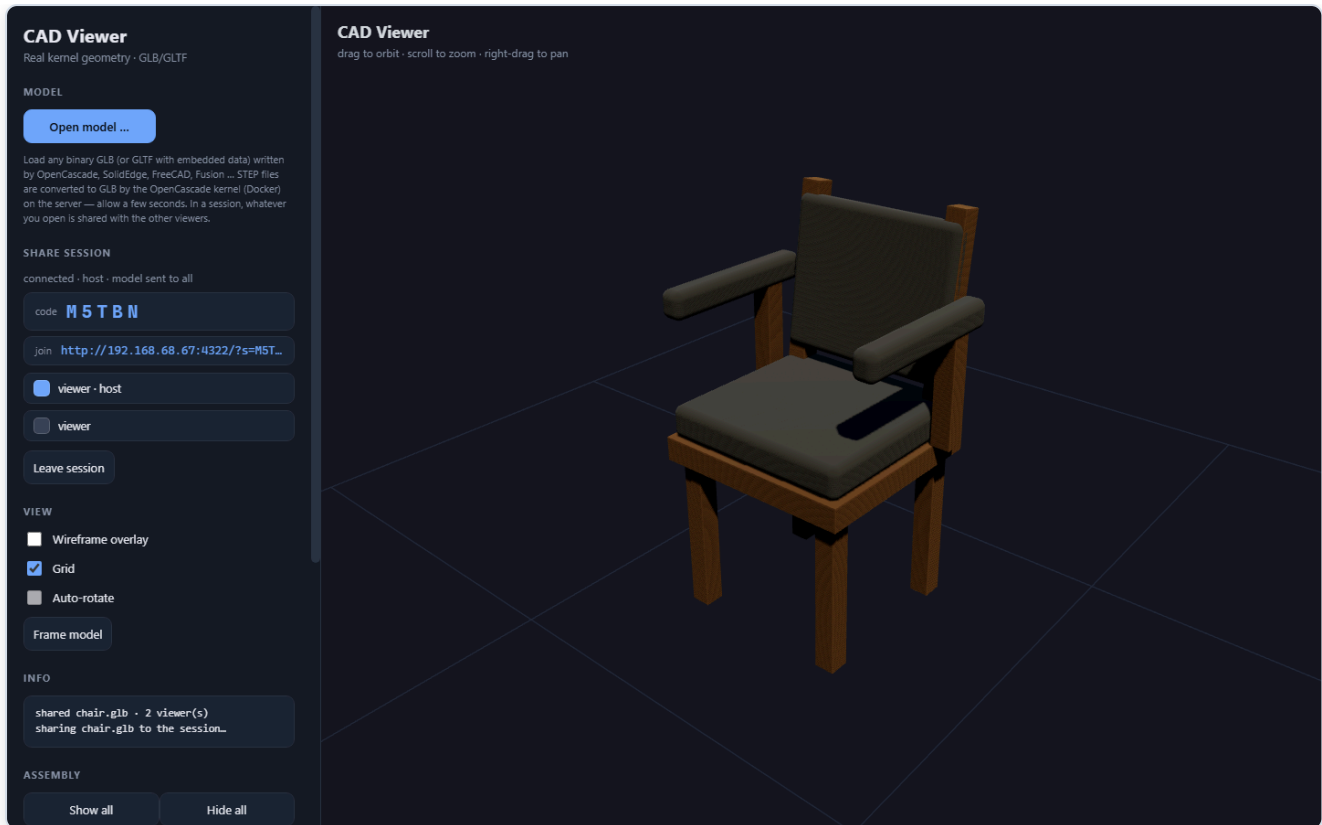

Part hidden on the host

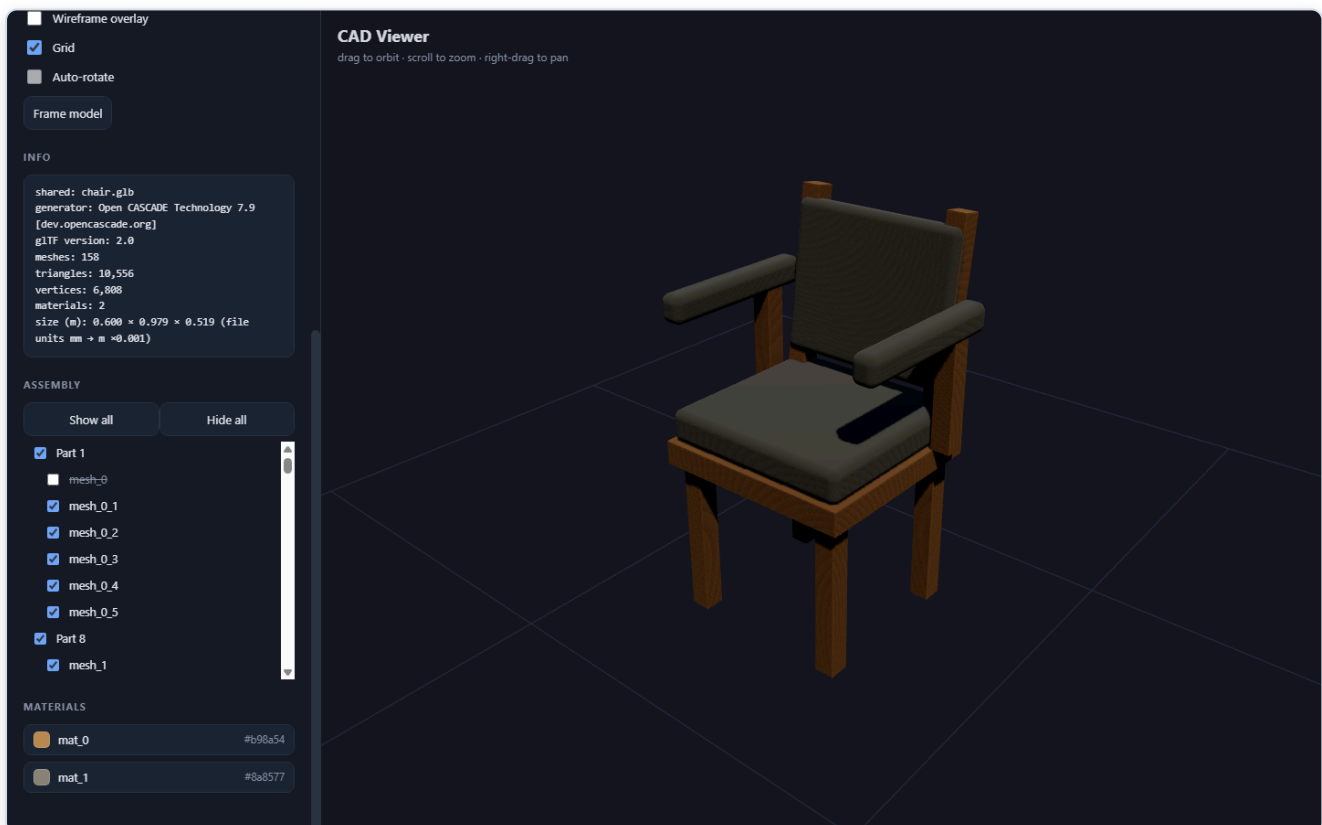


The same part hidden on the guest — synced

7. Leaving a session

Click **Leave session** — you keep your local model and return to solo viewing.


The session itself stays alive on the server for other members.

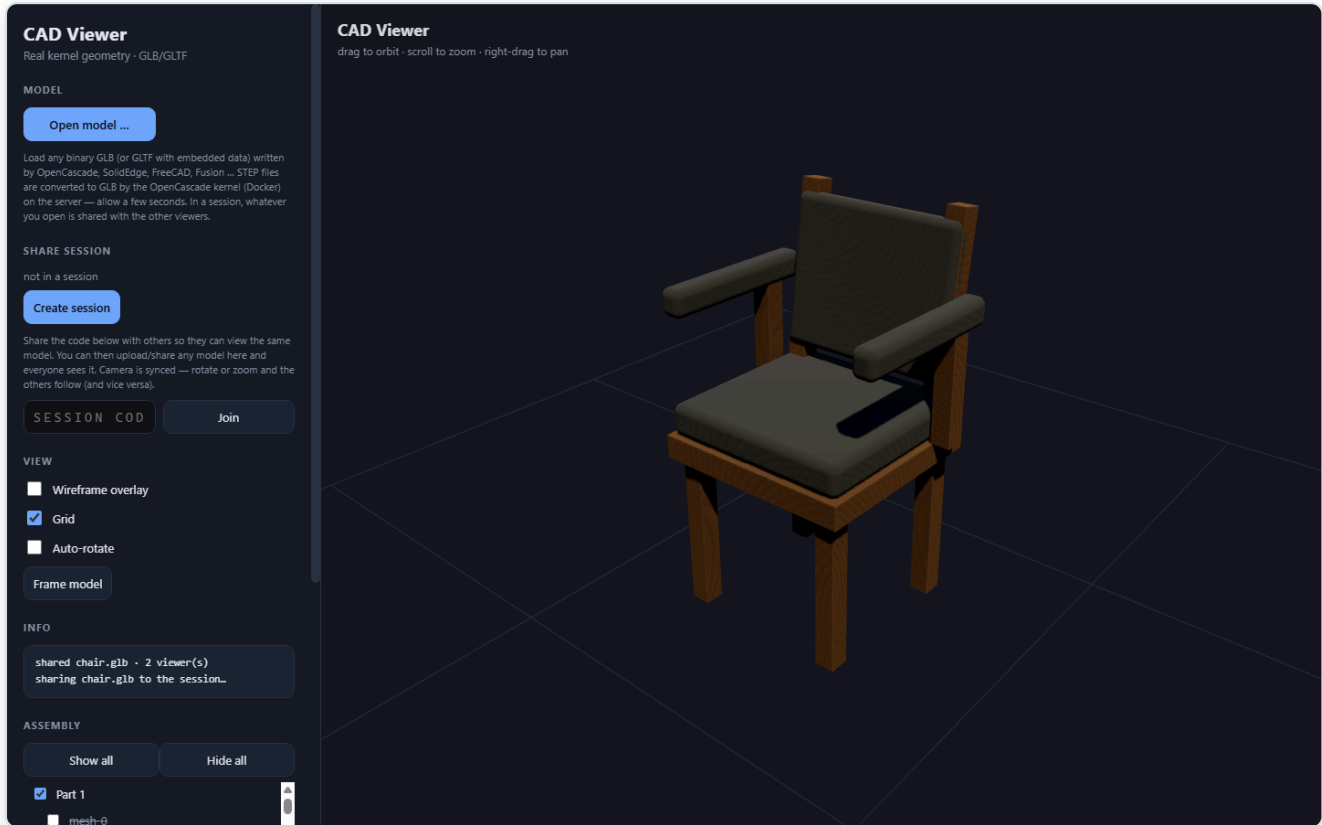

After leaving the session

8. Opening a STEP file

STEP conversion happens through the OpenCascade kernel (Docker). The first time you open a STEP file you'll see the conversion overlay; when it finishes the GLB is loaded — with the original **colours and materials** preserved, and part names appearing in the Assembly tree.

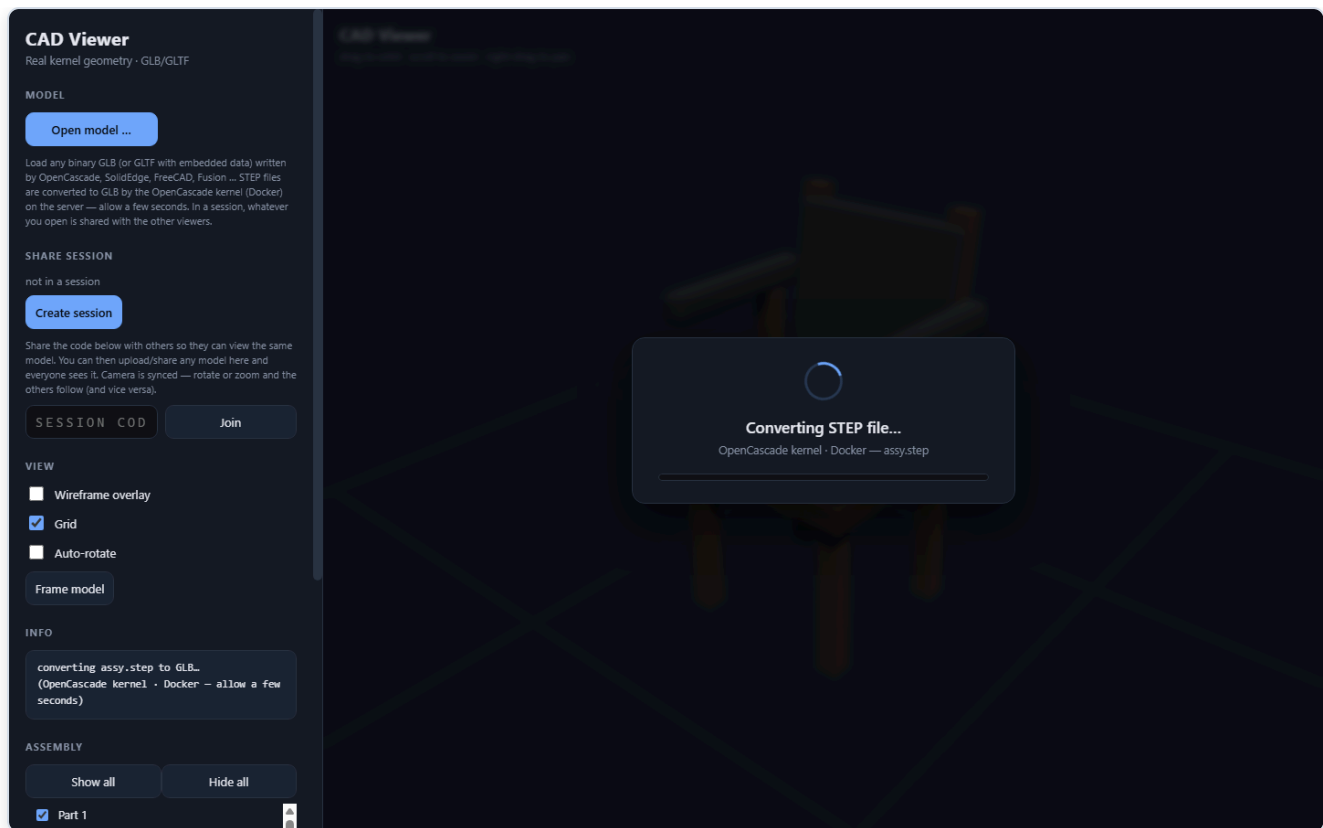

STEP file being converted to GLB

If Docker or the `chair-cq:local` image isn't installed, STEP files show a conversion error while GLB/GLTF continues to work normally.

9. Troubleshooting

Problem	Fix
Can't open the app on another PC	Use the join link (LAN address), make sure both PCs are on the same network, and that port 4322 isn't blocked by a firewall
STEP shows "conversion failed"	Run <code>install-docker-opencascade.bat</code> ; confirm Docker is running with the <code>chair-cq:local</code> image
Guest doesn't get the model	The host must be connected with a model loaded — joining an empty session shows nothing until the host shares
Port already in use	Set a different port: <code>set PORT=4323</code> then <code>node server.js</code>
Join link shows the wrong IP	The link uses the host's LAN address; refresh/re-create the session to re-detect it

CAD Viewer v0.2 — collaborative CAD viewing for the LAN.