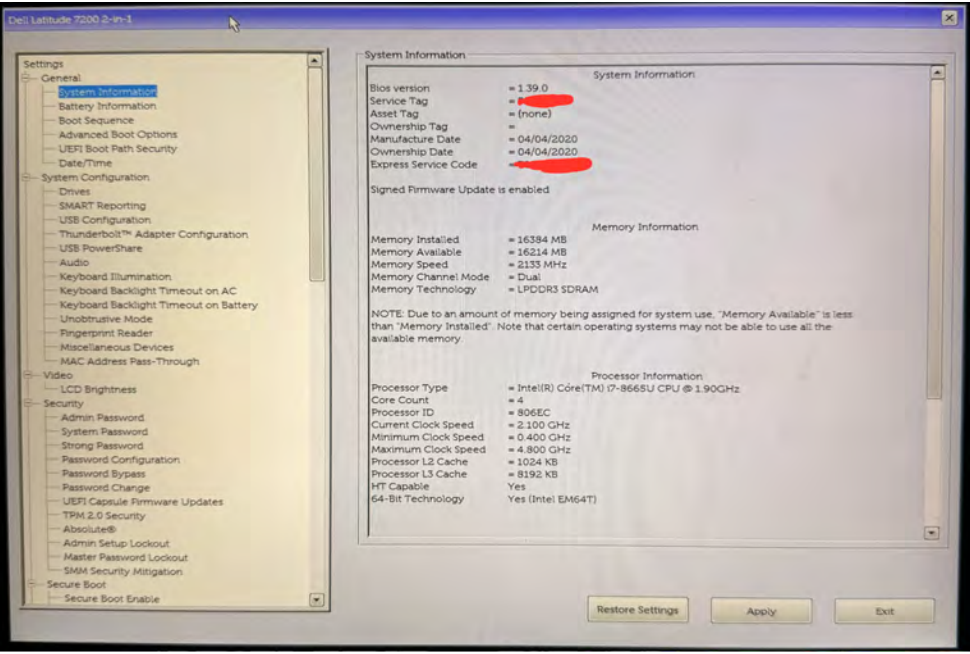
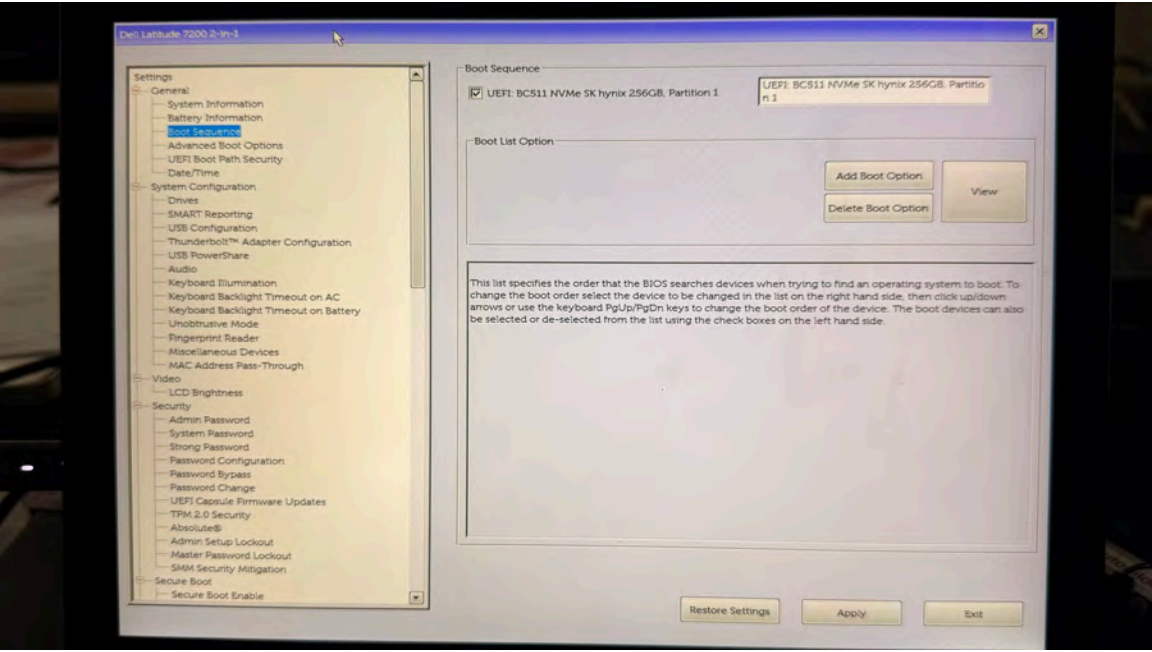
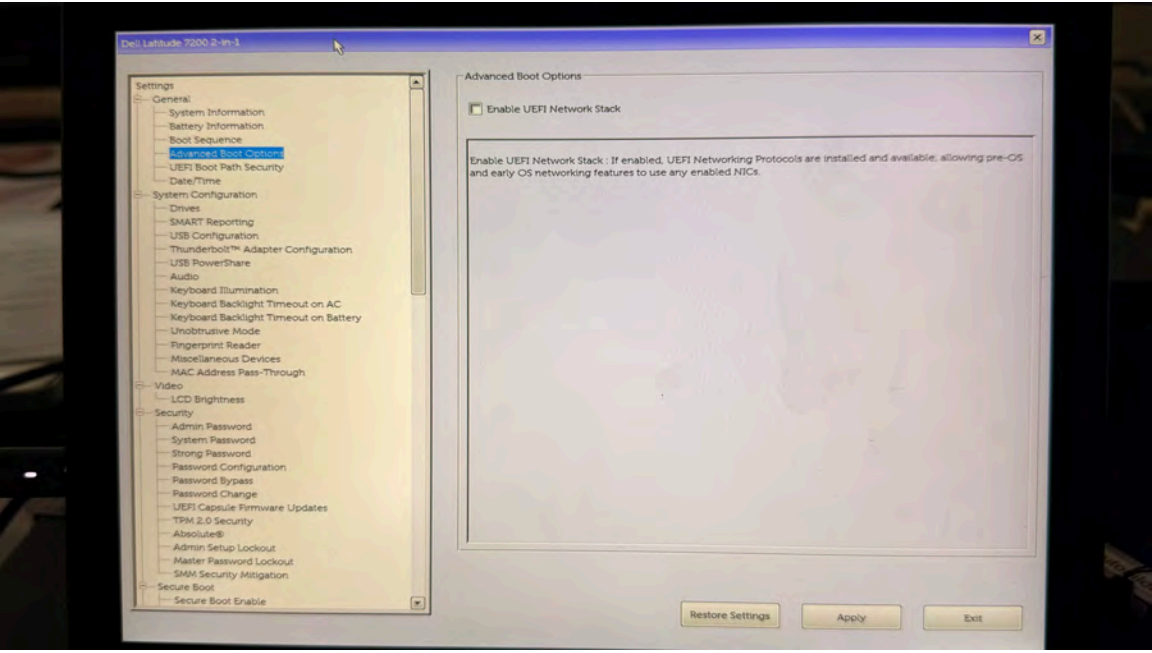
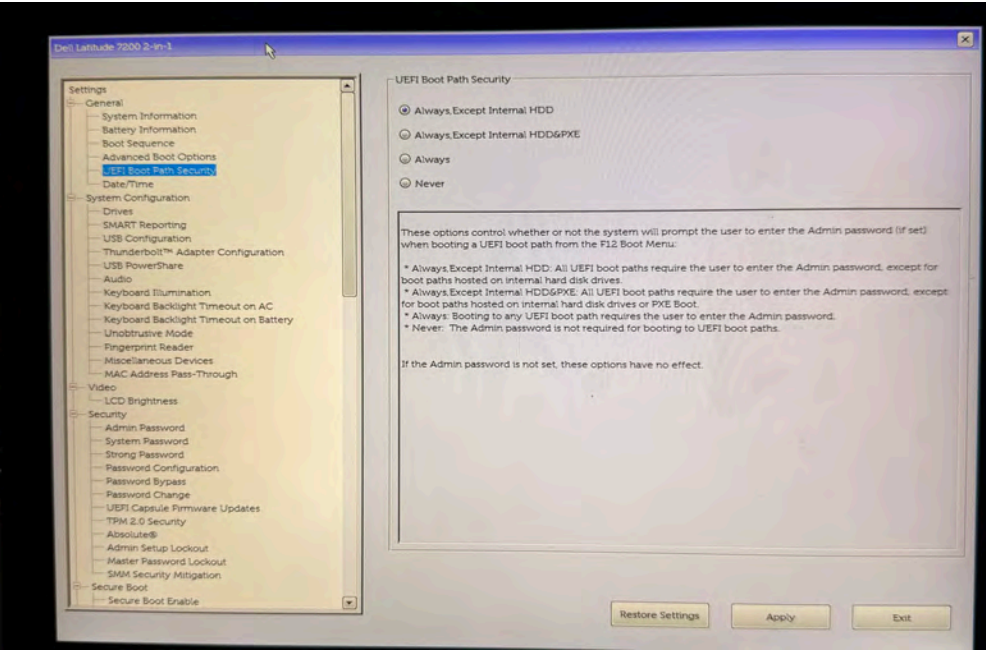
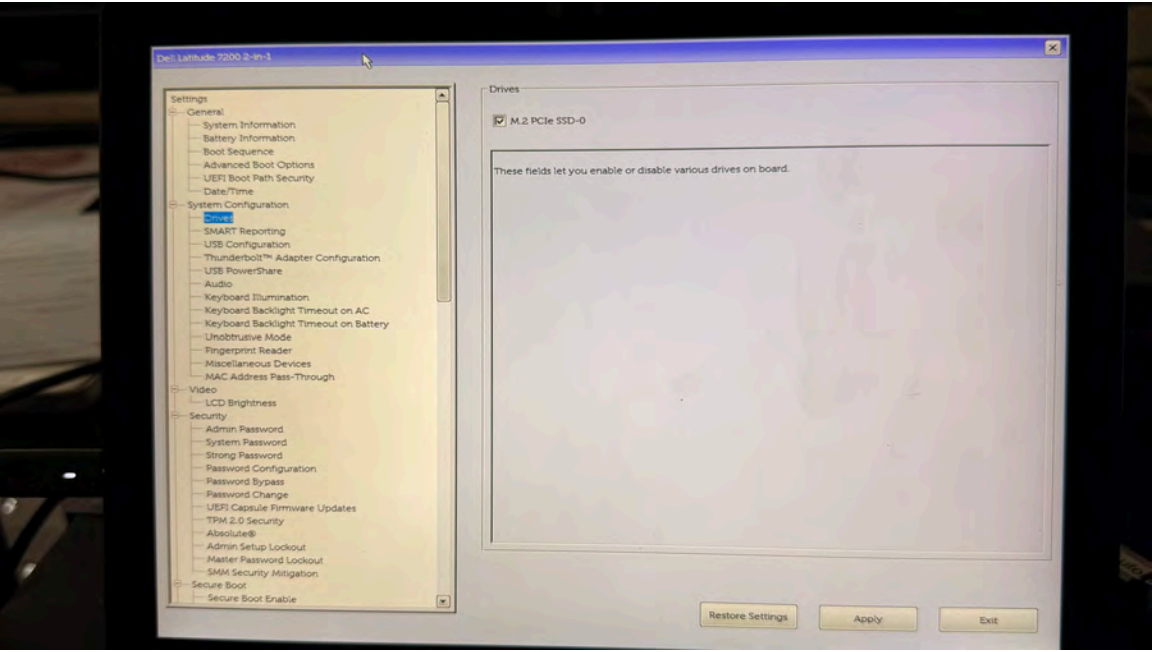
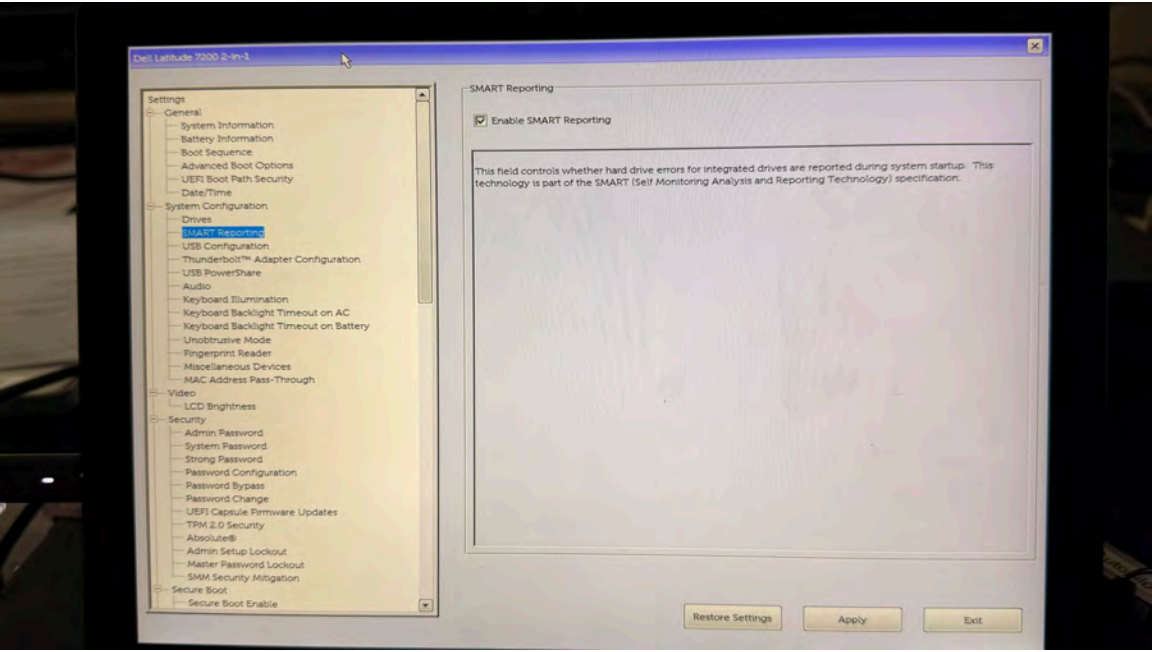

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
System Information
System Information
Bios version = 1.39.0
Service Tag = [redacted]
Asset Tag = (none)
Ownership Tag =
Manufacture Date = 04/04/2020
Ownership Date = 04/04/2020
Express Service Code = [redacted]
Signed Firmware Update is enabled
Memory Information
Memory Installed = 16384 MB
Memory Available = 16214 MB
Memory Speed = 2133 MHz
Memory Channel Mode = Dual
Memory Technology = LPDDR3 SDRAM
NOTE: Due to an amount of memory being assigned for system use, "Memory Available" is less than "Memory Installed". Note that certain operating systems may not be able to use all the available memory.
Processor Information
Processor Type = Intel(R) Core(TM) i7-8665U CPU @ 1.90GHz
Core Count = 4
Processor ID = 806EC
Current Clock Speed = 2.100 GHz
Minimum Clock Speed = 0.400 GHz
Maximum Clock Speed = 4.800 GHz
Processor L2 Cache = 1024 KB
Processor L3 Cache = 8192 KB
HT Capable Yes
64-Bit Technology Yes (Intel EM64T)
Restore Settings
Apply
Exit

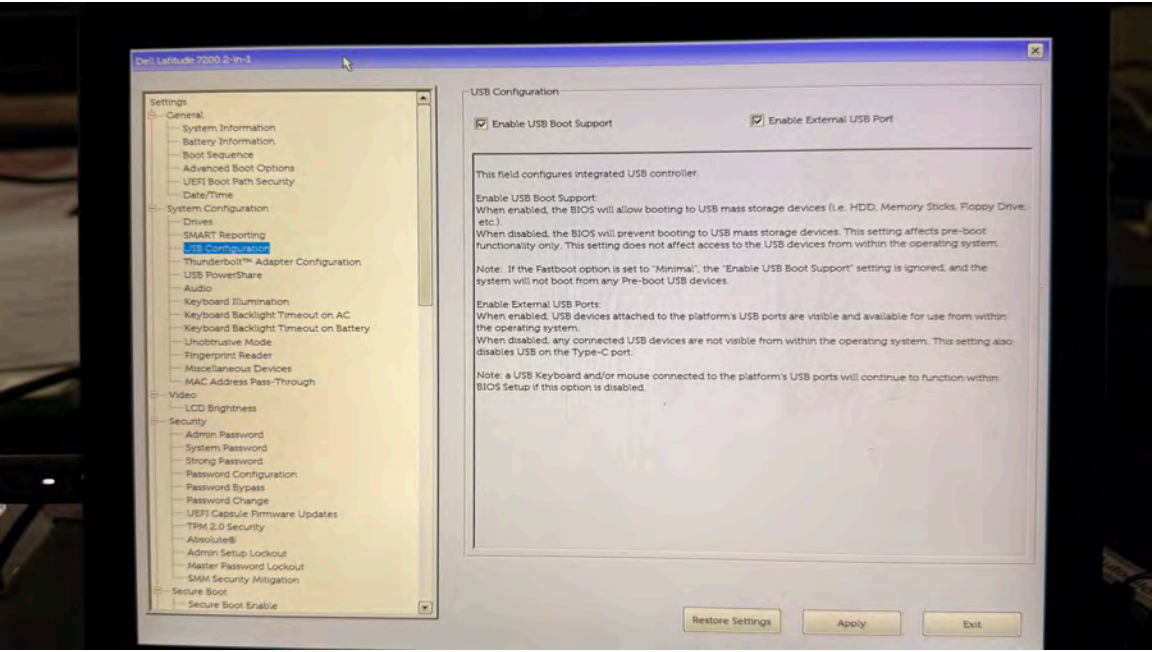

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Boot Sequence
UEFI: BC511 NVMe SK hynix 256GB, Partition 1
UEFI: BC511 NVMe SK hynix 256GB, Partitio n 1
Boot List Option
Add Boot Option
Delete Boot Option
View
This list specifies the order that the BIOS searches devices when trying to find an operating system to boot. To change the boot order select the device to be changed in the list on the right hand side, then click up/down arrows or use the keyboard PgUp/PgDn keys to change the boot order of the device. The boot devices can also be selected or de-selected from the list using the check boxes on the left hand side.
Restore Settings
Apply
Exit

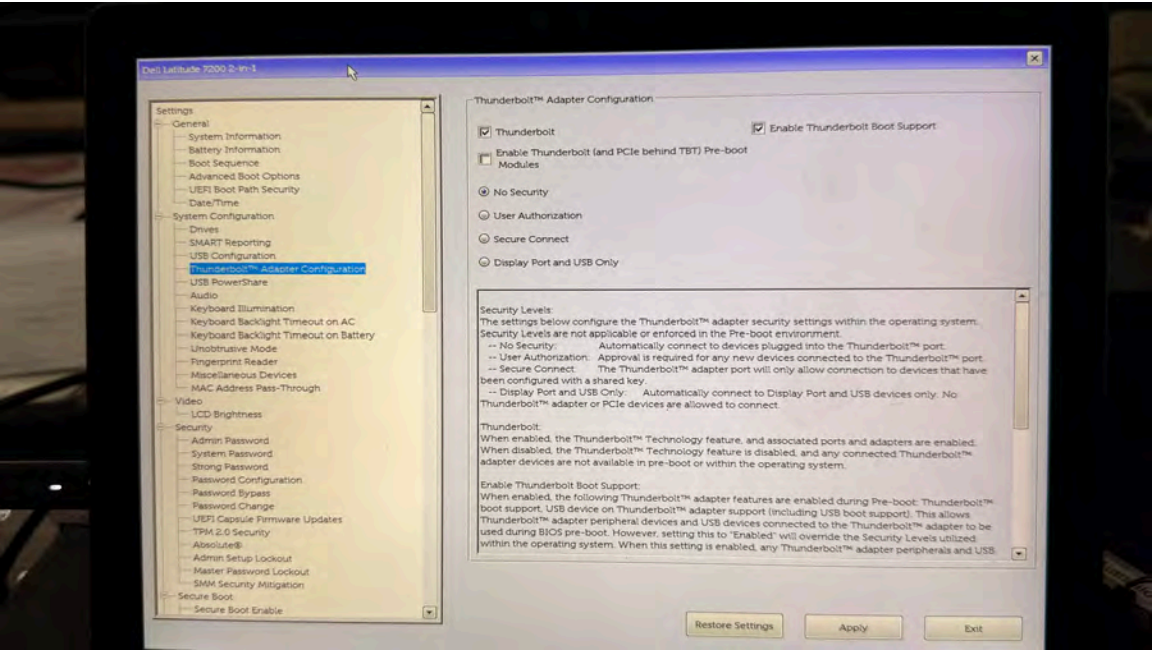

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Advanced Boot Options
Enable UEFI Network Stack
Enable UEFI Network Stack : If enabled, UEFI Networking Protocols are installed and available, allowing pre-OS and early OS networking features to use any enabled NICs.
Restore Settings
Apply
Exit

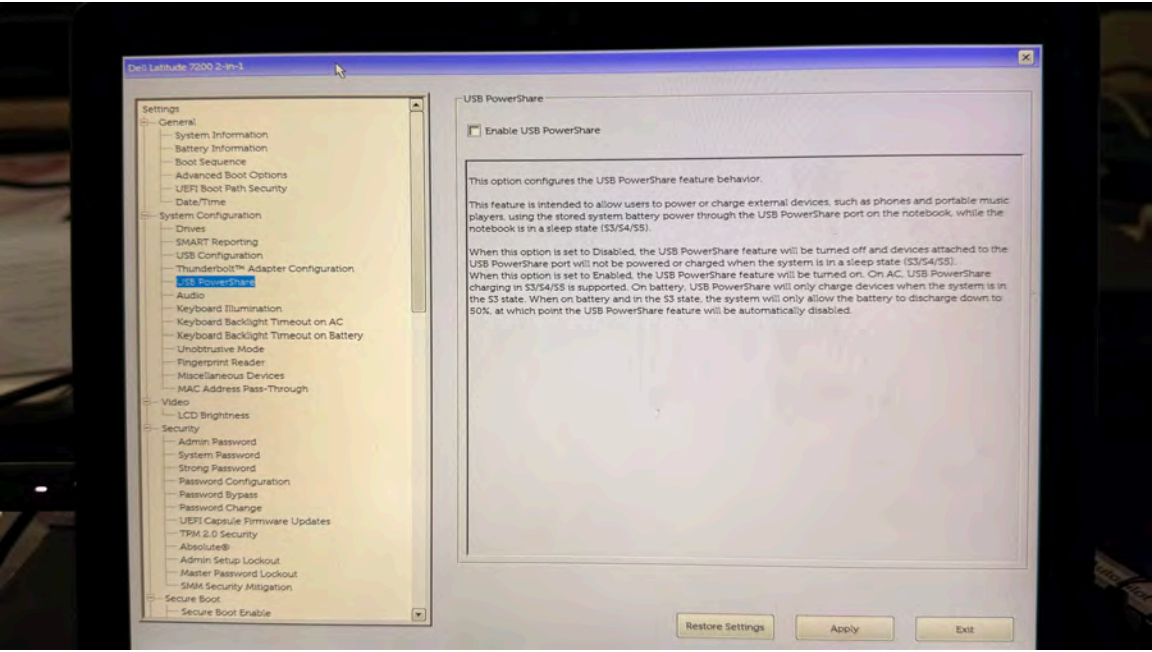

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
UEFI Boot Path Security
Always,Except Internal HDD
Always,Except Internal HDD&PXE
Always
Never
These options control whether or not the system will prompt the user to enter the Admin password (if set) when booting a UEFI boot path from the F12 Boot Menu:
* Always,Except Internal HDD: All UEFI boot paths require the user to enter the Admin password, except for boot paths hosted on internal hard disk drives.
* Always,Except Internal HDD&PXE: All UEFI boot paths require the user to enter the Admin password, except for boot paths hosted on internal hard disk drives or PXE Boot.
* Always: Booting to any UEFI boot path requires the user to enter the Admin password.
* Never: The Admin password is not required for booting to UEFI boot paths.
If the Admin password is not set, these options have no effect.
Restore Settings
Apply
Exit

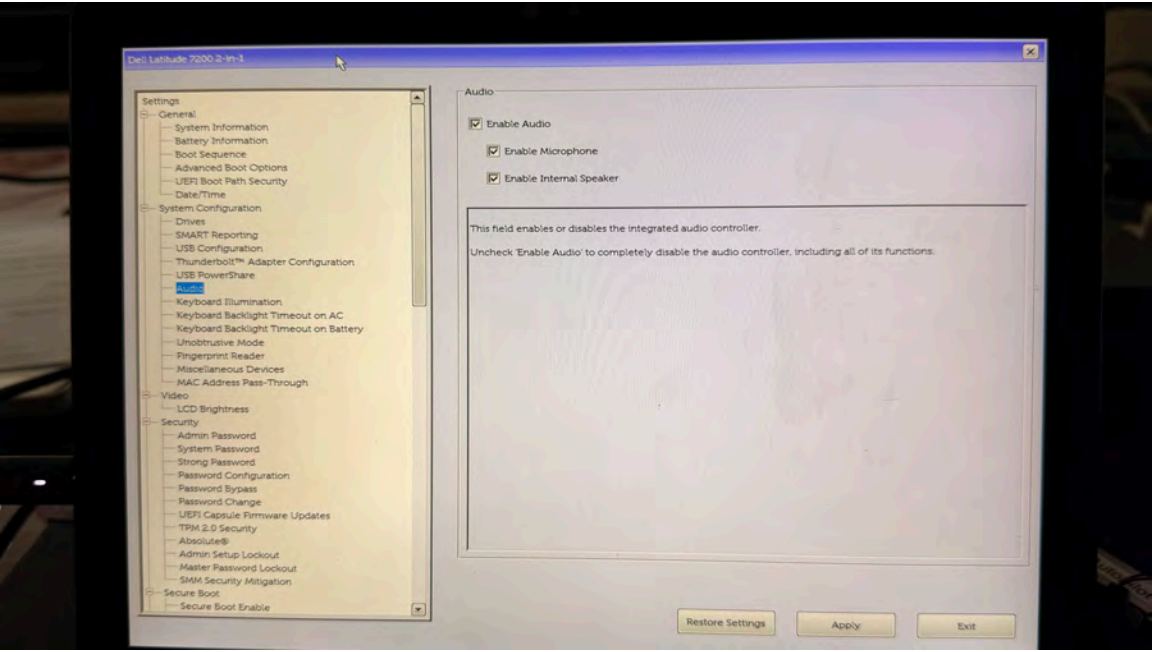

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Drives
M.2 PCIe SSD-0
These fields let you enable or disable various drives on board.
Restore Settings
Apply
Exit

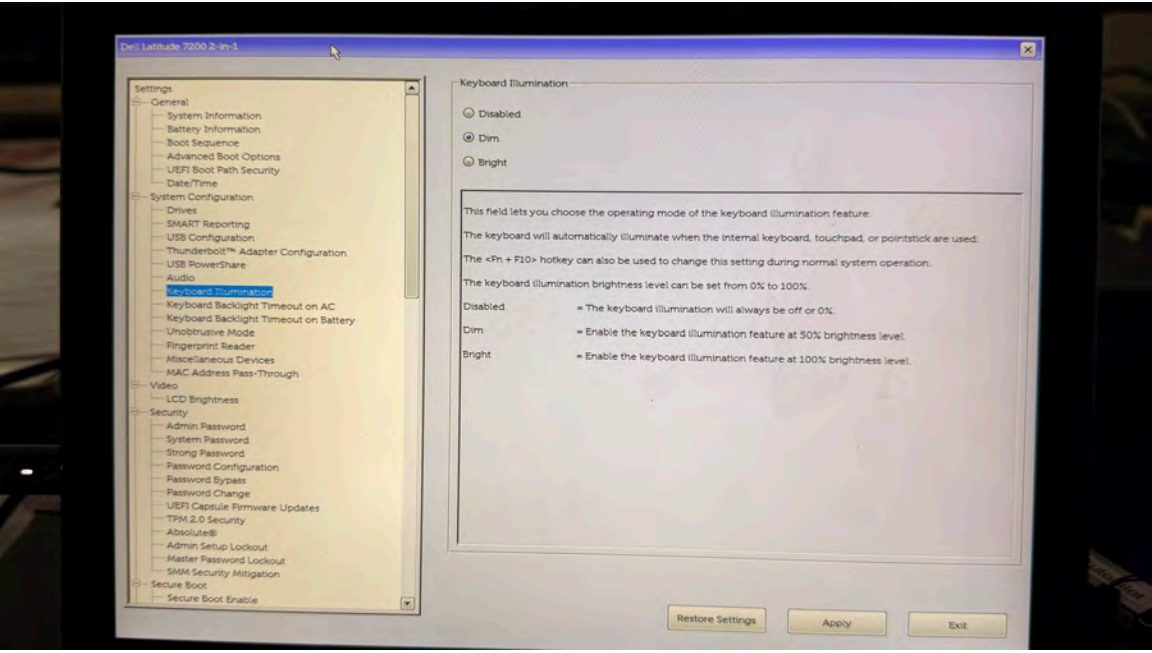

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
SMART Reporting
Enable SMART Reporting
This field controls whether hard drive errors for integrated drives are reported during system startup. This technology is part of the SMART (Self Monitoring Analysis and Reporting Technology) specification.
Restore Settings
Apply
Exit

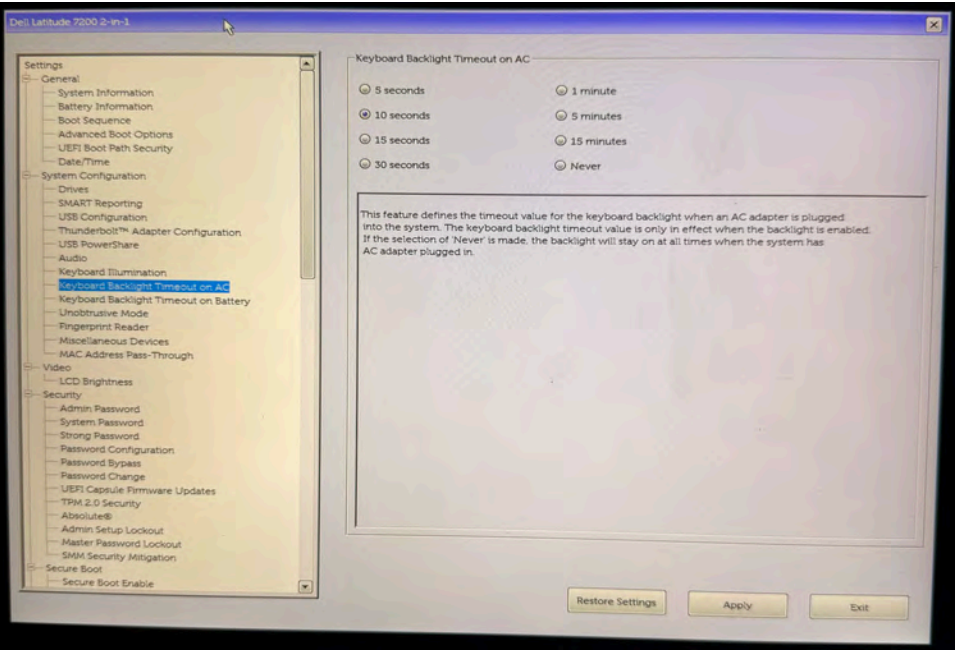

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
USB Configuration
Enable USB Boot Support
Enable External USB Port
This field configures integrated USB controller.
Enable USB Boot Support:
When enabled, the BIOS will allow booting to USB mass storage devices (i.e. HDD, Memory Sticks, Floppy Drive, etc.).
When disabled, the BIOS will prevent booting to USB mass storage devices. This setting affects pre-boot functionality only. This setting does not affect access to the USB devices from within the operating system.
Note: If the Fastboot option is set to "Minimal", the "Enable USB Boot Support" setting is ignored, and the system will not boot from any Pre-boot USB devices.
Enable External USB Ports:
When enabled, USB devices attached to the platform's USB ports are visible and available for use from within the operating system.
When disabled, any connected USB devices are not visible from within the operating system. This setting also disables USB on the Type-C port.
Note: a USB Keyboard and/or mouse connected to the platform's USB ports will continue to function within BIOS Setup if this option is disabled.
Restore Settings
Apply
Exit

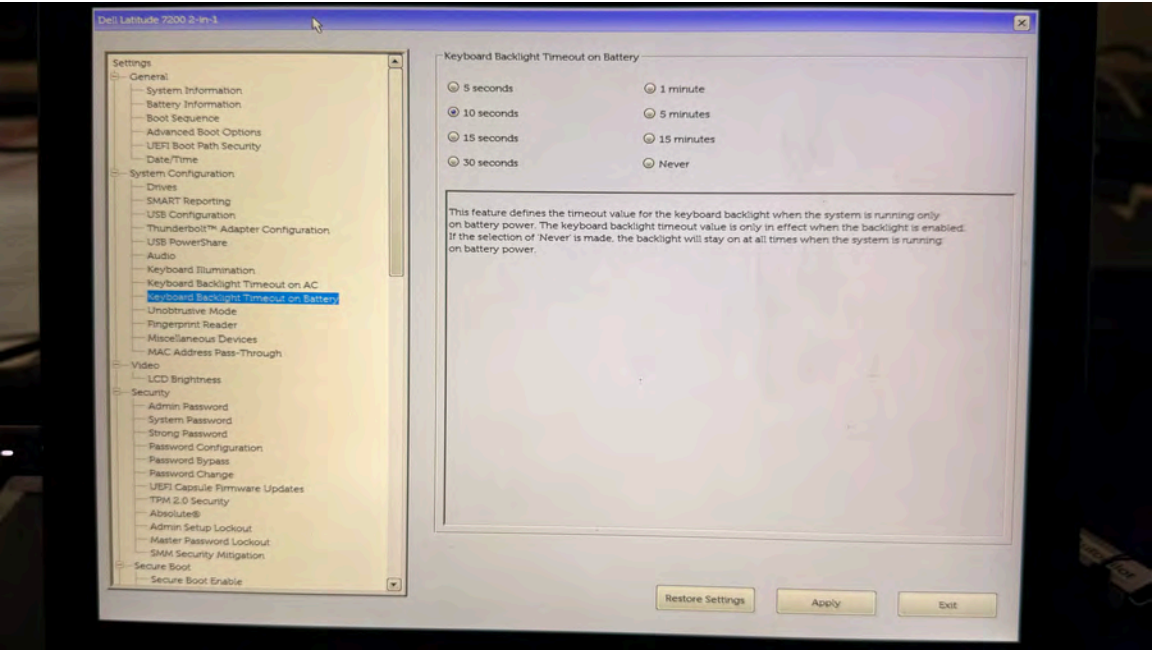

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Thunderbolt™ Adapter Configuration
Thunderbolt
Enable Thunderbolt Boot Support
Enable Thunderbolt (and PCIe behind TBT) Pre-boot Modules
No Security
User Authorization
Secure Connect
Display Port and USB Only
Security Levels:
The settings below configure the Thunderbolt™ adapter security settings within the operating system. Security Levels are not applicable or enforced in the Pre-boot environment.
-- No Security: Automatically connect to devices plugged into the Thunderbolt™ port.
-- User Authorization: Approval is required for any new devices connected to the Thunderbolt™ port.
-- Secure Connect: The Thunderbolt™ adapter port will only allow connection to devices that have been configured with a shared key.
-- Display Port and USB Only: Automatically connect to Display Port and USB devices only. No Thunderbolt™ adapter or PCIe devices are allowed to connect.
Thunderbolt:
When enabled, the Thunderbolt™ Technology feature, and associated ports and adapters are enabled. When disabled, the Thunderbolt™ Technology feature is disabled, and any connected Thunderbolt™ adapter devices are not available in pre-boot or within the operating system.
Enable Thunderbolt Boot Support:
When enabled, the following Thunderbolt™ adapter features are enabled during Pre-boot: Thunderbolt™ boot support, USB device on Thunderbolt™ adapter support (including USB boot support). This allows Thunderbolt™ adapter peripheral devices and USB devices connected to the Thunderbolt™ adapter to be used during BIOS pre-boot. However, setting this to "Enabled" will override the Security Levels utilized within the operating system. When this setting is enabled, any Thunderbolt™ adapter peripherals and USB
Restore Settings
Apply
Exit

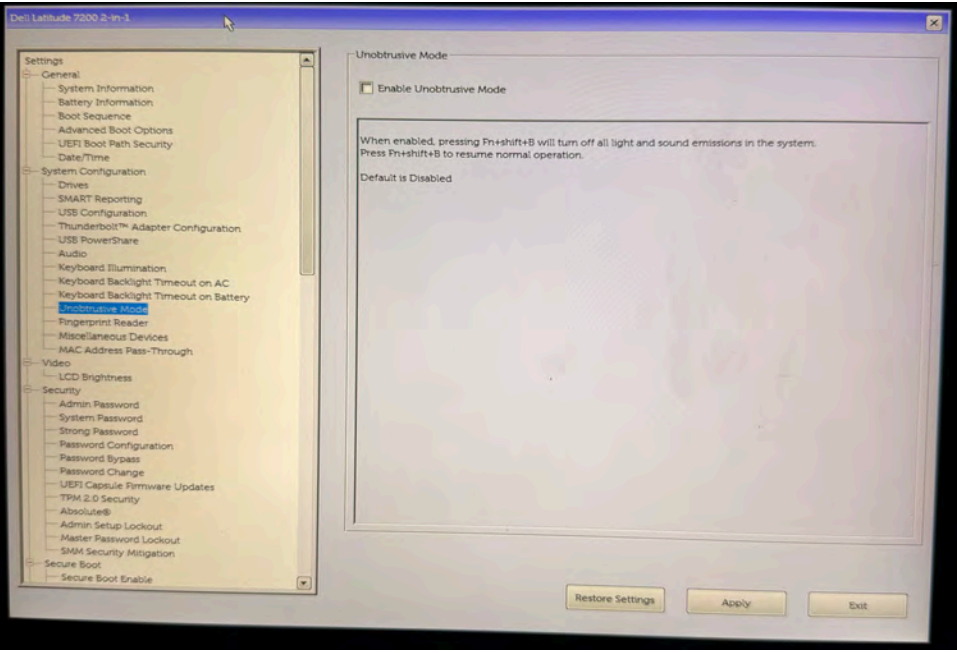

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
USB PowerShare
Enable USB PowerShare
This option configures the USB PowerShare feature behavior.
This feature is intended to allow users to power or charge external devices, such as phones and portable music players, using the stored system battery power through the USB PowerShare port on the notebook, while the notebook is in a sleep state (S3/S4/S5).
When this option is set to Disabled, the USB PowerShare feature will be turned off and devices attached to the USB PowerShare port will not be powered or charged when the system is in a sleep state (S3/S4/S5).
When this option is set to Enabled, the USB PowerShare feature will be turned on. On AC, USB PowerShare charging in S3/S4/S5 is supported. On battery, USB PowerShare will only charge devices when the system is in the S3 state. When on battery and in the S3 state, the system will only allow the battery to discharge down to 50%, at which point the USB PowerShare feature will be automatically disabled.
Restore Settings
Apply
Exit

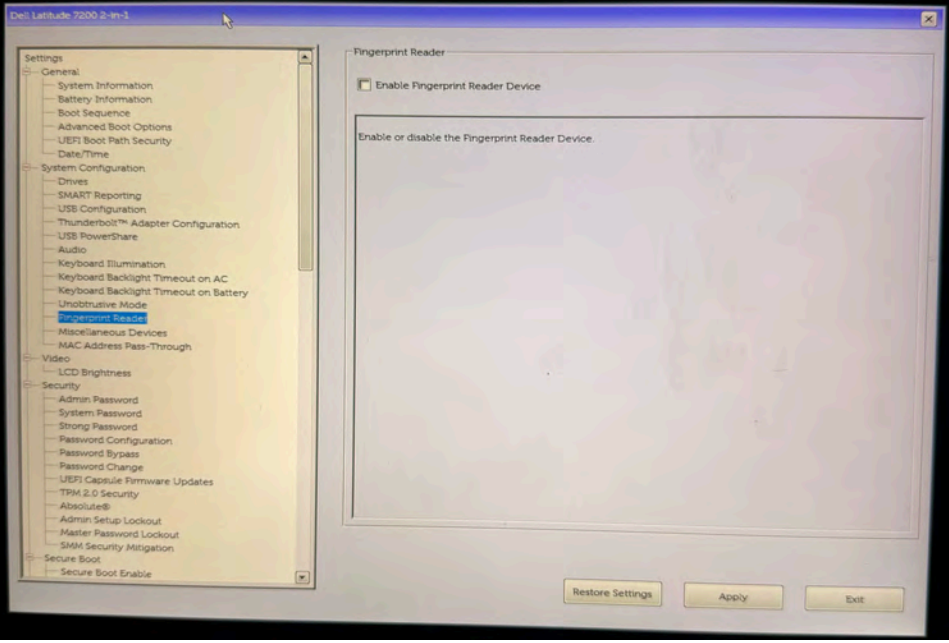

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Audio
Enable Audio
Enable Microphone
Enable Internal Speaker
This field enables or disables the integrated audio controller.
Uncheck 'Enable Audio' to completely disable the audio controller, including all of its functions.
Restore Settings
Apply
Exit

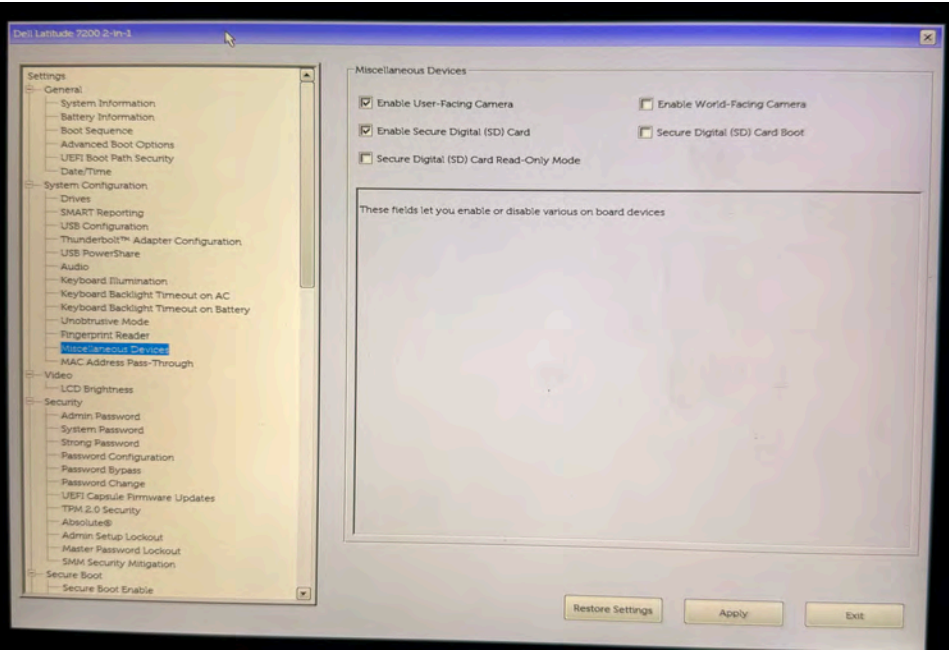

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Keyboard Illumination
Disabled
Dim
Bright
This field lets you choose the operating mode of the keyboard illumination feature.
The keyboard will automatically illuminate when the internal keyboard, touchpad, or pointstick are used.
The <Fn + F10> hotkey can also be used to change this setting during normal system operation.
The keyboard illumination brightness level can be set from 0% to 100%.
Disabled = The keyboard illumination will always be off or 0%.
Dim = Enable the keyboard illumination feature at 50% brightness level.
Bright = Enable the keyboard illumination feature at 100% brightness level.
Restore Settings
Apply
Exit

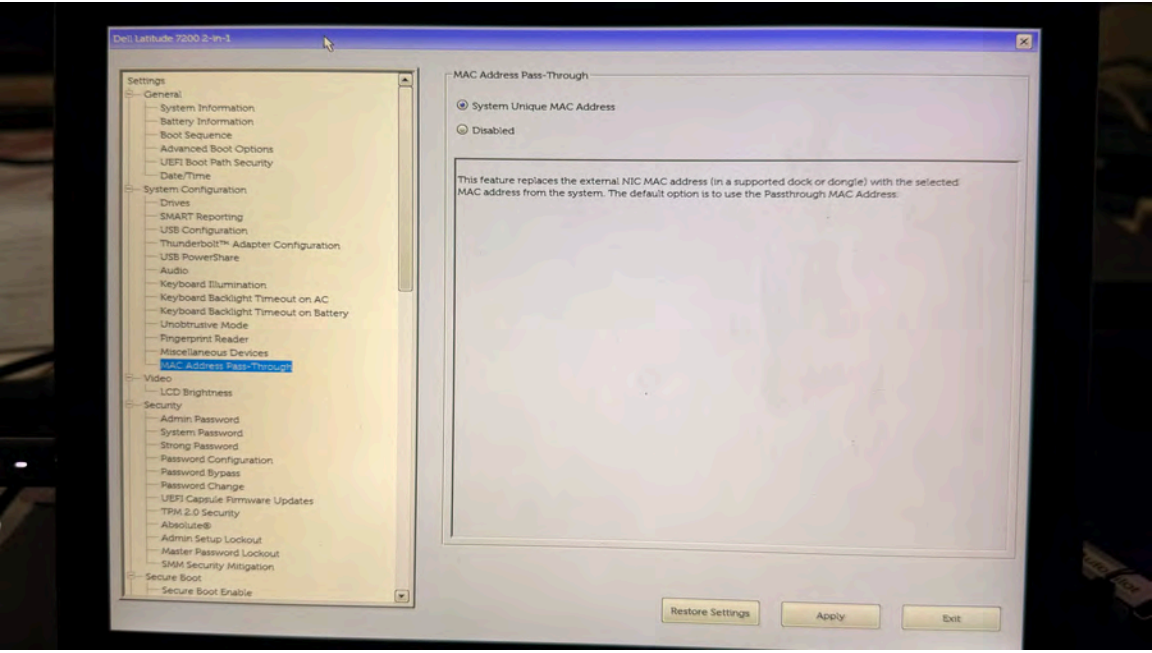

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Keyboard Backlight Timeout on AC
5 seconds
10 seconds
15 seconds
30 seconds
1 minute
5 minutes
15 minutes
Never
This feature defines the timeout value for the keyboard backlight when an AC adapter is plugged into the system. The keyboard backlight timeout value is only in effect when the backlight is enabled. If the selection of 'Never' is made, the backlight will stay on at all times when the system has AC adapter plugged in.
Restore Settings
Apply
Exit

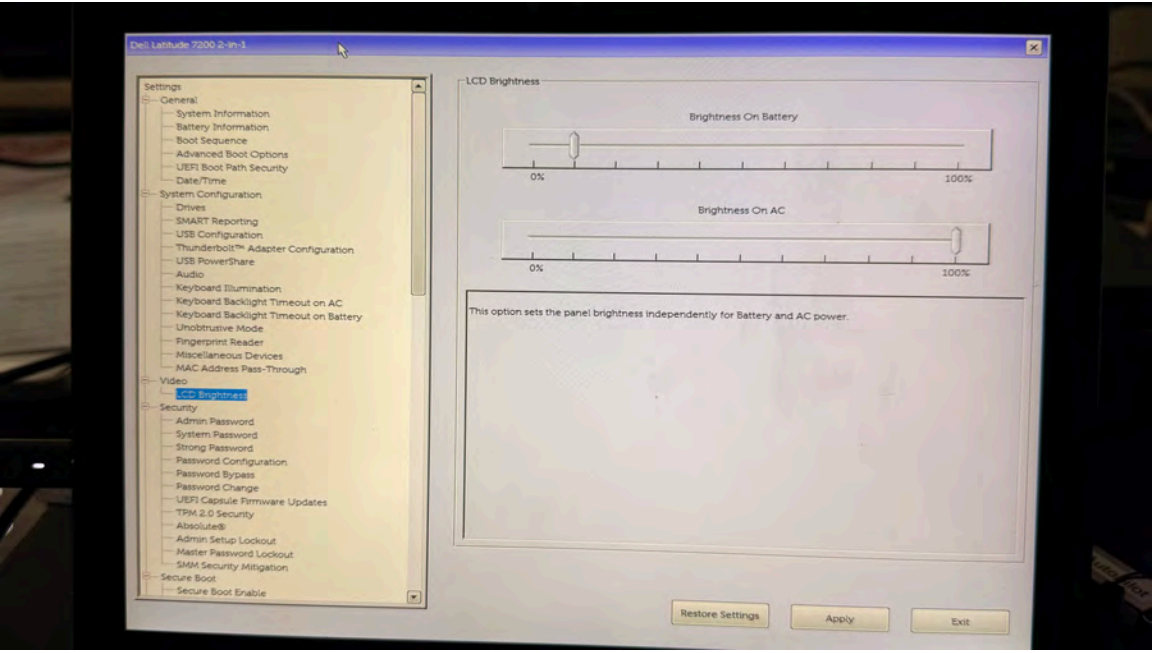

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Keyboard Backlight Timeout on Battery
5 seconds
10 seconds
15 seconds
30 seconds
1 minute
5 minutes
15 minutes
Never
This feature defines the timeout value for the keyboard backlight when the system is running only on battery power. The keyboard backlight timeout value is only in effect when the backlight is enabled. If the selection of 'Never' is made, the backlight will stay on at all times when the system is running on battery power.
Restore Settings
Apply
Exit

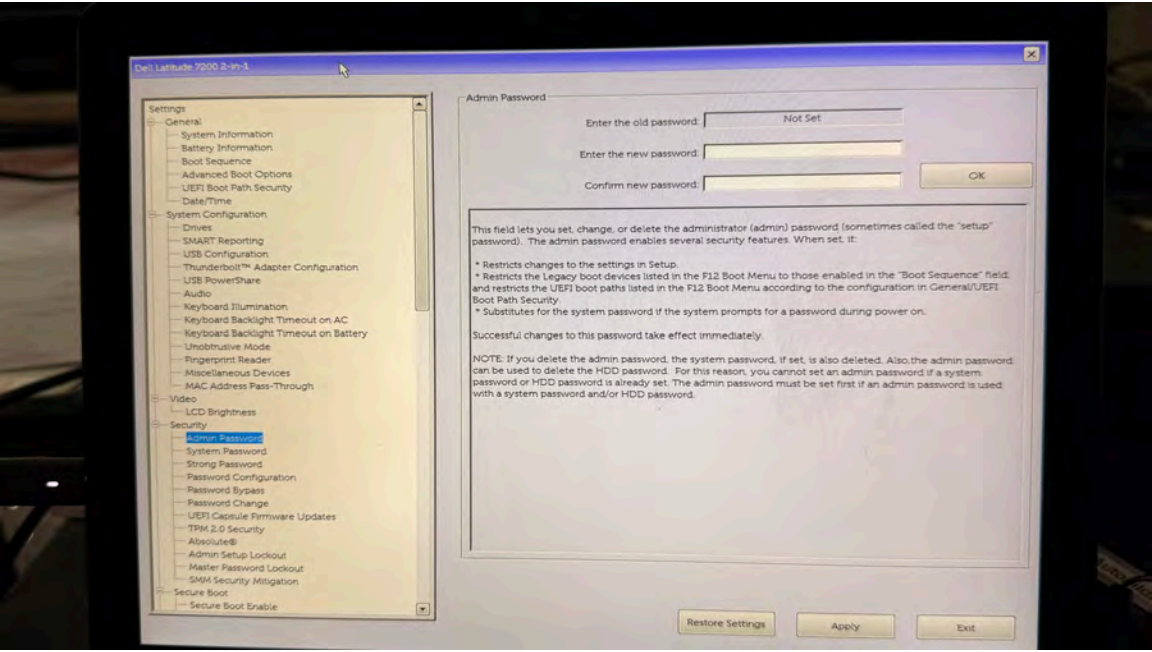

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Unobtrusive Mode
Enable Unobtrusive Mode
When enabled, pressing Fn+shift+B will turn off all light and sound emissions in the system.
Press Fn+shift+B to resume normal operation.
Default is Disabled
Restore Settings
Apply
Exit

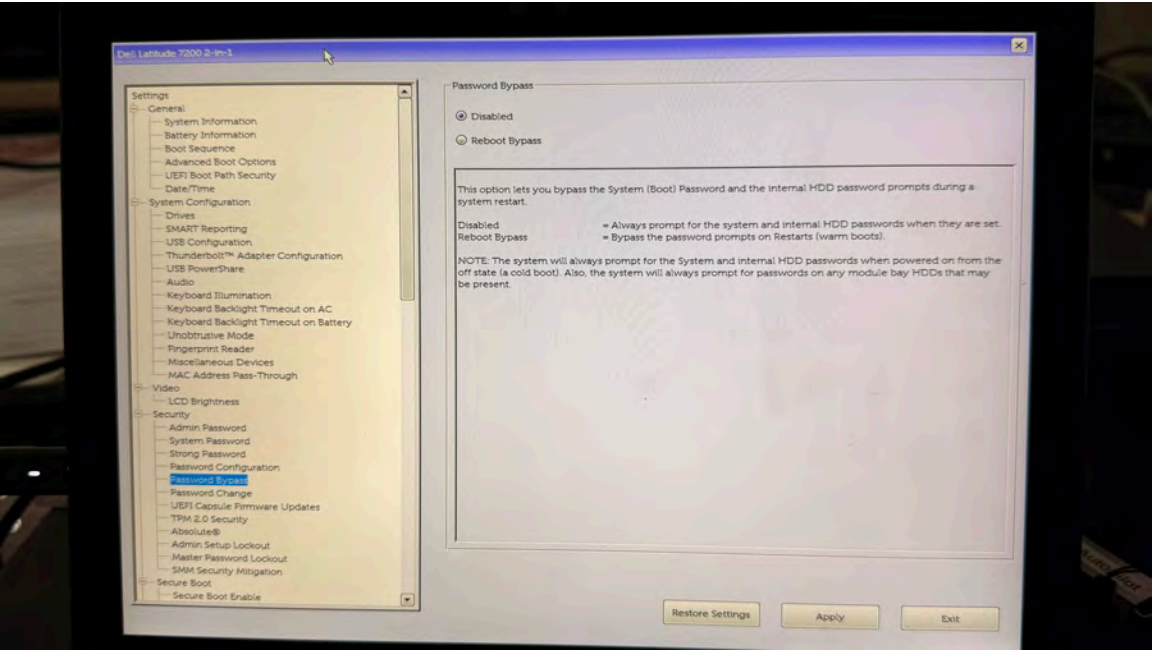

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Fingerprint Reader
Enable Fingerprint Reader Device
Enable or disable the Fingerprint Reader Device.
Restore Settings
Apply
Exit

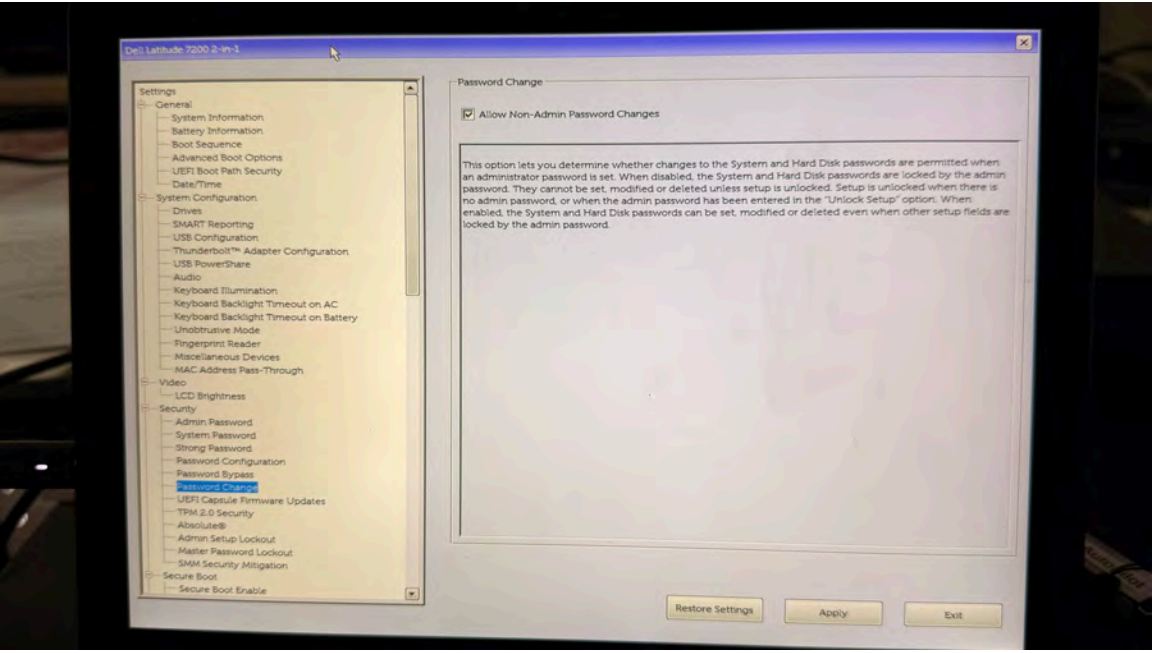

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Miscellaneous Devices
Enable User-Facing Camera
Enable World-Facing Camera
Enable Secure Digital (SD) Card
Secure Digital (SD) Card Boot
Secure Digital (SD) Card Read-Only Mode
These fields let you enable or disable various on board devices
Restore Settings
Apply
Exit

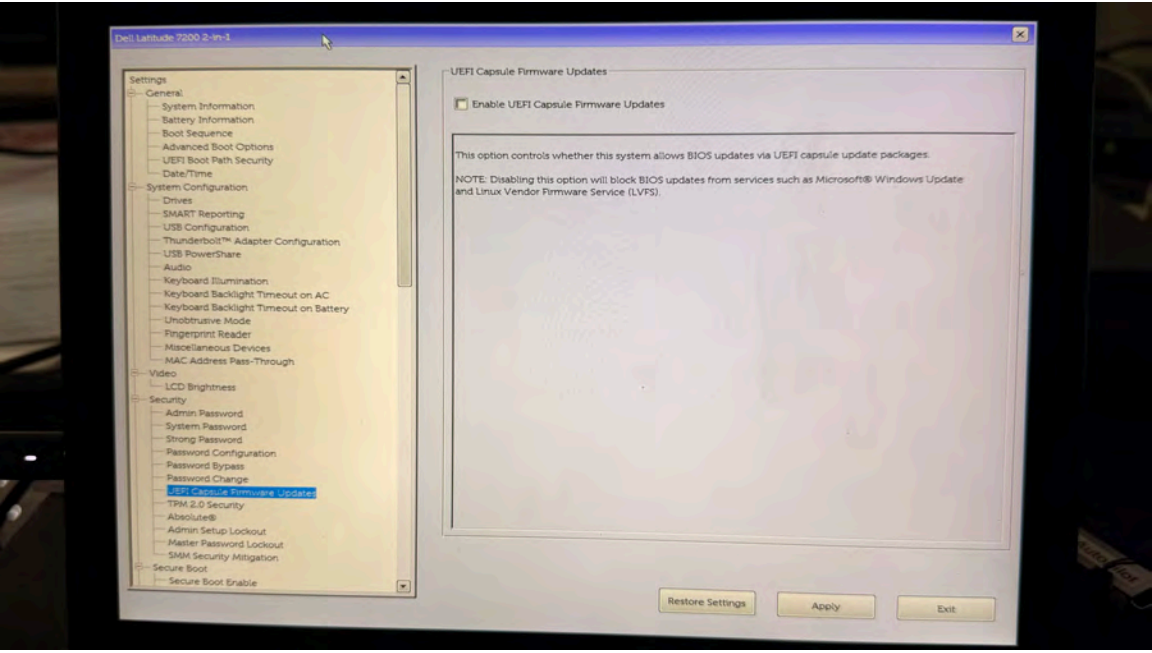

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
MAC Address Pass-Through
System Unique MAC Address
Disabled
This feature replaces the external NIC MAC address (in a supported dock or dongle) with the selected MAC address from the system. The default option is to use the Passthrough MAC Address.
Restore Settings
Apply
Exit

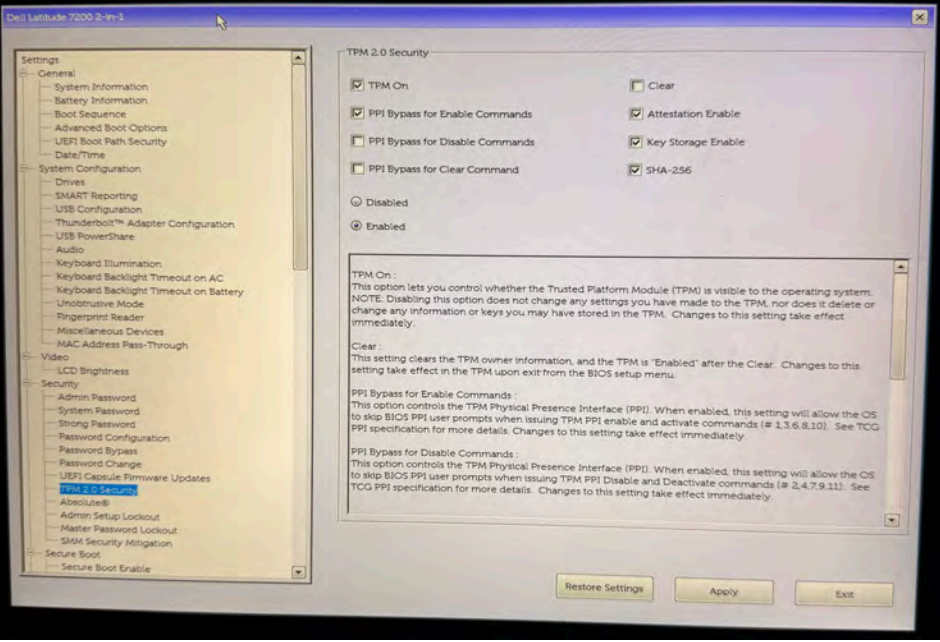

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
LCD Brightness
Brightness On Battery
0%
100%
Brightness On AC
0%
100%
This option sets the panel brightness independently for Battery and AC power.
Restore Settings
Apply
Exit

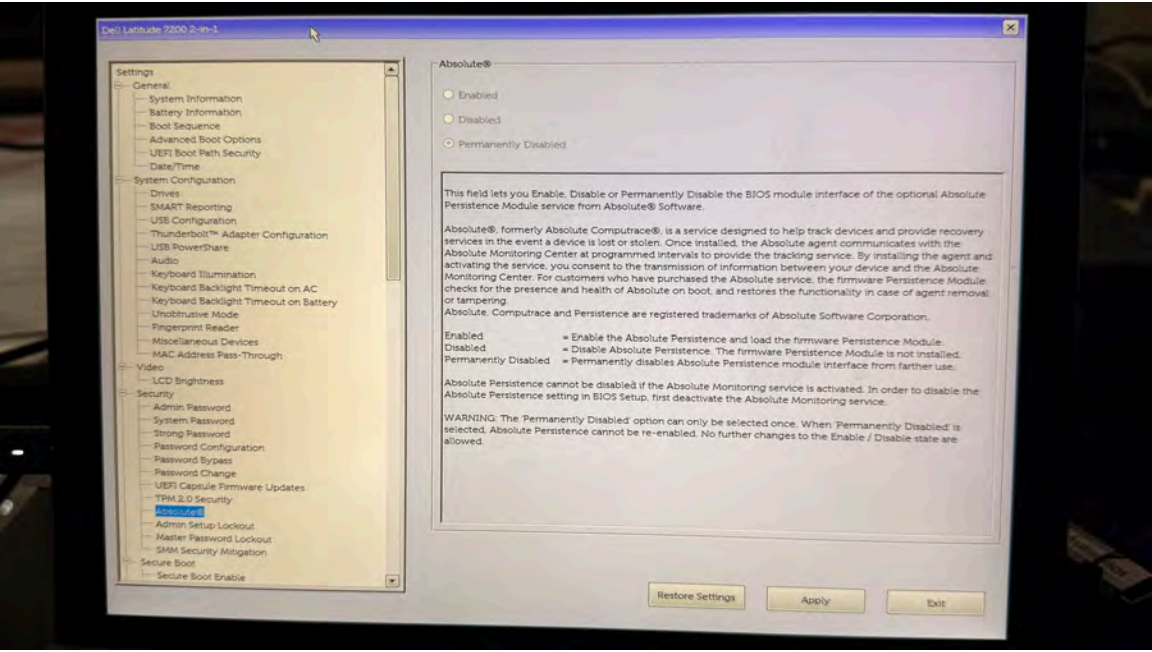

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Admin Password
Enter the old password:
Not Set
Enter the new password:
Confirm new password:
OK
This field lets you set, change, or delete the administrator (admin) password (sometimes called the "setup" password). The admin password enables several security features. When set, it:
* Restricts changes to the settings in Setup.
* Restricts the Legacy boot devices listed in the F12 Boot Menu to those enabled in the "Boot Sequence" field, and restricts the UEFI boot paths listed in the F12 Boot Menu according to the configuration in General/UEFI Boot Path Security.
* Substitutes for the system password if the system prompts for a password during power on.
Successful changes to this password take effect immediately.
NOTE: If you delete the admin password, the system password, if set, is also deleted. Also,the admin password can be used to delete the HDD password. For this reason, you cannot set an admin password if a system password or HDD password is already set. The admin password must be set first if an admin password is used with a system password and/or HDD password.
Restore Settings
Apply
Exit

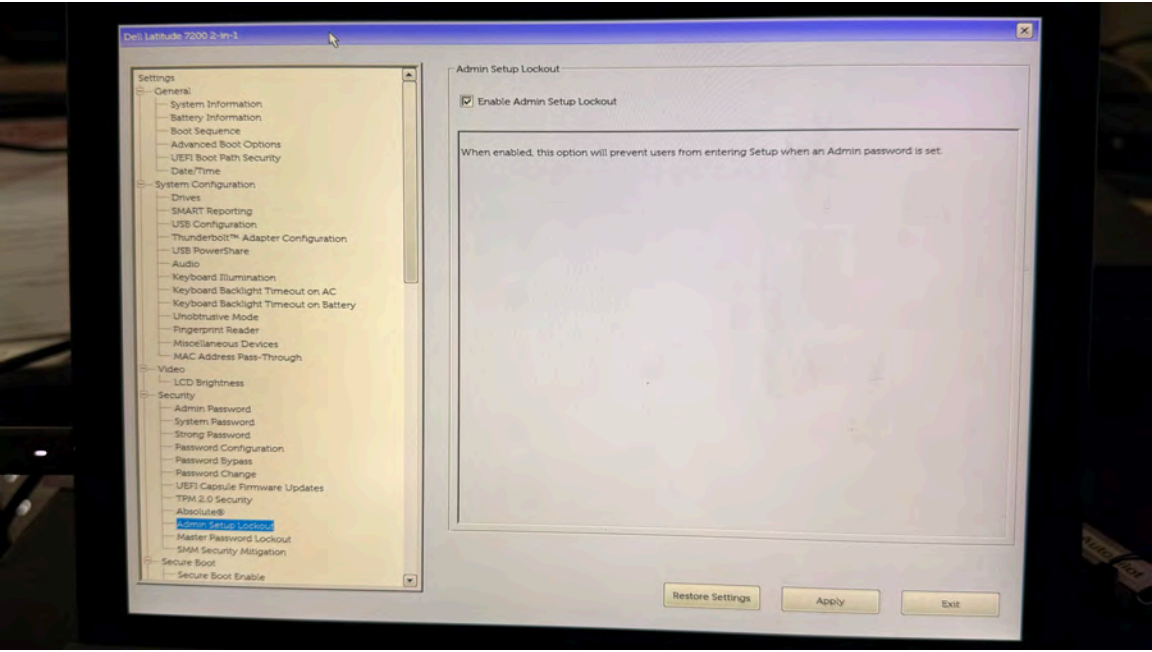

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Password Bypass
Disabled
Reboot Bypass
This option lets you bypass the System (Boot) Password and the internal HDD password prompts during a system restart.
Disabled = Always prompt for the system and internal HDD passwords when they are set.
Reboot Bypass = Bypass the password prompts on Restarts (warm boots).
NOTE: The system will always prompt for the System and internal HDD passwords when powered on from the off state (a cold boot). Also, the system will always prompt for passwords on any module bay HDDs that may be present.
Restore Settings
Apply
Exit

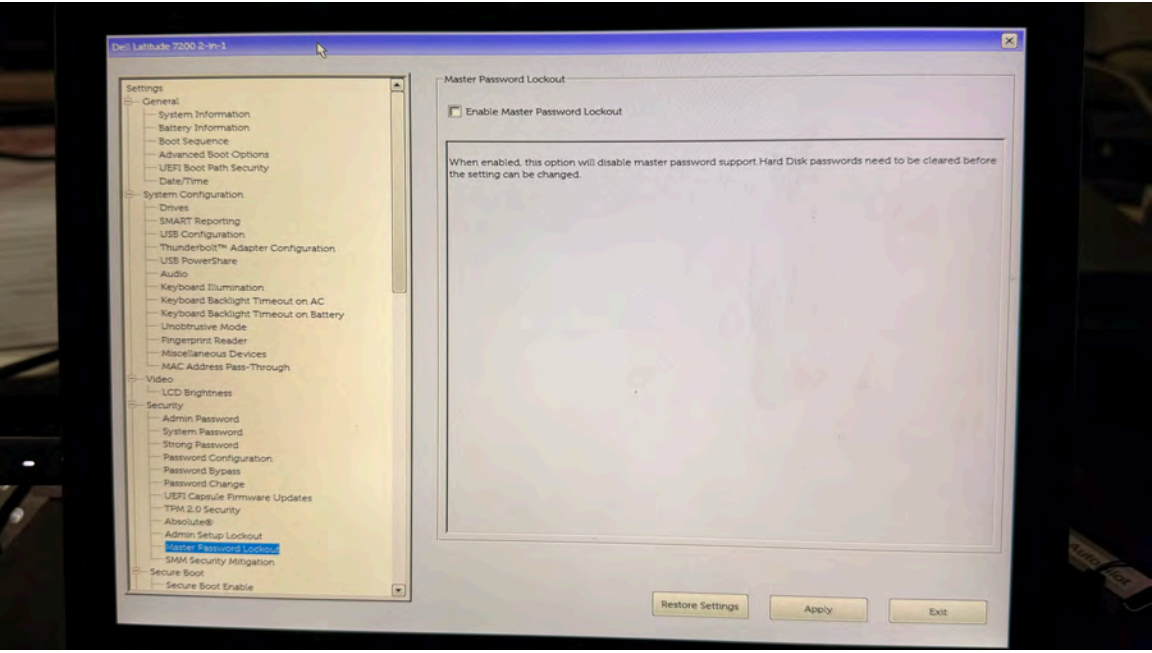

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Password Change
Allow Non-Admin Password Changes
This option lets you determine whether changes to the System and Hard Disk passwords are permitted when an administrator password is set. When disabled, the System and Hard Disk passwords are locked by the admin password. They cannot be set, modified or deleted unless setup is unlocked. Setup is unlocked when there is no admin password, or when the admin password has been entered in the "Unlock Setup" option. When enabled, the System and Hard Disk passwords can be set, modified or deleted even when other setup fields are locked by the admin password.
Restore Settings
Apply
Exit

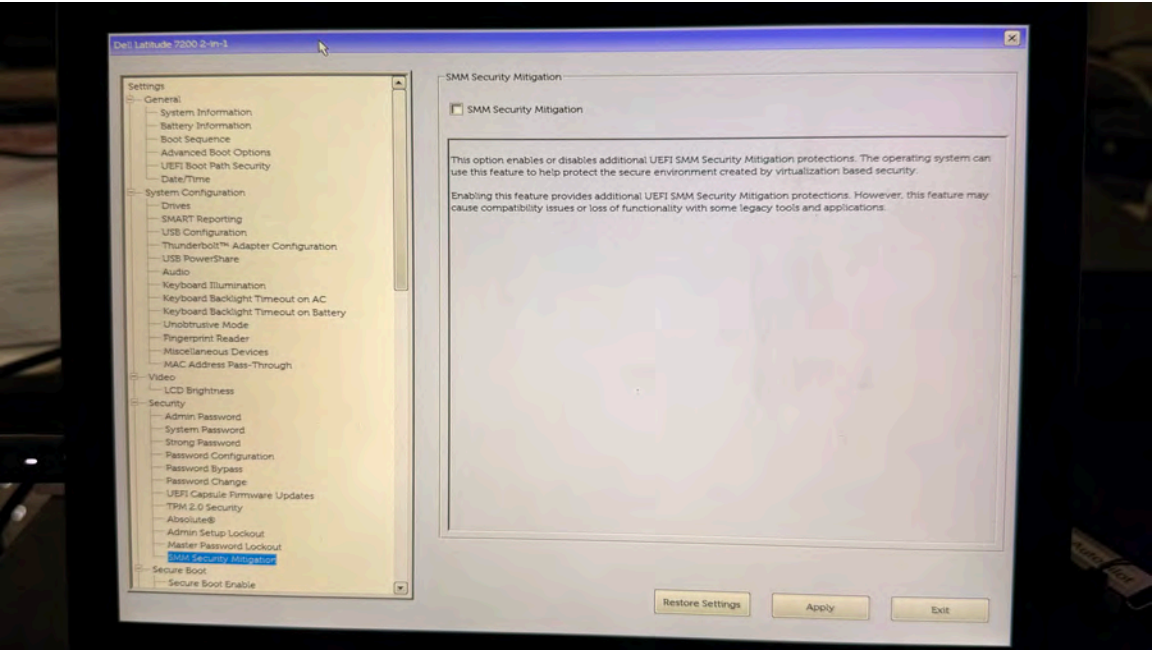

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
UEFI Capsule Firmware Updates
Enable UEFI Capsule Firmware Updates
This option controls whether this system allows BIOS updates via UEFI capsule update packages.
NOTE: Disabling this option will block BIOS updates from services such as Microsoft® Windows Update and Linux Vendor Firmware Service (LVFS).
Restore Settings
Apply
Exit

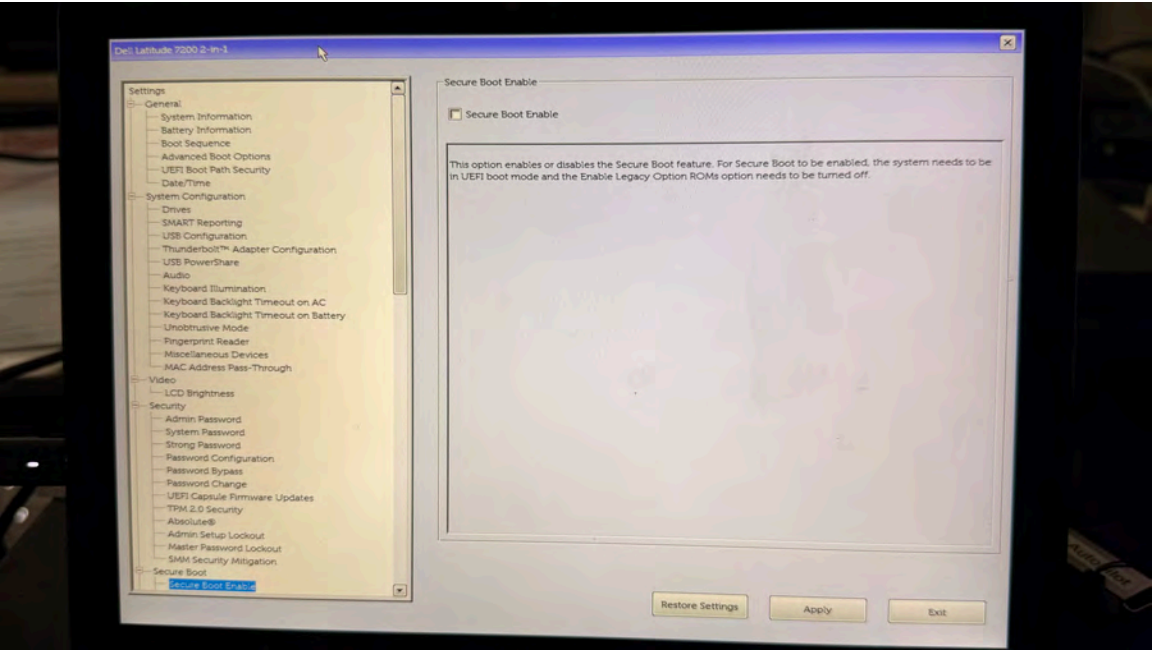

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
TPM 2.0 Security
TPM On
PPI Bypass for Enable Commands
PPI Bypass for Disable Commands
PPI Bypass for Clear Command
Clear
Attestation Enable
Key Storage Enable
SHA-256
Disabled
Enabled
TPM On :
This option lets you control whether the Trusted Platform Module (TPM) is visible to the operating system. NOTE: Disabling this option does not change any settings you have made to the TPM, nor does it delete or change any information or keys you may have stored in the TPM. Changes to this setting take effect immediately.
Clear :
This setting clears the TPM owner information, and the TPM is "Enabled" after the Clear. Changes to this setting take effect in the TPM upon exit from the BIOS setup menu.
PPI Bypass for Enable Commands :
This option controls the TPM Physical Presence Interface (PPI). When enabled, this setting will allow the OS to skip BIOS PPI user prompts when issuing TPM PPI enable and activate commands (# 1,3,6,8,10). See TCG PPI specification for more details. Changes to this setting take effect immediately.
PPI Bypass for Disable Commands :
This option controls the TPM Physical Presence Interface (PPI). When enabled, this setting will allow the OS to skip BIOS PPI user prompts when issuing TPM PPI Disable and Deactivate commands (# 2,4,7,9,11). See TCG PPI specification for more details. Changes to this setting take effect immediately.
Restore Settings
Apply
Exit

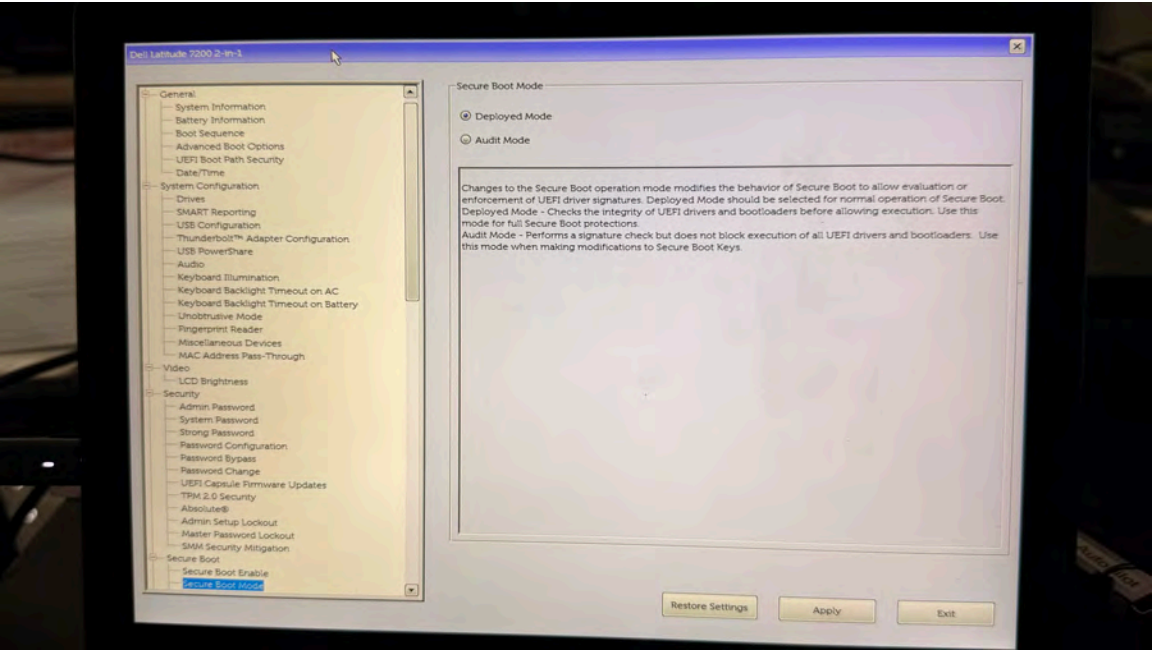

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Absolute®
Enabled
Disabled
Permanently Disabled
This field lets you Enable, Disable or Permanently Disable the BIOS module interface of the optional Absolute Persistence Module service from Absolute® Software.
Absolute®, formerly Absolute Computrace®, is a service designed to help track devices and provide recovery services in the event a device is lost or stolen. Once installed, the Absolute agent communicates with the Absolute Monitoring Center at programmed intervals to provide the tracking service. By installing the agent and activating the service, you consent to the transmission of information between your device and the Absolute Monitoring Center. For customers who have purchased the Absolute service, the firmware Persistence Module checks for the presence and health of Absolute on boot, and restores the functionality in case of agent removal or tampering.
Absolute, Computrace and Persistence are registered trademarks of Absolute Software Corporation.
Enabled = Enable the Absolute Persistence and load the firmware Persistence Module.
Disabled = Disable Absolute Persistence. The firmware Persistence Module is not installed.
Permanently Disabled = Permanently disables Absolute Persistence module interface from farther use.
Absolute Persistence cannot be disabled if the Absolute Monitoring service is activated. In order to disable the Absolute Persistence setting in BIOS Setup, first deactivate the Absolute Monitoring service.
WARNING: The 'Permanently Disabled' option can only be selected once. When 'Permanently Disabled' is selected, Absolute Persistence cannot be re-enabled. No further changes to the Enable / Disable state are allowed.
Restore Settings
Apply
Exit

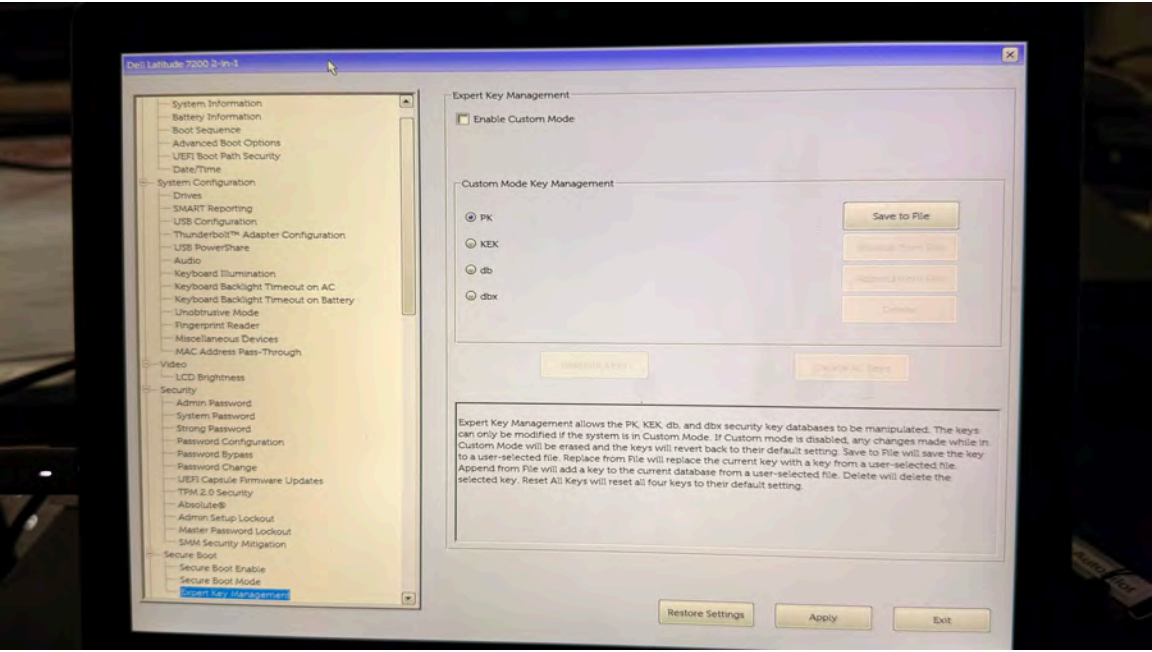

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Admin Setup Lockout
Enable Admin Setup Lockout
When enabled, this option will prevent users from entering Setup when an Admin password is set.
Restore Settings
Apply
Exit

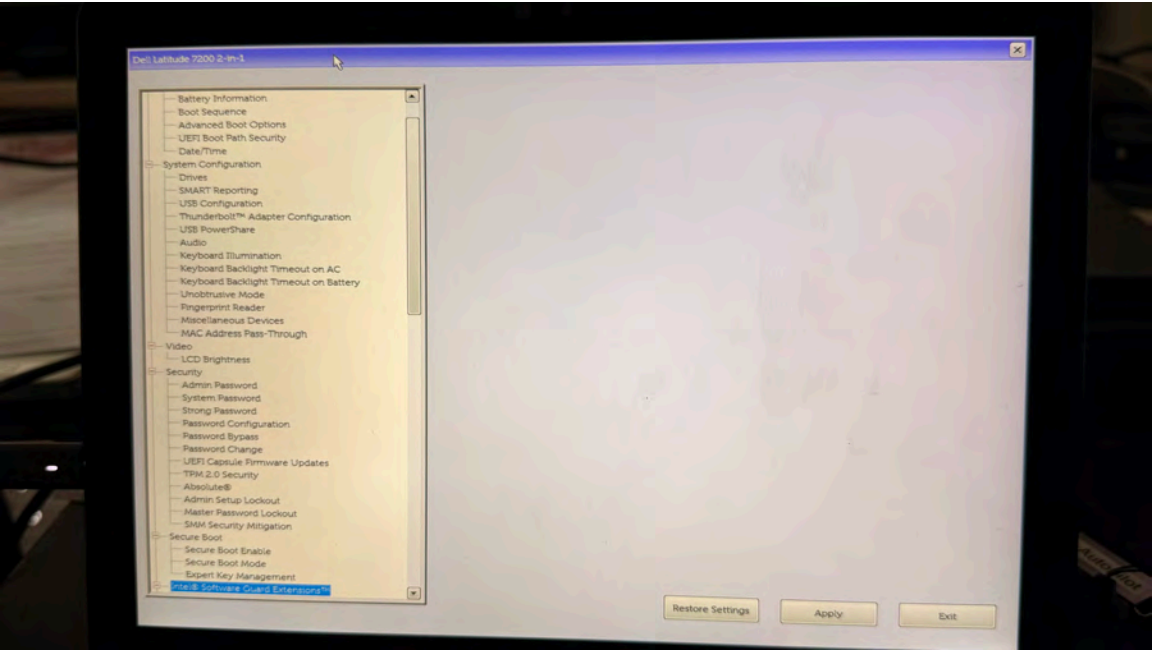

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Master Password Lockout
Enable Master Password Lockout
When enabled, this option will disable master password support. Hard Disk passwords need to be cleared before the setting can be changed.
Restore Settings
Apply
Exit

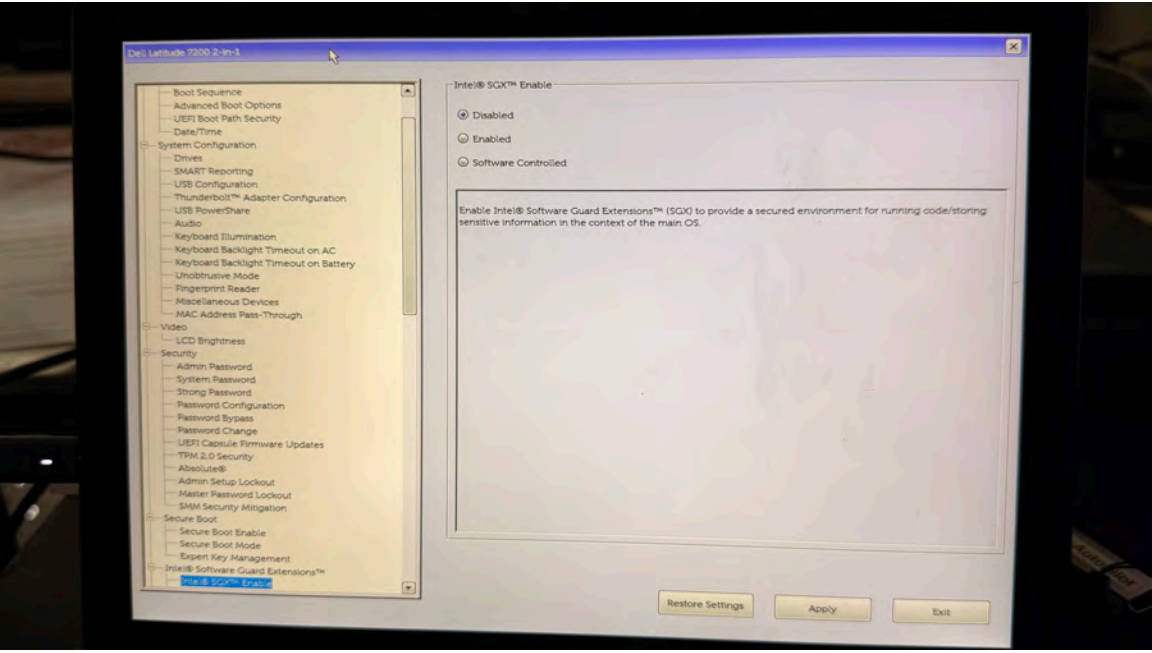

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
SMM Security Mitigation
SMM Security Mitigation
This option enables or disables additional UEFI SMM Security Mitigation protections. The operating system can use this feature to help protect the secure environment created by virtualization based security.
Enabling this feature provides additional UEFI SMM Security Mitigation protections. However, this feature may cause compatibility issues or loss of functionality with some legacy tools and applications.
Restore Settings
Apply
Exit

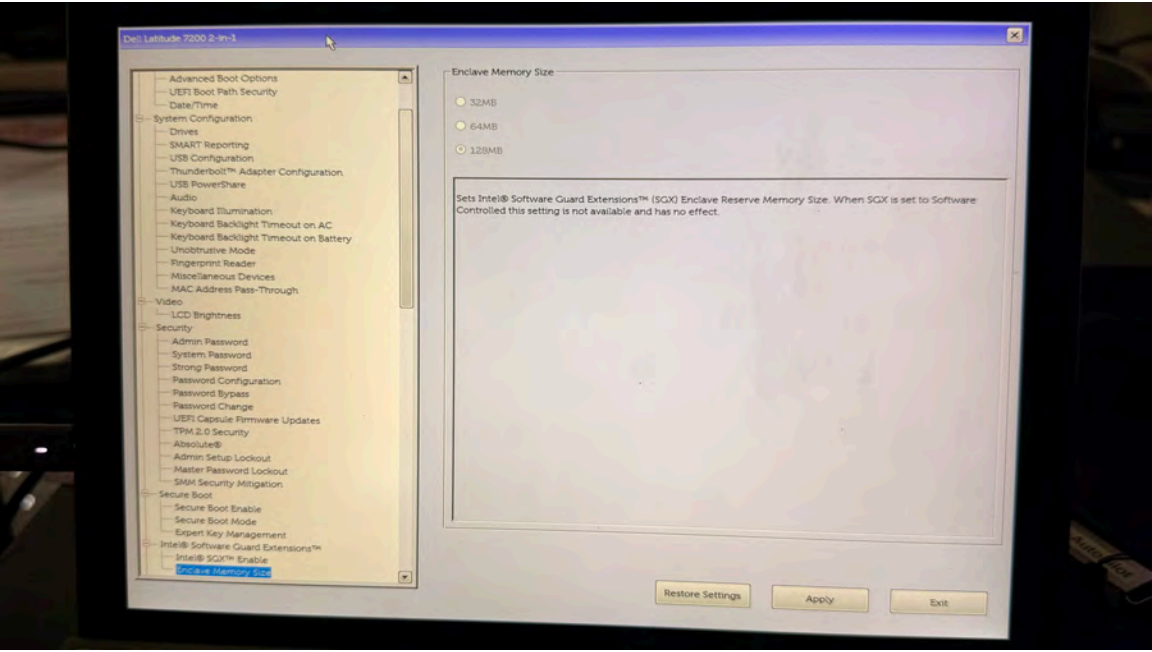

Dell Latitude 7200 2-in-1
Settings
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Enable
Secure Boot Enable
This option enables or disables the Secure Boot feature. For Secure Boot to be enabled, the system needs to be in UEFI boot mode and the Enable Legacy Option ROMs option needs to be turned off.
Restore Settings
Apply
Exit

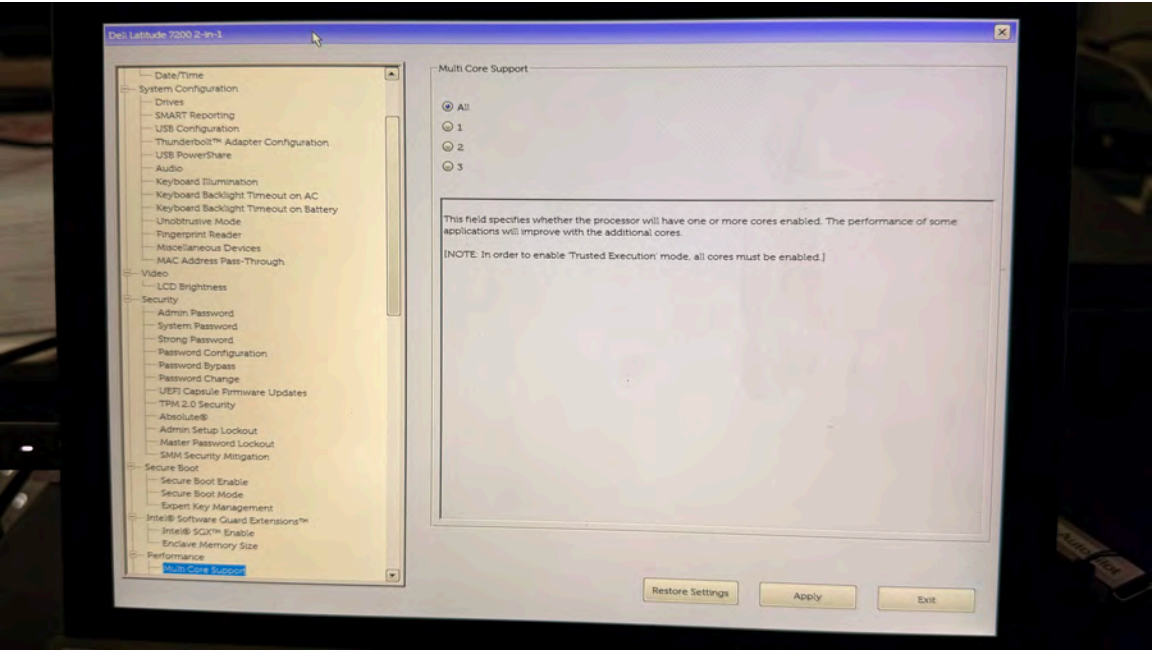

Dell Latitude 7200 2-in-1
General
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Secure Boot Mode
Deployed Mode
Audit Mode
Changes to the Secure Boot operation mode modifies the behavior of Secure Boot to allow evaluation or enforcement of UEFI driver signatures. Deployed Mode should be selected for normal operation of Secure Boot.
Deployed Mode - Checks the integrity of UEFI drivers and bootloaders before allowing execution. Use this mode for full Secure Boot protections.
Audit Mode - Performs a signature check but does not block execution of all UEFI drivers and bootloaders. Use this mode when making modifications to Secure Boot Keys.
Restore Settings
Apply
Exit

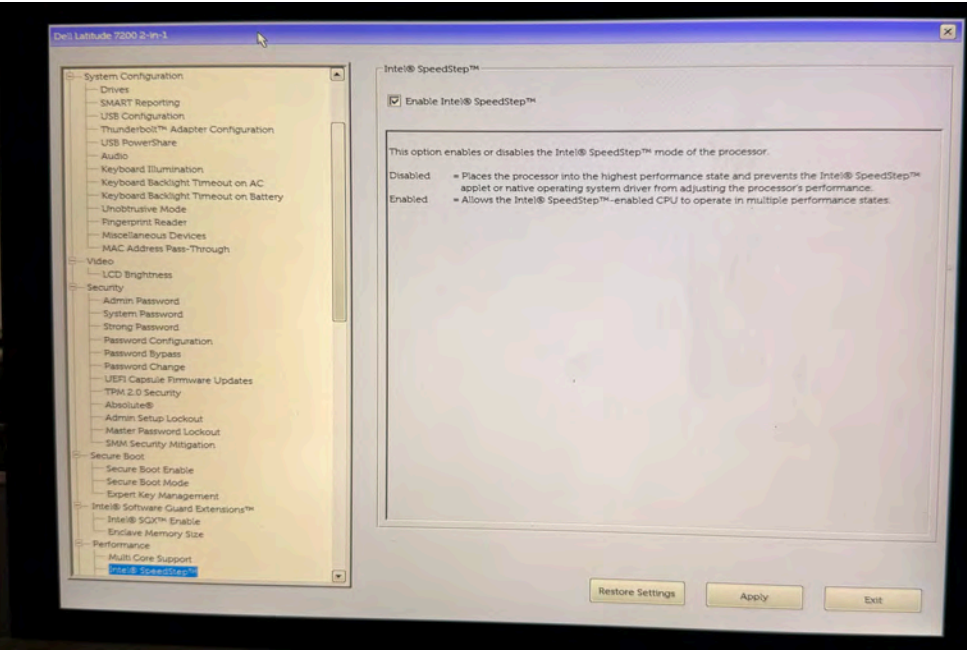

Dell Latitude 7200 2-in-1
System Information
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Expert Key Management
Enable Custom Mode
Custom Mode Key Management
PK
KEK
db
dbx
Save to File
Expert Key Management allows the PK, KEK, db, and dbx security key databases to be manipulated. The keys can only be modified if the system is in Custom Mode. If Custom mode is disabled, any changes made while in Custom Mode will be erased and the keys will revert back to their default setting. Save to File will save the key to a user-selected file. Replace from File will replace the current key with a key from a user-selected file. Append from File will add a key to the current database from a user-selected file. Delete will delete the selected key. Reset All Keys will reset all four keys to their default setting.
Restore Settings
Apply
Exit

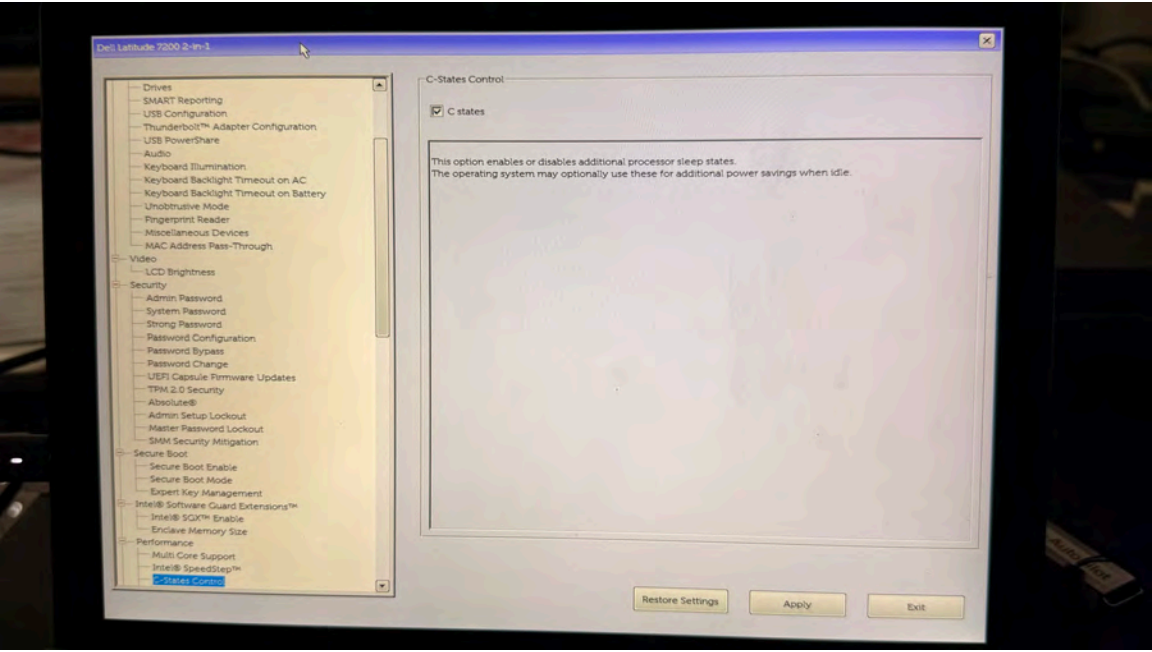

Dell Latitude 7200 2-in-1
Battery Information
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Restore Settings
Apply
Exit

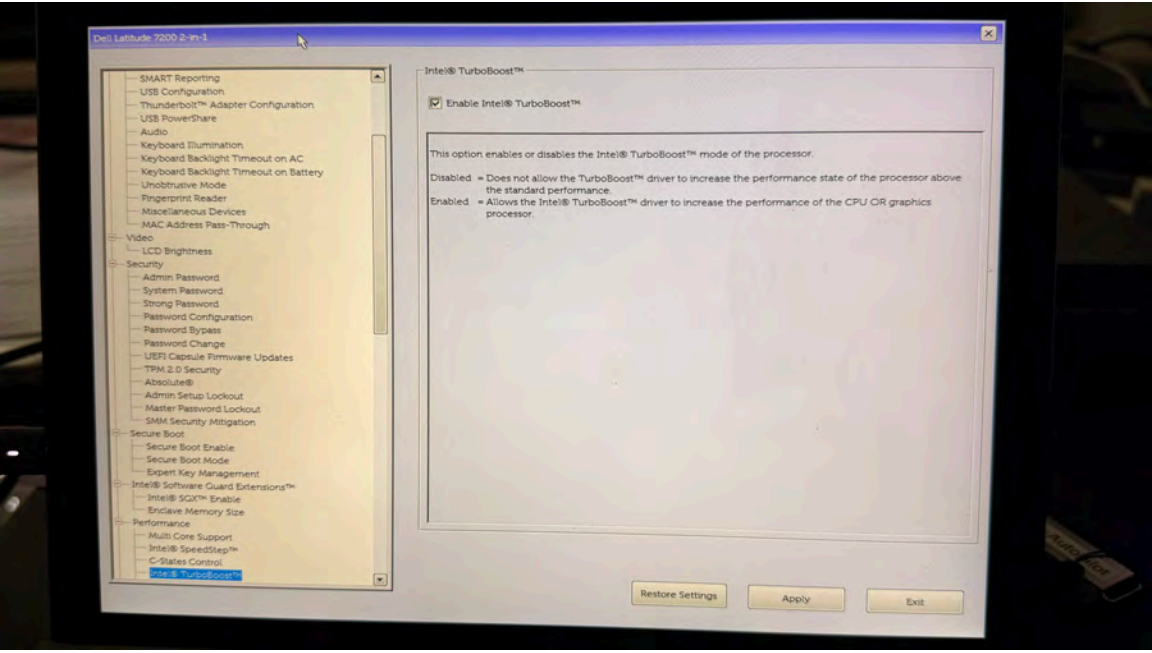

Dell Latitude 7200 2-in-1
Boot Sequence
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Intel® SGX™ Enable
Disabled
Enabled
Software Controlled
Enable Intel® Software Guard Extensions™ (SGX) to provide a secured environment for running code/storing sensitive information in the context of the main OS.
Restore Settings
Apply
Exit

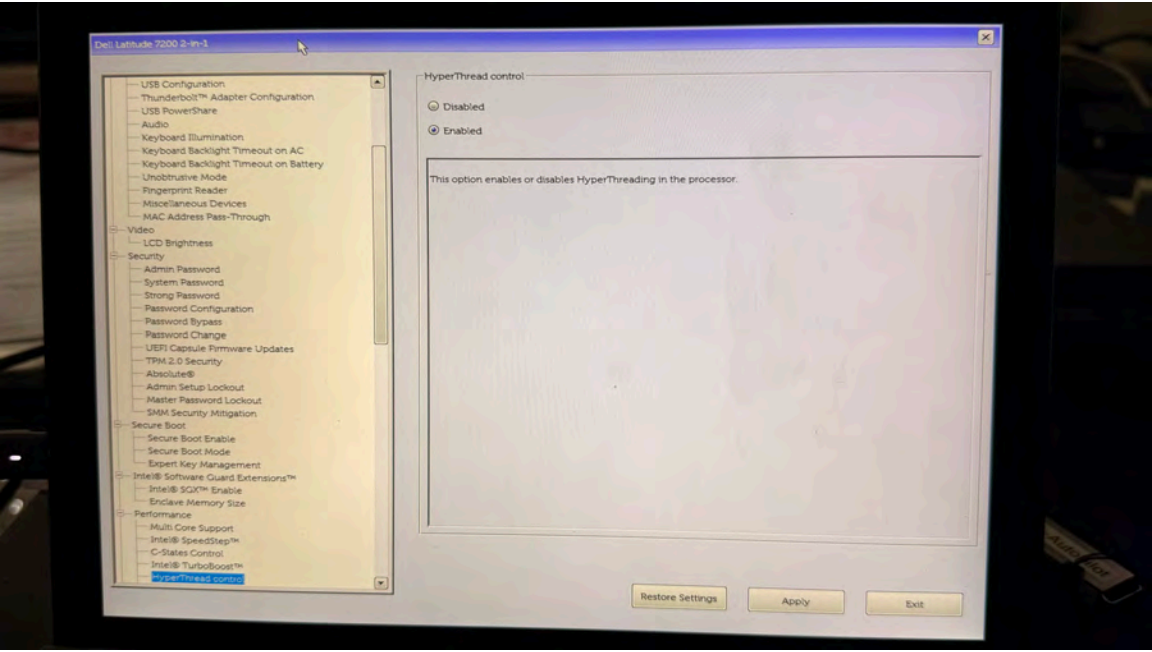

Dell Latitude 7200 2-in-1
Advanced Boot Options
UEFI Boot Path Security
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Enclave Memory Size
32MB
64MB
128MB
Sets Intel® Software Guard Extensions™ (SGX) Enclave Reserve Memory Size. When SGX is set to Software Controlled this setting is not available and has no effect.
Restore Settings
Apply
Exit

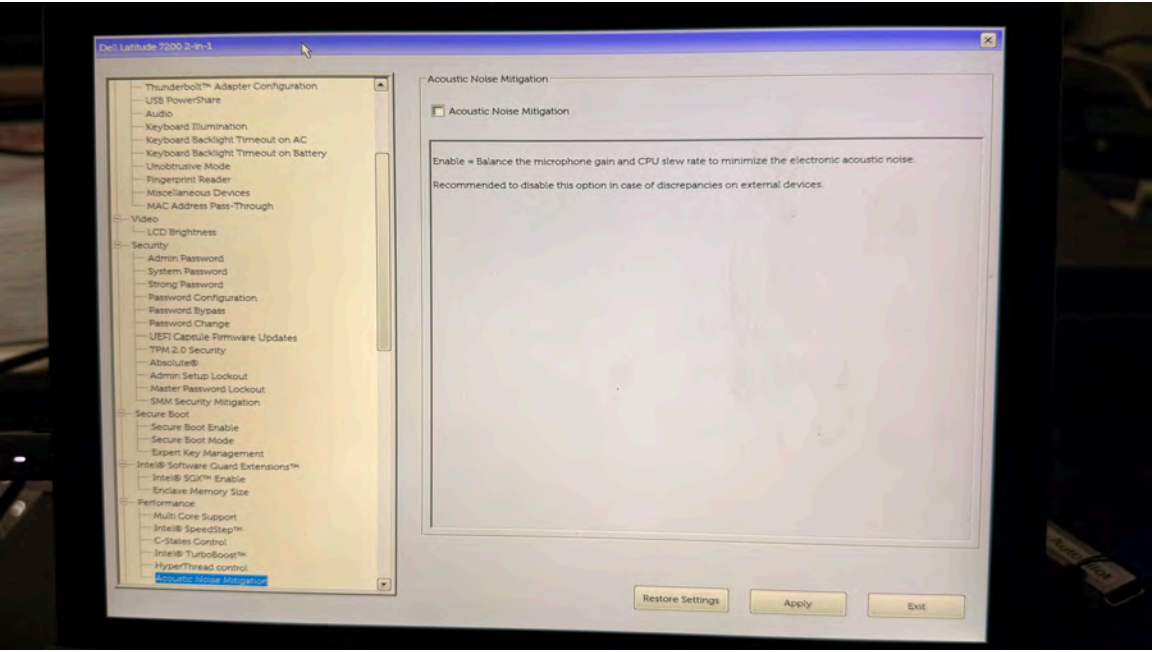

Dell Latitude 7200 2-in-1
Date/Time
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Multi Core Support
All
1
2
3
This field specifies whether the processor will have one or more cores enabled. The performance of some applications will improve with the additional cores.
[NOTE: In order to enable 'Trusted Execution' mode, all cores must be enabled.]
Restore Settings
Apply
Exit

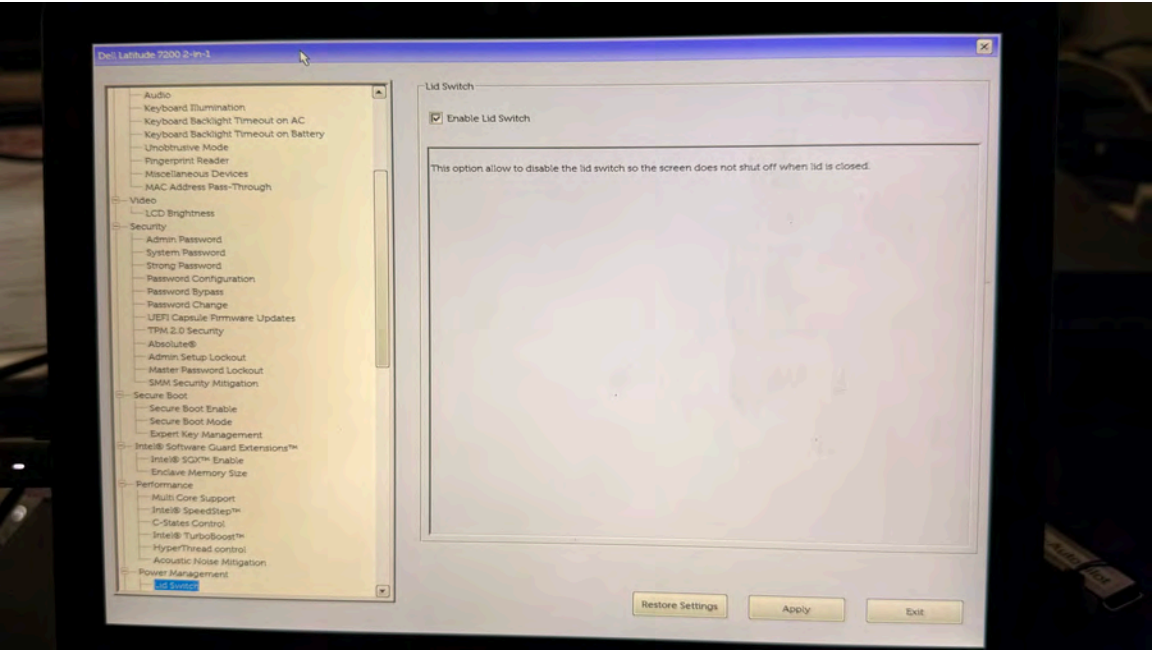

Dell Latitude 7200 2-in-1
System Configuration
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
Intel® SpeedStep™
Enable Intel® SpeedStep™
This option enables or disables the Intel® SpeedStep™ mode of the processor.
Disabled = Places the processor into the highest performance state and prevents the Intel® SpeedStep™ applet or native operating system driver from adjusting the processor's performance.
Enabled = Allows the Intel® SpeedStep™-enabled CPU to operate in multiple performance states.
Restore Settings
Apply
Exit

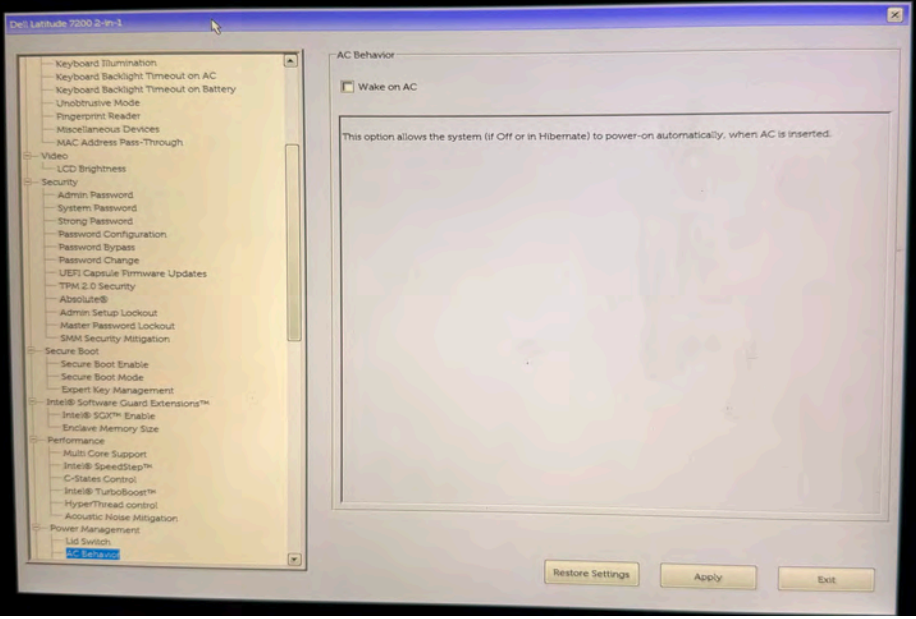

Dell Latitude 7200 2-in-1
Drives
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
C-States Control
C states
This option enables or disables additional processor sleep states.
The operating system may optionally use these for additional power savings when idle.
Restore Settings
Apply
Exit

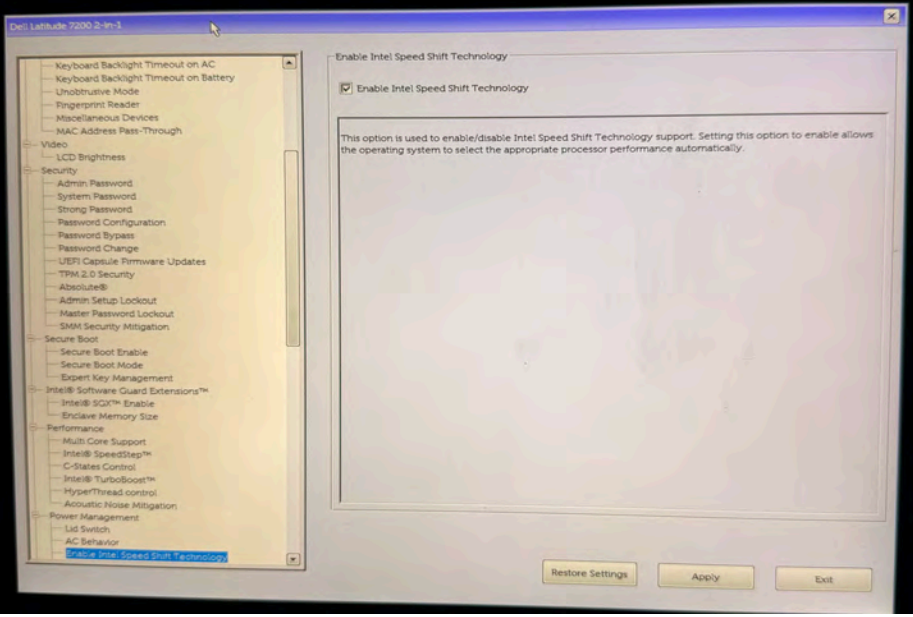

Dell Latitude 7200 2-in-1
SMART Reporting
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
Intel® TurboBoost™
Enable Intel® TurboBoost™
This option enables or disables the Intel® TurboBoost™ mode of the processor.
Disabled = Does not allow the TurboBoost™ driver to increase the performance state of the processor above the standard performance.
Enabled = Allows the Intel® TurboBoost™ driver to increase the performance of the CPU OR graphics processor.
Restore Settings
Apply
Exit

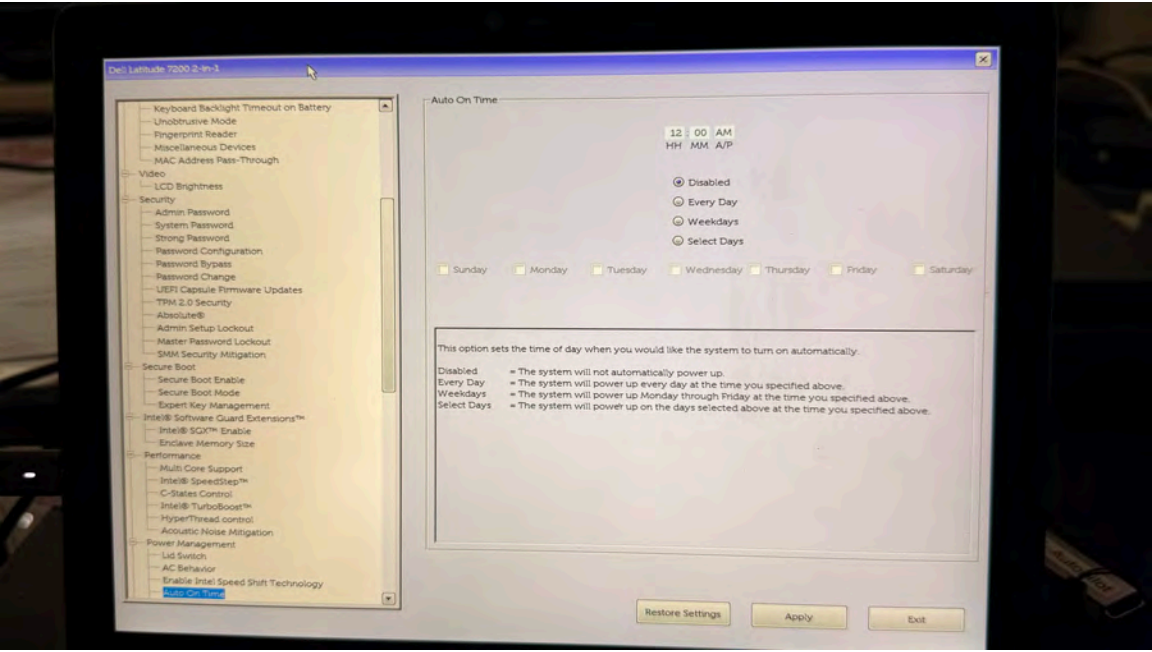

Dell Latitude 7200 2-in-1
USB Configuration
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread contro
HyperThread control
Disabled
Enabled
This option enables or disables HyperThreading in the processor.
Restore Settings
Apply
Exit

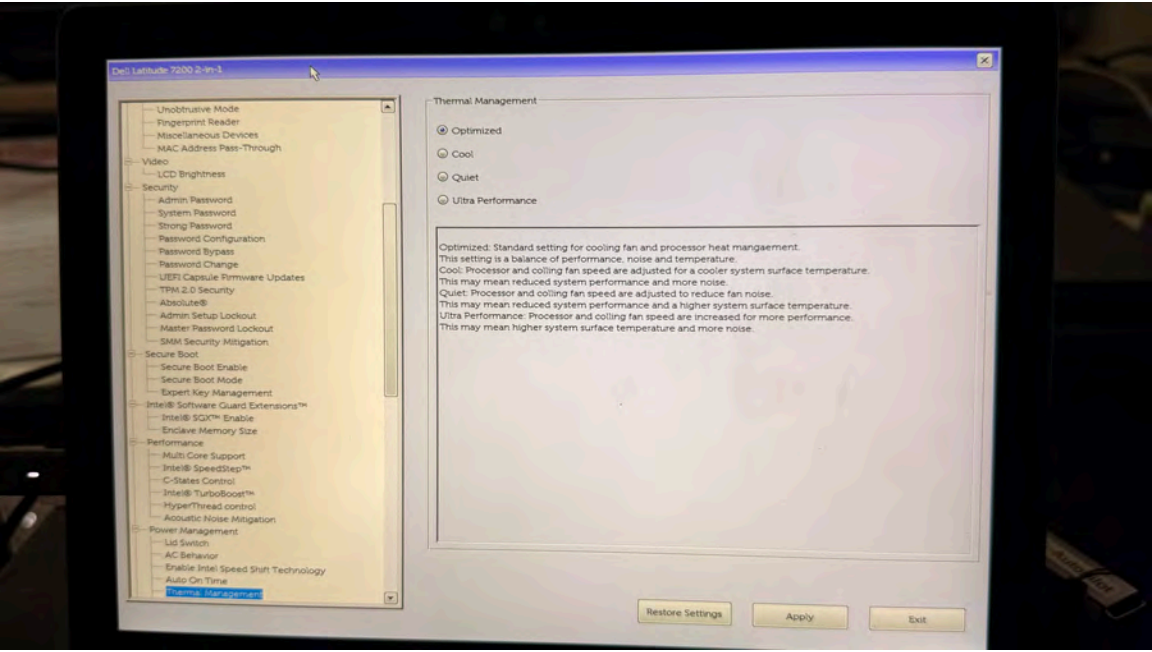

Dell Latitude 7200 2-in-1
Thunderbolt™ Adapter Configuration
USB PowerShare
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Acoustic Noise Mitigation
Acoustic Noise Mitigation
Enable = Balance the microphone gain and CPU slew rate to minimize the electronic acoustic noise.
Recommended to disable this option in case of discrepancies on external devices.
Restore Settings
Apply
Exit

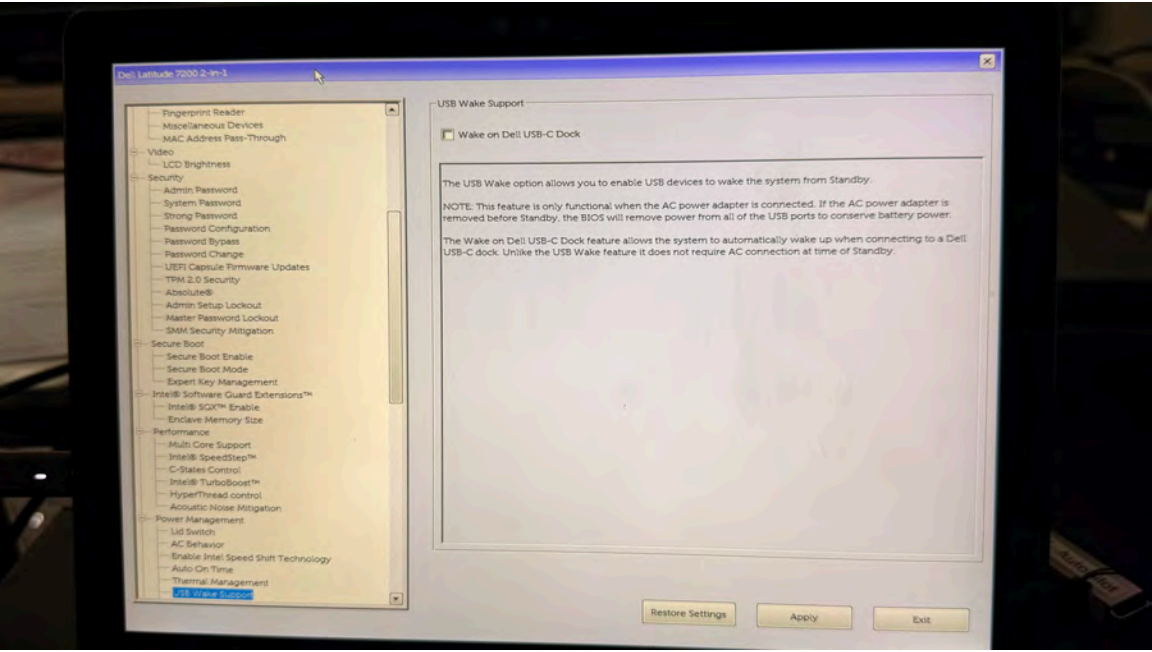

Dell Latitude 7200 2-in-1
Audio
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
Lid Switch
Enable Lid Switch
This option allow to disable the lid switch so the screen does not shut off when lid is closed.
Restore Settings
Apply
Exit

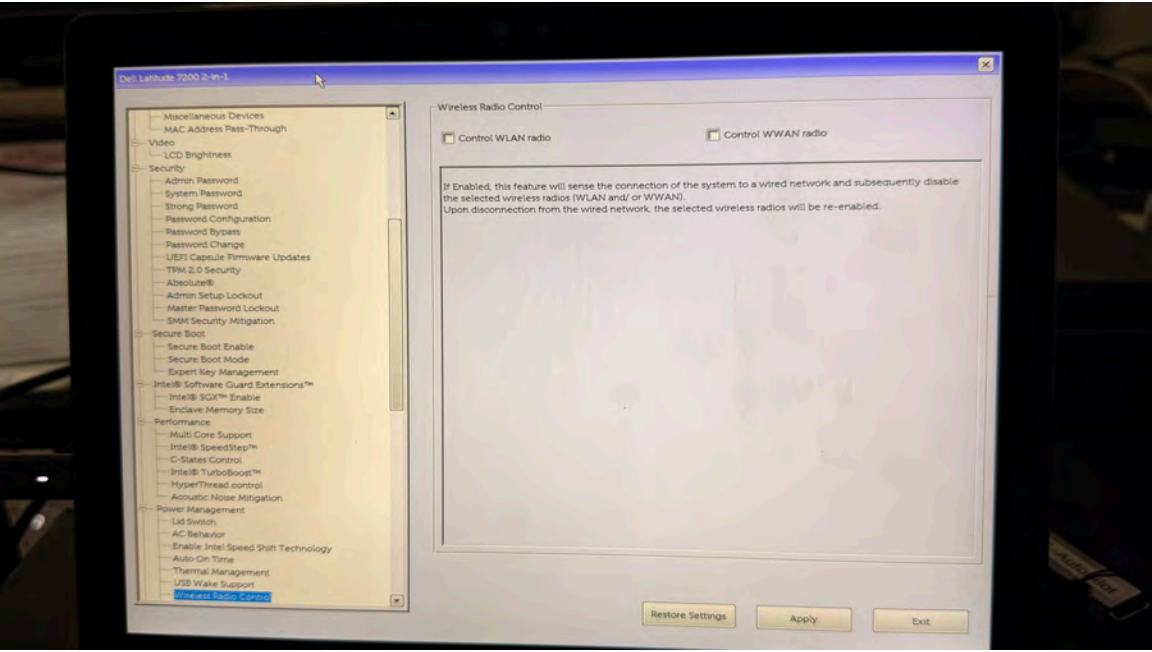

Dell Latitude 7200 2-in-1
Keyboard Illumination
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
AC Behavior
Wake on AC
This option allows the system (if Off or in Hibernate) to power-on automatically, when AC is inserted.
Restore Settings
Apply
Exit

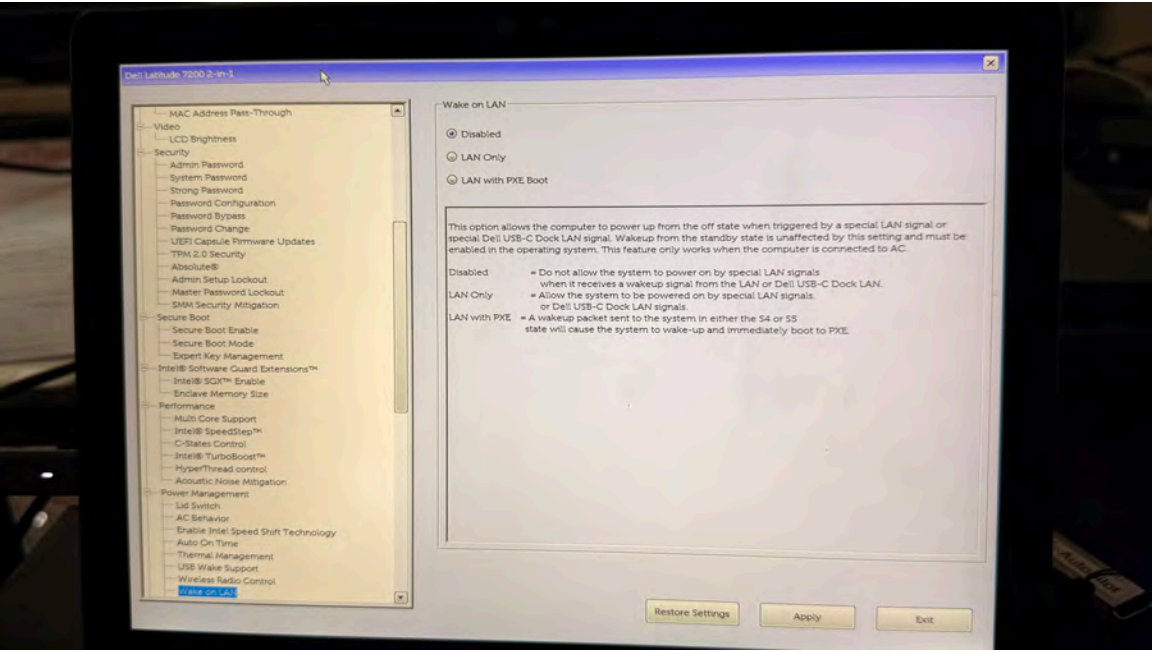

Dell Latitude 7200 2-in-1
Keyboard Backlight Timeout on AC
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Enable Intel Speed Shift Technology
Enable Intel Speed Shift Technology
This option is used to enable/disable Intel Speed Shift Technology support. Setting this option to enable allows the operating system to select the appropriate processor performance automatically.
Restore Settings
Apply
Exit

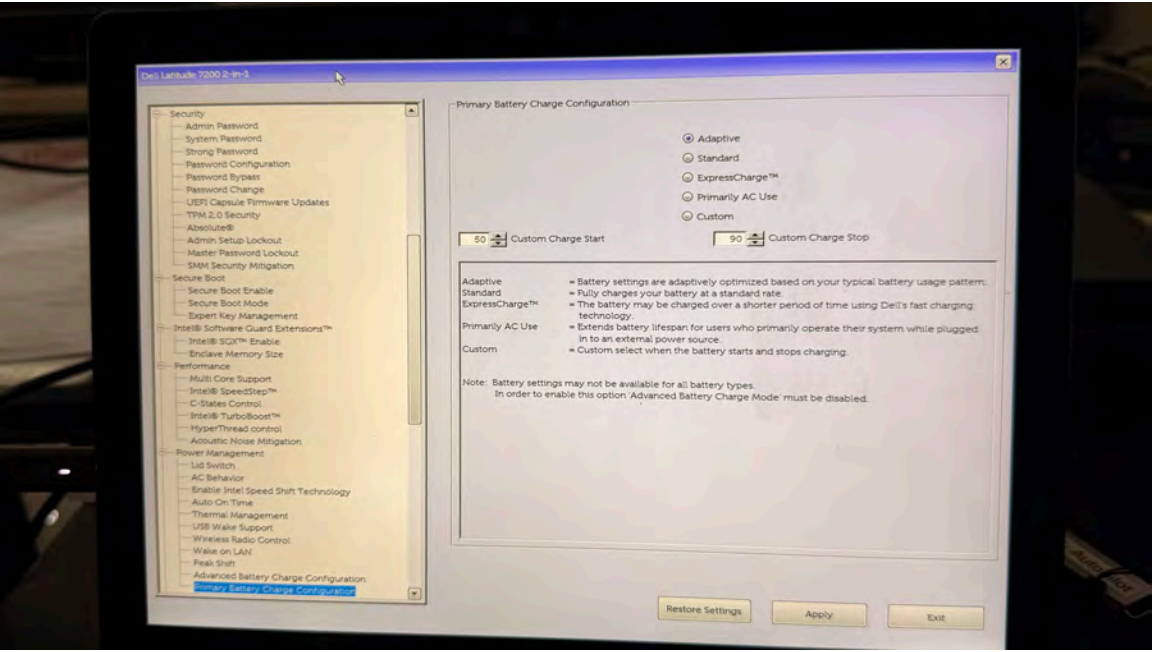

Dell Latitude 7200 2-in-1
Keyboard Backlight Timeout on Battery
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Auto On Time
12 00 AM
HH MM A/P
Disabled
Every Day
Weekdays
Select Days
Sunday
Monday
Tuesday
Wednesday
Thursday
Friday
Saturday
This option sets the time of day when you would like the system to turn on automatically.
Disabled = The system will not automatically power up.
Every Day = The system will power up every day at the time you specified above.
Weekdays = The system will power up Monday through Friday at the time you specified above.
Select Days = The system will power up on the days selected above at the time you specified above.
Restore Settings
Apply
Exit

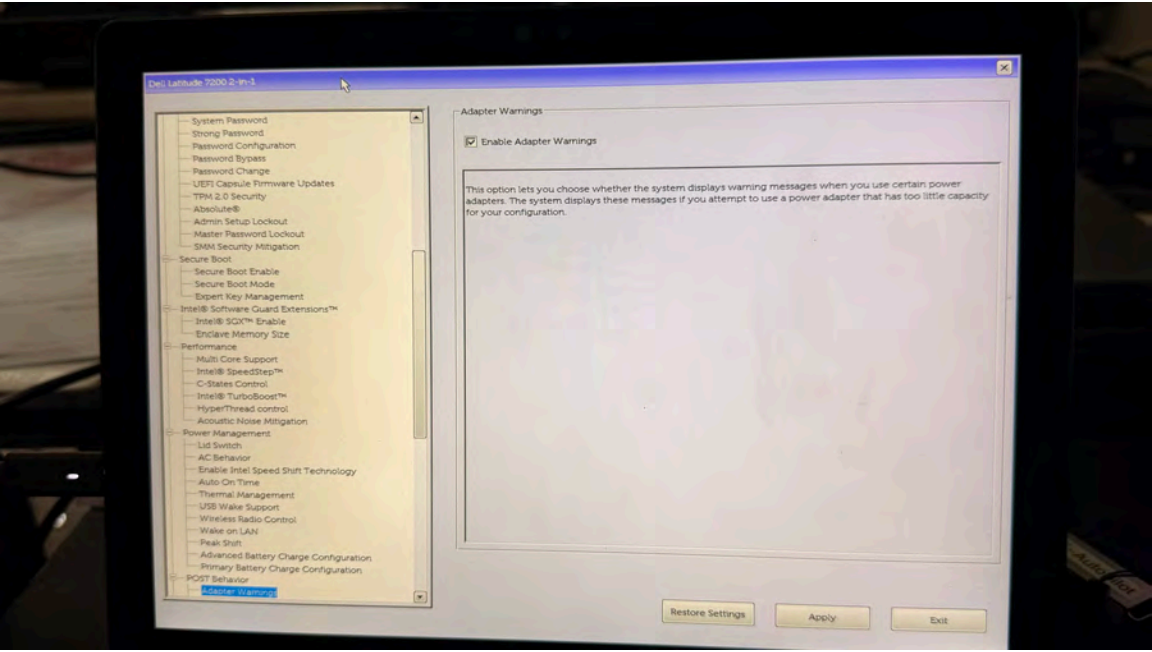

Dell Latitude 7200 2-in-1
Unobtrusive Mode
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
Thermal Management
Optimized
Cool
Quiet
Ultra Performance
Optimized: Standard setting for cooling fan and processor heat mangaement.
This setting is a balance of performance, noise and temperature.
Cool: Processor and colling fan speed are adjusted for a cooler system surface temperature.
This may mean reduced system performance and more noise.
Quiet: Processor and colling fan speed are adjusted to reduce fan noise.
This may mean reduced system performance and a higher system surface temperature.
Ultra Performance: Processor and colling fan speed are increased for more performance.
This may mean higher system surface temperature and more noise.
Restore Settings
Apply
Exit

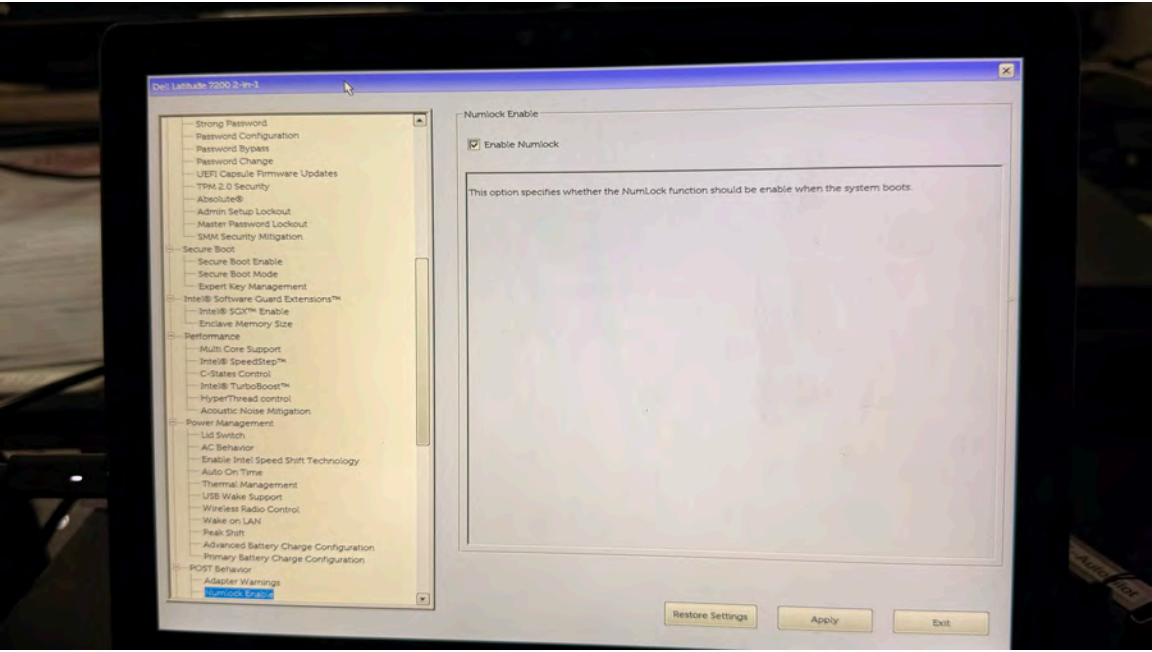

Dell Latitude 7200 2-in-1
Fingerprint Reader
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
USB Wake Support
Wake on Dell USB-C Dock
The USB Wake option allows you to enable USB devices to wake the system from Standby.
NOTE: This feature is only functional when the AC power adapter is connected. If the AC power adapter is removed before Standby, the BIOS will remove power from all of the USB ports to conserve battery power.
The Wake on Dell USB-C Dock feature allows the system to automatically wake up when connecting to a Dell USB-C dock. Unlike the USB Wake feature it does not require AC connection at time of Standby.
Restore Settings
Apply
Exit

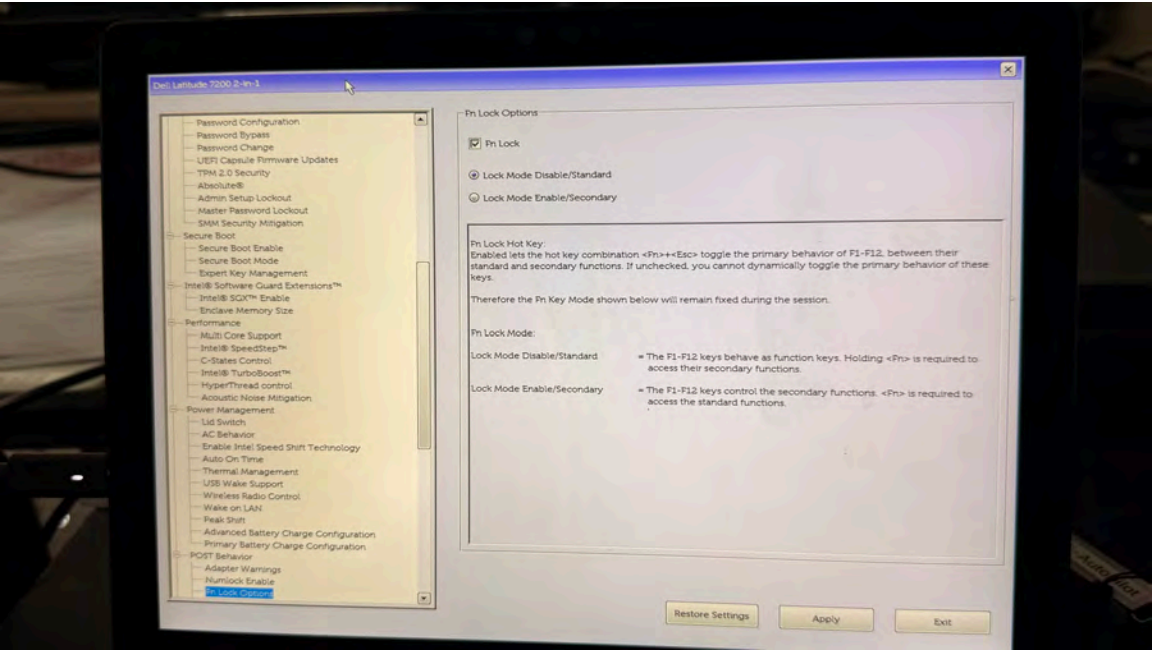

Dell Latitude 7200 2-in-1
Miscellaneous Devices
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Contro
Wireless Radio Control
Control WLAN radio
Control WWAN radio
If Enabled, this feature will sense the connection of the system to a wired network and subsequently disable the selected wireless radios (WLAN and/ or WWAN).
Upon disconnection from the wired network, the selected wireless radios will be re-enabled.
Restore Settings
Apply
Exit

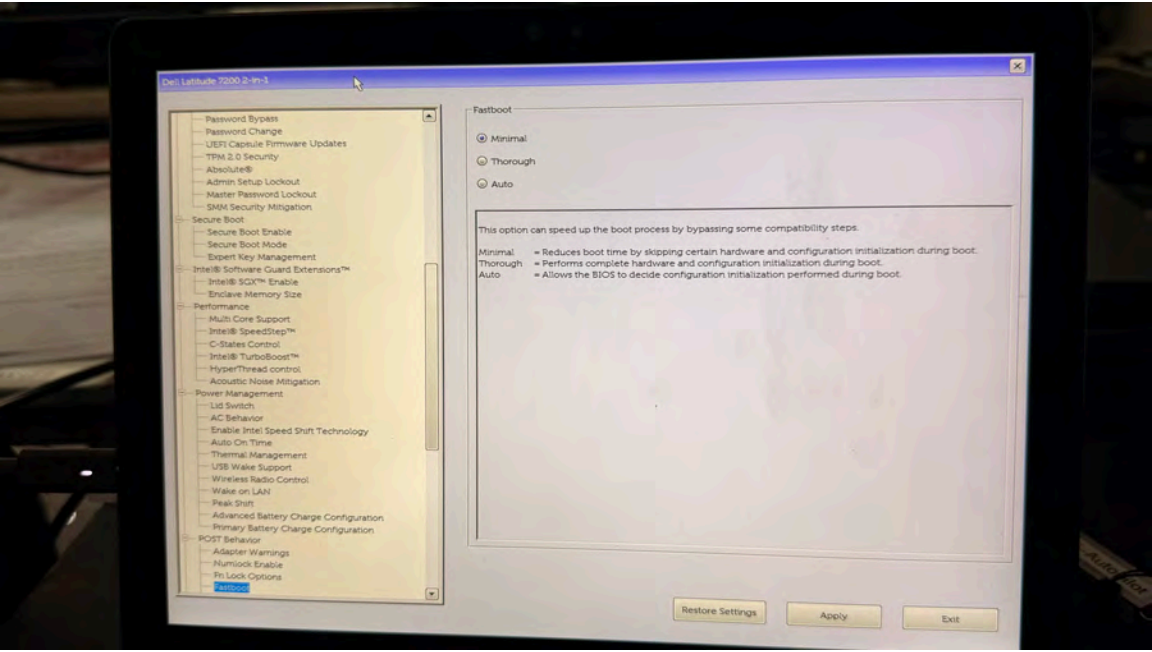

Dell Latitude 7200 2-in-1
MAC Address Pass-Through
Video
LCD Brightness
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Wake on LAN
Disabled
LAN Only
LAN with PXE Boot
This option allows the computer to power up from the off state when triggered by a special LAN signal or special Dell USB-C Dock LAN signal. Wakeup from the standby state is unaffected by this setting and must be enabled in the operating system. This feature only works when the computer is connected to AC.
Disabled = Do not allow the system to power on by special LAN signals when it receives a wakeup signal from the LAN or Dell USB-C Dock LAN.
LAN Only = Allow the system to be powered on by special LAN signals or Dell USB-C Dock LAN signals.
LAN with PXE = A wakeup packet sent to the system in either the S4 or S5 state will cause the system to wake-up and immediately boot to PXE.
Restore Settings
Apply
Exit

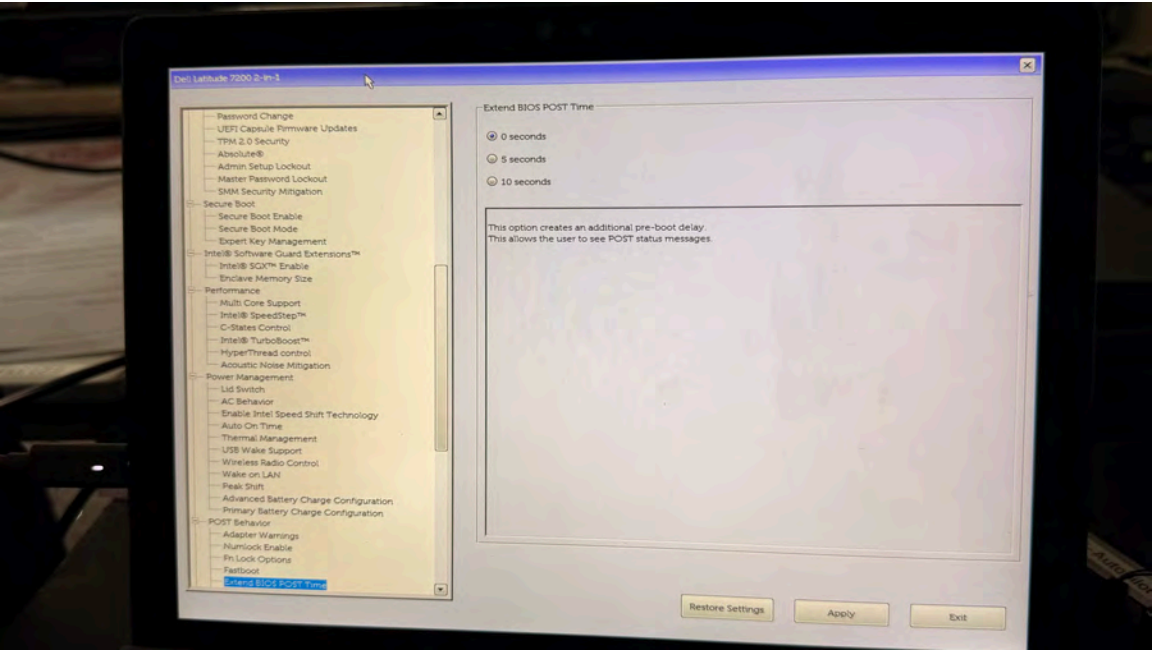

Dell Latitude 7200 2-in-1
Security
Admin Password
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
Primary Battery Charge Configuration
Adaptive
Standard
ExpressCharge™
Primarily AC Use
Custom
50
Custom Charge Start
90
Custom Charge Stop
Adaptive = Battery settings are adaptively optimized based on your typical battery usage pattern.
Standard = Fully charges your battery at a standard rate.
ExpressCharge™ = The battery may be charged over a shorter period of time using Dell's fast charging technology.
Primarily AC Use = Extends battery lifespan for users who primarily operate their system while plugged in to an external power source.
Custom = Custom select when the battery starts and stops charging.
Note: Battery settings may not be available for all battery types.
In order to enable this option 'Advanced Battery Charge Mode' must be disabled.
Restore Settings
Apply
Exit

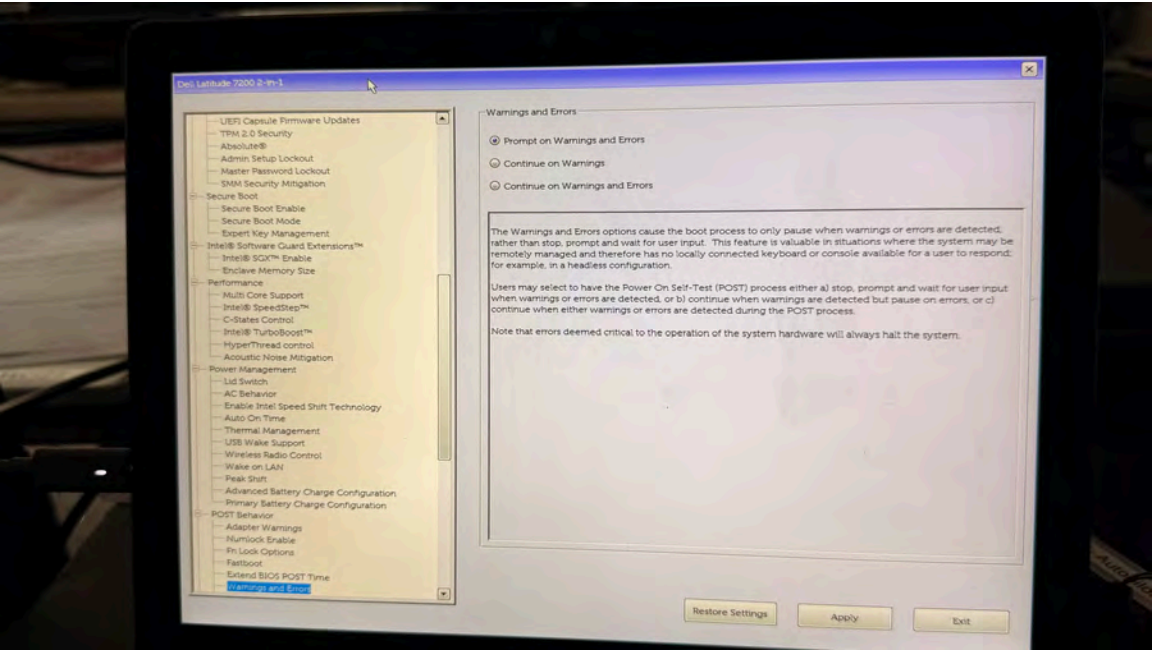

Dell Latitude 7200 2-in-1
System Password
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Adapter Warnings
Enable Adapter Warnings
This option lets you choose whether the system displays warning messages when you use certain power adapters. The system displays these messages if you attempt to use a power adapter that has too little capacity for your configuration.
Restore Settings
Apply
Exit

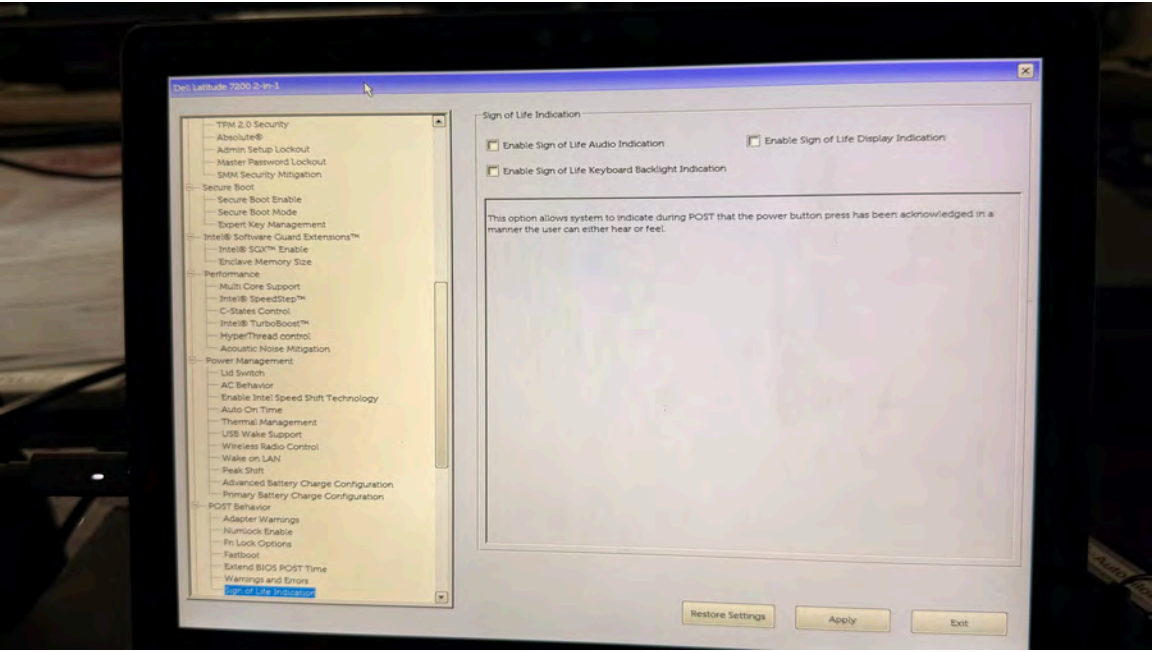

Dell Latitude 7200 2-in-1
Strong Password
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Numlock Enable
Enable Numlock
This option specifies whether the NumLock function should be enable when the system boots.
Restore Settings
Apply
Exit

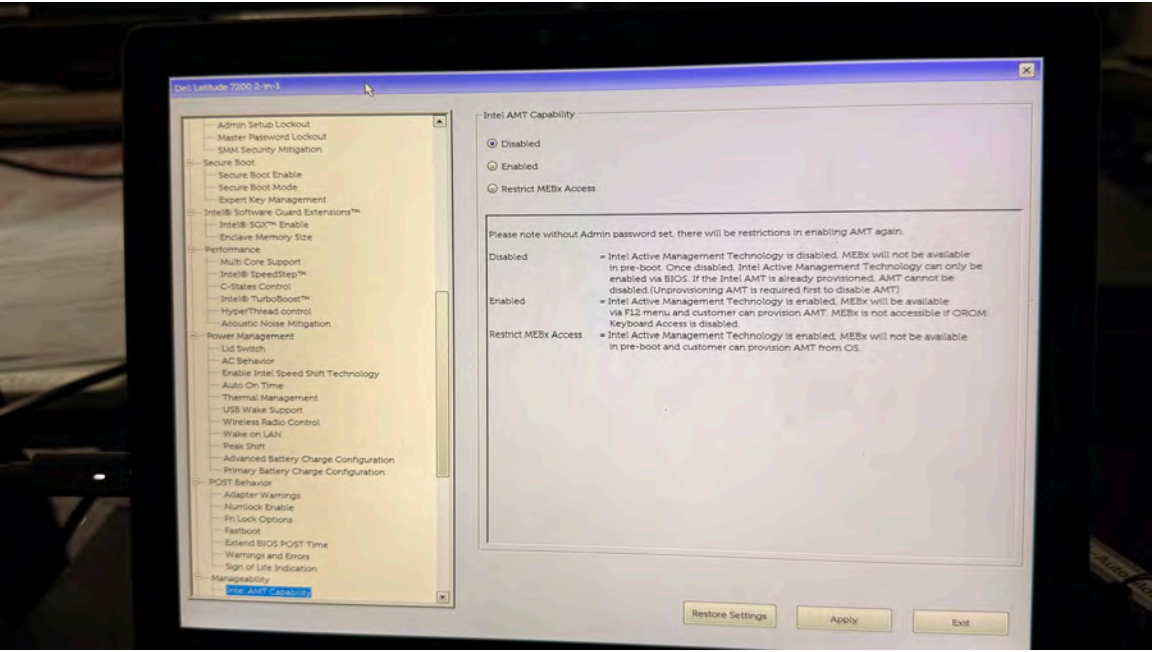

Dell Latitude 7200 2-in-1
Password Configuration
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto-On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fn Lock Options
Fn Lock
Lock Mode Disable/Standard
Lock Mode Enable/Secondary
Fn Lock Hot Key:
Enabled lets the hot key combination <Fn>+<Esc> toggle the primary behavior of F1-F12, between their standard and secondary functions. If unchecked, you cannot dynamically toggle the primary behavior of these keys.
Therefore the Fn Key Mode shown below will remain fixed during the session.
Fn Lock Mode:
Lock Mode Disable/Standard = The F1-F12 keys behave as function keys. Holding <Fn> is required to access their secondary functions.
Lock Mode Enable/Secondary = The F1-F12 keys control the secondary functions. <Fn> is required to access the standard functions.
Restore Settings
Apply
Exit

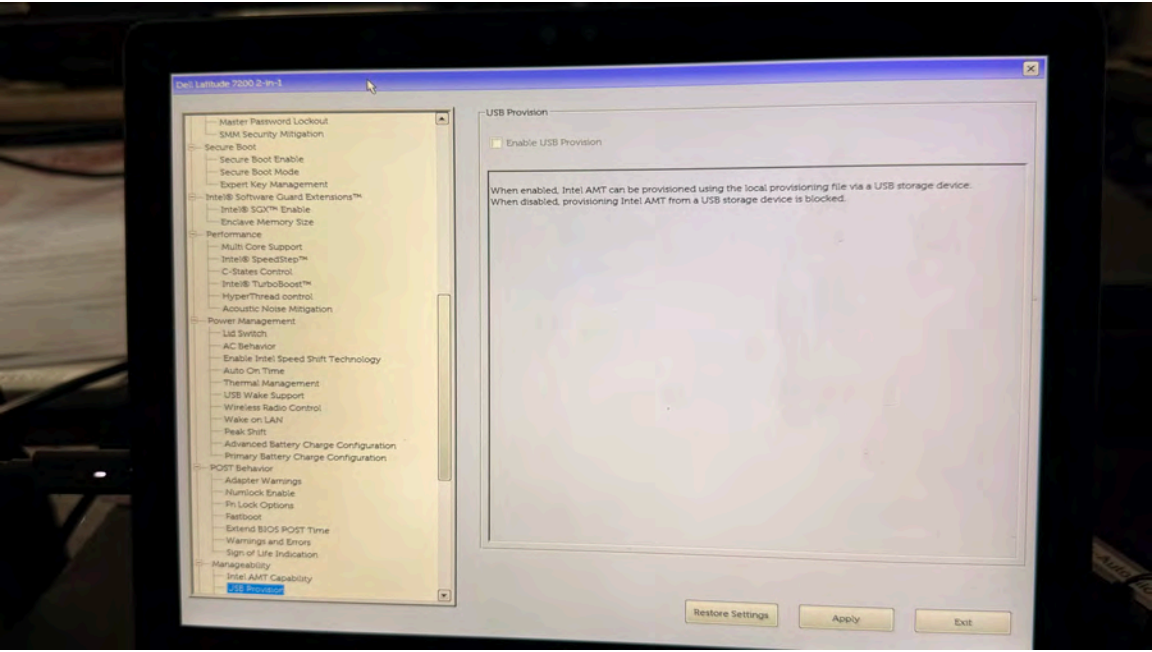

Dell Latitude 7200 2-in-1
Password Bypass
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Fastboot
Minimal
Thorough
Auto
This option can speed up the boot process by bypassing some compatibility steps.
Minimal = Reduces boot time by skipping certain hardware and configuration initialization during boot.
Thorough = Performs complete hardware and configuration initialization during boot.
Auto = Allows the BIOS to decide configuration initialization performed during boot.
Restore Settings
Apply
Exit

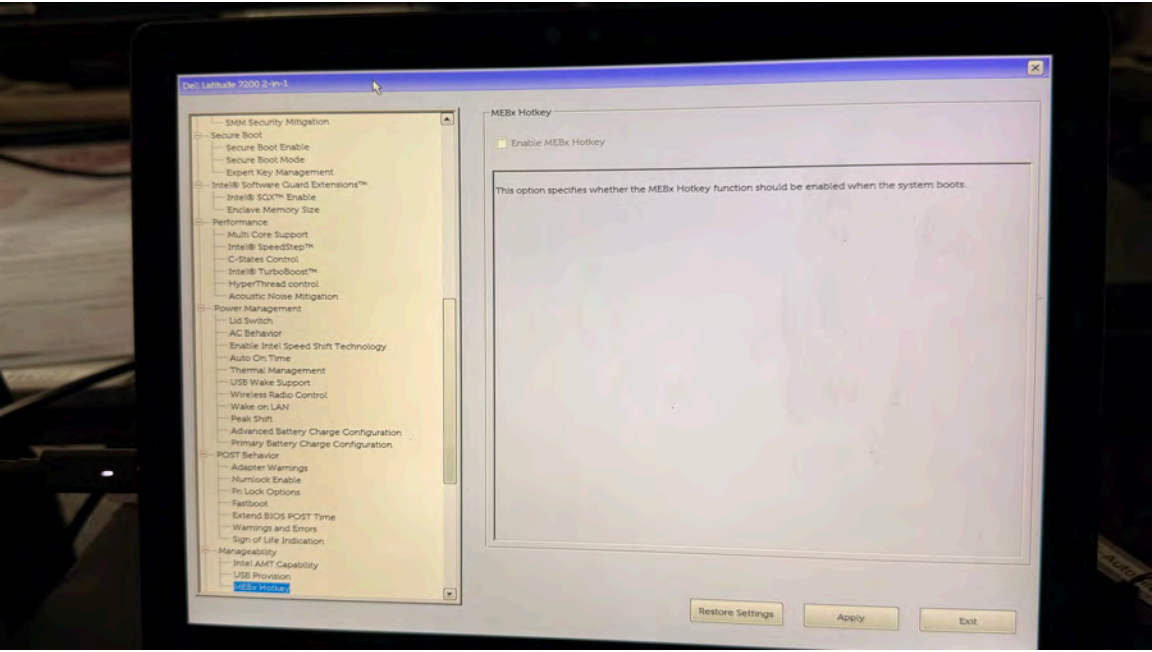

Dell Latitude 7200 2-in-1
Password Change
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Extend BIOS POST Time
0 seconds
5 seconds
10 seconds
This option creates an additional pre-boot delay.
This allows the user to see POST status messages.
Restore Settings
Apply
Exit

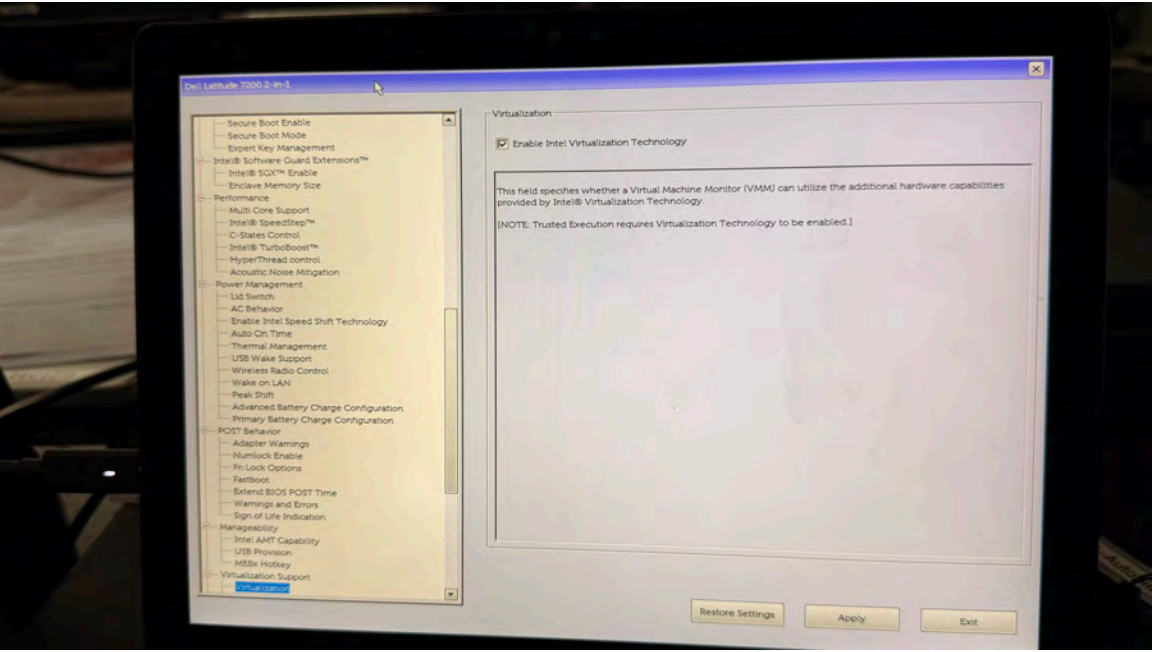

Dell Latitude 7200 2-in-1
UEFI Capsule Firmware Updates
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Warnings and Errors
Prompt on Warnings and Errors
Continue on Warnings
Continue on Warnings and Errors
The Warnings and Errors options cause the boot process to only pause when warnings or errors are detected, rather than stop, prompt and wait for user input. This feature is valuable in situations where the system may be remotely managed and therefore has no locally connected keyboard or console available for a user to respond; for example, in a headless configuration.
Users may select to have the Power On Self-Test (POST) process either a) stop, prompt and wait for user input when warnings or errors are detected, or b) continue when warnings are detected but pause on errors, or c) continue when either warnings or errors are detected during the POST process.
Note that errors deemed critical to the operation of the system hardware will always halt the system.
Restore Settings
Apply
Exit

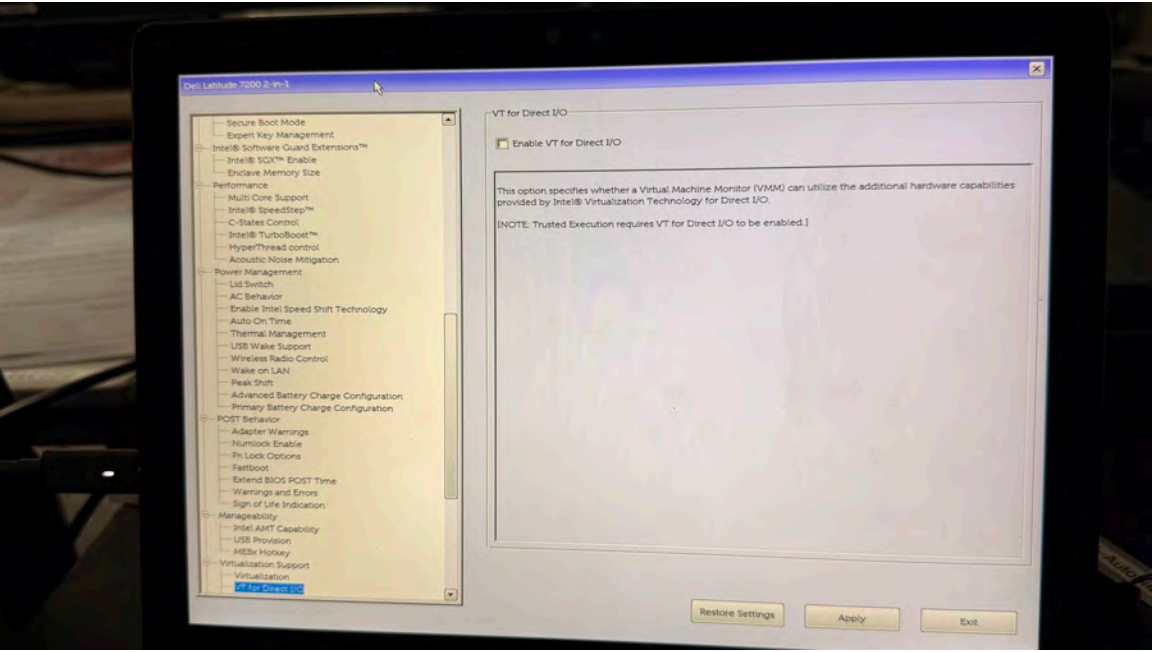

Dell Latitude 7200 2-in-1
TPM 2.0 Security
Absolute®
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Pin Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Sign of Life Indication
Enable Sign of Life Audio Indication
Enable Sign of Life Display Indication
Enable Sign of Life Keyboard Backlight Indication
This option allows system to indicate during POST that the power button press has been acknowledged in a manner the user can either hear or feel.
Restore Settings
Apply
Exit

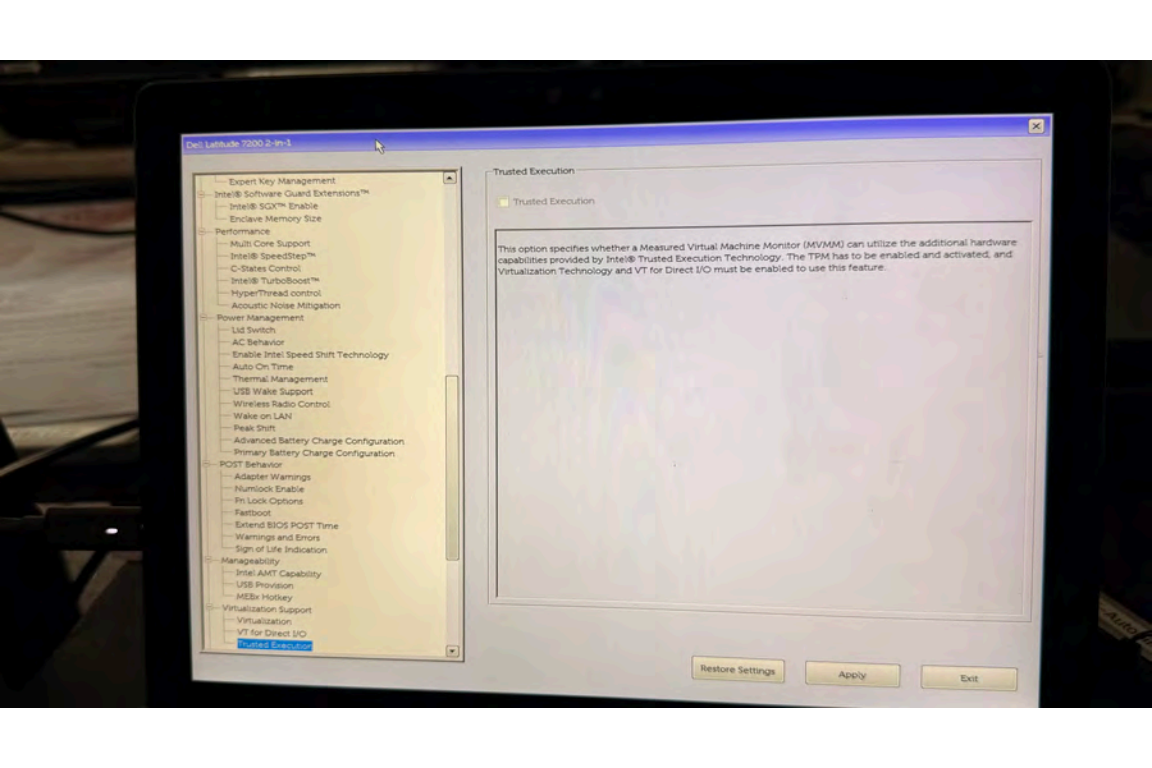

Dell Latitude 7200 2-in-1
Admin Setup Lockout
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
Intel AMT Capability
Disabled
Enabled
Restrict MEBx Access
Please note without Admin password set, there will be restrictions in enabling AMT again.
Disabled = Intel Active Management Technology is disabled. MEBx will not be available in pre-boot. Once disabled, Intel Active Management Technology can only be enabled via BIOS. If the Intel AMT is already provisioned, AMT cannot be disabled (Unprovisioning AMT is required first to disable AMT)
Enabled = Intel Active Management Technology is enabled. MEBx will be available via F12 menu and customer can provision AMT. MEBx is not accessible if ORCM Keyboard Access is disabled.
Restrict MEBx Access = Intel Active Management Technology is enabled. MEBx will not be available in pre-boot and customer can provision AMT from OS.
Restore Settings
Apply
Exit

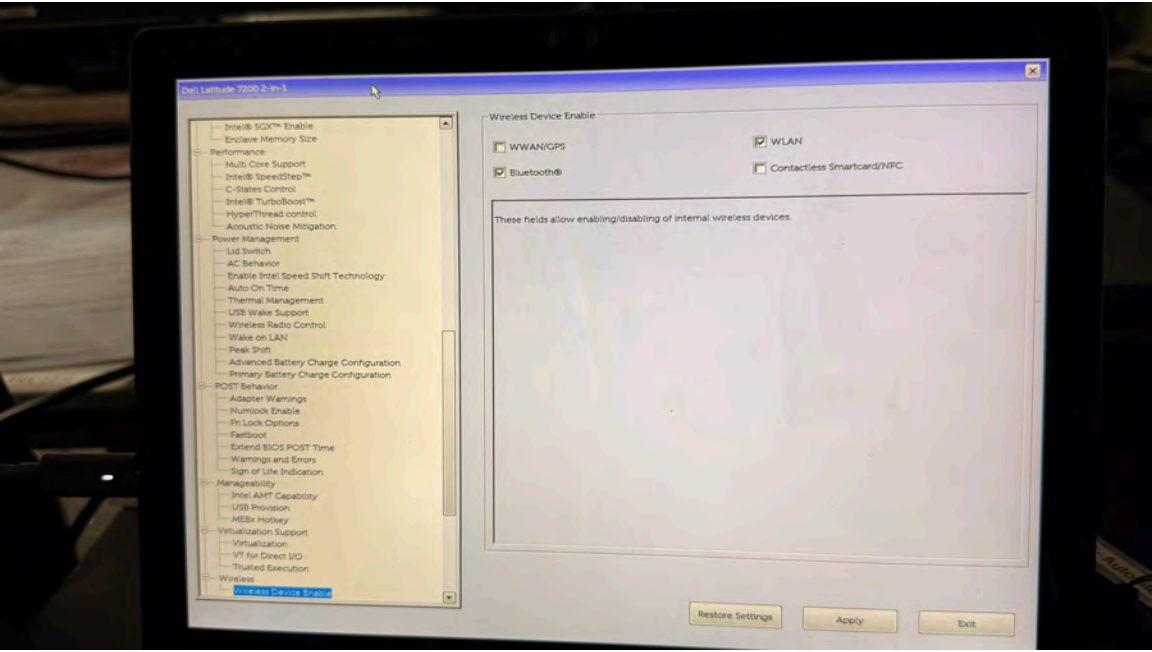

Dell Latitude 7200 2-in-1
Master Password Lockout
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
USB Provision
USB Provision
Enable USB Provision
When enabled, Intel AMT can be provisioned using the local provisioning file via a USB storage device.
When disabled, provisioning Intel AMT from a USB storage device is blocked.
Restore Settings
Apply
Exit

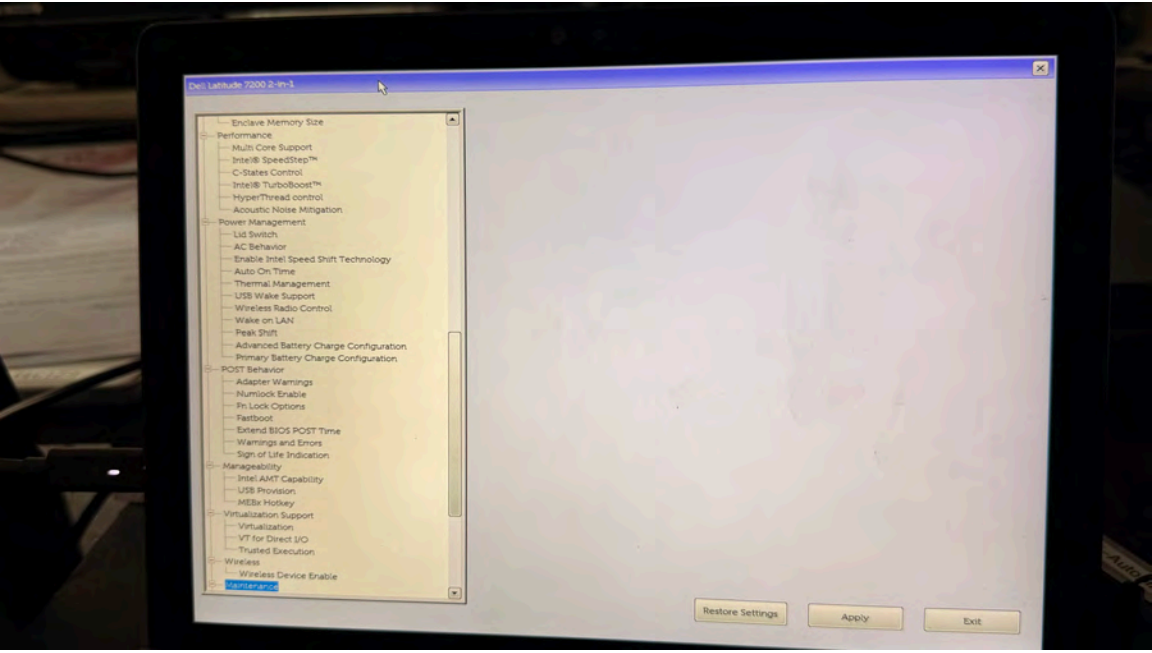

Dell Latitude 7200 2-in-1
SMM Security Mitigation
Secure Boot
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
USB Provision
MEBx Hotkey
MEBx Hotkey
Enable MEBx Hotkey
This option specifies whether the MEBx Hotkey function should be enabled when the system boots.
Restore Settings
Apply
Exit

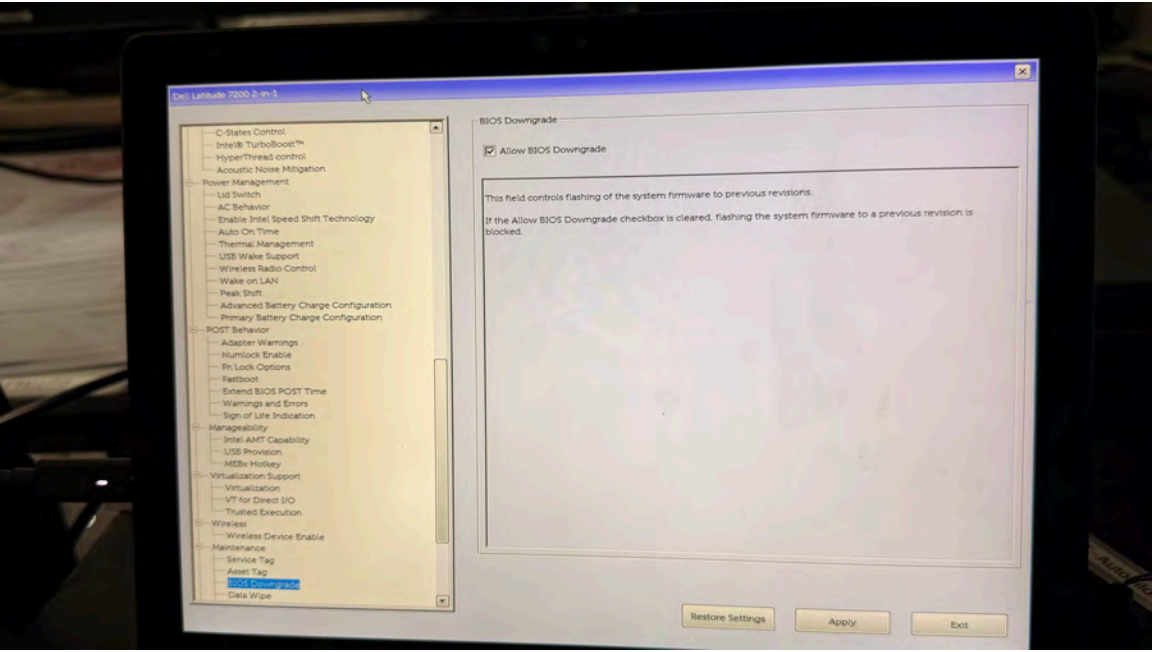

Dell Latitude 7200 2-in-1
Secure Boot Enable
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
USB Provision
MEBx Hotkey
Virtualization Support
Virtualization
Virtualization
Enable Intel Virtualization Technology
This field specifies whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Intel® Virtualization Technology.
[NOTE: Trusted Execution requires Virtualization Technology to be enabled.]
Restore Settings
Apply
Exit

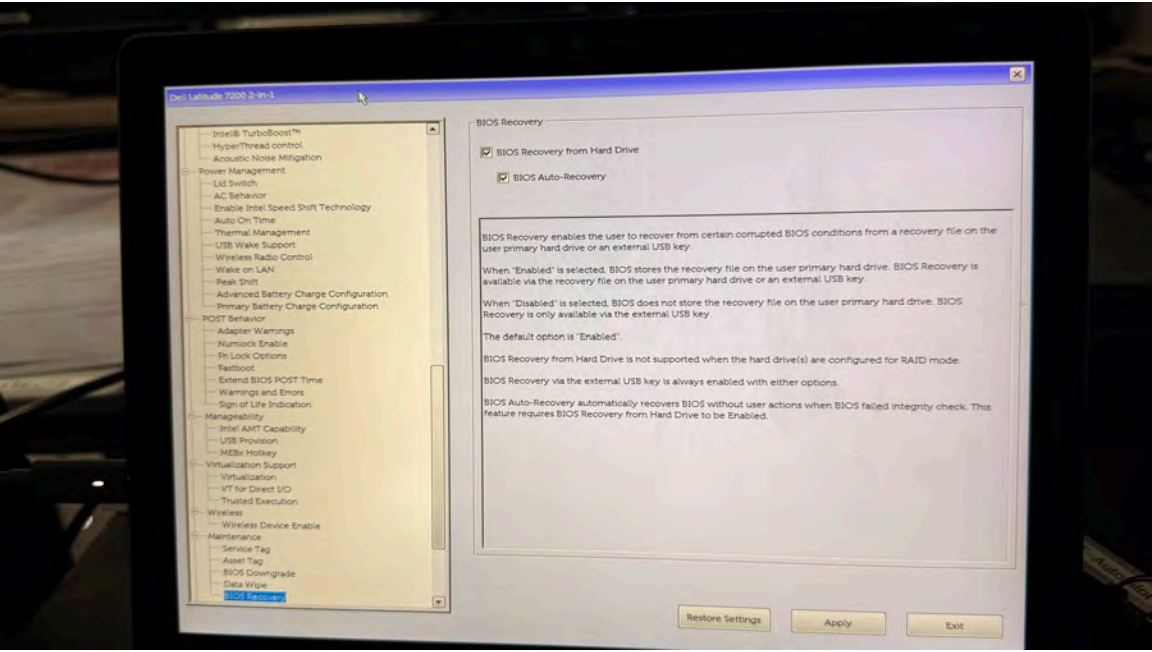

Dell Latitude 7200 2-in-1
Secure Boot Mode
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
USB Provision
MEBx Hotkey
Virtualization Support
Virtualization
VT for Direct I/O
VT for Direct I/O
Enable VT for Direct I/O
This option specifies whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Intel® Virtualization Technology for Direct I/O.
[NOTE: Trusted Execution requires VT for Direct I/O to be enabled.]
Restore Settings
Apply
Exit

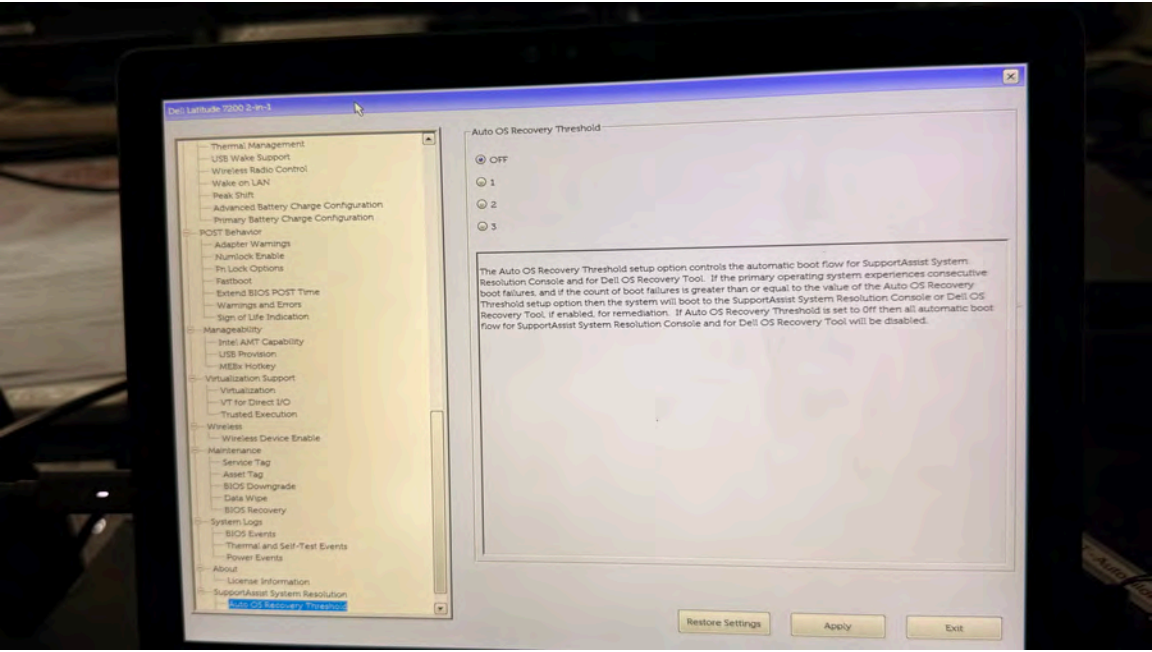

Dell Latitude 7200 2-in-1
Expert Key Management
Intel® Software Guard Extensions™
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
USB Provision
MEBx Hotkey
Virtualization Support
Virtualization
VT for Direct I/O
Trusted Execution
Trusted Execution
Trusted Execution
This option specifies whether a Measured Virtual Machine Monitor (MVMM) can utilize the additional hardware capabilities provided by Intel® Trusted Execution Technology. The TPM has to be enabled and activated, and Virtualization Technology and VT for Direct I/O must be enabled to use this feature.
Restore Settings
Apply
Exit

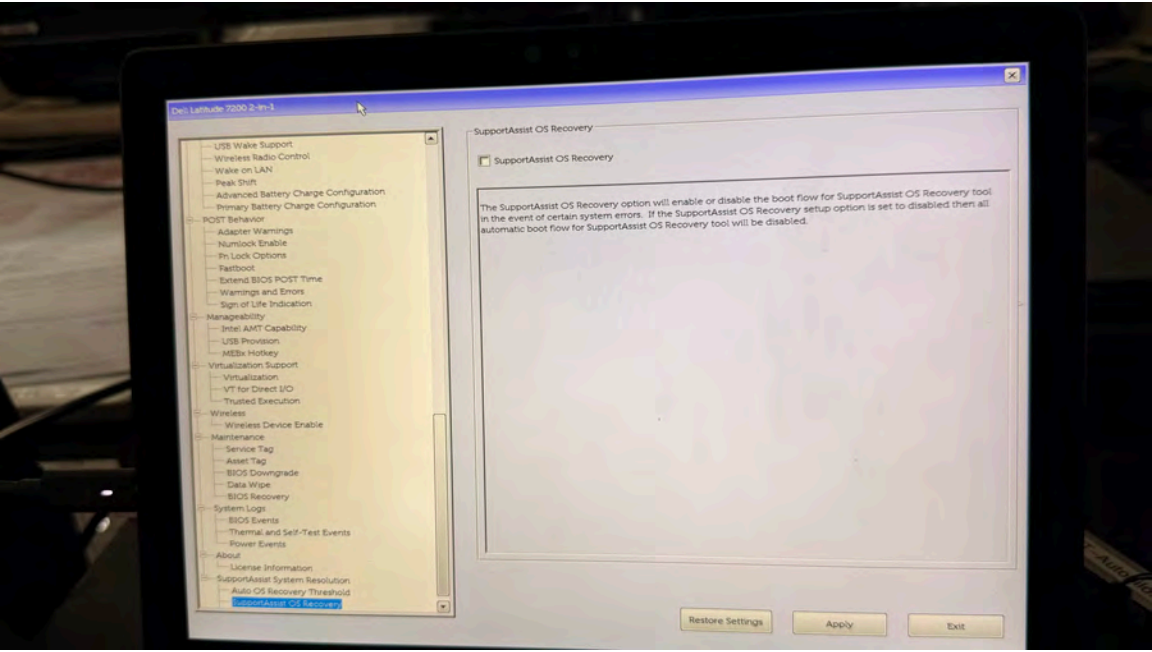

Dell Latitude 7200 2-in-1
Intel® SGX™ Enable
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
USB Provision
MEBx Hotkey
Virtualization Support
Virtualization
VT for Direct I/O
Trusted Execution
Wireless
Wireless Device Enable
Wireless Device Enable
WWAN/GPS
WLAN
Bluetooth®
Contactless Smartcard/NFC
These fields allow enabling/disabling of internal wireless devices.
Restore Settings
Apply
Exit

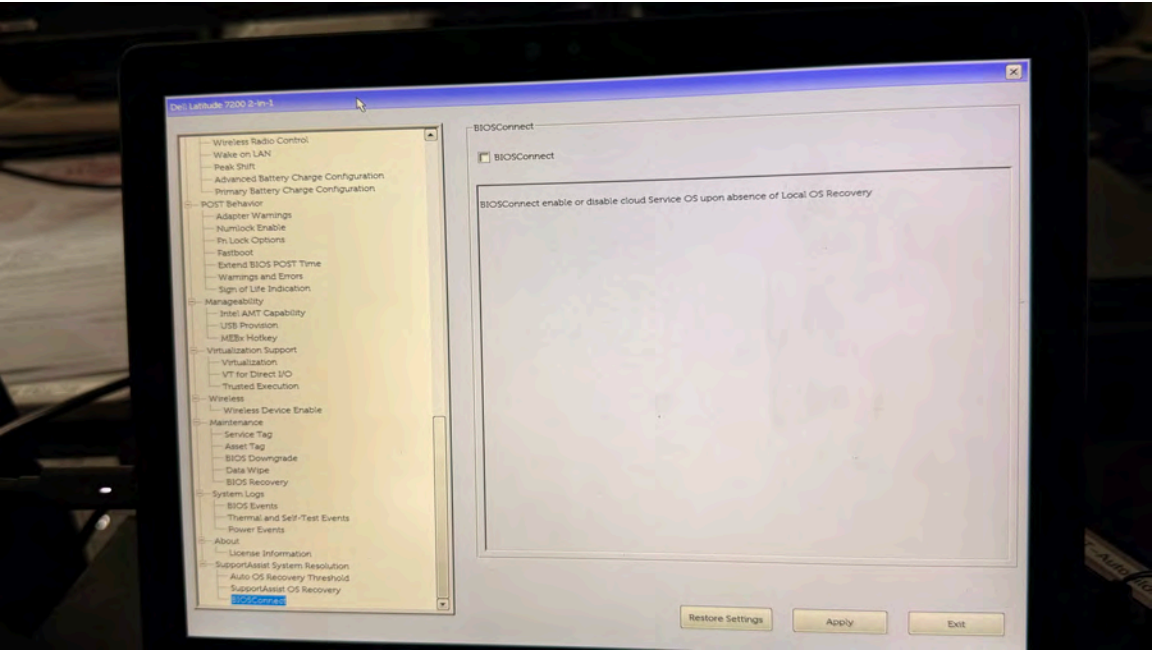

Dell Latitude 7200 2-in-1
Enclave Memory Size
Performance
Multi Core Support
Intel® SpeedStep™
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
USB Provision
MEBx Hotkey
Virtualization Support
Virtualization
VT for Direct I/O
Trusted Execution
Wireless
Wireless Device Enable
Maintenance
Restore Settings
Apply
Exit


Dell Latitude 7200 2-in-1
C-States Control
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
USB Provision
MEBx Hotkey
Virtualization Support
Virtualization
VT for Direct I/O
Trusted Execution
Wireless
Wireless Device Enable
Maintenance
Service Tag
Asset Tag
BIOS Downgrade
Data Wipe
BIOS Downgrade
Allow BIOS Downgrade
This field controls flashing of the system firmware to previous revisions.
If the Allow BIOS Downgrade checkbox is cleared, flashing the system firmware to a previous revision is blocked.
Restore Settings
Apply
Exit


Dell Latitude 7200 2-in-1
Intel® TurboBoost™
HyperThread control
Acoustic Noise Mitigation
Power Management
Lid Switch
AC Behavior
Enable Intel Speed Shift Technology
Auto On Time
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
USB Provision
MEBx Hotkey
Virtualization Support
Virtualization
VT for Direct I/O
Trusted Execution
Wireless
Wireless Device Enable
Maintenance
Service Tag
Asset Tag
BIOS Downgrade
Data Wipe
BIOS Recovery
BIOS Recovery
BIOS Recovery from Hard Drive
BIOS Auto-Recovery
BIOS Recovery enables the user to recover from certain corrupted BIOS conditions from a recovery file on the user primary hard drive or an external USB key.
When "Enabled" is selected, BIOS stores the recovery file on the user primary hard drive. BIOS Recovery is available via the recovery file on the user primary hard drive or an external USB key.
When "Disabled" is selected, BIOS does not store the recovery file on the user primary hard drive. BIOS Recovery is only available via the external USB key.
The default option is "Enabled".
BIOS Recovery from Hard Drive is not supported when the hard drive(s) are configured for RAID mode.
BIOS Recovery via the external USB key is always enabled with either options.
BIOS Auto-Recovery automatically recovers BIOS without user actions when BIOS failed integrity check. This feature requires BIOS Recovery from Hard Drive to be Enabled.
Restore Settings
Apply
Exit


Dell Latitude 7200 2-in-1
Thermal Management
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
USB Provision
MEBx Hotkey
Virtualization Support
Virtualization
VT for Direct I/O
Trusted Execution
Wireless
Wireless Device Enable
Maintenance
Service Tag
Asset Tag
BIOS Downgrade
Data Wipe
BIOS Recovery
System Logs
BIOS Events
Thermal and Self-Test Events
Power Events
About
License Information
SupportAssist System Resolution
Auto OS Recovery Threshold
Auto OS Recovery Threshold
OFF
1
2
3
The Auto OS Recovery Threshold setup option controls the automatic boot flow for SupportAssist System Resolution Console and for Dell OS Recovery Tool. If the primary operating system experiences consecutive boot failures, and if the count of boot failures is greater than or equal to the value of the Auto OS Recovery Threshold setup option then the system will boot to the SupportAssist System Resolution Console or Dell OS Recovery Tool, if enabled, for remediation. If Auto OS Recovery Threshold is set to Off then all automatic boot flow for SupportAssist System Resolution Console and for Dell OS Recovery Tool will be disabled.
Restore Settings
Apply
Exit


Dell: Latitude 7200 2-in-1
USB Wake Support
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
USB Provision
MEBx Hotkey
Virtualization Support
Virtualization
VT for Direct I/O
Trusted Execution
Wireless
Wireless Device Enable
Maintenance
Service Tag
Asset Tag
BIOS Downgrade
Data Wipe
BIOS Recovery
System Logs
BIOS Events
Thermal and Self-Test Events
Power Events
About
License Information
SupportAssist System Resolution
Auto OS Recovery Threshold
SupportAssist OS Recovery
SupportAssist OS Recovery
SupportAssist OS Recovery
The SupportAssist OS Recovery option will enable or disable the boot flow for SupportAssist OS Recovery tool in the event of certain system errors. If the SupportAssist OS Recovery setup option is set to disabled then all automatic boot flow for SupportAssist OS Recovery tool will be disabled.
Restore Settings
Apply
Exit


Dell Latitude 7200 2-in-1
Wireless Radio Control
Wake on LAN
Peak Shift
Advanced Battery Charge Configuration
Primary Battery Charge Configuration
POST Behavior
Adapter Warnings
Numlock Enable
Fn Lock Options
Fastboot
Extend BIOS POST Time
Warnings and Errors
Sign of Life Indication
Manageability
Intel AMT Capability
USB Provision
MEBx Hotkey
Virtualization Support
Virtualization
VT for Direct I/O
Trusted Execution
Wireless
Wireless Device Enable
Maintenance
Service Tag
Asset Tag
BIOS Downgrade
Data Wipe
BIOS Recovery
System Logs
BIOS Events
Thermal and Self-Test Events
Power Events
About
License Information
SupportAssist System Resolution
Auto OS Recovery Threshold
SupportAssist OS Recovery
BIOSConnect
BIOSConnect
BIOSConnect
BIOSConnect enable or disable cloud Service OS upon absence of Local OS Recovery
Restore Settings
Apply
Exit