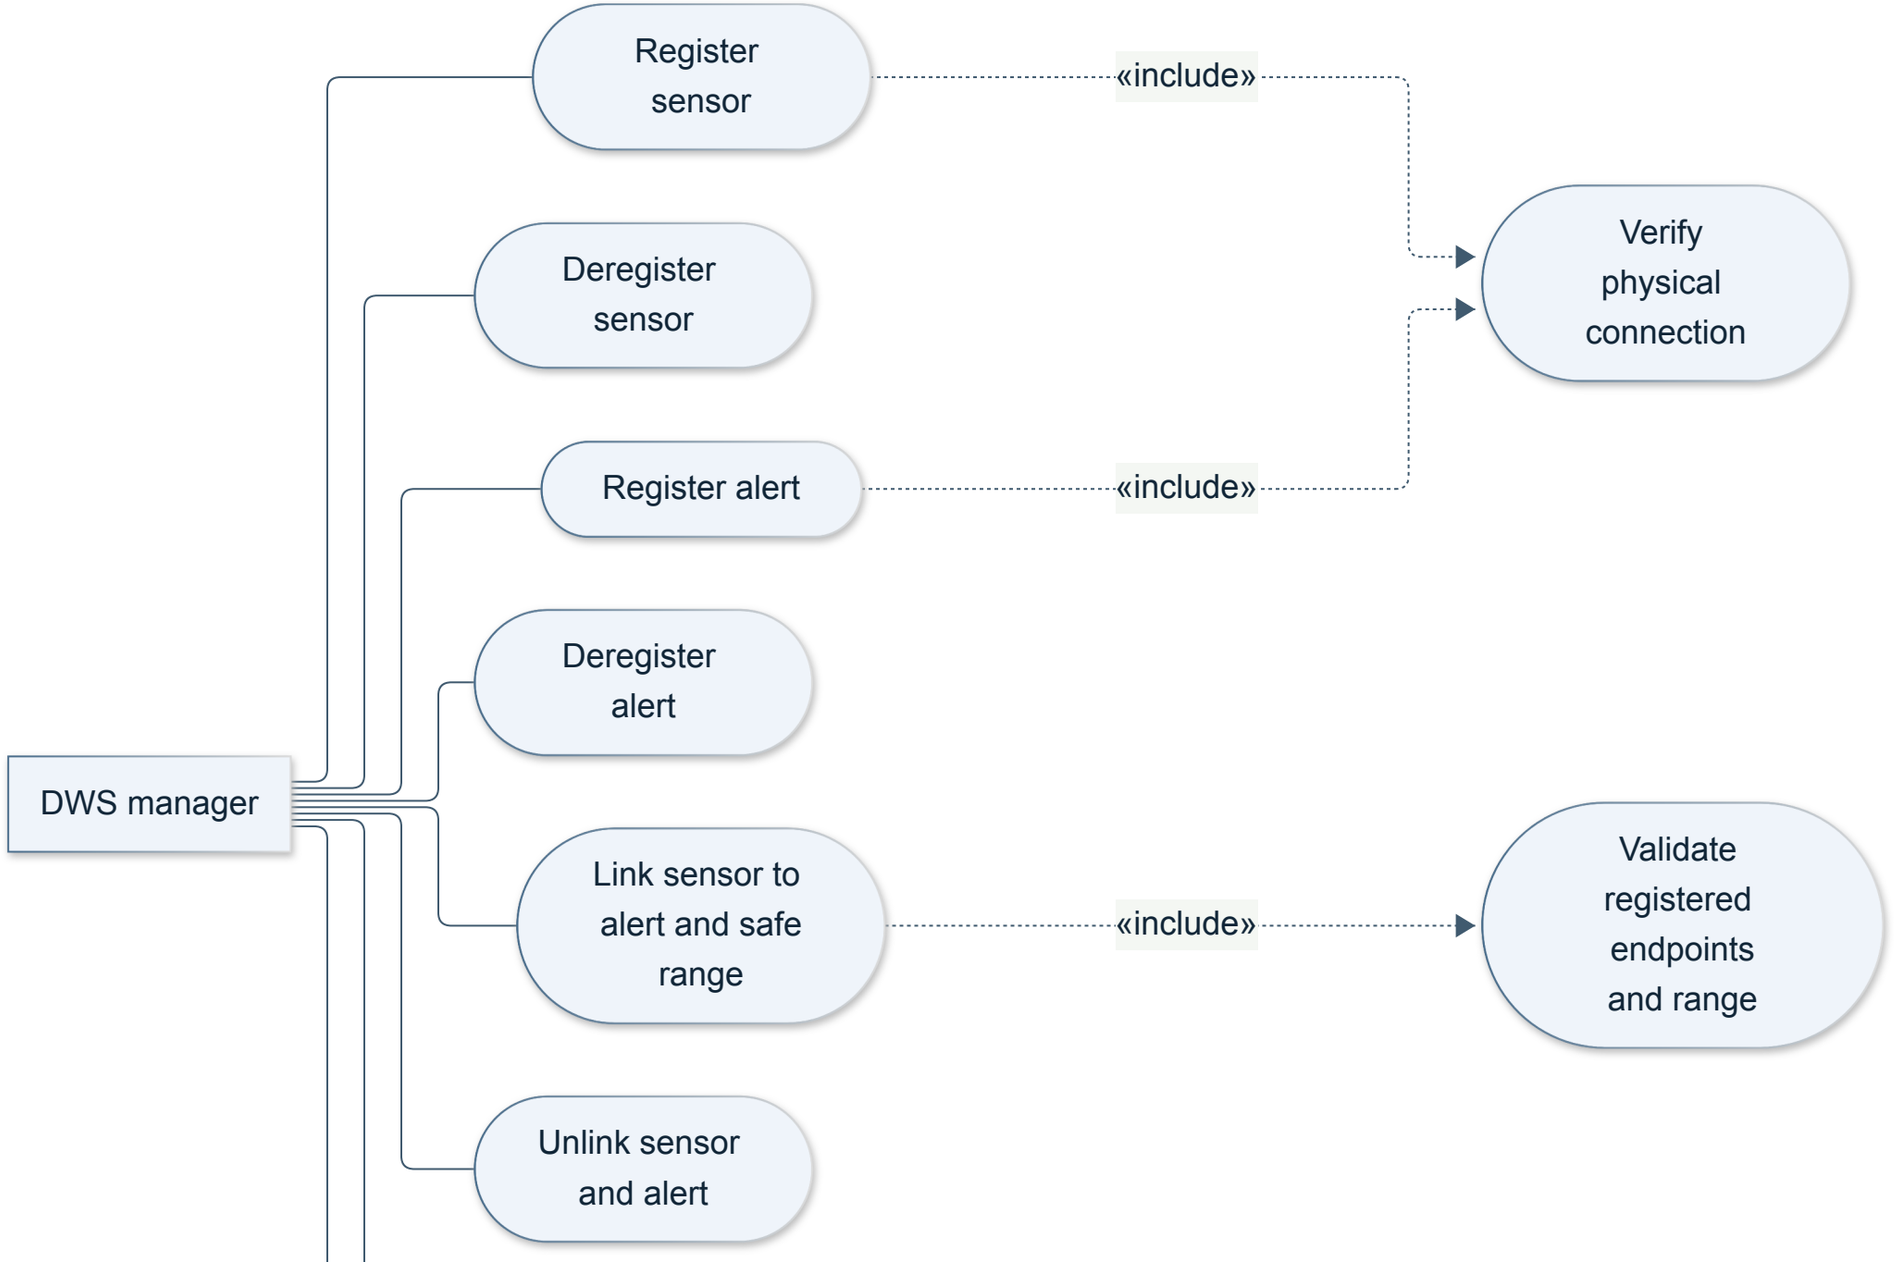

Register sensor
«include»
Verify physical connection
Deregister sensor
Register alert
«include»
Deregister alert
DWS manager
Link sensor to alert and safe range
«include»
Validate registered endpoints and range
Unlink sensor and alert