

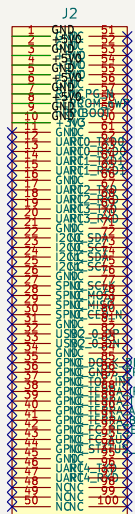


CM4 MODULE CONNECTORS

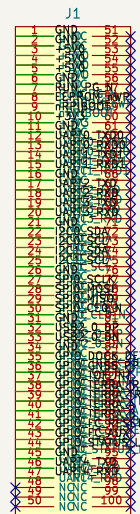


POWER: BATTERY INPUTS, ORING, REGULATION, CHARGING, TELEMETRY

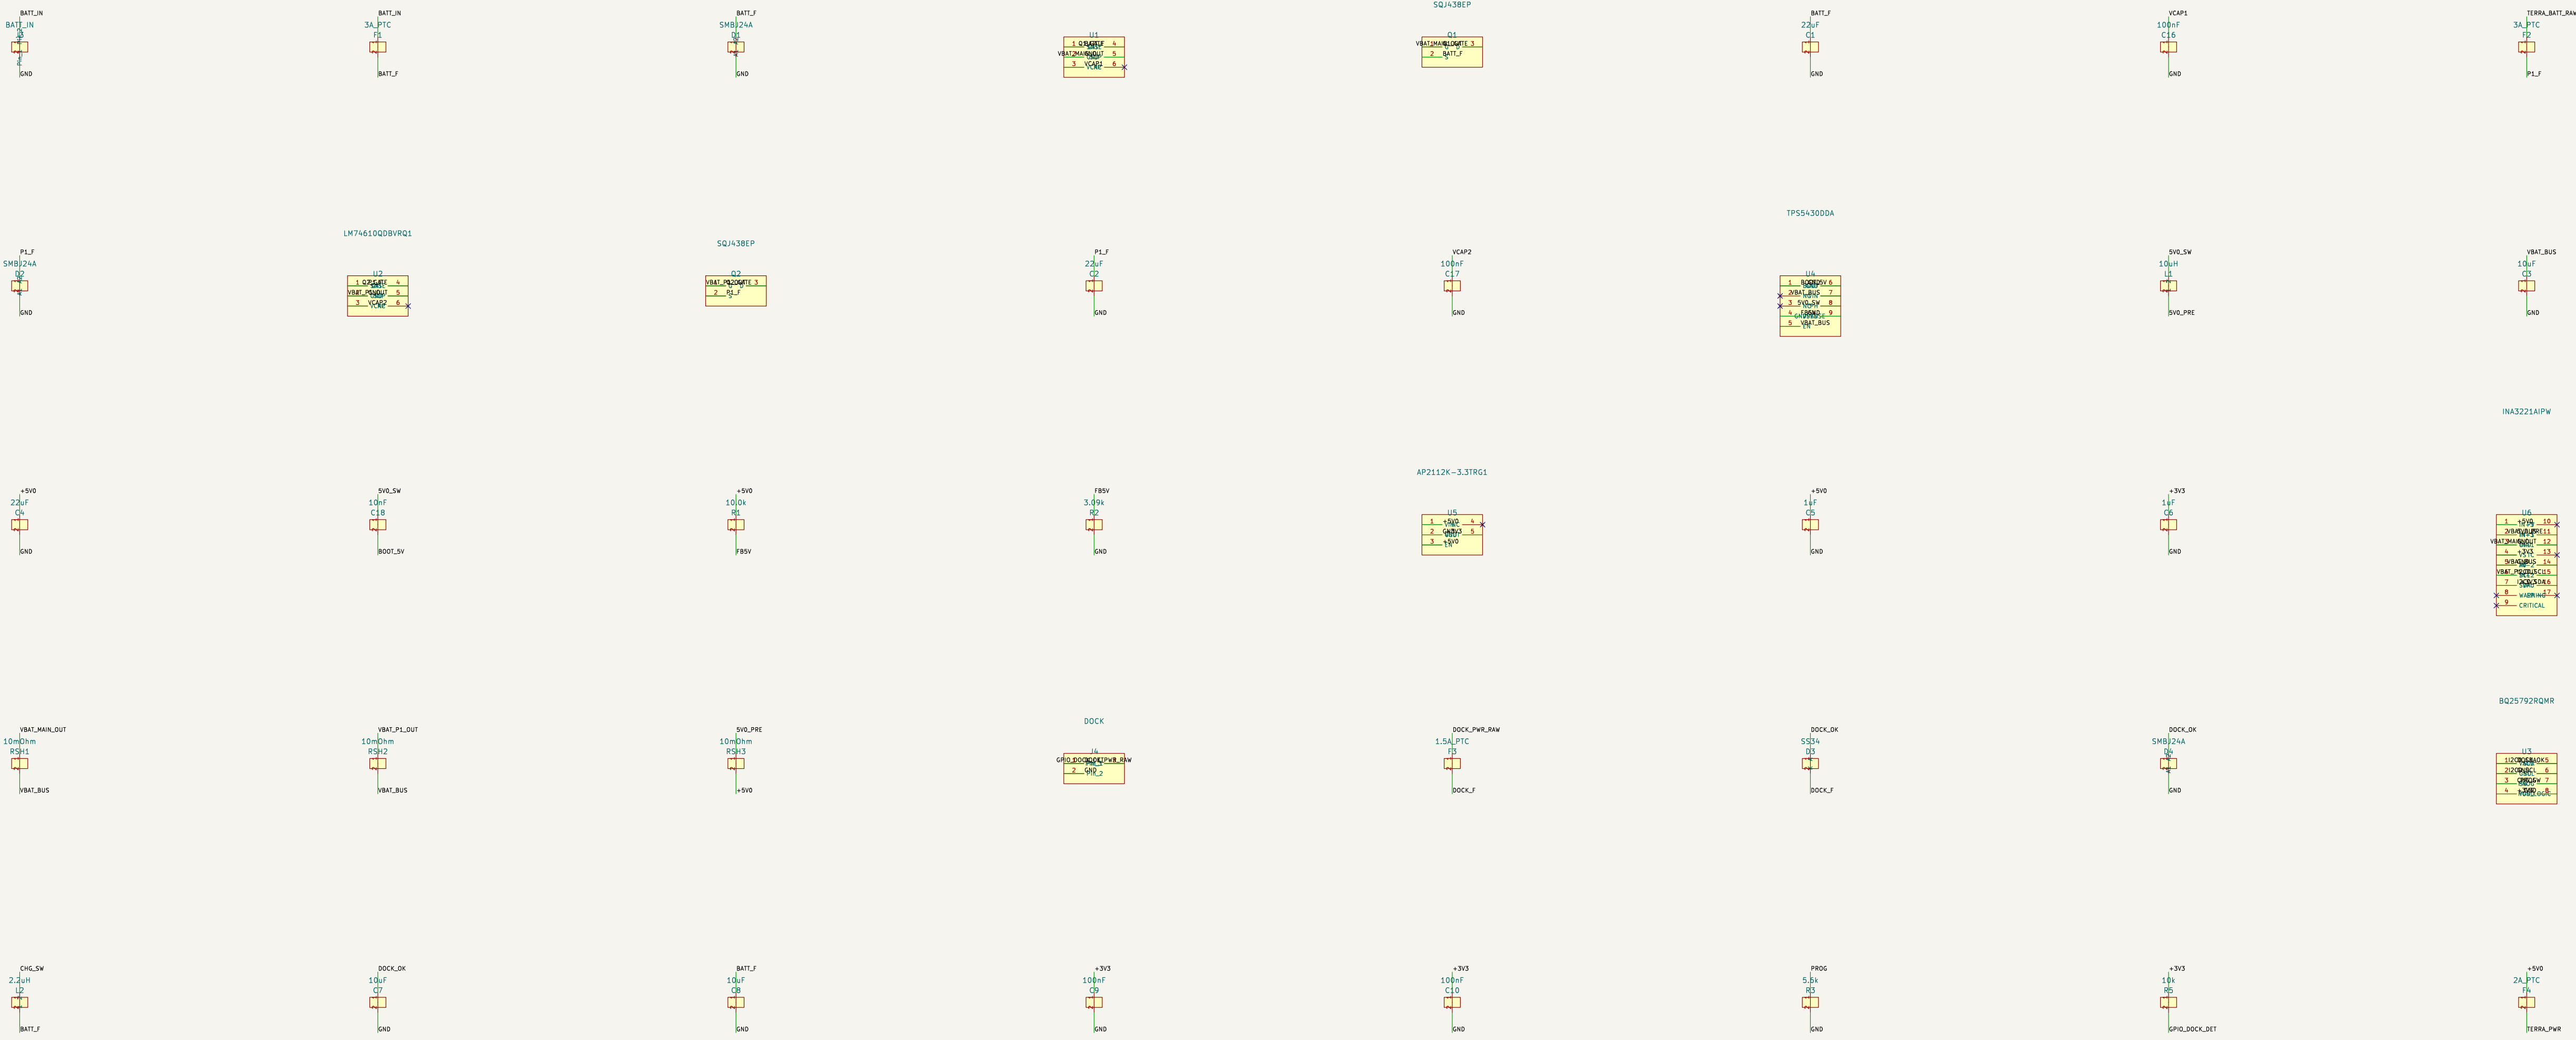


CM4 SUPPORT: BOOT/RESET STRAPS, DECOUPLING, DEBUG HEADER

PERIPHERALS: FC / GNSS / ELRS / TOF / TERRA

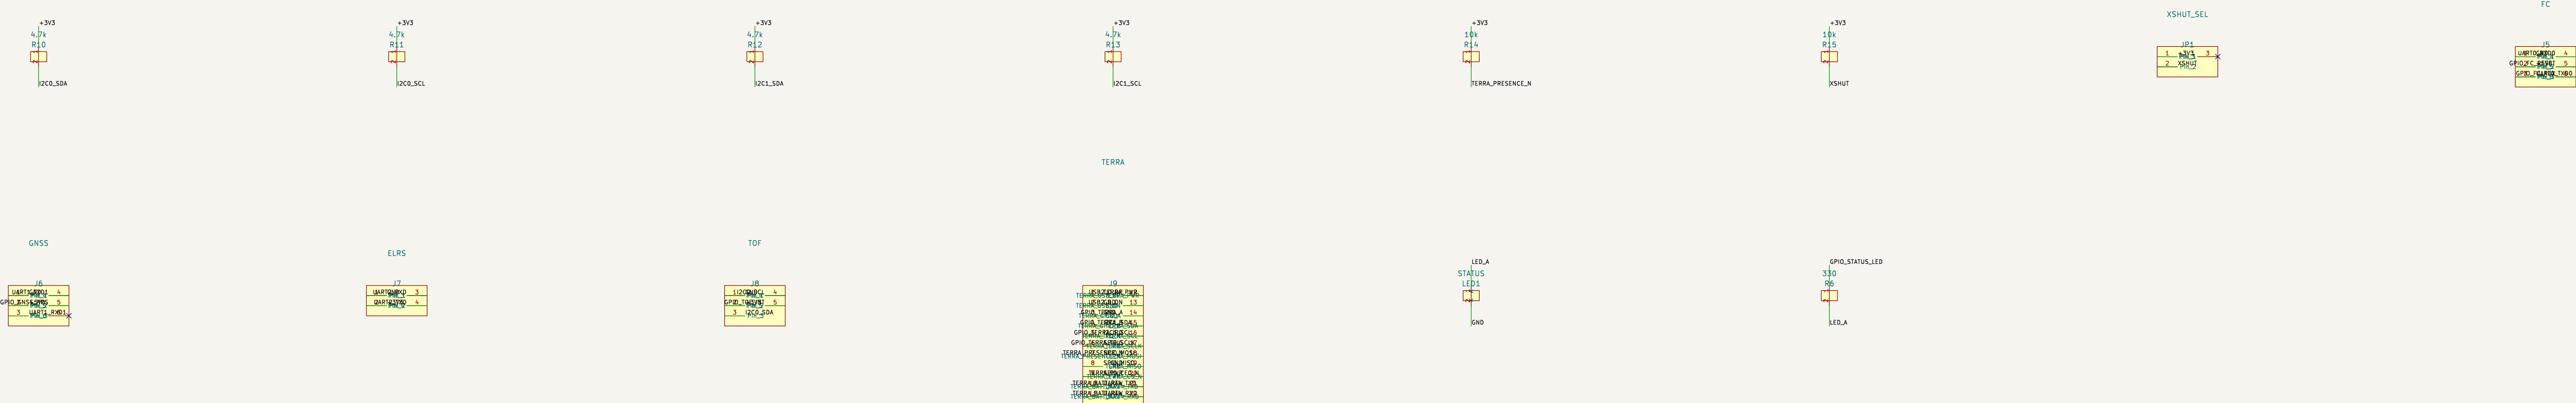

TEST POINTS



MECHANICAL

