


# QSG139: Getting Started with *Bluetooth*® Software Development



This document describes how to get started with Bluetooth development using the Bluetooth SDK and Simplicity Studio with a compatible wireless starter kit (WSTK). If you have purchased a Blue Gecko Bluetooth Wireless Starter Kit (SLWSTK6101) you can first experiment with its built-in software and an Android or iOS smartphone app before downloading the Simplicity Studio development environment and Bluetooth SDK.

## KEY POINTS

- Introducing the Bluetooth development environment.
- Using the Blue Gecko Wireless Starter Kit built-in application and Android or iOS smartphone app to demonstrate Bluetooth features.
- Installing the Bluetooth SDK in Simplicity Studio.
- Starting application development for Bluetooth devices with Simplicity Studio.

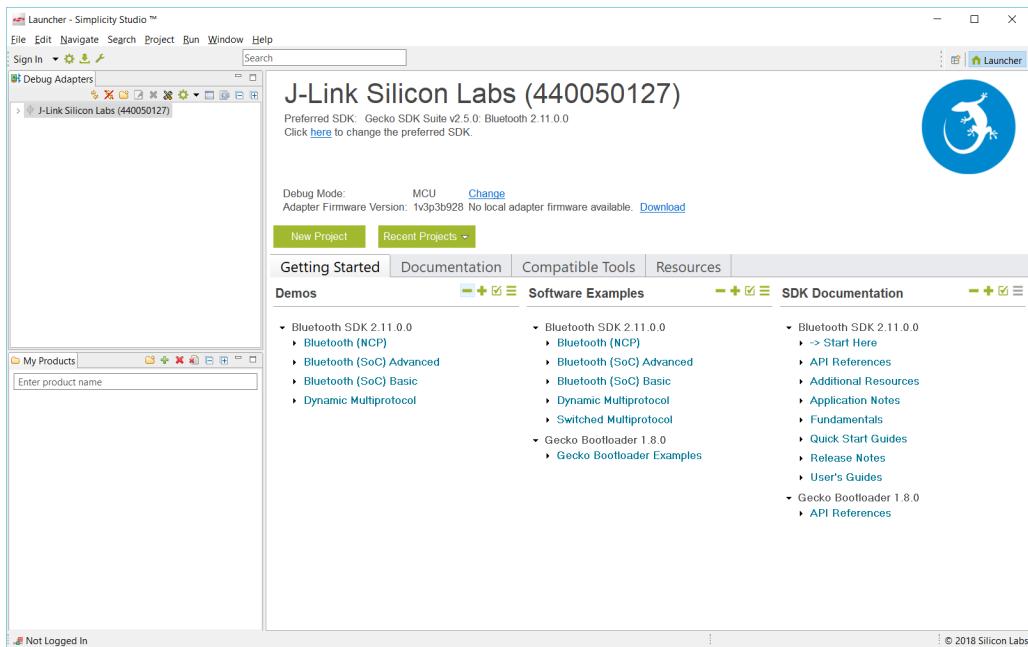

## 1 Introduction

This document describes how to get started with Bluetooth development using Silicon Labs products. It introduces the features of the Silicon Labs Bluetooth stack and the resources available to help with development. Application development is started using the Silicon Labs development environment Simplicity Studio and the Bluetooth Software Development Kit (SDK). The SDK comes with a number of example application that you can then modify to create your own applications. If you are developing with a Blue Gecko device and have purchased a Blue Gecko Bluetooth Wireless Starter Kit (SLWSTK6101), before downloading Simplicity Studio and the Bluetooth SDK you can use the pre-programmed firmware and an Android or iOS smartphone app to demonstrate Bluetooth software features.

This document describes the following:

- Bluetooth Stack features and components (see [About the Bluetooth Stack](#))
- [Getting Started with SLWSTK6101 Embedded Software](#) (if applicable)
- [Getting Started with Simplicity Studio and the Bluetooth SDK](#)
- A description of the precompiled demos and example code available in the SDK (see [About Demos and Examples](#))
- [Starting Application Development](#) in Simplicity Studio
- A description of other [Development Tools](#) that are useful in the development process

### 1.1 Prerequisites

If you are working with a Blue Gecko Wireless Starter Kit, see Chapter 3 [Getting Started with SLWSTK6101 Embedded Software](#) for details on using the embedded application.

As well as Simplicity Studio v4, you should have the following before beginning application development:

- A basic understanding of Bluetooth technology and terminology. *UG104.13: Application Development Fundamentals: Bluetooth Technology* provides a good starting point if you have not yet learned about Bluetooth.
- A compatible compiler:
  - Simplicity Studio comes with a free GCC C-compiler.
  - IAR Embedded Workbench for ARM (IAR-EWARM) can also be used as the compiler for all Silicon Labs protocols. See the Bluetooth SDK's release notes for the compatible IAR-EWARM version.
- A registered account at Silicon Labs is required in order to download the Silicon Labs Bluetooth SDK.
  - You can register at [https://siliconlabs.force.com/apex/SL\\_CommunitiesSelfReg?form=short](https://siliconlabs.force.com/apex/SL_CommunitiesSelfReg?form=short).

To get a 30-day evaluation license for IAR:


- Go to the Silicon Labs support portal at <https://www.silabs.com/support>.
- Scroll down to the bottom of the page, and click **Contact Support**
- If you are not already signed in, sign in.
- Click the Software Releases tab. In the View list select **Development Tools**. Click **Go**. In the results is a link to the IAR-EWARM version named in the release notes.
- Download the IAR package (takes approximately 1 hour).
- Install IAR.
- In the IAR License Wizard, click **Register with IAR Systems to get an evaluation license**.
- Complete the registration and IAR will provide a 30-day evaluation license.
- Once IAR-EWARM is installed, the next time Simplicity Studio starts it will automatically detect and configure the IDE to use IAR-EWARM.

### 1.2 Support


You can access the Silicon Labs support portal at <https://www.silabs.com/support> through Simplicity Studio's Resources tab, as described in section [4.7 Accessing Documentation and Other Resources](#). Use the support portal to contact Customer Support for any questions you might have during the development process.

### 1.3 Documentation

Documentation for the Bluetooth SDK is summarized in the following figure.

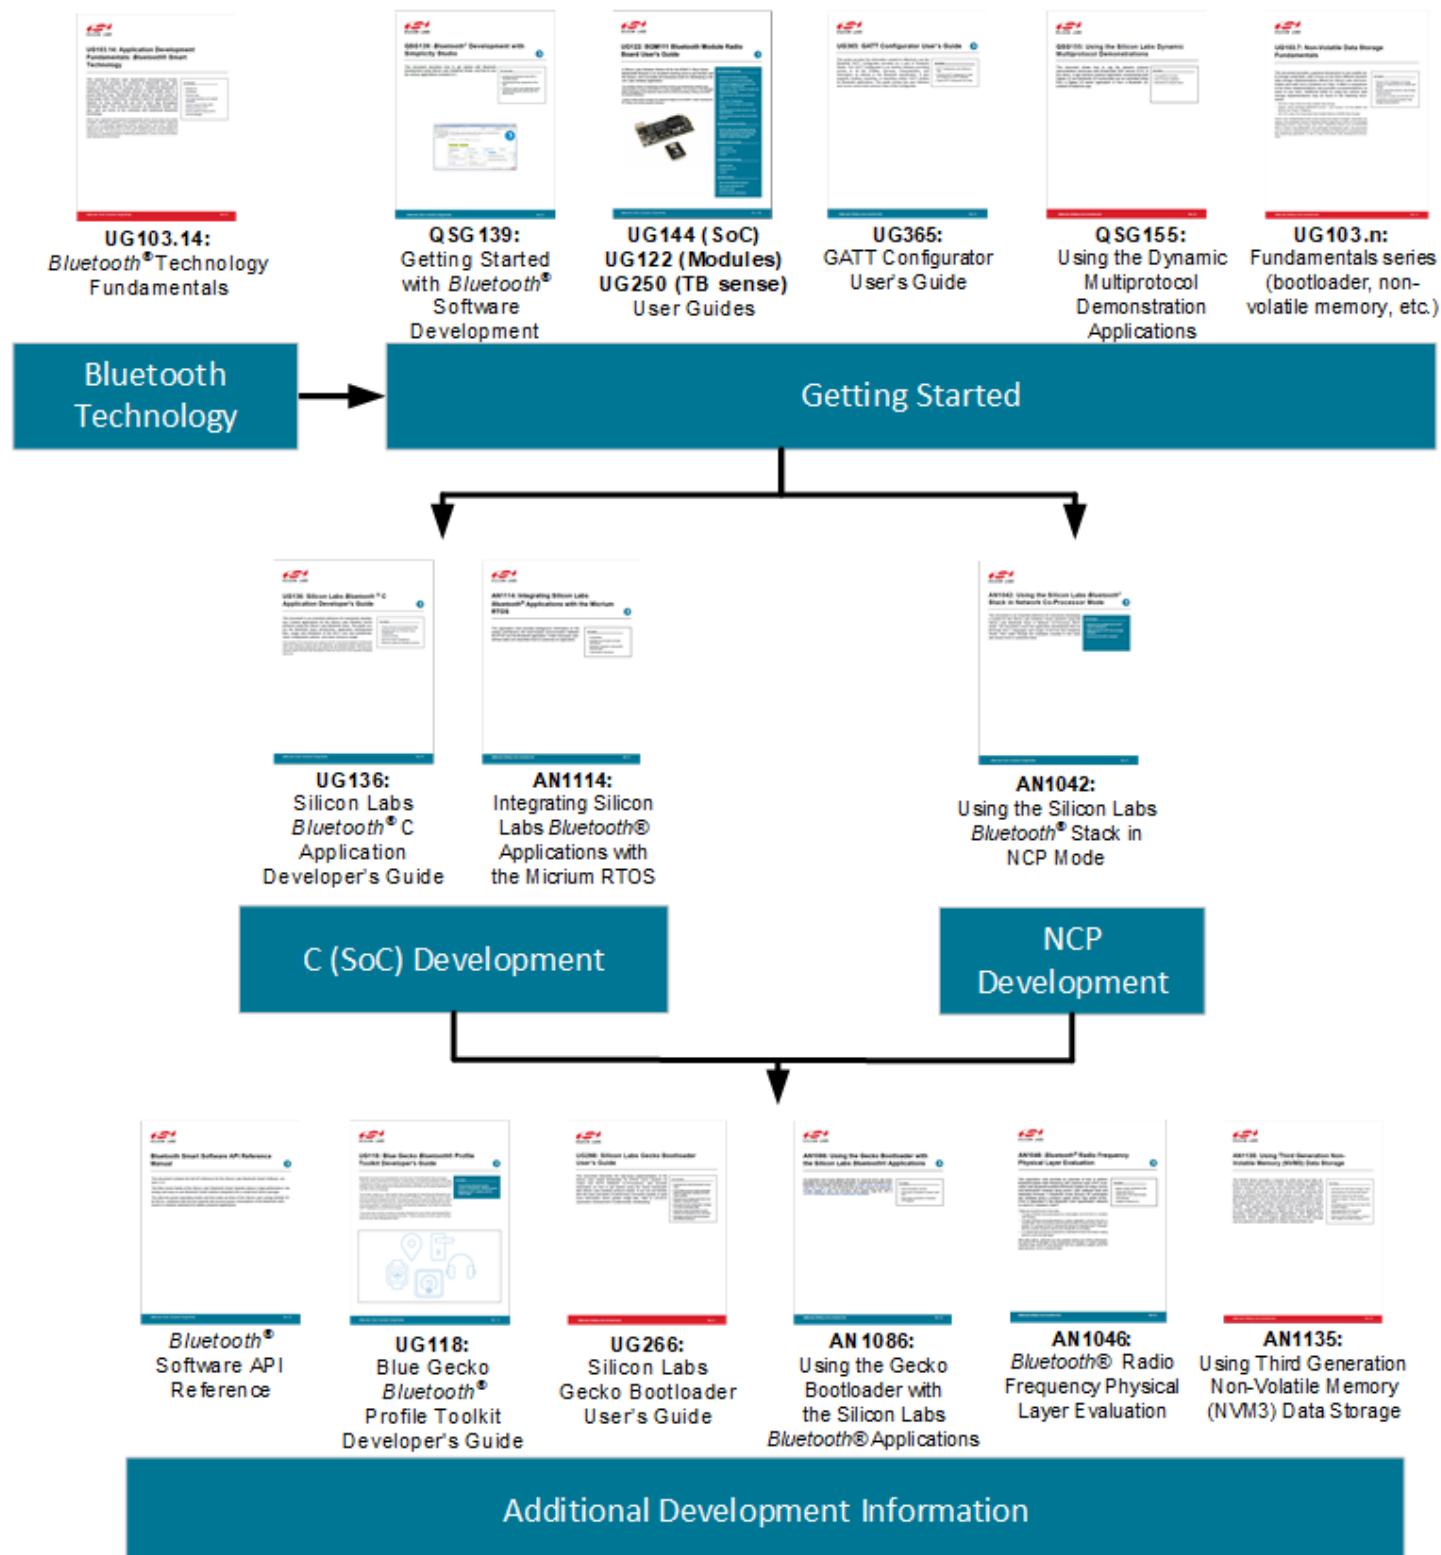

SDK documentation is accessed through Simplicity Studio, as described in section [4.7 Accessing Documentation and Other Resources](#). Other resources available include [Knowledge Base Articles \(KBAs\)](#) and Hardware documentation. All may be accessed through links in Simplicity Studio.

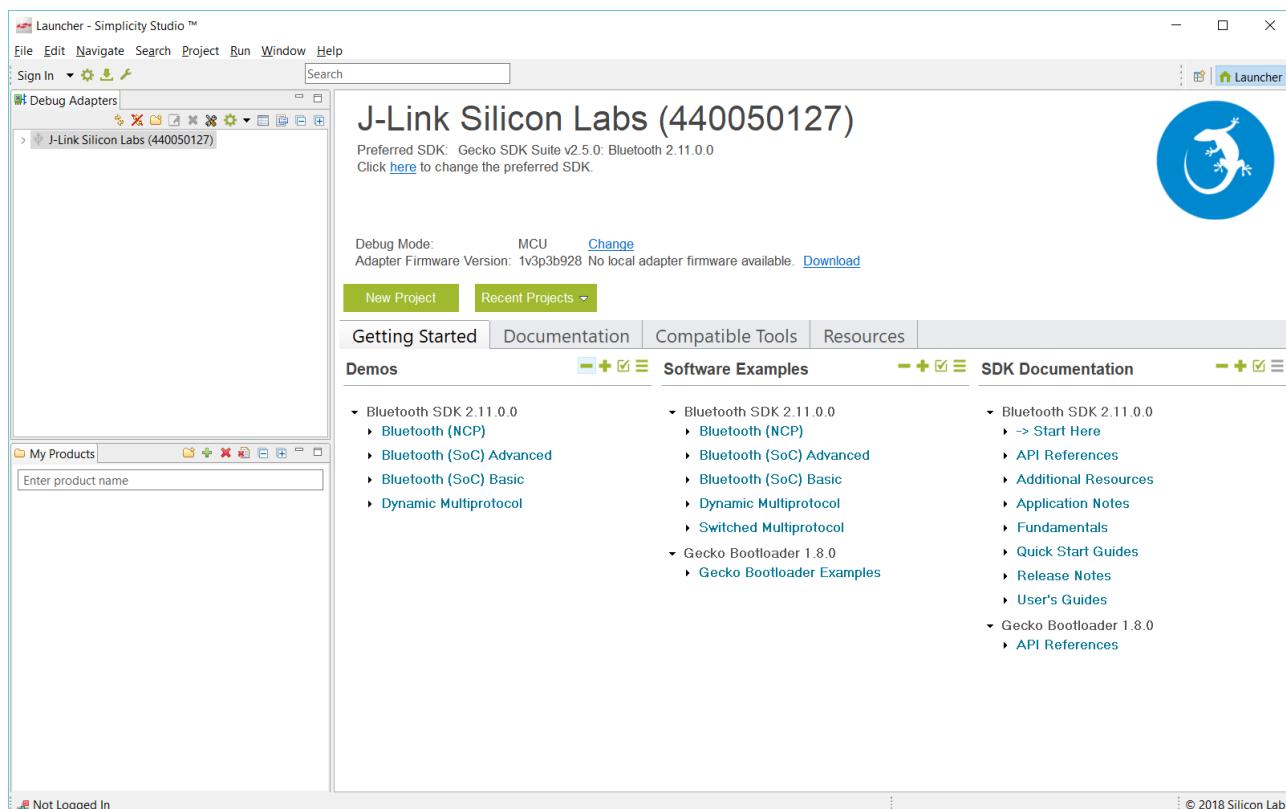

Training materials are available on the Silicon Labs website at <https://www.silabs.com/support/training/bluetooth>.

The screenshot shows the Silicon Labs website with the following details:

- Header:** [JOTPA\_BT-534] Update AN1086, Bluetooth | Silicon Labs, Log In | Register, Simplified Chinese, Japanese.
- Navigation:** About, Products, Solutions, Community & Support, Parametric Search, Cross-Reference Search, Search silabs.com.
- Breadcrumbs:** Silicon Labs » Support » Training » Bluetooth.
- Main Content:**
  - Bluetooth Training:** You want to get up and running with your Bluetooth applications as quickly as possible, and we're here to help. Check out this collection of resources we've put together to give you one-click access to the latest how-to information, tutorials, and training.
  - Getting Started with Bluetooth:**
    - 1. Bluetooth Technology Fundamentals
    - 2. Getting Started with Silicon Labs Bluetooth Software
    - 3. Bluetooth Development with Simplicity Studio
    - 4. Bluetooth Developer's Guide
    - 5. Intro to Bluetooth - Hands-On Lab
    - 6. Bluetooth 5 Training
    - 7. Bluetooth 5 - Hands-On Lab
  - Advertising:**
    - 1. Bluetooth Advertising Data Basics
    - 2. Bluetooth Advertising using Manufacturer Specific Data

#### 1.4 Gecko Platform


The Gecko Platform is a set of drivers and other lower layer features that interact directly with Silicon Labs chips and modules. Gecko Platform components include EMLIB, EMDRV, RAIL Library, NVM3, and mbedTLS. For more information about Gecko Platform, see release notes that can be found in Simplicity Studio's Launcher Perspective, under **SDK Documentation > Bluetooth SDK n.n.n.n > Release Notes**.

## 2 About the Bluetooth Stack


The Silicon Labs Bluetooth stack is an advanced Bluetooth 5-compliant protocol stack implementing the Bluetooth low energy standard. It supports multiple connections, concurrent central, peripheral, broadcaster, and observer roles. The Silicon Labs Bluetooth stack is meant for Silicon Labs Wireless Gecko SoCs and modules.

The Silicon Labs Bluetooth stack provides multiple APIs for the developer to access the Bluetooth functionality. Two modes are supported:

1. Standalone mode, where both the Bluetooth stack and the application run in a Wireless Geckos SoC or module. The application can be developed with C programming language.

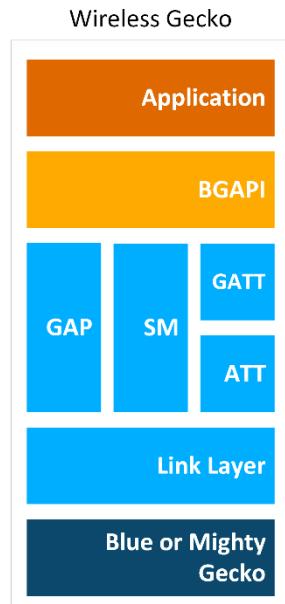

2. Network Co-Processor (NCP) mode, where the Bluetooth stack runs in a Wireless Gecko and the application runs on a separate host MCU. For this use case, the Bluetooth stack can be configured into NCP mode where the API is exposed over a serial interface such as UART.

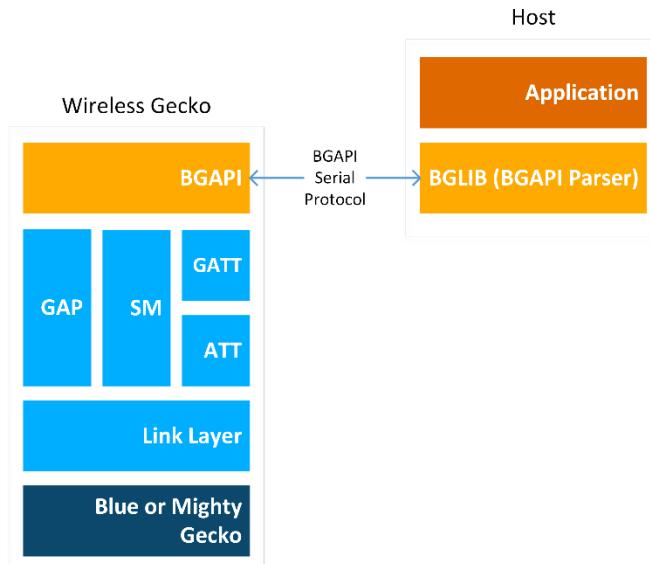

## 2.1 Bluetooth Stack Features

The features of the Silicon Labs Bluetooth stack are listed in the following table.

Feature	Value and comments
Bluetooth version	Bluetooth 5.1
Bluetooth features	Bluetooth 5.1 GATT caching Bluetooth 5 2M PHY (EFR32[B M]G12, EFR32[B M]G13 and EFR32[B M]G21) Bluetooth 5 LE Long Range (EFR32[B M]G13 and EFR32[B M]G21) Bluetooth 5 advertisement sets and scan event reporting Bluetooth 5 extended advertisements (EFR32[B M]G12, EFR32[B M]G13 and EFR32[B M]G21) <ul style="list-style-type: none"> <li>• Anonymous advertisement</li> <li>• Periodic advertisement</li> <li>• Extended advertisement packet size: up to 1650 B</li> </ul> Concurrent central, peripheral, broadcaster and observer modes LE secure connections LE Privacy 1.2 (peripheral) LE packet length extensions LE dual topology Whitelisting (central side only)
Simultaneous connections	Up to 8 simultaneous connections regardless of role (master or slave)
Maximum throughput	1300 kbps over 2M PHY 700 kbps over 1M PHY
Encryption	AES-128
Pairing modes	Just works Man-in-the-Middle with numeric comparison and passkey Out-Of-Band
Number of simultaneous bondings	EFR32[B M]G1, EFR32[B M]G12 and EFR32[B M]G13: Up to 14 (Limited by Persistent Store size) EFR32[B M]G21: Up to 32
Link Layer packet size	Up to 251 B
ATT protocol packet size	Up to 250 B
Supported Bluetooth profiles and services	All GATT based profiles and services are supported
Apple HomeKit	Apple HomeKit R13 compliant implementation (EFR32[B M]12 and EFR32[B M]13) Implements all Apple HomeKit profiles and services Available separately for Apple MFi licensees
Host (NCP) interfaces	4-wire UART with RTS/CTS control or 2-wire UART without RTS/CTS GPIOs for sleep and wake-up management
Wi-Fi Coexistence	Using Packet Trace Arbitration (PTA)
Bootloaders	Secure Gecko Bootloader supporting authenticated and encrypted updates over OTA or UART and Secure Boot. The Gecko Bootloader also supports flash partitioning and both internal and external (SPI) flash.
Non-volatile memory	EFR32[B M]G1, EFR32[B M]G12, EFR32[B M]G13: Persistent Store (PS) for standalone Bluetooth. EFR32[B M]G21: NVM3

## 2.2 Bluetooth Qualification

All products deploying Bluetooth technology must go through the Bluetooth SIG's Qualification Process. There are online resources to learn more about the [Bluetooth Qualification Process](#) as well as tutorials on the [Launch Studio](#), which is the online tool used to complete the Bluetooth Qualification Process. If you need assistance to qualify your device you can consider reaching out to your nearest [Bluetooth Qualification Consultant](#).

When qualifying your end-product based on Silicon Labs' Bluetooth stack you will integrate the pre-qualified components listed in the table below, depending on which SDK version was used to build your application.

Bluetooth SDK version	Component	QDID
v1.x	Link layer (Bluetooth 4.2)	<a href="#">81105</a>
	Host stack (Bluetooth 4.2)	<a href="#">82817</a>
v2.0 to v2.4.x	Host stack (Bluetooth 4.2)	<a href="#">91422</a>
v2.6.x to 2.10.x	Link layer (Bluetooth 5.0) [*]	<a href="#">99504</a>
	Host stack (Bluetooth 5.0) [*]	<a href="#">101550</a>
V2.11.x and above	Link Layer (Bluetooth 5.0 – including coded PHYs)	<a href="#">124272</a>
	Link Layer (Bluetooth 5.1)	<a href="#">127618</a>
	Host stack (Bluetooth 5.1)	<a href="#">126252</a>

[\*] Note: For end-product qualifications based on this component, because of the Erratum 10734 you must also check the items 21/17 and 34/13 in the "Summary ICS" and upload the test evidence and a declaration, which can be requested through the support portal.

The above software-based pre-qualified components are two out of the three components to integrate when proceeding with the "Qualification Process with Required Testing". Despite the "Required Testing", customers do not need to do any additional testing, given that the test reports are embedded in the pre-qualified components for the SIG to review.

In addition to these two software components you must also have integrated a qualified RF-PHY component in your end-product listing. If you are designing with one of Silicon Labs' Bluetooth modules then refer to the module datasheet for the appropriate component QDID to use. If you are designing with an SoC then you may need to obtain your own RF-PHY qualification with the Bluetooth SIG depending on your hardware design. In the latter case, please consult your nearest [Bluetooth Qualification Consultant](#), or Silicon Labs through the support portal, to understand if an existing Silicon Labs RF-PHY pre-qualification could be used.

## 2.3 The Bluetooth Stack APIs

This section briefly describes the different software APIs available for the developer.

### 2.3.1 The BGAPI Bluetooth API

The BGAPI is the Bluetooth API provided by the Silicon Labs Bluetooth stack. It provides access to all the Bluetooth functionality implemented by the Bluetooth stack, such as: the Generic Access Profile (GAP), connection manager, the security manager (SM), and GATT client and server.

In addition to the Bluetooth APIs, the BGAPI also provides access to a few other functions like the Direct Test Mode (DTM) API for RF testing purposes, the Persistent Store (PS) API for reading and writing keys to and from the devices flash memory, the DFU (Device Firmware Update) API for field firmware updates, and the System API for various system level functions.

### 2.3.2 CMSIS and emlib

The Cortex Microcontroller Software Interface Standard (CMSIS) is a common coding standard for all ARM Cortex devices. The CMSIS library provided by Silicon Labs contains header files, defines (for peripherals, registers and bitfields), and startup files for all devices. In addition, CMSIS includes functions that are common to all Cortex devices, like interrupt handling, intrinsic functions, etc. Although it is

possible to write to registers using hard-coded address and data values, it is recommended to use the defines to ensure portability and readability of the code.

To simplify programming Wireless Geckos, Silicon Labs developed and maintains a complete C function library called emlib that provides efficient, clear, and robust access to and control of all peripherals and core functions in the device. This library resides within the em\_xxx.c (for example, em\_dac.c) and em\_xxx.h files in the SDK.


The emlib documentation is available on the [Silicon Labs' website](#).

### 2.3.3 The BGAPI Serial Protocol and BGLIB Host API

When configured in NCP (network co-processor) mode, the Bluetooth stack also implements the BGAPI serial protocol. This allows the Bluetooth stack to be controlled over a serial interface such as UART from a separate host like an EFM32 microcontroller. The BGAPI serial protocol provides exactly the same Bluetooth APIs over UART as the BGAPI API when used in a standalone mode.

The BGAPI serial protocol is a lightweight, binary protocol that carries the BGAPI commands from the host to the Bluetooth stack and responses and events from the Bluetooth stack back to the host.

The Bluetooth SDK delivers a ready-made BGAPI serial protocol parser implementation, called BGLIB. It implements the serial protocol parser and C language function and events for all the APIs provided by the Bluetooth stack. The host code developed on top of BGLIB can be written to be identical to the code for the Wireless Gecko, which allows easy porting of the application code from the Wireless Gecko to a separate host or vice versa.

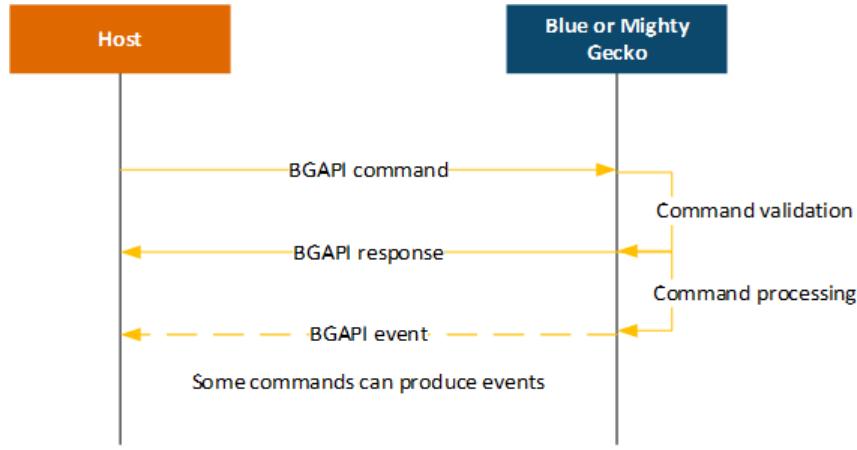

**Figure 2-1. BGAPI Serial Protocol Message Exchange**

The BGAPI serial protocol packet structure is described below.

**Table 2-1. BGAPI Packet Structure**

Byte	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4-255
Explanation	Message type	Minimum payload length	Message class	Message ID	Payload
Values	0x20: command 0x20: response 0xA0: event	0x00 - 0xFF	0x00 - 0xFF	0x00 - 0xFF	Specific to command, response, or event

### 2.3.4 The Bluetooth Profile Toolkit GATT Builder

The Bluetooth Profile Toolkit is a simple XML-based API and description language used to describe the GATT-based service and characteristic easily without the need to write them in code. The XML files can be easily written by hand based on the information contained in *UG118: Blue Gecko Bluetooth® Profile Toolkit Developer Guide*. Use the Profile Toolkit GATT Builder if you are developing outside of Simplicity Studio.

Within Simplicity Studio, we provide the GATT Configurator, a tool that allows building the GATT in a visual way, without hand editing the XML file. See section [7.1, The GATT Configurator](#) for summary information, and UG365: GATT Configurator User's Guide for details.

The GATT database developed with the Profile Toolkit is converted to a .c file and a .h file and included in the application project as a pre-build step when the firmware is compiled. Then the GATT can be accessed with the Bluetooth stack GATT APIs or by a remote Bluetooth device.

```
<gatt>

    <service uuid="1800">
        <description>Generic Access Service</description>
        <characteristic uuid="2a00">
            <properties read="true" const="true" />
            <value>Blue Gecko BGM111</value>
        </characteristic>
        <characteristic uuid="2a01">
            <properties read="true" const="true" />
            <value type="hex">0768</value>
        </characteristic>
    </service>
</gatt>
```

**Figure 2-2. Example of a Generic Access Service**

## 2.4 About the Bluetooth SDK

The Bluetooth SDK is a full software development kit that enables you to develop applications on top of the Bluetooth stack using C programming language. The SDK also supports making standalone applications, where the Bluetooth stack and the application both run in the Wireless Gecko, or the network co-processor (NCP) architecture, where the application runs on an external host and the Bluetooth stack runs in the Wireless Gecko. SDK contents and folder structure are described in the following sections.

### 2.4.1 Libraries

The following libraries are delivered with the Bluetooth SDK and must be included in C application projects.

Library	Explanation	Mandatory
<b>libbluetooth.a</b>	Bluetooth stack library	Yes
<b>libraill_efr32xg1_gcc_release.a</b>	RAIL library for GCC	Yes for GCC projects on EFR32xG1 platform
<b>libraill_efr32xg12_gcc_release.a</b>	RAIL library for GCC	Yes for GCC projects on EFR32xG12 platform
<b>libraill_efr32xg13_gcc_release.a</b>	RAIL library for GCC	Yes for GCC projects on EFR32xG13 platform
<b>libraill_efr32xg14_gcc_release.a</b>	RAIL library for GCC	Yes for GCC projects on EFR32xG14 platform
<b>libraill_efr32xg1_iar_release.a</b>	RAIL library for IAR	Yes for IAR projects on EFR32xG1 platform
<b>libraill_efr32xg12_iar_release.a</b>	RAIL library for IAR	Yes for IAR projects on EFR32xG12 platform
<b>libraill_efr32xg13_iar_release.a</b>	RAIL library for IAR	Yes for IAR projects on EFR32xG13 platform
<b>libraill_efr32xg14_iar_release.a</b>	RAIL library for IAR	Yes for IAR projects on EFR32xG14 platform
<b>libmbedtls.a</b>	mbedtls library	Yes
<b>libpsstore.a</b>	PSStore library	Yes
<b>binuploader.o</b>	Uploader for OTA updates	No

Library	Explanation	Mandatory
<b>libcoex.a</b>	Wi-Fi and Bluetooth coexistence	No

#### 2.4.2 Include Files

The following files are delivered with the Bluetooth SDK and must be included in C application projects.

Library	Explanation	When needed
<b>native_gecko.h</b>	Bluetooth stack API for standalone applications without Micrium RTOS	Must be included in standalone C applications where both Bluetooth stack and application run in a Wireless Gecko.
<b>rtos_gecko.h</b>	Bluetooth stack API for standalone applications with Micrium RTOS	Required when the Bluetooth stack is used together with Micrium RTOS.
<b>ncp_gecko.h</b>	Bluetooth stack API for NCP applications	Must be included in NCP applications where the host controls the device via BGAPI protocol over UART
<b>gecko_configuration.h</b>	Bluetooth stack configuration	Included automatically.
<b>bg_errorcodes.h</b>	Error codes produced by the Bluetooth stack	Included automatically.
<b>bg_gattdb_def.h</b>	Bluetooth GATT database structure definition	Included automatically.
<b>bg_types.h</b>	Simple data type definitions and structures	Included automatically.
<b>gecko_bglib.h</b>	An adaptation layer between host application and BGAPI serial protocol	Must be included in C applications developed for external hosts.
<b>host_gecko.h</b>	Bluetooth API for host (NCP) applications	Must be included in C applications developed for external hosts.

#### 2.4.3 Platform Components

The following components are delivered with the Bluetooth SDK. The platform components are under the platform folder.

Folder	Explanation
<b>bootloader</b>	Gecko Bootloader source code and project files.
<b>CMSIS</b>	Silicon Laboratories CMSIS-CORE device headers. <a href="#">Documentation</a>
<b>Device</b>	EFR32BG and EFR32MG device files. <a href="#">Documentation</a>
<b>emdrv</b>	A set of function-specific high performance drivers for EFR32 on-chip peripherals. Drivers are typically DMA based and are using all available low-energy features. For most drivers, the API offers both synchronous and asynchronous functions. <a href="#">Documentation</a>
<b>emlib</b>	A low-level peripheral support library that provides a unified API for all EFM32, EZR32 and EFR32 MCUs and SoCs from Silicon Laboratories. <a href="#">Documentation</a>
<b>middleware</b>	Display driver for WSTK development kits.
<b>radio</b>	Silicon Labs RAIL (Radio Abstraction Interface Layer) library

### 3 Getting Started with SLWSTK6101 Embedded Software

The Blue Gecko Bluetooth Wireless Starter Kit is meant to help you evaluate Silicon Labs' Blue Gecko Bluetooth modules and get you started with your own software development. The kits come in different versions with different module radio boards. See <https://www.silabs.com/products/development-tools/wireless/bluetooth/bluegecko-bluetooth-low-energy-module-wireless-starter-kit> for details on the current configurations.

Once you have experimented with the built-in firmware, you can download Simplicity Studio and the Bluetooth SDK as described in section 4 Getting Started with Simplicity Studio and the Bluetooth SDK.

#### 3.1 Prepare the WSTK


3. Connect a **Bluetooth Module Radio Board** to the WSTK Main Board as shown in the following figure.
4. Connect the WSTK to a PC using the **Main Board USB** connector.
5. Turn the **Power switch** to "**AEM**" position.

**Note:** At this stage you might be prompted to install the drivers for the WSTK Main Board but you can skip this for now.


6. Check that the blue **USB Connection Indicator** LED turns on or starts blinking.
7. Check that the Main Board LCD display turns on and displays a Silicon Labs logo.

Before starting to test the demo application note the following parts on the WSTK Main Board

- Temperature & Humidity Sensor
- PB0 button
- LED0

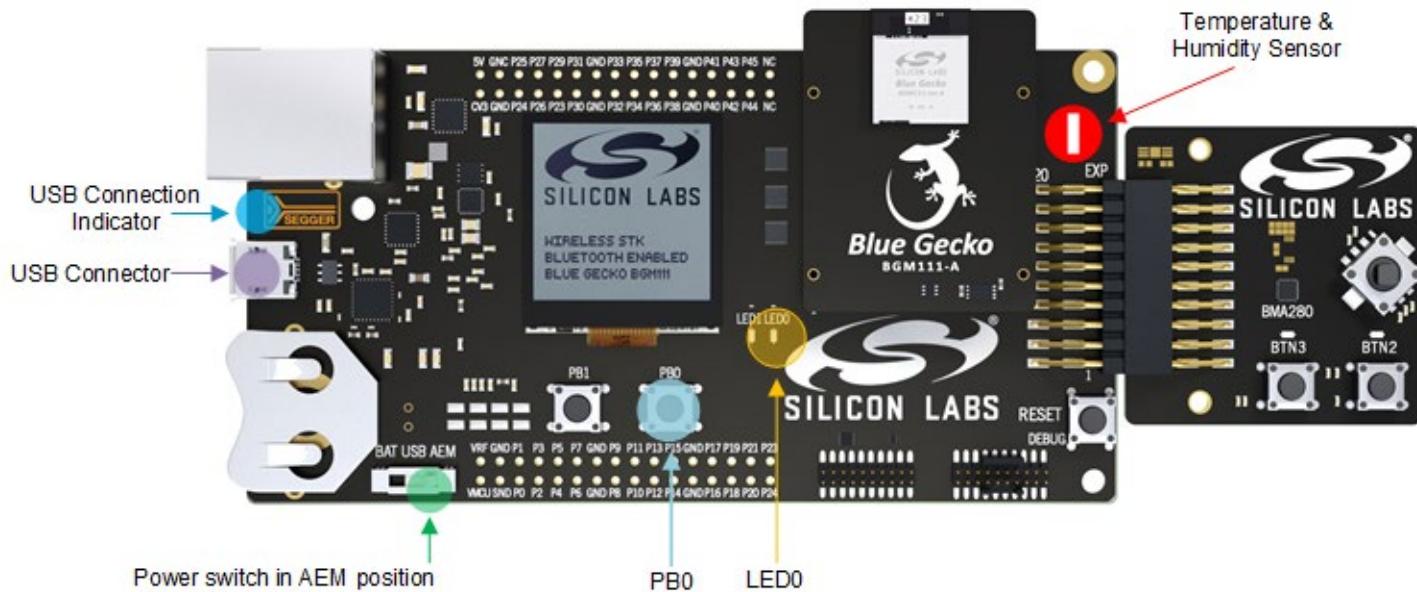

### 3.2 Try the Built-In Demo Using an Android Smartphone

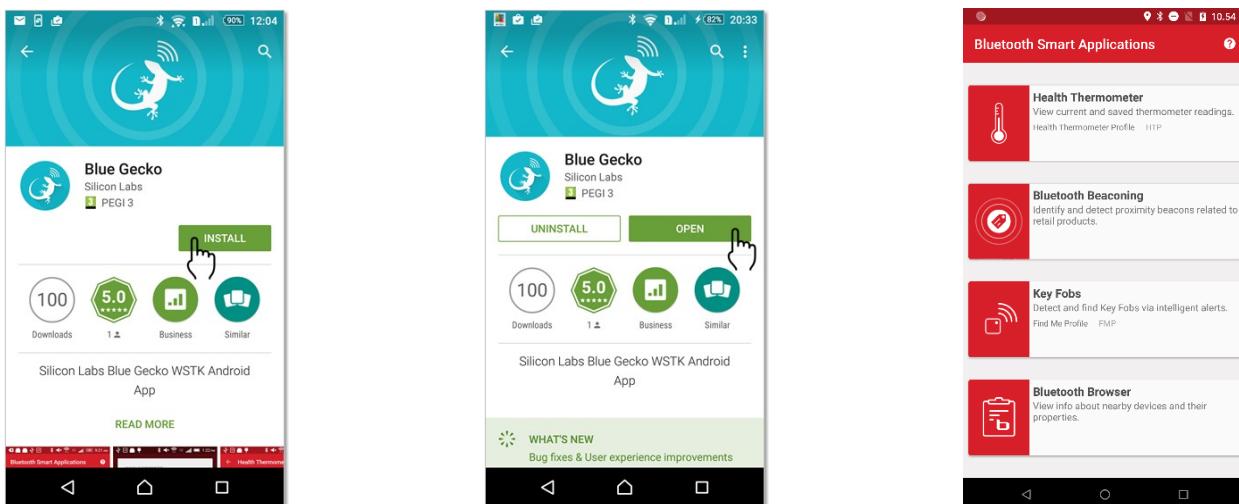

1. Download the Silicon Labs Blue Gecko App for Android from the Google Play Store. Touch **Install** to install the app on your Android smartphone.
2. Touch **Open** to open the Blue Gecko App.
3. The main menu of the **Blue Gecko** App opens.

The Blue Gecko App consists of three demos selectable from the main menu of the App:




- Health Thermometer
- Bluetooth Beaconing
- Key Fobs

The fourth main menu option is **Bluetooth Browser**, which enables scanning for Bluetooth devices. It lists the Bluetooth Address, RSSI value and some other details of the detected devices.



Before starting to test any of the demos using the Blue Gecko App make sure that you have attached either the BGM111 or BGM113 Radio Board on to the WSTK Main Board connectors and that you have set up and switched on your WSTK Main Board as instructed in section [3.1 Prepare the WSTK](#).

The firmware inside the modules on the Radio Board defaults to the Health Thermometer part of the demo after powering up the WSTK Main Board.


### 3.2.1 Running the Health Thermometer Demo

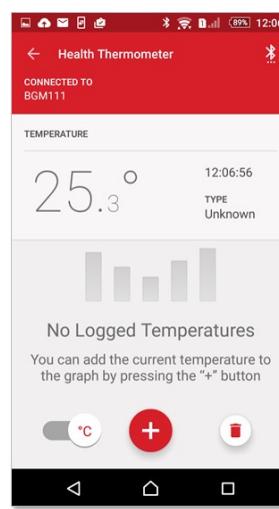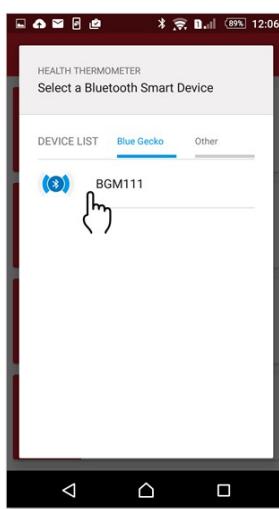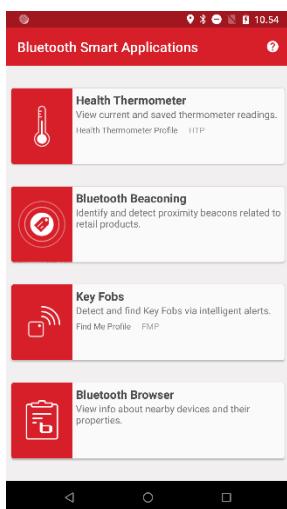

1. Touch **Health Thermometer**.
2. Your Blue Gecko device (BGM111 or BGM113) should appear listed in the **DEVICE LIST**. Touch the device.
3. The **Health Thermometer** screen is displayed. The current temperature reading from the WSTK Temperature & Humidity sensor is displayed. You can change the temperature units with the slider in the bottom left.


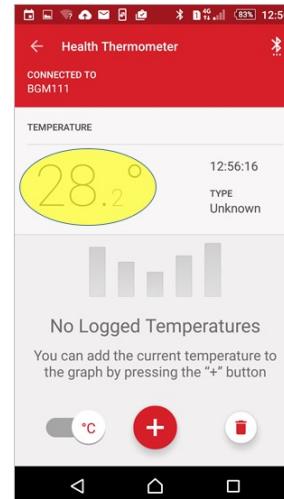
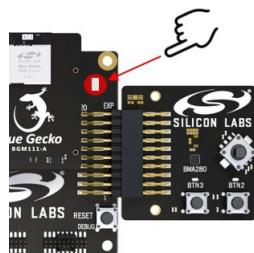


4. Add the current temperature as a bar graph indicator with the temperature value shown numerically by touching . Touch again to add another reading. Clear the graph by touching .
5. Test the temperature sensor by pressing your finger on top of the sensor on the WSTK Main Board.
6. Verify that the temperature reading changes.

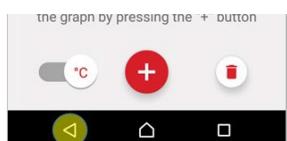

7. Return to the **Blue Gecko** App main menu by pressing twice.


### 3.2.2 Running the Bluetooth Beacons Demo

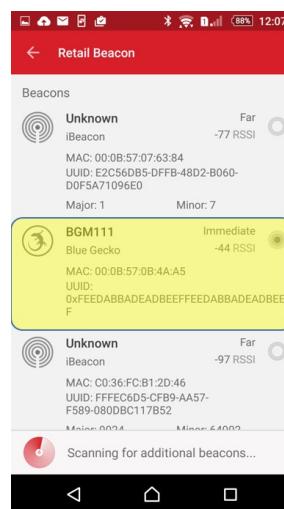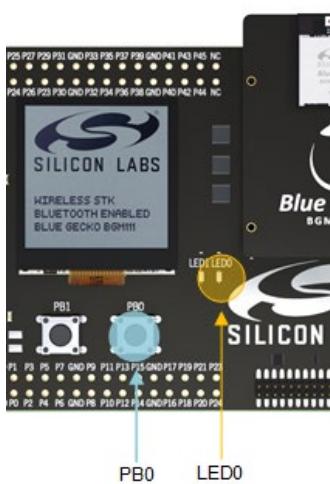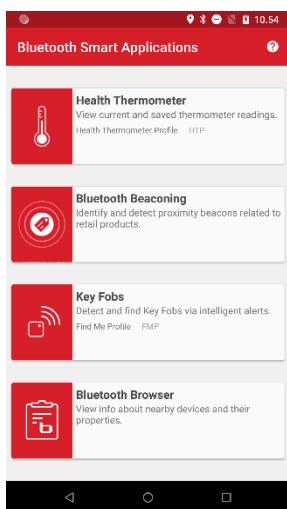

1. Touch **Bluetooth Beacons**. The App scans for beacons and displays detected beacons as a list. BGM111 / BGM113 is not listed at this point.
2. Press the **PB0** button on the WSTK Main Board to set the firmware into **Bluetooth Beaconing** mode.
3. BGM111 / BGM113 appears in the detected **Beacons** list.


The App displays the detected device's friendly name ("BGM111" or "BGM113"), the Bluetooth address and UUID, along with the RSSI numerical value. A graphical symbol and text ("Far" / "Immediate") indicates whether the beacon and the smartphone are close to each other or further apart.

If you select the beacon a small info screen (not shown here) opens that also shows the TX value of the beacon device.

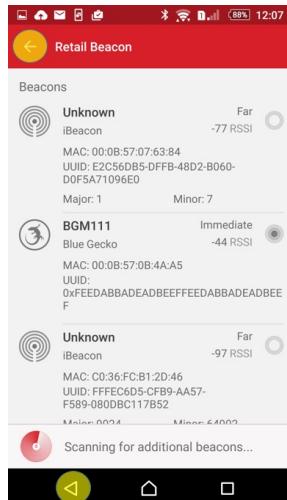


4. Return to Blue Gecko App main menu by pressing either on the top left or on the bottom left.

### 3.2.3 Running the Key Fobs Demo

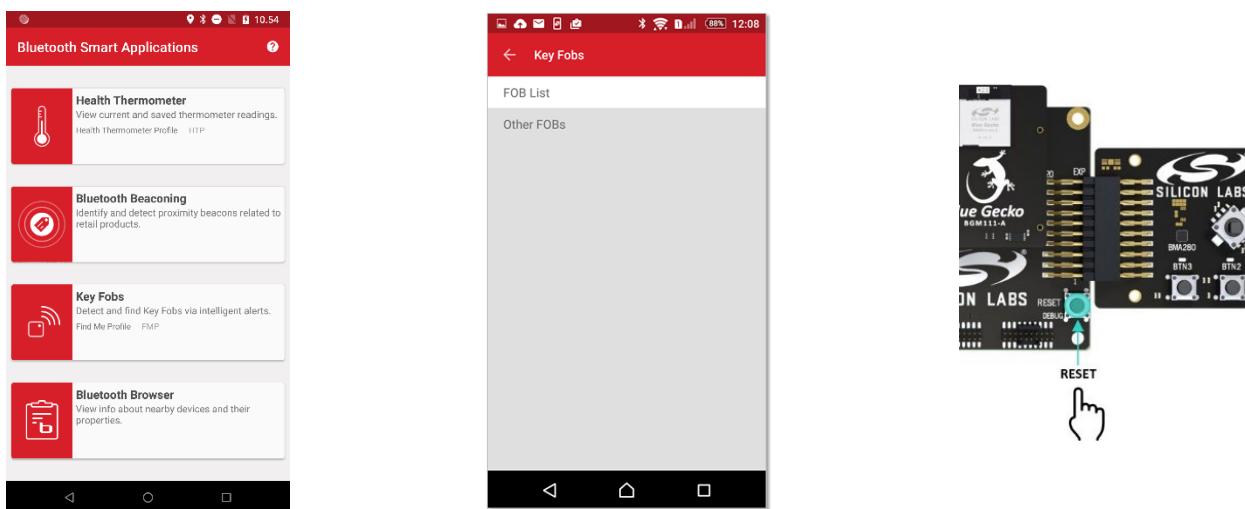


1. Touch **Key Fobs**.
2. The Blue Gecko App starts to scan for a Key Fob. BGM111 / BGM113 is not listed at this point.
3. Press the **Reset** button on WSTK Main Board momentarily to select the **Key Fobs** part of the firmware in BGM111 / BGM113.

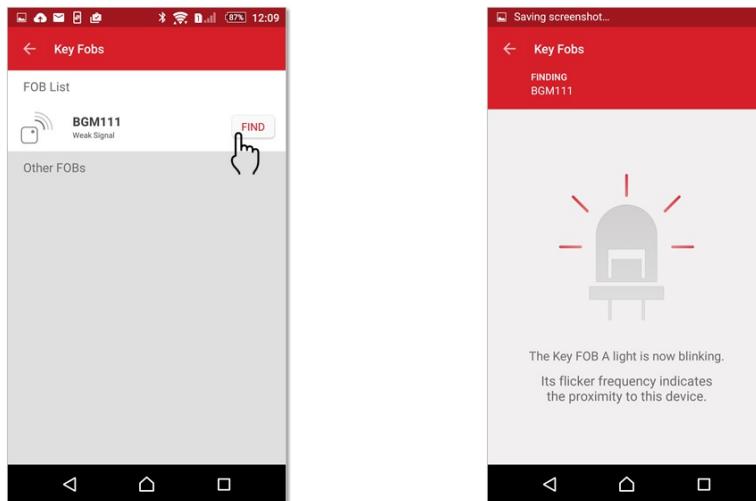

4. BGM111 / BGM113 should appear in the FOB List. Press **FIND** to connect with it.
5. The Key Fobs screen opens, with the LED graphic blinking.
6. Verify that LED0 on the WSTK Main Board is ON. It will remain on as long as the app and the BGM111 / BGM113 are connected.


**Note:** Contrary to the on-screen text the flicker frequency of the graphic does not change according to the proximity. This is due to the fact that the BGM111 / BGM113 Key Fob functionality is not based on the RSSI value.



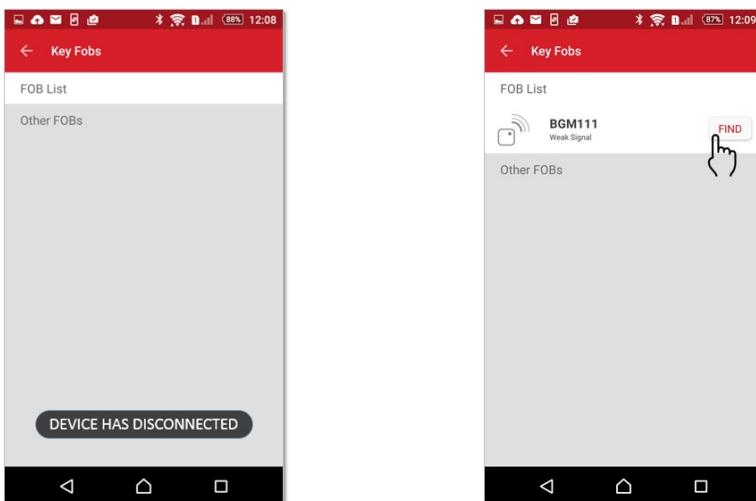

7. Test the Key Fob functionality by walking away from the WSTK Main Board until the Blue Gecko App screen indicates that the connection is lost by displaying the message "DEVICE HAS DISCONNECTED" and LED0 on the WSTK Main Board turns OFF.
8. Walk back towards the WSTK Main Board until BGM111 / BGM113 reappears on the FOB List. Press **FIND** and verify that BGM111 / BGM113 and the Blue Gecko App are again connected and that LED0 turns back ON.

### 3.3 Try the Built-In Demo Using an iOS Smartphone

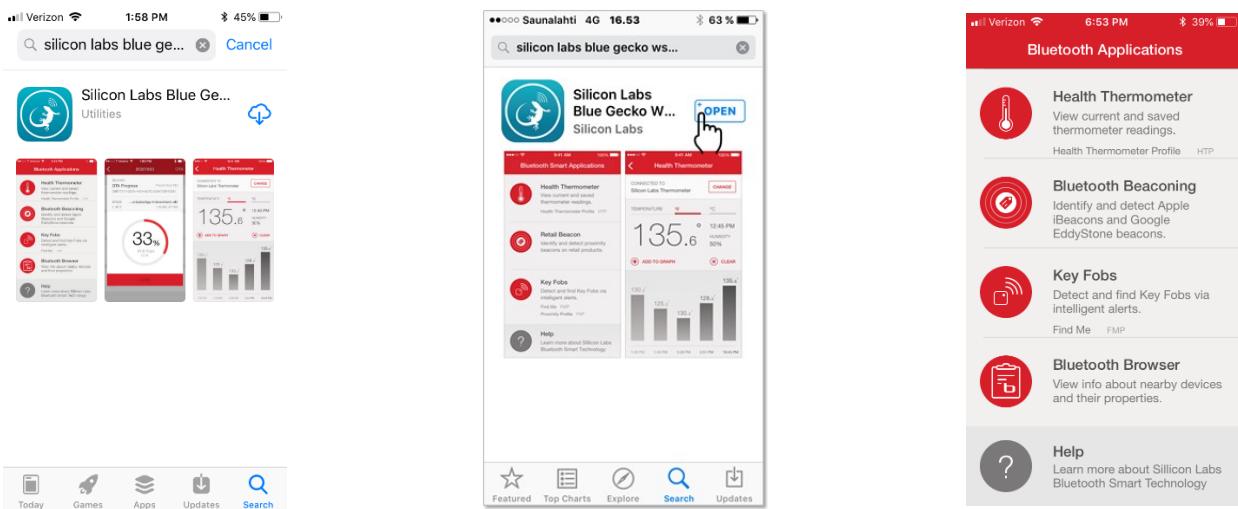

1. Download the Silicon Labs "Blue Gecko WSTK App" for iOS from Apple App Store by pressing the download icon.
2. Open the app by pressing OPEN.
3. The main menu of the **Blue Gecko** App opens.

The Blue Gecko App consists of three demos selectable from the main menu of the App:


- Health Thermometer
- Bluetooth Beaconing
- Key Fobs

The fourth main menu option is **Bluetooth Browser**, which enables scanning for Bluetooth devices. It lists the Bluetooth Address, RSSI value and some other details of the detected devices.


Before starting to test any of the demos using the Blue Gecko App make sure that you have attached either the BGM111 or BGM113 Radio Board on to the WSTK Main Board connectors and that you have set up and switched on your WSTK Main Board as instructed in section [3.1 Prepare the WSTK](#).

The firmware inside the BGM111 / BGM113 module on the Radio Board defaults to the Health Thermometer part of the demo after powering up the WSTK Main Board.

### 3.3.1 Running the Health Thermometer Demo

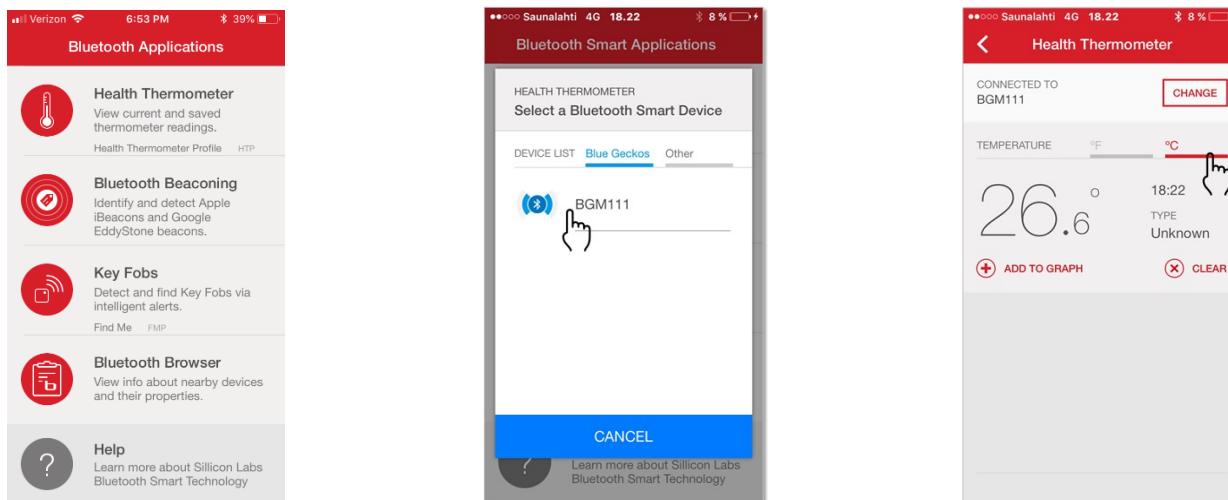

1. Touch **Health Thermometer**.
2. Your Blue Gecko device (BGM111 or BGM113) should appear listed in the **DEVICE LIST**. Touch the device.
3. The **Health Thermometer** screen is displayed. The current temperature reading from the WSTK Temperature & Humidity sensor is displayed. You can change the temperature units by pressing **°F** or **°C**.

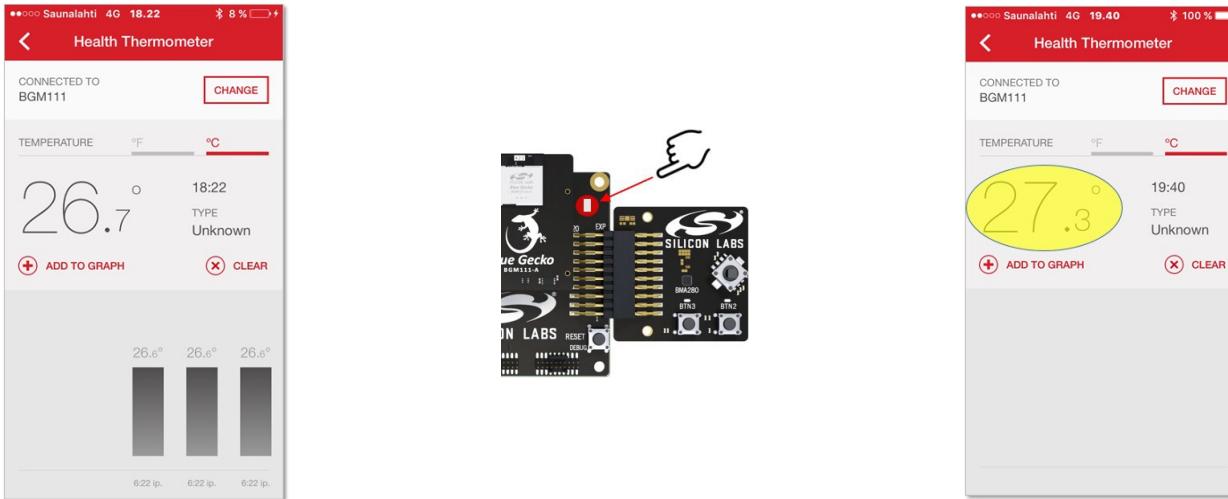

4. Add the current temperature as a bar graph indicator with the temperature value shown numerically by touching **+ ADD TO GRAPH**. Touch the control again to add another reading. Clear the graph by touching **x CLEAR**.
5. Test the temperature sensor by pressing your finger on top of the sensor on the WSTK Main Board.
6. Verify that the temperature reading changes.



7. Return to the **Blue Gecko** App main menu by pressing .

### 3.3.2 Running the Retail Beacon Demo



1. Touch **Bluetooth Beaconing**. The App scans for beacons and displays detected beacons as a list. BGM111 / BGM113 is not listed at this point.
2. Press **PB0** to set the firmware in BGM111 / BGM113 into **Bluetooth Beaconing** mode.
3. BGM111 / BGM113 appears in the detected **Beacons** list.



The App displays the detected device's friendly name ("BGM111" or "BGM113"), the Bluetooth address and UUID, along with the RSSI numerical value. A graphical symbol and text ("Far" / "Immediate") indicates whether the beacon and the smartphone are close to each other or further apart.

If you press the beacon a small info screen (not shown here) opens that also shows the TX value of the beacon device.




4. Return to Blue Gecko App main menu by pressing .

### 3.3.3 Running the Key Fobs Demo

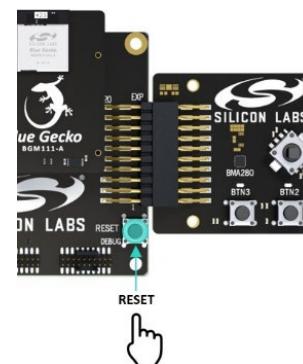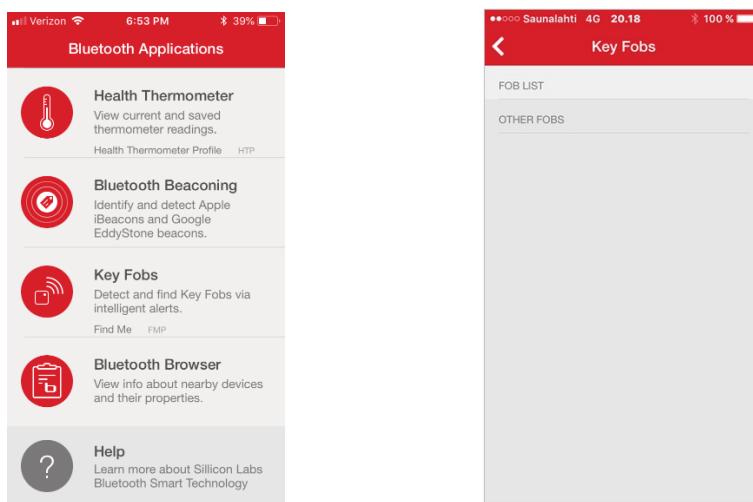


1. Touch **Key Fobs**.
2. The Blue Gecko App starts to scan for a Key Fob. BGM111 / BGM113 is not listed at this point.
3. Press the **Reset** button on WSTK Main Board to select the **HTM / Key Fobs** part of the firmware in BGM111 / BGM113.

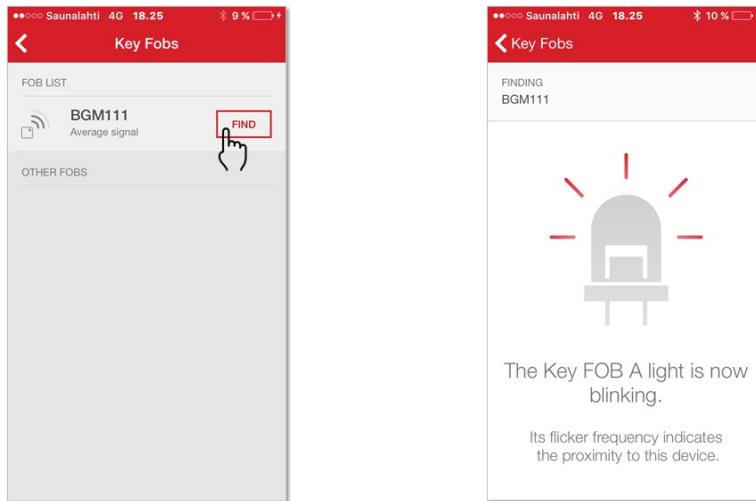

4. BGM111 / BGM113 should appear in the FOB List. Press **FIND** to connect with it.
5. The Key Fobs screen opens, with the LED graphic blinking.
6. Verify that LED0 on the WSTK Main Board is ON. It will remain on as long as the app and the BGM111 / BGM113 are connected.

Note: Contrary to the on-screen text the flicker frequency of the graphic does not change according to the proximity. This is due to the fact that the BGM111 / BGM113 Key Fob functionality is not based on the RSSI value.

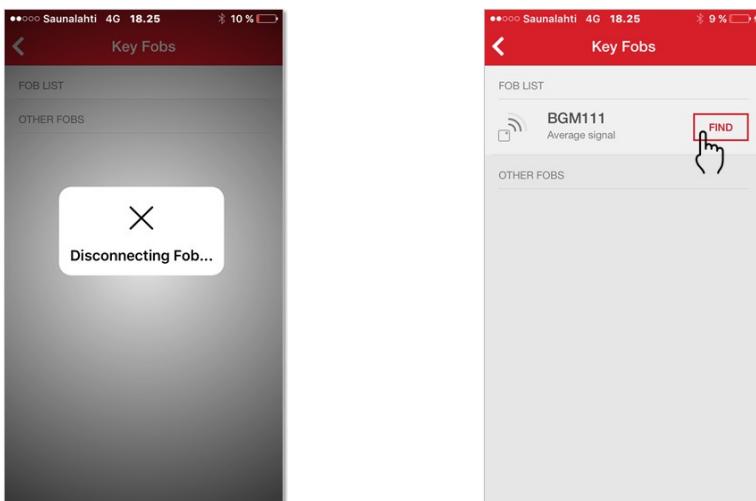

7. Test the Key Fob functionality by walking away from the WSTK Main Board until the Blue Gecko App screen indicates that the connection is lost by displaying the message "Disconnecting Fob" and LED0 on the WSTK Main Board turns OFF.
8. Walk back towards the WSTK Main Board until BGM111 / BGM113 reappears on the FOB List. Press **FIND** and verify that BGM111 / BGM113 and the Blue Gecko App are again connected and that LED0 turns back ON.

## 4 Getting Started with Simplicity Studio and the Bluetooth SDK

Simplicity Studio is a free Eclipse-based Integrated Development Environment (IDE) and a collection of value-add tools provided by Silicon Labs. Developers can use Simplicity Studio to develop, debug and analyze their Bluetooth and other Silicon Labs SDK (Software Development Kit) applications. Its main goal is to reduce development time so that you can focus on your application instead of researching the Bluetooth specification and hardware reference manuals. See section [4.3 Functionality in the Launcher Perspective](#) for a review of Simplicity Studio's features.

If you have already installed Simplicity Studio with a different protocol stack, see section [4.4 Updating Software/New Elements](#) for instructions on updating the installation with the Bluetooth stack.

### 4.1 Connect your Hardware

Connect your WSTK using a USB cable to the PC on which you will install Simplicity Studio. By having it connected when Simplicity Studio installs, Simplicity Studio will automatically obtain the relevant additional resources it needs.


**Note:** For best performance in Simplicity Studio, be sure that the power switch on your WSTK is in the Advanced Energy Monitoring or "AEM" position as shown in the following figure.




Figure 4-1. EFR32BG12 on a WSTK

## 4.2 Installing Simplicity Studio and the Gecko Suite with the Bluetooth Stack


1. Run the Simplicity Studio installation application.
2. When Simplicity Studio first launches, it presents a License Agreement dialog. Accept the terms of the agreement and click **Next**.

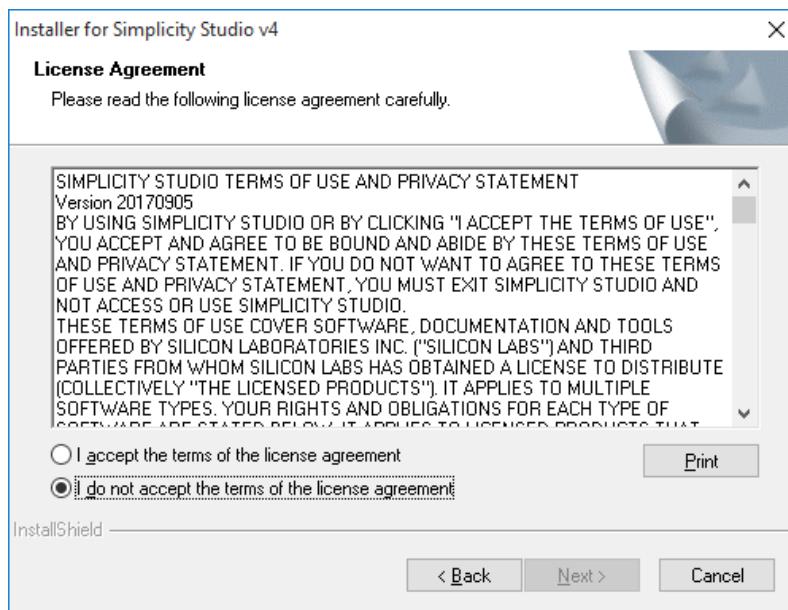


3. Choose a destination location, click **Next >** and then click **Install**.
4. When the application launches, you are invited to log in. Log in using your support account username and password. Although you can skip log in here, you must be logged in to access protected content.

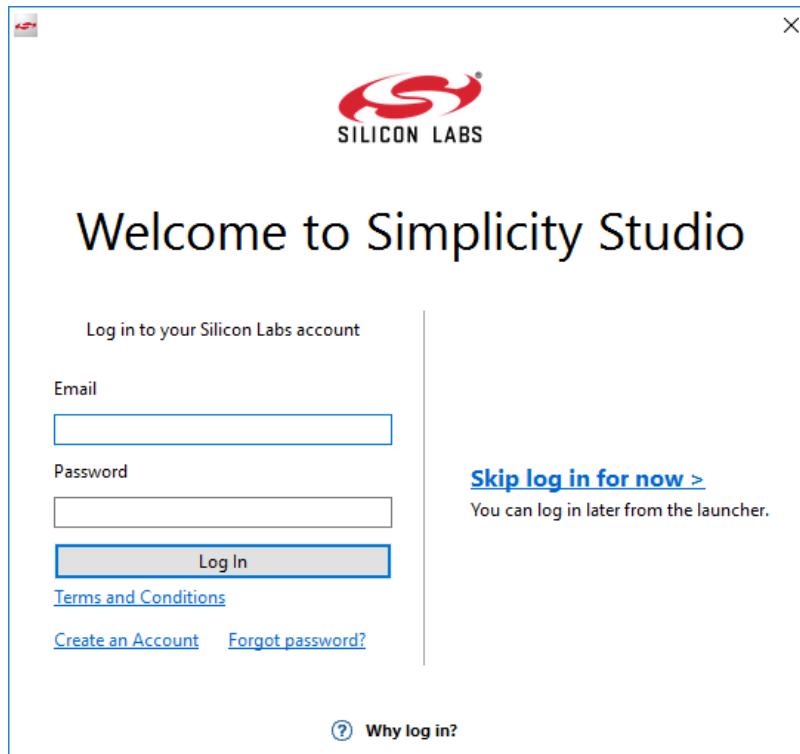

5. After login, Simplicity Studio adds software information. Once initial software installation is complete, Simplicity Studio checks for connected hardware. If you have the WSTK connected by USB cable, Simplicity Studio will detect the USB cable and prompt you to download a Device Inspector. Click **Yes**.

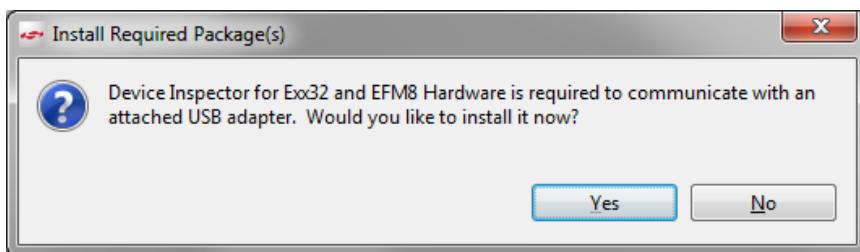


6. After some additional items are installed, you are offered the option of installing by device (step 13) or installing by product group (step 12). **Install by Product Group** will give you a more targeted set of installation options.

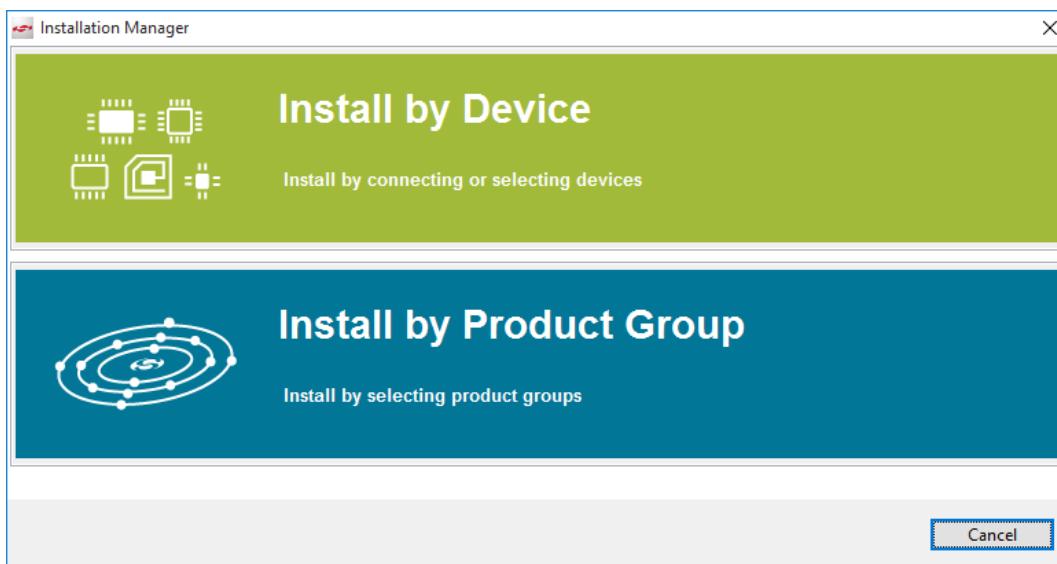


Throughout these procedures at any time you can click Home () to return to this dialog.


7. If you click **Install by Product Group** you are offered a list of product groups. Click the SDKs you want to install, or click Wireless & RF to check all. If you plan to work on the RAIL/Bluetooth Dynamic Multiprotocol examples, select both Bluetooth and Proprietary groups. Click **Next** and go to step 10.

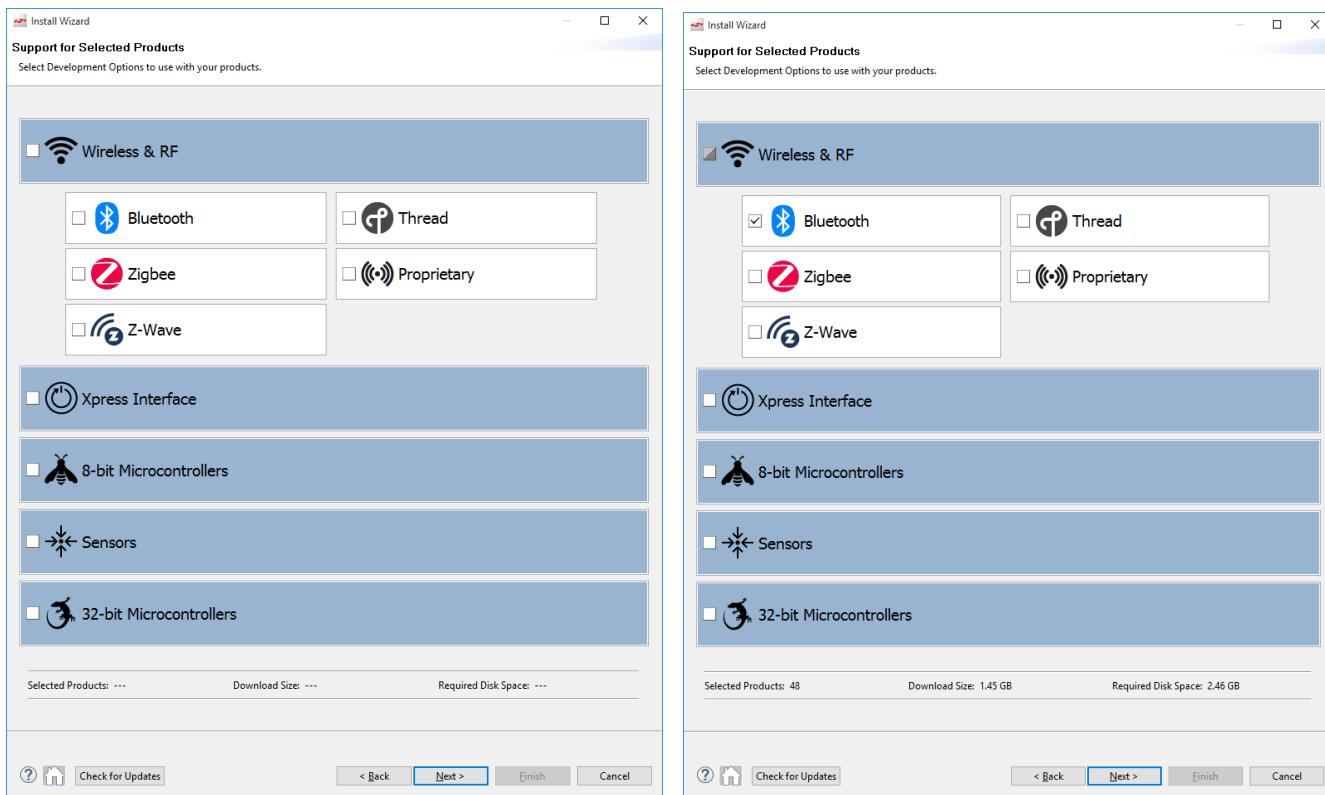

8. If you click **Install by Devices**, an **Install Device Support** dialog appears. After a short delay, it shows your connected device. If the connected device does not show, click **Refresh**. Select either a connected device, or search for a product and select it. When a product is selected click **>>** to add it to the Selected Device pane. Simplicity Studio calculated available space required for installation. You can also click a selected device and click **<<** to remove it. Click **Next** to continue.

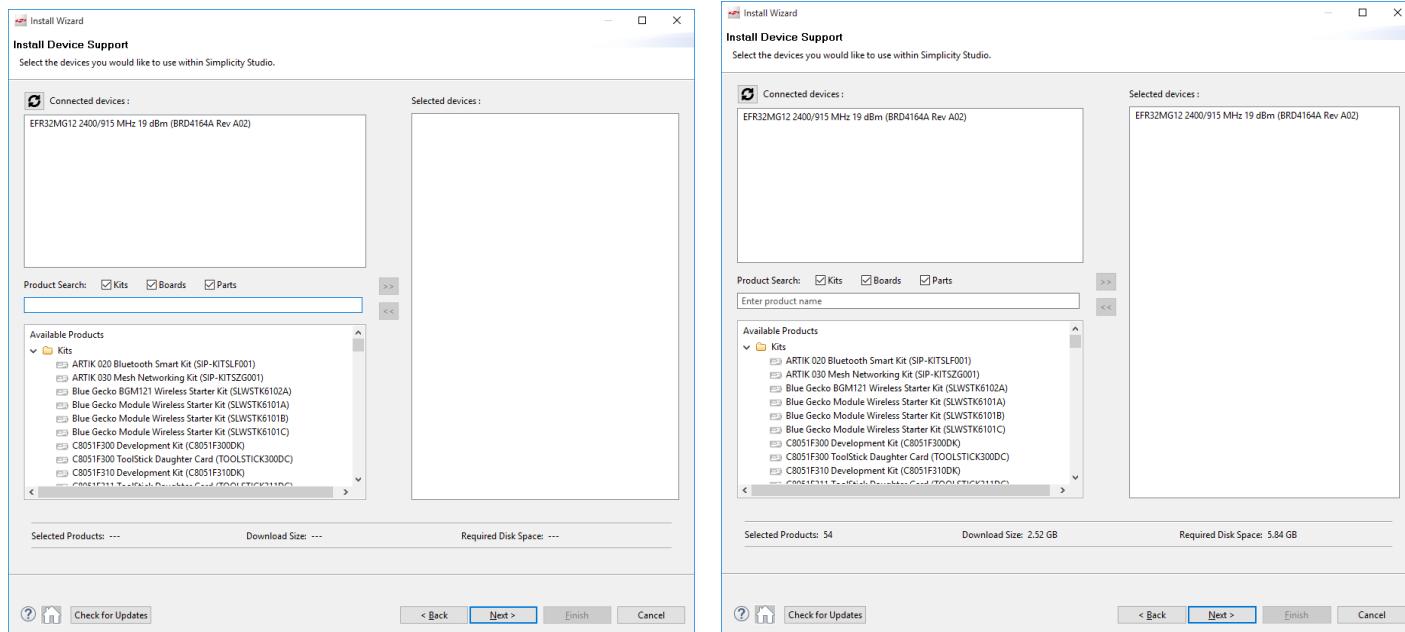



9. The next dialog varies depending on whether or not you have signed in. If you have not signed in, you have no access to restricted content and must sign in first. Once you have signed in and see Bluetooth Mesh SDK on the list of available content, click **Next**.

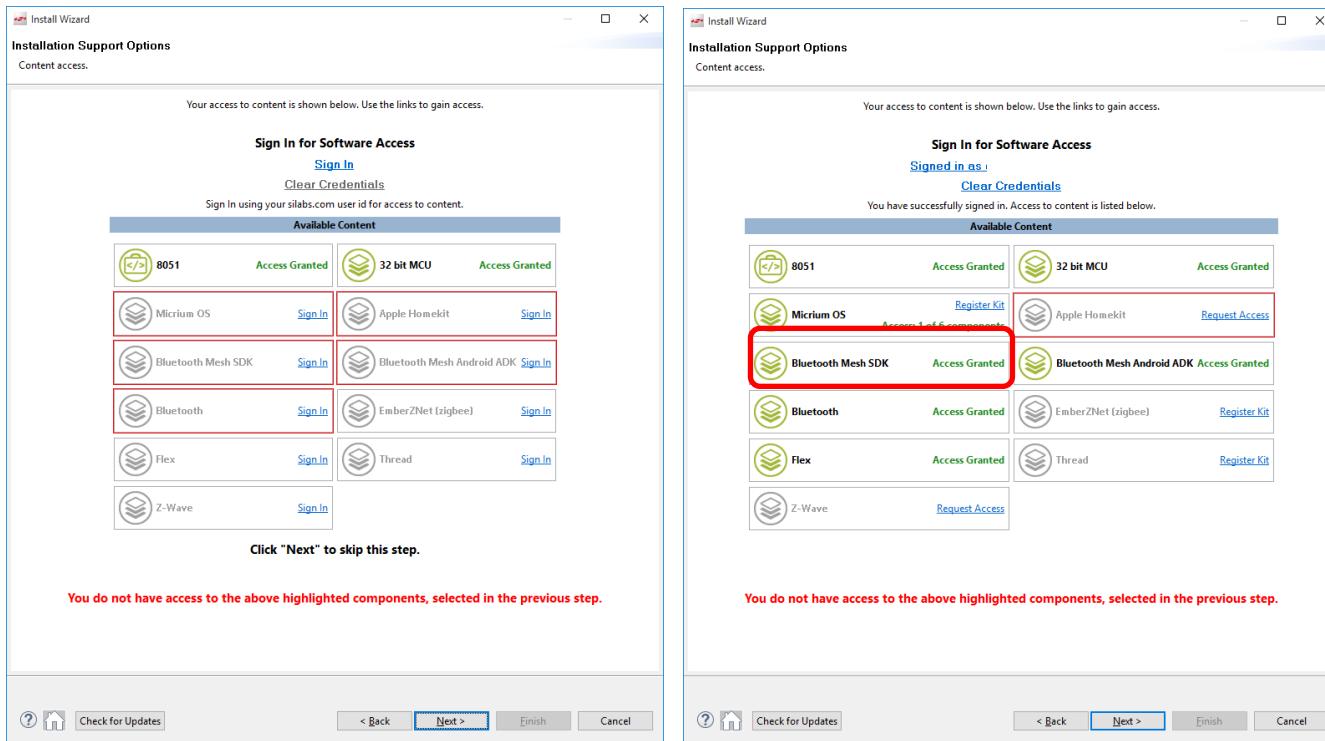

10. The **Installation Options** dialog shows the tools and software packages that can be installed (your versions may be different). The following shows Installation options after selecting the Bluetooth product group (a), and after selecting an EFR32MG device (b). In both views you can uncheck anything you don't want to install. If you have installed by Product Group, the selection is filtered more specifically to your needs than if you have installed by device, and installing all checked options is recommended. If you have installed by device, and are unchecking items:


- If you plan to use GCC, leave GNU ARM Toolchain checked.
- If you plan to work on the RAIL/Bluetooth Dynamic Multiprotocol examples, leave Micrium OS Kernel and the Flex SDK checked.

Click **Next**.

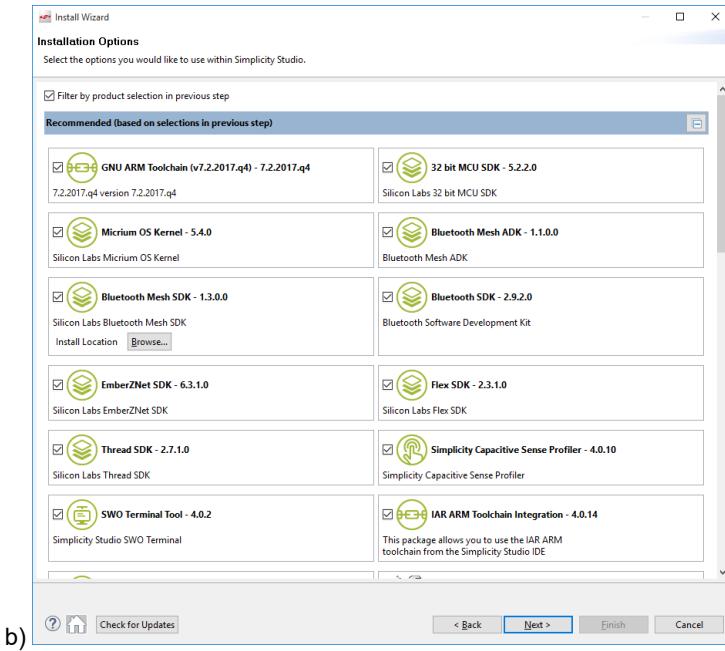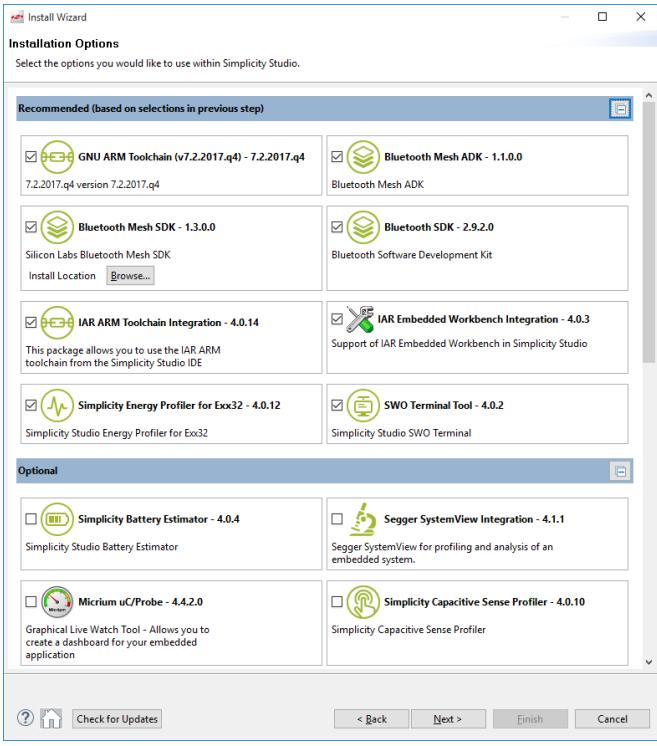


**Note:** Previous stack versions are shown under **Other Options**.

11. Studio displays a Review Licenses dialog. Accept the licenses shown and click **Finish**. Note that this dialog will present again if in the future you install a component with a separate license.

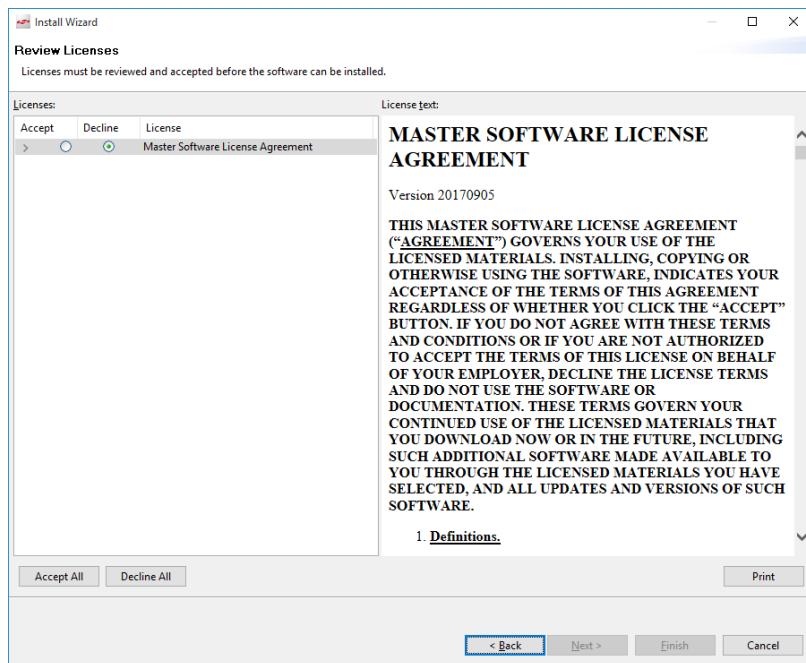


Installation takes several minutes. During installation, Simplicity Studio offers you viewing and reading options to learn more about the environment.

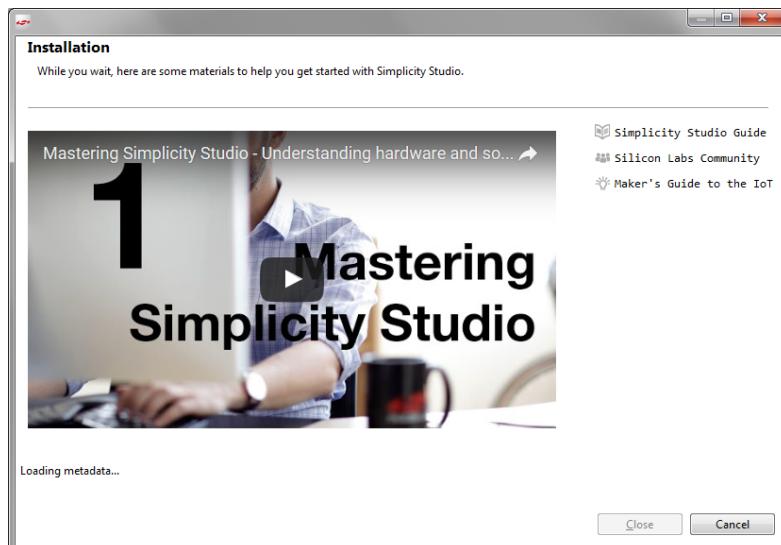


12. After installation is complete, restart Simplicity Studio.  
13. When Simplicity Studio restarts, you are invited to take a tour. To clear this option now or at any time during or after the tour, click **Exit tour**.



14. The Launcher perspective opens, but it is not yet fully populated. Click the connection entry in the devices tab or a part in the solutions tab to populate it. Note that USB-connected WSTK devices are identified as J-Link devices as shown.

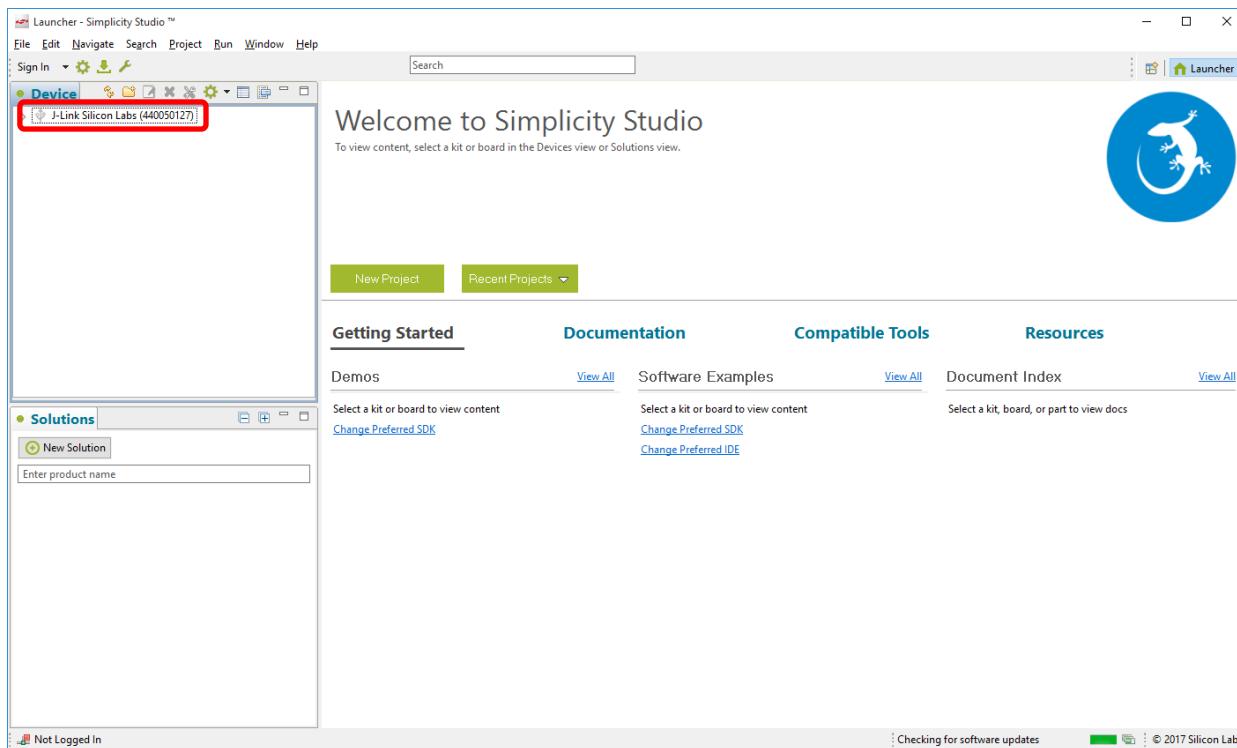

15. The Launcher perspective then is populated with the software components and functionality associated with your hardware and installed SDKs. Before proceeding, if you have a device connected update your device firmware as described in section [4.6 Updating Adapter Firmware](#).

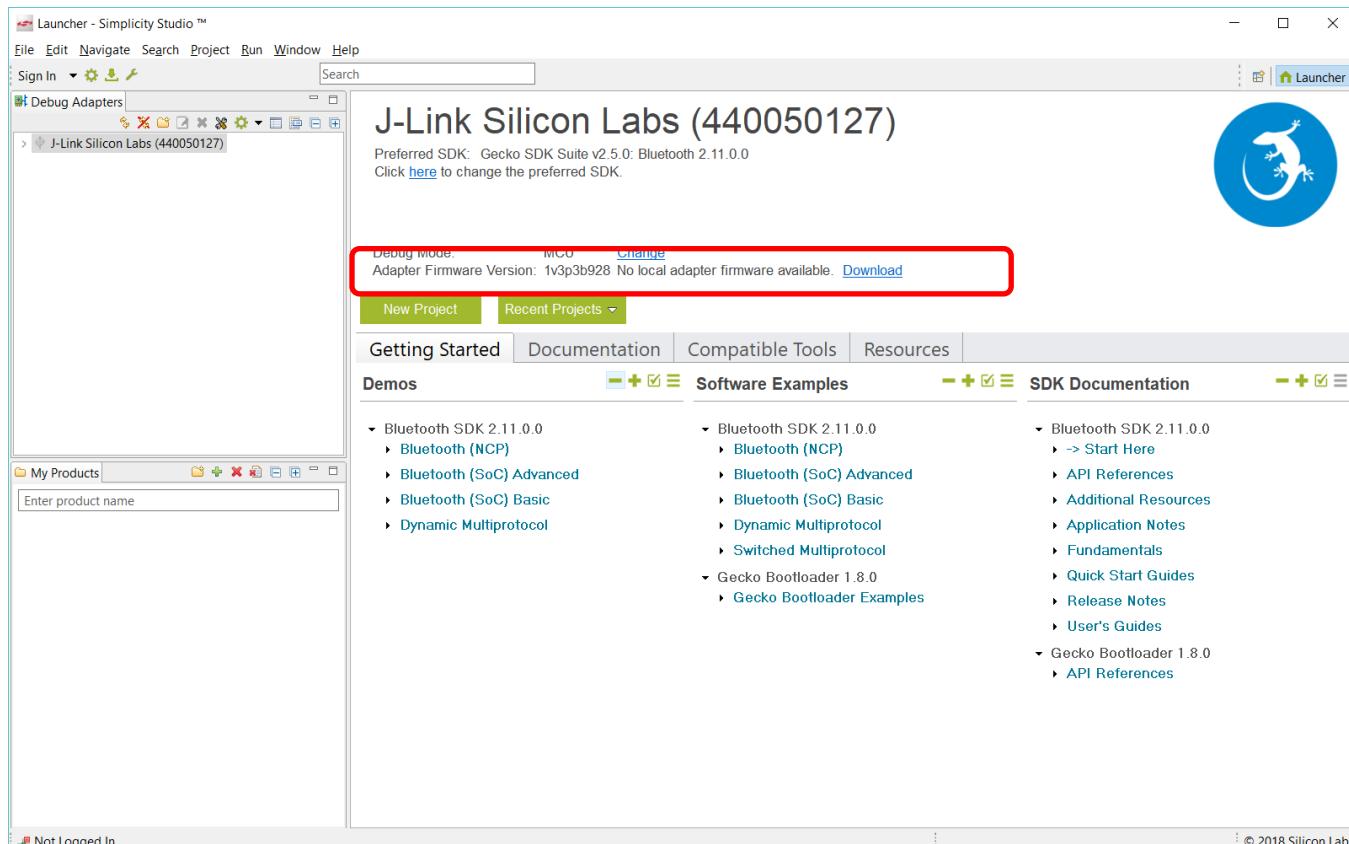

#### 4.3 Functionality in the Launcher Perspective


Perspectives are made up of a number of tiles or panes, called views, as well as the content in those views. You can perform a number of functions in the Launcher Perspective, as shown in the following figure. Additional information on some of these is provided later in the section. Note: Your installed version may be different than the version shown in the graphics in this section.

On the toolbar (1) you can:

- Sign in or out
- Open application settings (  )
- Update your software (  , see section 4.4 Updating Software/New Elements for more information)
- Open the Tools menu (  ) to access tools such as Simplicity Commander or Energy Profiler.
- Search for information including entries in the Community forums.
- Change perspectives (2). As you open the Simplicity IDE or other tools, buttons for their perspectives are displayed in the upper right. Use those buttons to easily navigate back to the Launcher perspective or to other perspectives. You can change the layouts of various perspectives by expanding or relocating views, or adding or removing views. To return to the default layout, right-click the perspective button in the upper right and select **Reset**.

In the main view you can:


- Change your preferred SDK (3, see section 4.5 Changing the Preferred SDK for more information).
- Change debug mode (4) (displayed only if a device is connected).
- Update adapter firmware (5, displayed only if a device is connected, see section 4.6 Updating Adapter Firmware for more information).
- Create solutions of multiple parts (6). If you developing for complex networks with a number of different parts involved, you can add them all to the solution and then select the one you are working on from the list. You do not need to have the hardware connected to your computer.
- Access demos, examples, documentation, and other resources from the Getting Started and other tabs (see section 4.7 Accessing Documentation and Other Resources for more information).

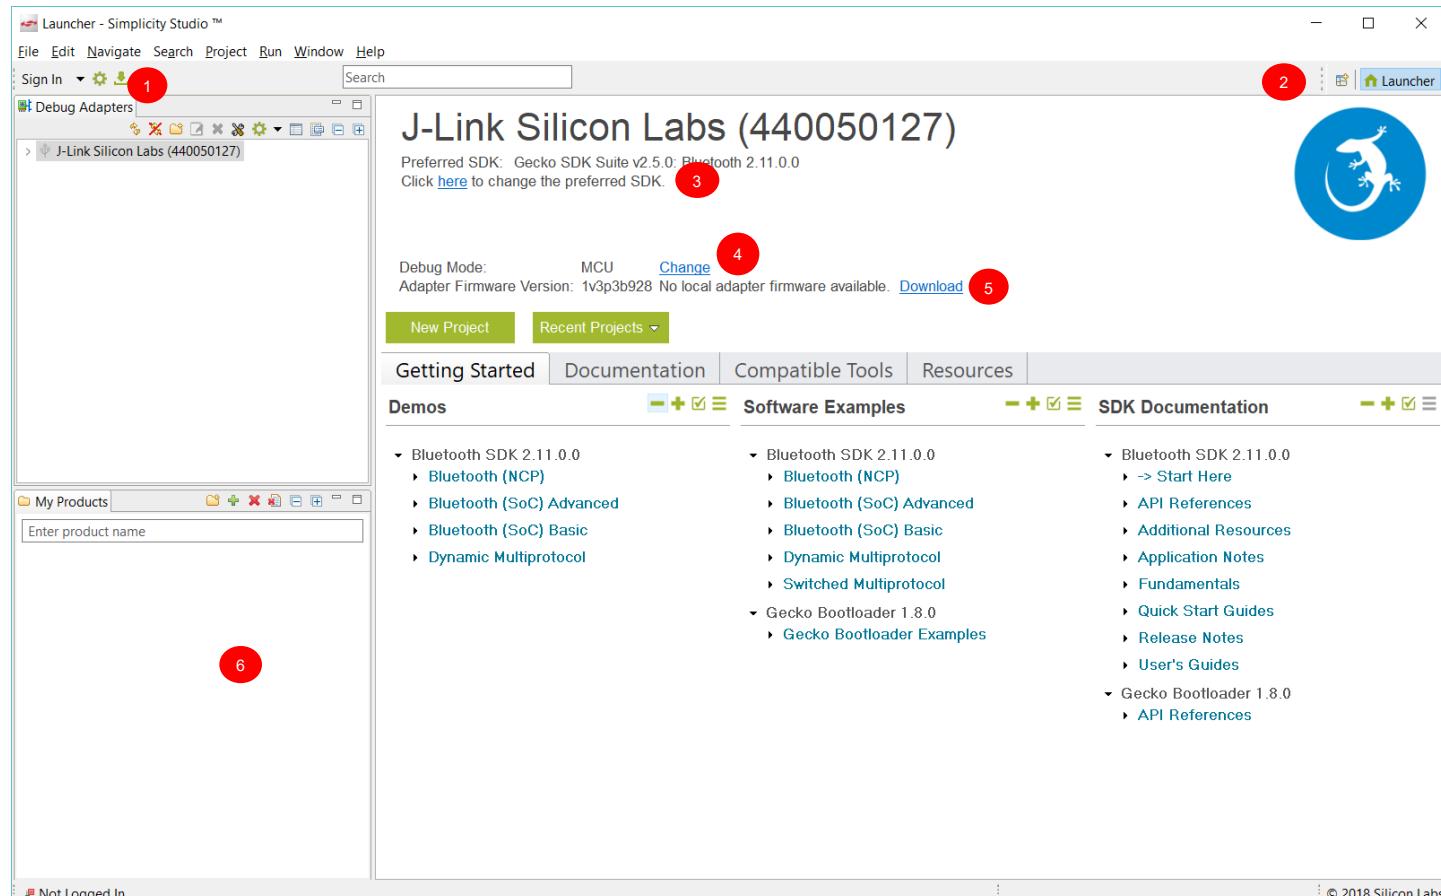


#### 4.4 Updating Software/New Elements

The Update Software icon will be red if updates to installed components are available. If Simplicity Studio detects an available update, and you are in another perspective, you will be notified that an update is available.

To download a new or updated component, click the Update Software icon. Click Package Manager. Note: If you are installing based on a new device, or want to install a new product group, you can do so through this dialog as well. In subsequent dialogs, click Home () to return to this dialog. Note that Studio does not show you options, such as the GNU ARM Toolchain, that have already been installed.

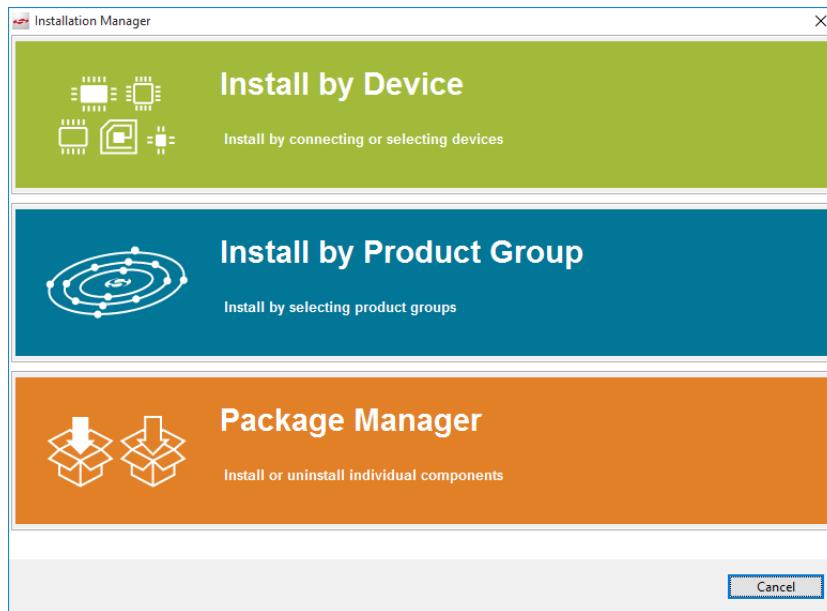


Simplicity Studio shows you available updates or SDKs in the Package Manager dialog. You can update all or select individual updates for installation. Click the tabs in the Package Manager dialog to see other components available for installation. Use the filters to reduce long lists.

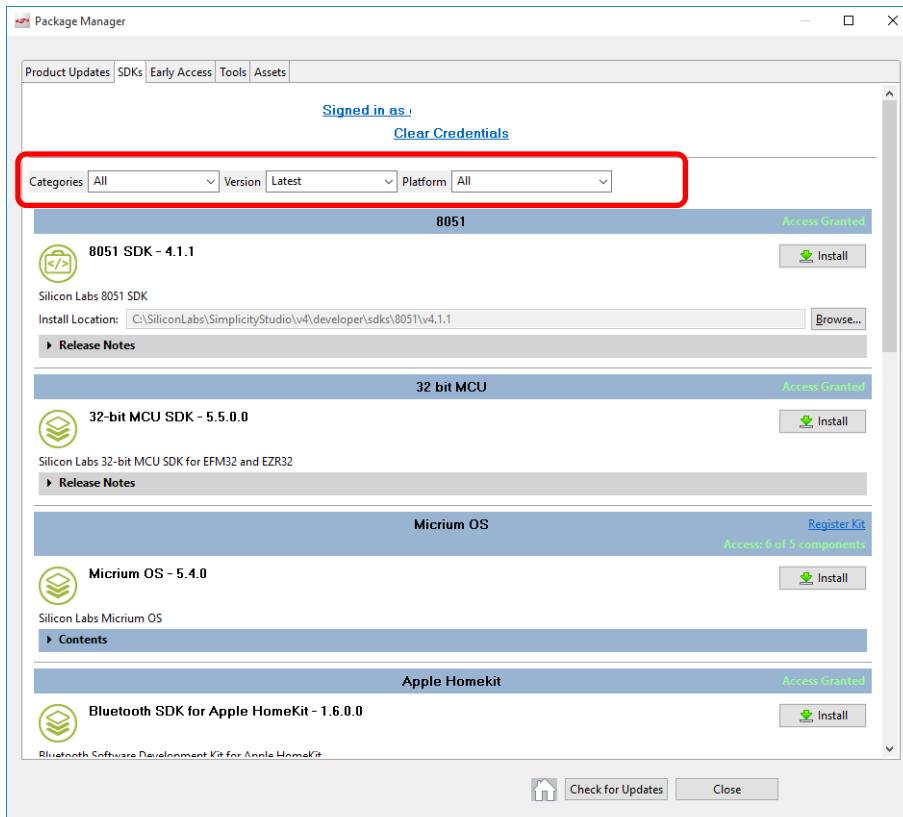

## 4.5 Changing the Preferred SDK


Use this function if on startup Simplicity Studio defaults to Stackless applications. Otherwise, most Silicon Labs protocol stack users will have one SDK available to them, the Gecko SDK Suite.

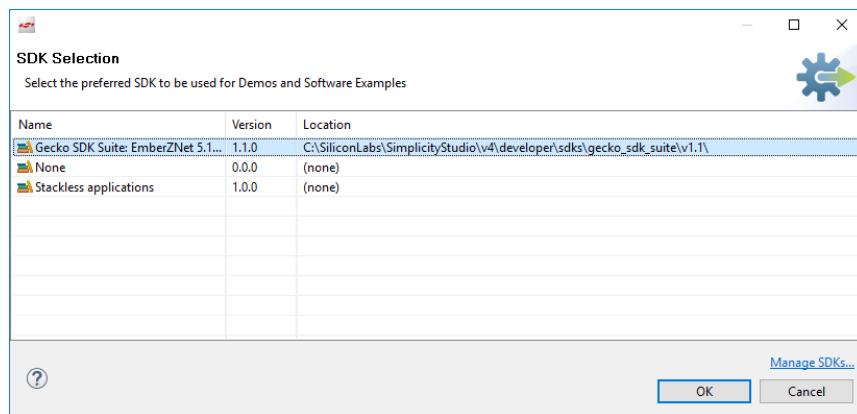


Within that suite you can have multiple protocols installed. The protocol used in any given instance is controlled either by the example you select, or the stack you select if you go through the 'New Project' interface. In general, you should add or remove protocol stacks through the Simplicity Studio update manager. If you need to install a stack or the Gecko SDK Suite outside of the normal installation process, you will receive separate instructions.

## 4.6 Updating Adapter Firmware

Initially the Launcher perspective may display "No local adapter firmware available." Click **Download** to download any updates.

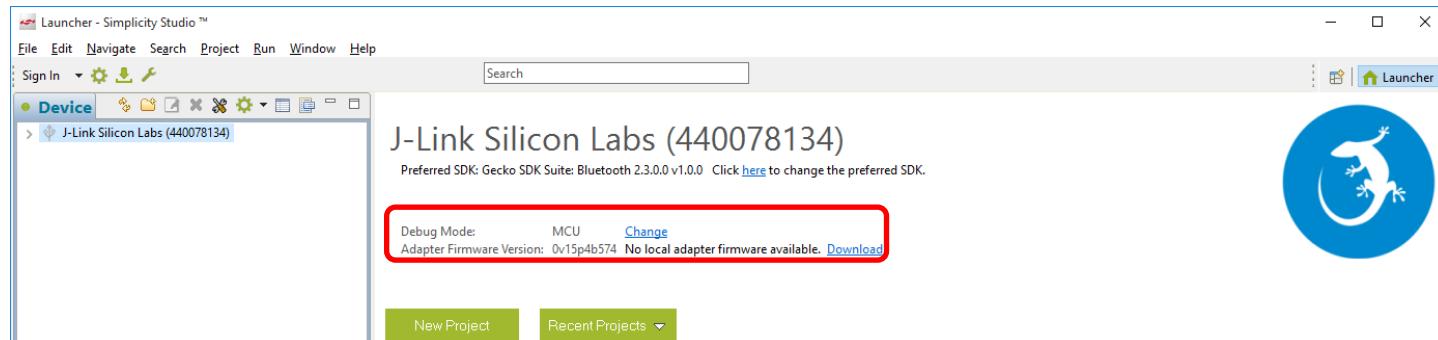


If an update is available, click **Install** to install the firmware.

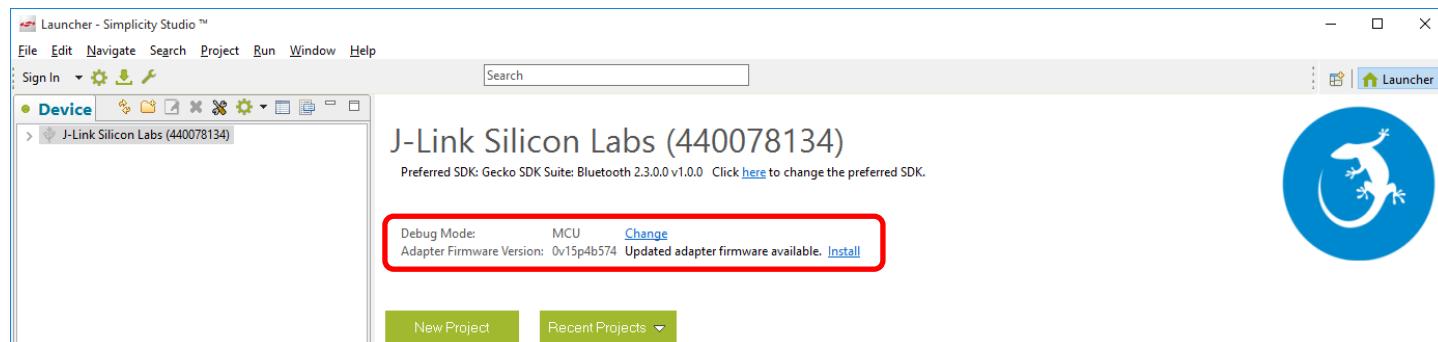


Once you have installed a current update, the version is displayed. Simplicity Studio will notify you if another firmware update is available.

## 4.7 Accessing Documentation and Other Resources


The **Getting Started** tab provides access to demos, example applications, and stack related documentation. To show/hide specific categories, click Customize (✓). Select or deselect categories, then click **OK**.

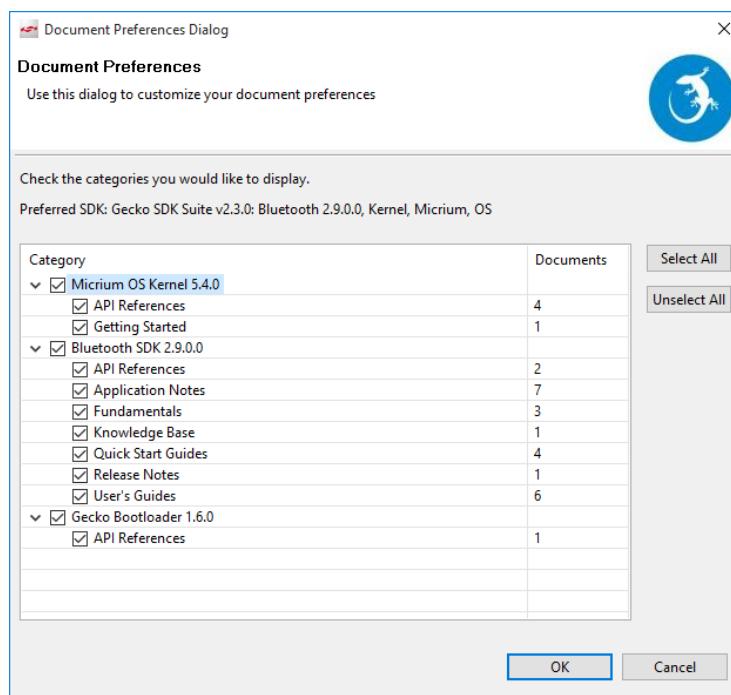


The **Documentation** tab lists documentation about the stack and about the hardware on the right, and documents you selected as favorites on the left. Click the star icon on any document to show it in the My Favorite Documents list.

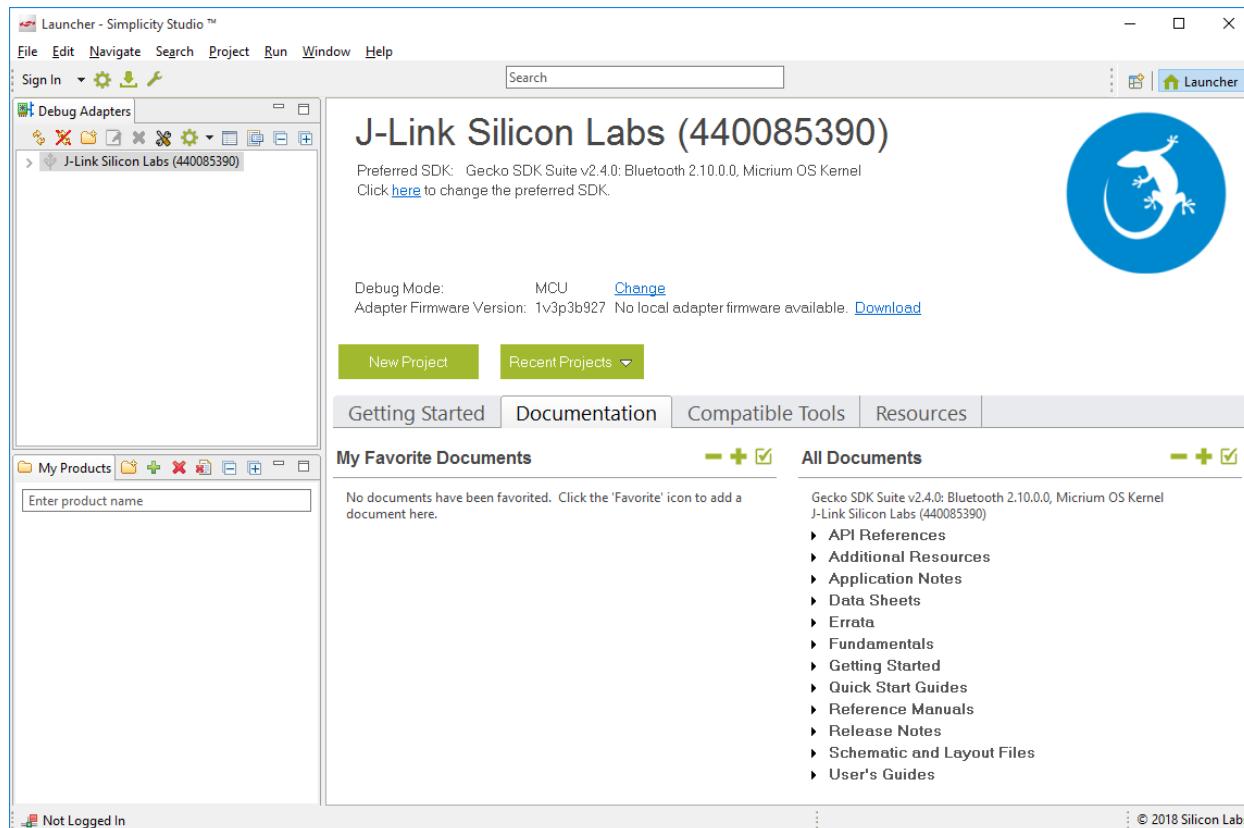

The **Compatible Tools** tab is an alternative way to access the tools available through the Tools dropdown.

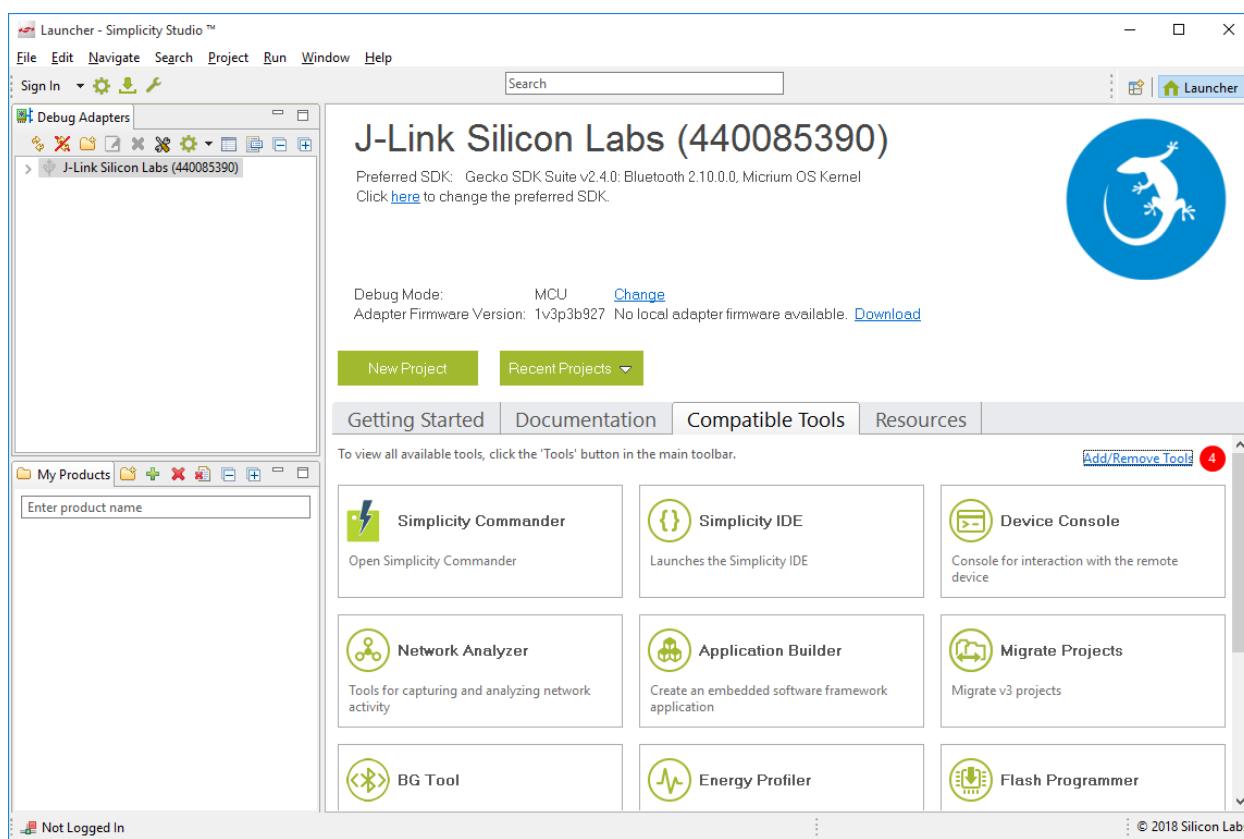

The **Resources** tab provides access to support, marketing collateral, and the Silicon Labs community.

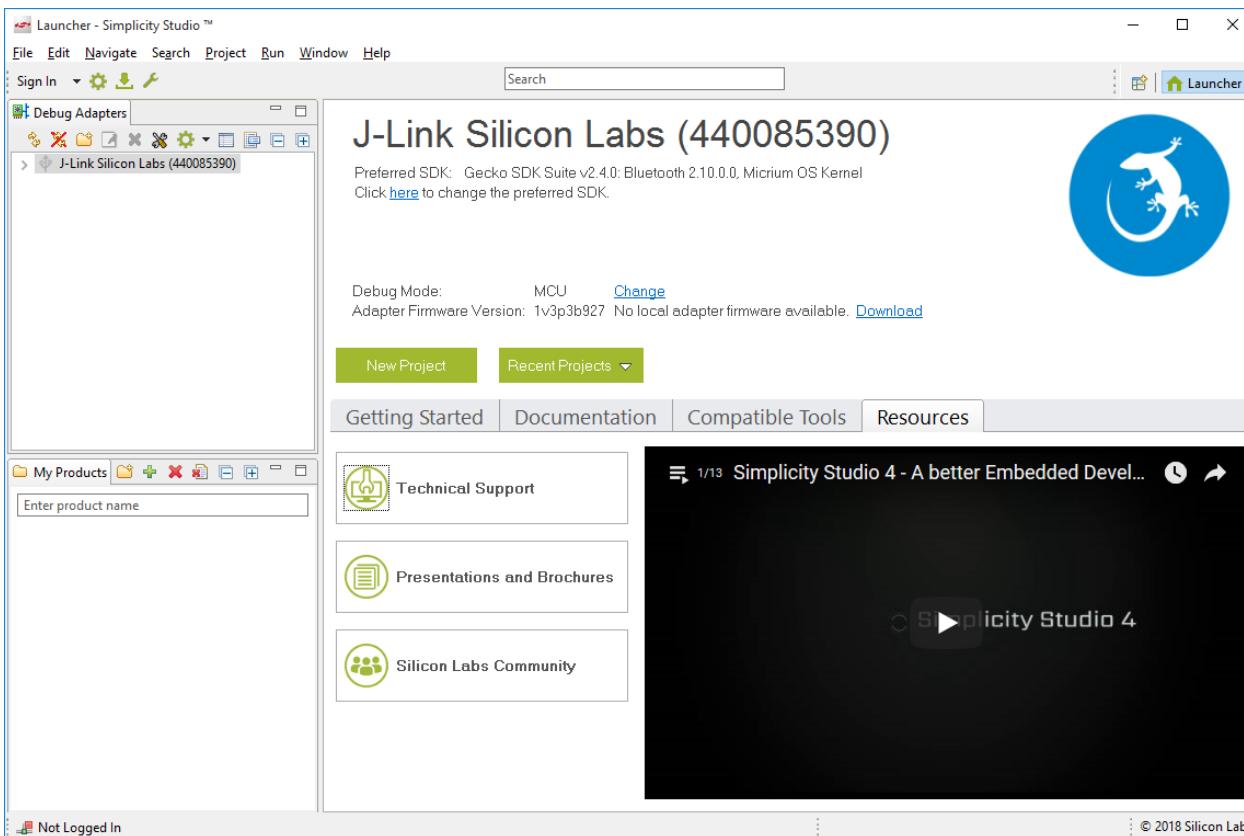


## 5 About Demos and Examples

Because starting application development from scratch is difficult, the Bluetooth SDK comes with a number of built-in demos and examples covering the most frequent use cases, as shown in the following figure. Demos are pre-built application images that you can run immediately. Software examples can be modified before building the application image. Demos with the same name as software examples are built from their respective example.

**Note:** The demos and examples you see are determined by the part selected. If you are using a custom solution with more than one part, click on the part you are working with to see only the items applicable to that part.

- To download and run a demo on your device, click the demo. In the Mode drop-down in the next dialog, select Run. Click **Start**.
- To import software example code into your workspace as a new project using default project configurations, click the name of the example to open the Simplicity Studio IDE. To build the example project click Debug (  ) in the upper left corner of the Simplicity IDE perspective. The Debug perspective opens. Click Play (  ) to start running your project on the device. To create a project with different configurations, click **New Project** (above the Demos column in the Launcher perspective), and proceed as described in section [6 Starting Application Development](#).

If an example project closely matches your needs, you need only extend the code with your application code, and rewrite only what must be customized for your needs. Otherwise you should start with the SOC-Empty application as described in section [6 Starting Application Development](#). Note that the 'SOC-Empty' application is not blank, but rather provides a minimal project that only starts advertising.

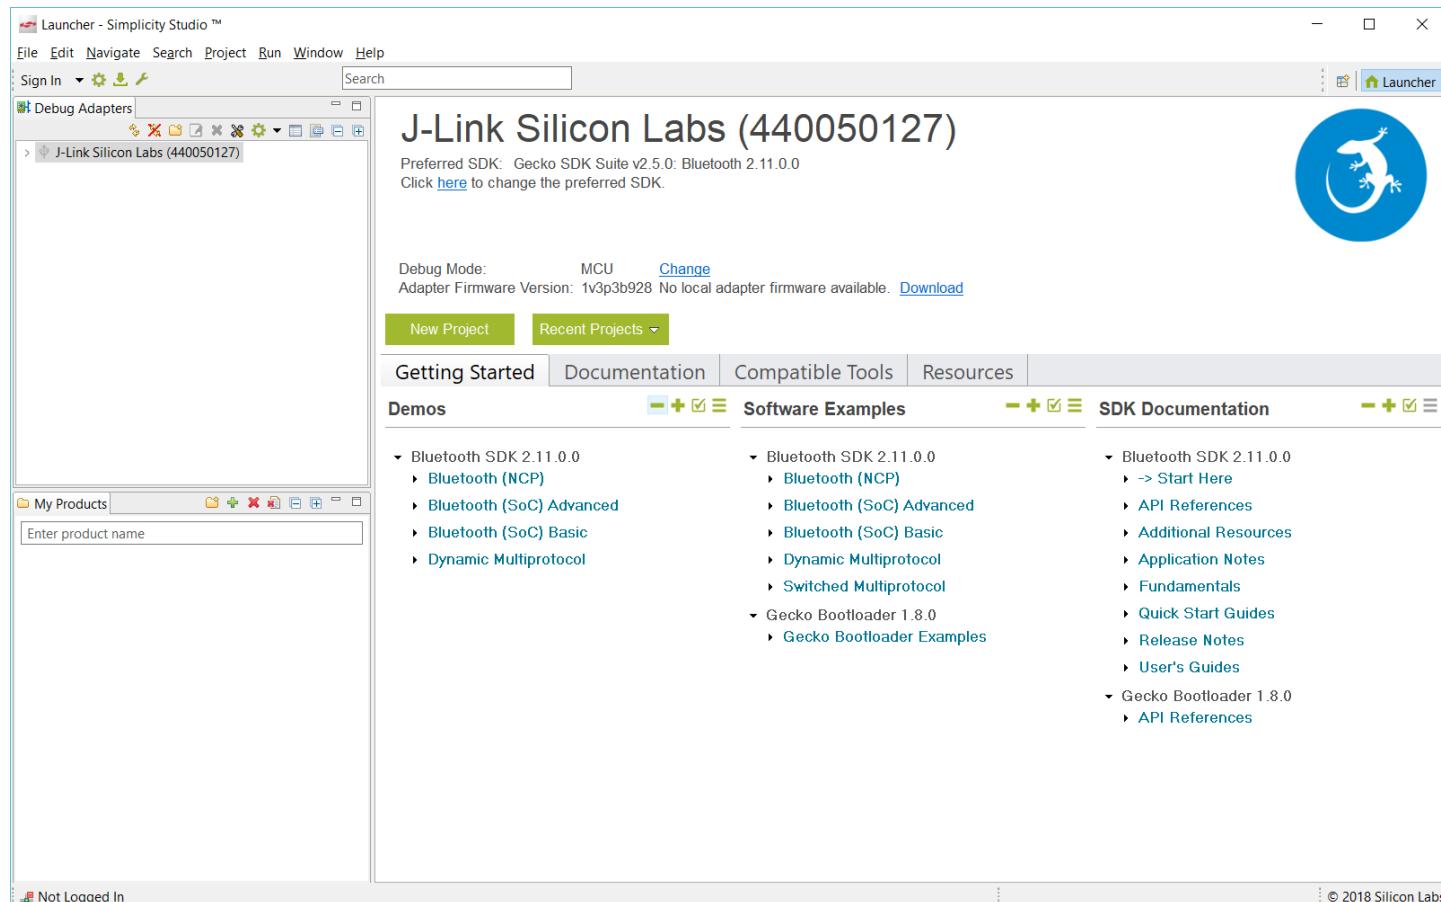

## 5.1 Software Example Descriptions

The following examples are provided. Examples with (\*) in their names have a matching pre-built demo.

- **Silicon Labs Gecko Bootloader examples** (see [UG266: Silicon Labs Gecko Bootloader User Guide](#) and [AN1086: Using the Gecko Bootloader with Silicon Labs Bluetooth Applications](#))

### • Bluetooth Examples

- **Bluetooth (NCP)**
  - **NCP – Host:** NCP (Network co-processor) Host example that connects to an NCP target via USART. It demonstrates the usage of BGlib with or without USART flow-control. This example does not have a Bluetooth function over the radio as it uses the EFR32 only as a host device.
  - **NCP target – Empty(\*):** Network co-processor target application with a minimal GATT database. Use this as a starting point to create an NCP firmware. An NCP device can be controlled from another (host) device or directly from your PC with BGTool. This example together with BG Tool provides an easy way to get started and also debug your application by issuing commands to the stack step-by-step.

### • **Bluetooth (SOC – Basic)**

- **SOC – Empty(\*):** A minimal project structure, used as a starting point for custom applications. The project has the basic functionality enabling peripheral connectivity and contains a minimal GATT database that can be expanded to fit your application requirements.
- **SOC – iBeacon:** An iBeacon device implementation that sends non-connectible advertisements in iBeacon format. The iBeacon Service gives Bluetooth accessories a simple and convenient way to send iBeacons to iOS devices. This example demonstrates the power consumption at 0 dBm TX power.
- **SOC – Thermometer – Client:** Implements a Client that discovers and connects up to 4 BLE devices advertising themselves as Thermometer Servers. It displays the discovery process and the temperature values received via UART.
- **SOC – Thermometer:** Implements the Thermometer (GATT Server) Role of the Health Thermometer Profile, which enables a Collector device to connect and interact with a Thermometer.

**Note:** Some radio boards will exhibit random pixels in the display when this example is running because they have a shared pin for sensor and display enable signals.

### • **Bluetooth (SOC – Advanced)**

- **SOC – DTM:** Used to run Bluetooth DTM (direct test mode) tests for radio testing. See [AN1046: Bluetooth® Radio Frequency Physical Layer Evaluation](#) for more information.
- **SOC – Smart Phone App(\*):** For use with the Silicon Labs Smartphone app (for more details visit: <http://www.silabs.com/bluegeckoapp>). Demonstrates the Health Thermometer Profile, Proximity Profile, and implements an iBeacon service that sends non-connectible advertisements in iBeacon format. This provides the functionality described in section [3 Getting Started with SLWSTK6101 Embedded Software](#).
- **SOC – Thermometer - RTOS:** The SOC - Thermometer example based on Micrium RTOS.

### • **Thunderboard**

- **SOC - Thunderboard React, - Thunderboard Sense, and - Thunderboard Sense 2(\*):** Examples used to show the applicable Thunderboard features.
- **SOC - Voice over Bluetooth Low Energy:** Demonstrates how voice capture can be sent over a Bluetooth Low Energy Link.

- **Dynamic Multiprotocol Examples** (see [AN1134: Dynamic Multiprotocol Development with Bluetooth and Proprietary Protocols on RAIL](#) for more information)

- **SOC - Empty - RAIL - DMP(\*):** A minimal project structure, used as a starting point for custom Dynamic Multiprotocol applications. The project has the basic functionality enabling peripheral connectivity, without GATT services. It runs on top of Micrium OS RTOS and multiprotocol RAIL.
- **SOC - Light - RAIL - DMP(\*):** Implements the Light (GATT Server) Role, which enables a Switch device to connect to and interact with it. The device acts as a connection Peripheral. This is a Dynamic Multiprotocol reference application, running on top of Micrium OS RTOS and multiprotocol RAIL. To learn how to test this demo see [QSG155: Using the Silicon Labs Dynamic Multiprotocol Demonstration Applications](#).
- **SOC - Range Test - RAIL - DMP(\*):** Range Test with Bluetooth connectivity. It runs on top of Micrium OS RTOS and multiprotocol RAIL.

- **NCP Host Examples** (located in C:\SiliconLabs\SimplicityStudio\v4\developer\sdks\gecko\_sdk\_suite\<version>\app\bluetooth\examples\_ncp\_host)

- **Empty:** Minimal host-side project structure, used as a starting point for NCP host applications.
- **ota-dfu:** Demonstrates how to perform a OTA DFU on a Silicon Labs Bluetooth Device. It requires a WSTK with a radio board flashed with an NCP firmware to be used as the GATT client that performs the OTA.
- **uart-dfu:** Demonstrates how to perform a UART DFU on a Silicon Labs Bluetooth Device running NCP firmware.

- **Voice over Bluetooth Low Energy:** Client-side application that couples with the “SOC – Voice over Bluetooth Low Energy” for the Thunderboard Sense kit. It requires a WSTK with a radio board flashed with an NCP firmware. For information on how to test this example see the Knowledge Base Article [“How to use Voice over Bluetooth Low Energy example for Thunderboard Sense”](#).

## 6 Starting Application Development


Developing a Bluetooth application consists of two main steps: defining the GATT database structure, and defining the event handlers for events such as `connection_opened`, `connection_closed`, and so on.


The most common starting point for application development is the **SOC – Empty** example. This project contains a simple GATT database (including the Generic Access service, Device Information service, and OTA service) and a while loop that handles some events raised by the stack. You can extend both the GATT database and the event handlers of this example according to your needs.

**Note:** Beginning with Bluetooth SDK version 2.7.0.0, all devices must be loaded with the Gecko Bootloader as well as the application. While you are getting started, the easiest way to do this is to load any of the precompiled demo images, which come with the bootloader configured as part of the image. When you flash your application it overwrites the demo application, but the bootloader remains. Subsequently you may wish to build your own bootloader, as described in *UG266: Silicon Labs Gecko Bootloader User Guide*. The first bootloader loaded on a clean device should always be the combined bootloader.

To start developing your application, follow these steps (illustrated in the following figure). **Note:** Your SDK version may be later than the version shown in the procedure illustrations. :


1. Click **New Project** in the Launcher perspective.
2. Select Bluetooth SDK and click **Next**.
3. Select **SOC – Empty** and click **Next**.
4. Name your project and click **Next**.
5. Verify that your selected part is shown, and select your preferred toolchain. Note: You should only select one toolchain. If you are using GCC, you must uncheck IAR. Otherwise the system will revert to IAR when you generate your files. Click **Finish**.

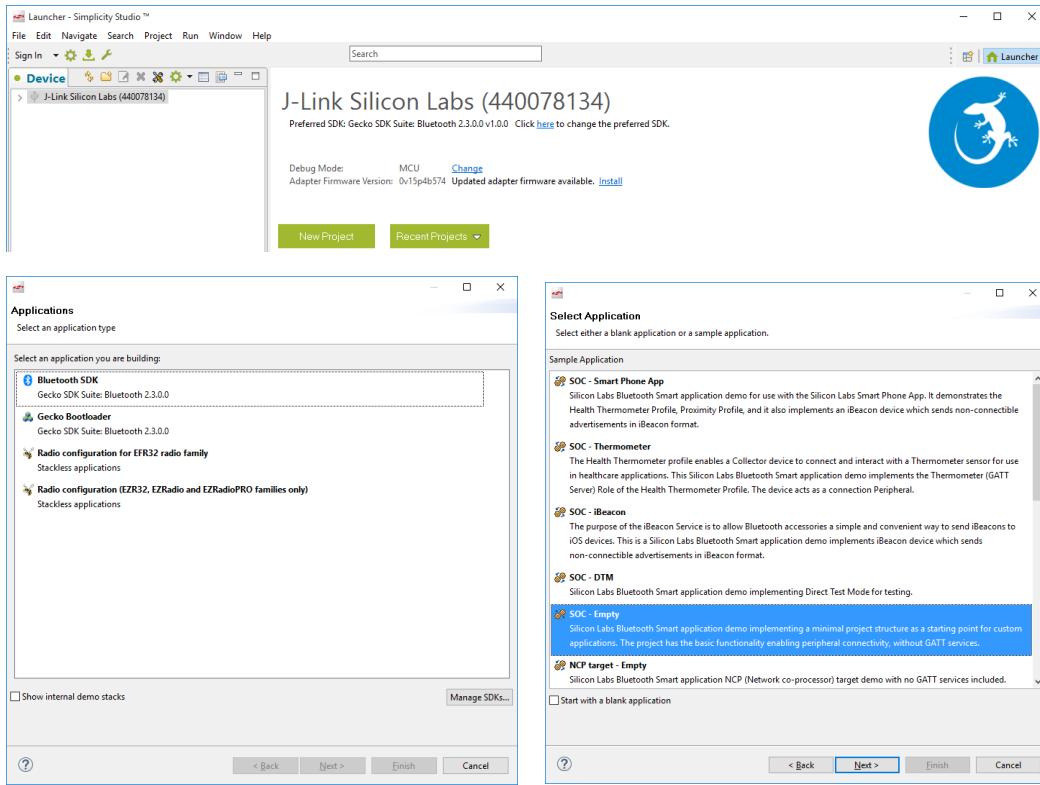

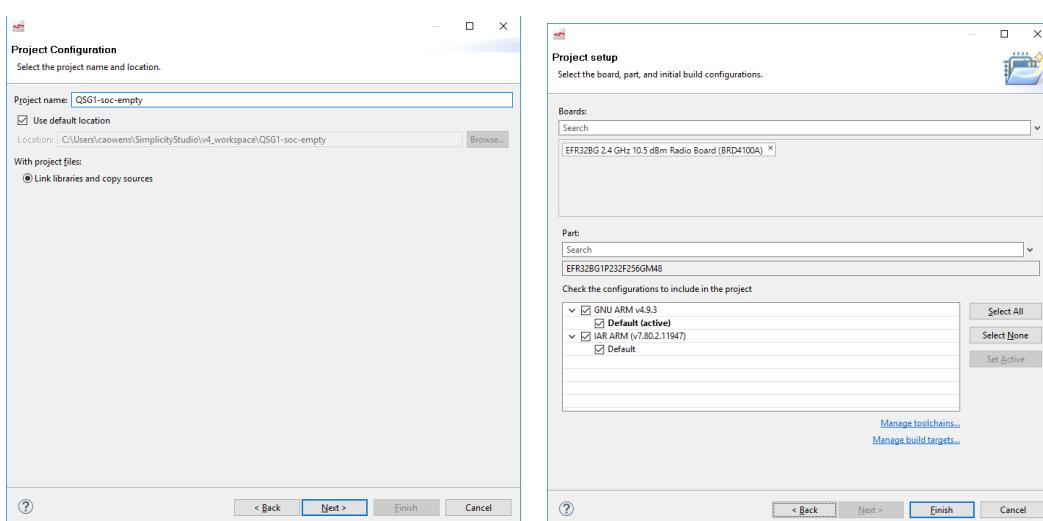

A visual GATT Configurator automatically appears after creating the project, to help you create your own GATT database with a few clicks. Note that a Simplicity IDE perspective button is now included in the upper right of the screen.

You can create your own database at this point, or return to it later by clicking the .isc file in the Project Explorer pane on the left. For more information, see section [7.1 The GATT Configurator](#).

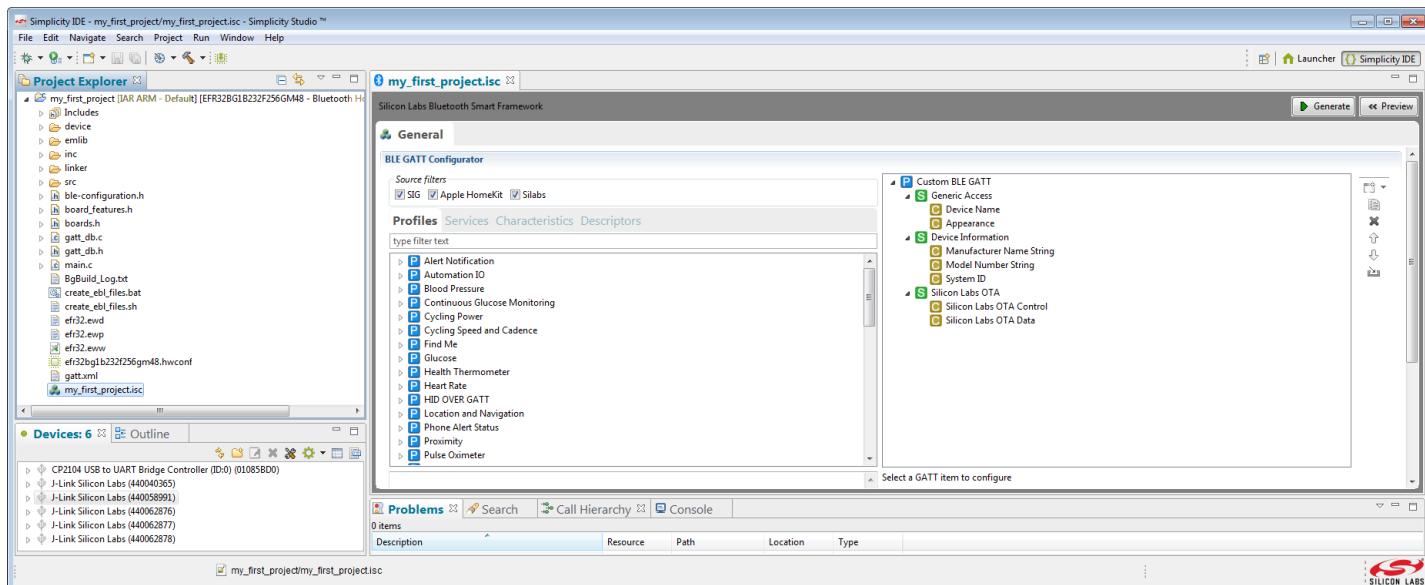

A reference for each characteristic is generated and defined in `gatt_db.h`. You can use these references in your code to read / write the values of the characteristics in the GATT database with `gecko_cmd_gatt_server_read_attribute_value()` / `gecko_cmd_gatt_server_write_attribute_value()` commands.

Open `main.c` by double-clicking it in Project Explorer. You will find the event handlers in the main loop. You can extend this list with further event handlers. The full list of events – and stack commands – can be found in the *Bluetooth Software API Reference Manual*.

The screenshot shows the Simplicity Studio IDE interface. The Project Explorer on the left lists several projects under 'my\_first\_project' and 'my\_second\_project'. The main window displays the 'main.c' file with code related to the Gecko bootloader. Two specific sections of the code are highlighted with red boxes: one around the handling of the 'gecko\_evt\_system\_boot\_id' event, and another around the handling of the 'gecko\_evt\_le\_connection\_closed\_id' event. The bottom navigation bar includes tabs for 'Problems', 'Search', 'Call Hierarchy', and 'Console'.

```

    gecko_init(&config);

    while (1) {
        /* Event pointer for handling events */
        struct gecko_cmd_packet* evt;

        /* Check for stack event. */
        evt = gecko_wait_event();

        /* Handle events */
        switch (BGLIB_MSG_ID(evt->header)) {

            /* This boot event is generated when the system boots up after reset.
             * Here the system is set to start advertising immediately after boot procedure. */
            case gecko_evt_system_boot_id:

                /* Set advertising parameters. 100ms advertisement interval. All channels used.
                 * The first two parameters are minimum and maximum advertising interval, both in
                 * units of (milliseconds * 1.6). The third parameter '7' sets advertising on all channels. */
                gecko_cmd_le_gap_set_adv_parameters(160,160,7);

                /* Start general advertising and enable connections. */
                gecko_cmd_le_gap_set_mode(le_gap_general_discoverable, le_gap_undirected_connectable);
                break;

            case gecko_evt_le_connection_closed_id:
                /* Restart advertising after client has disconnected */
                gecko_cmd_le_gap_set_mode(le_gap_general_discoverable, le_gap_undirected_connectable);
                break;
        }
    }
}

```

To build and debug your project click Debug ( ) in the upper left corner of the Simplicity IDE perspective. It will build and download your project, and open up the Debug perspective. Click Play ( ) to start running you project on the device.

## 6.1 Enabling Field Updates

Deploying new firmware for devices in the field can be done by UART DFU (Device Firmware Update) or, for SoC applications, OTA DFU. For more information on each of these methods refer to [AN1086: Using the Gecko Bootloader with the Silicon Labs Bluetooth Applications](#).

## 7 Development Tools


### 7.1 The GATT Configurator

Every Bluetooth connection has a GATT client and a GATT server. The server holds a GATT database: a collection of *Characteristics* that can be read and written by the client. The Characteristics are grouped into *Services*, and the group of Services determines a *Bluetooth Profile*.

If you are implementing a GATT server (typically on the peripheral device), you have to define a GATT database structure. This structure cannot be modified during runtime, so it has to be designed in advance. Clients (typically the central device) can also have a GATT database, even if no device will query it, so you can keep the default database structure in your code.

The GATT Configurator is a simple-to-use tool to help you build your own GATT database. A list of predefined Profiles/Services/Characteristics/Descriptors is shown in a pane in the upper left and your current GATT database structure is shown in a pane in the upper right. An options menu is provided to the right of the Database pane.

Click an item in the Database pane to see and modify its settings in a pane in the lower right. To add a Profile/Service/Characteristic/Descriptor to your database, simply drag and drop it from the list to your database.

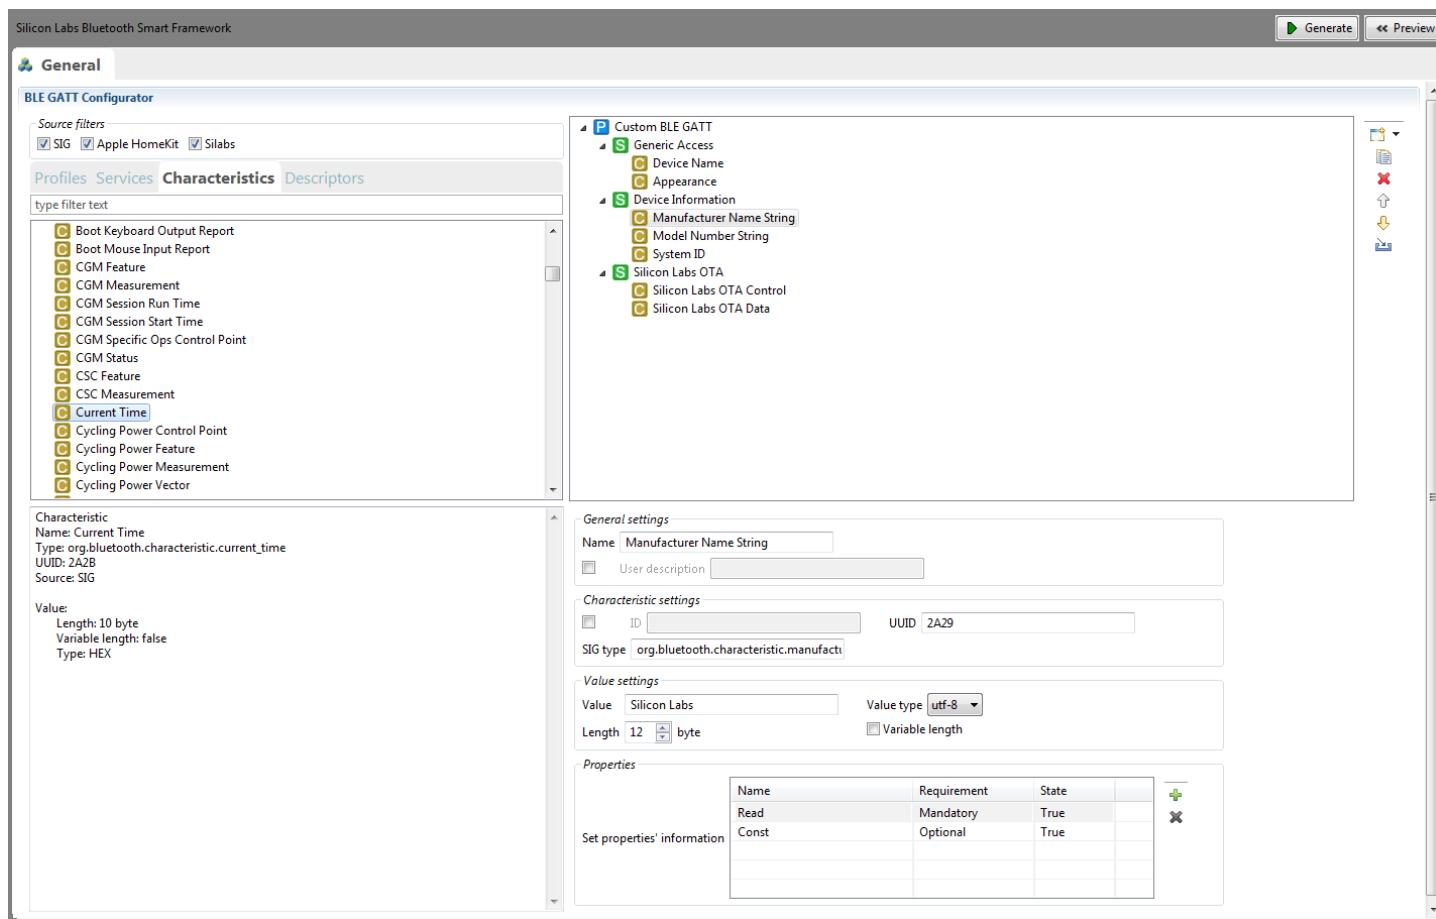

To get more information about a Profile/Service/Characteristic/Descriptor, click it either in the list or in your database. The description is displayed in the lower-left pane. You can find a detailed description of any Profile/Service/Characteristic/Descriptor on <https://www.bluetooth.com/specifications/gatt>.


Characteristics are generally complex structures of fields. The GATT Configurator currently does not list the fields within a characteristic. If you want to know what fields a characteristic has, visit <https://www.bluetooth.com/specifications/gatt/characteristics>.

More information about the GATT Configurator can be found in *UG365: GATT Configurator User's Guide*.


## 7.2 Multi-Node Energy Profiler

Multi-Node Energy profiler is an add-on tool, with which you can easily measure the energy consumption of your device in runtime. You can easily find peak and average consumption, and check for sleep mode current.

To profile the current project, drop down the Profile as menu (  ) in the Simplicity IDE perspective and select **Profile as / Simplicity Energy Profiler target**. This automatically builds your project, uploads it to the device, and starts Energy Profiler. A new Energy Profiler perspective appears, shown in the following figure.

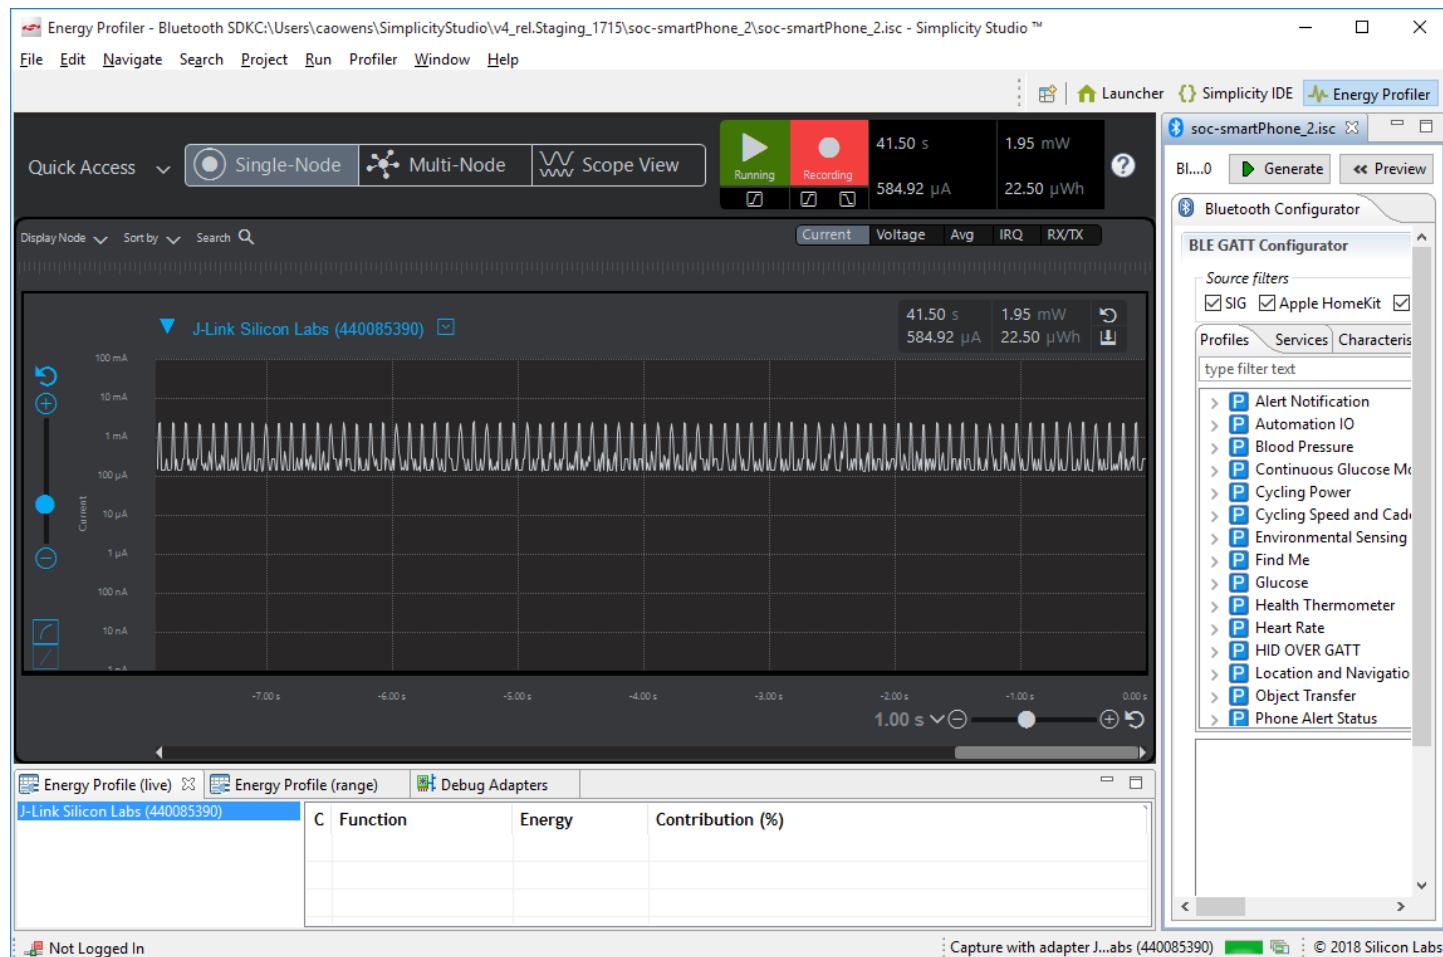

See *UG343: Multi-Node Energy Profiler User's Guide* for details on how to use this tool. You can switch easily between Simplicity IDE and Energy Profiler perspectives using the Perspective buttons in the upper right corner of your current perspective.




You can see peaks in the energy consumption diagram. Pause profiling by clicking Play , click one of the peaks, and zoom in with time axis (y-axis) zoom until you see three distinguishable peaks. These represent the three advertisement packets sent on the three advertisement channels. You can also see the three corresponding Tx events in the Rx/Tx bar below, provided that you enabled Rx/Tx view in the upper right corner. Note that the maximum consumption may now be greater than it appeared on the diagram before you zoomed in. This is because in zoomed-out mode, the displayed values are averaged. If you need exact values, always zoom in.

To measure average consumption, simply click and drag your mouse over a time interval. A new window appears in the upper right corner showing consumption information for the given interval. Bluetooth communication typically has a periodicity: the advertisement or the

connection interval. It is recommended to measure average over an advertisement or connection interval to obtain a proper average consumption. Overall average is measured as well, but this is influenced by transient events.



Multi-node Energy Profiler is also able to simultaneously measure the consumption of multiple devices. To start measuring a new device click the Quick Access menu (upper left corner) and select **Start Energy Capture**. To stop measuring, click the Quick Access menu, and select **End/Save session**.

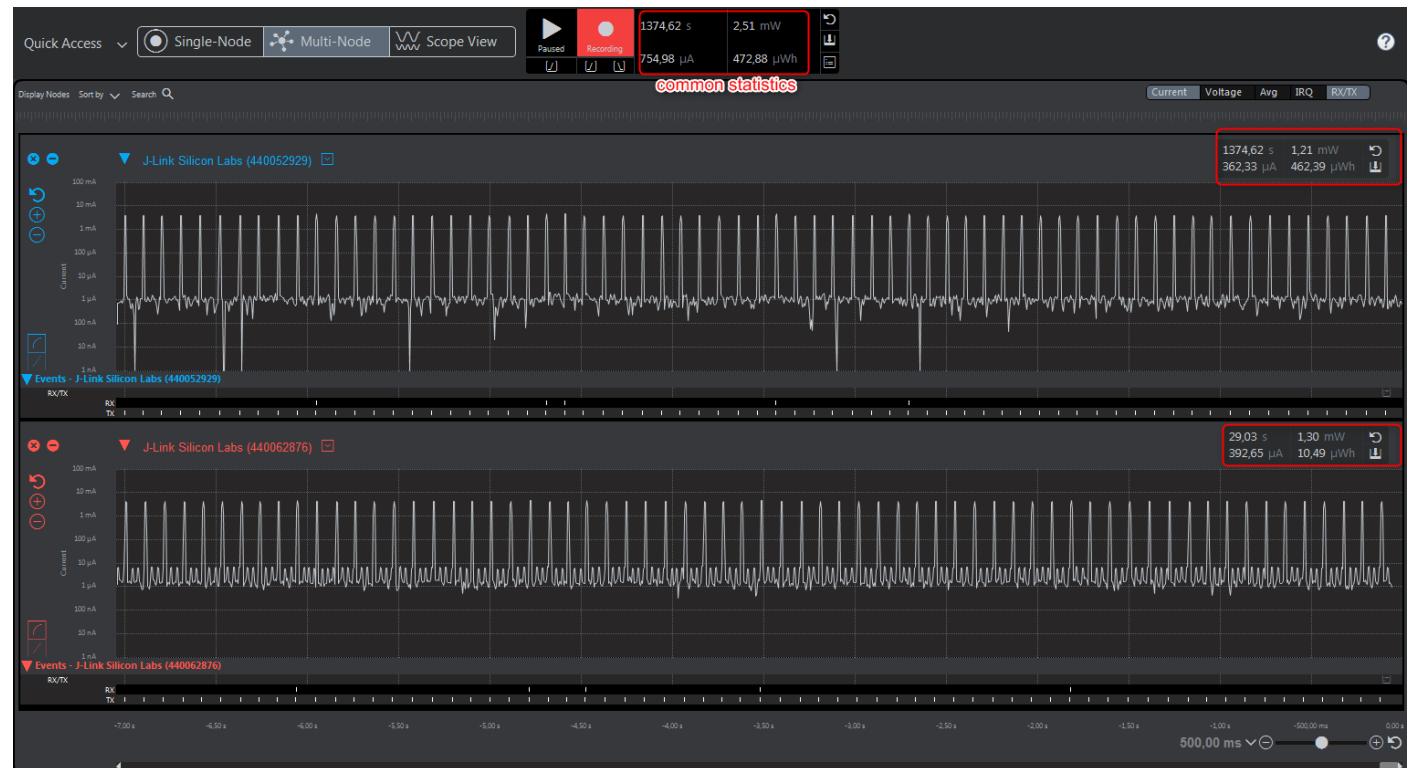


To learn more about how to use this tool, see *UG343: Multi-Node Energy Profiler User's Guide*.

### 7.3 Network Analyzer

Silicon Labs Network Analyzer is a free-of-charge packet capture and debugging tool that can be used to debug Bluetooth connectivity between Wireless Geckos and other Bluetooth devices. It significantly accelerates the network and application development process with graphical views of network traffic, activity, and duration.


The Packet Trace application captures the packets directly from the Packet Trace Interface (PTI) available on the Wireless Gecko SoCs and modules. It therefore provides a more accurate capture of the packets compared to air-based capture.

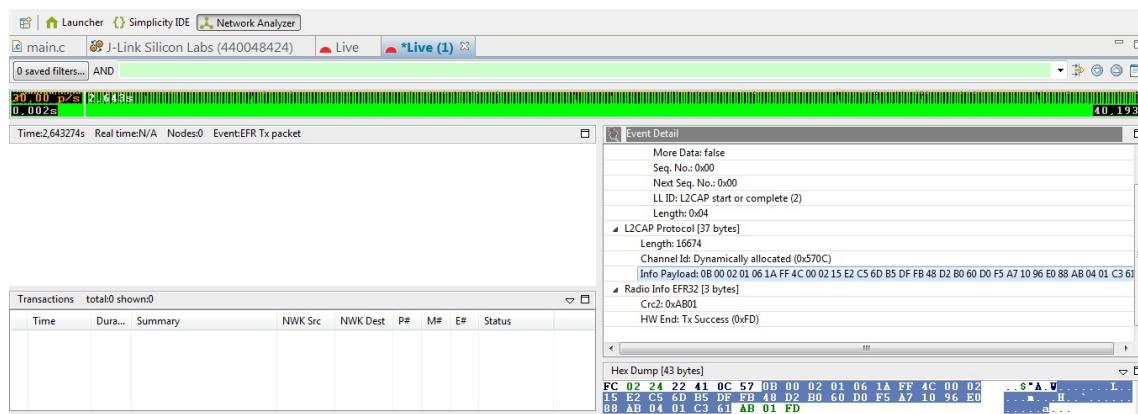

**Figure 7-1. Bluetooth Traffic Capture with Packet Trace**

### 7.4 Simplicity Commander

Simplicity Commander is a simple flashing tool, which can be used to flash firmware images, erase flash, lock and unlock debug access, and write-protect flash pages via the J-Link interface. Both GUI and CLI (Command Line Interface) are available. See *UG162: Simplicity Commander Reference Guide* for more information.

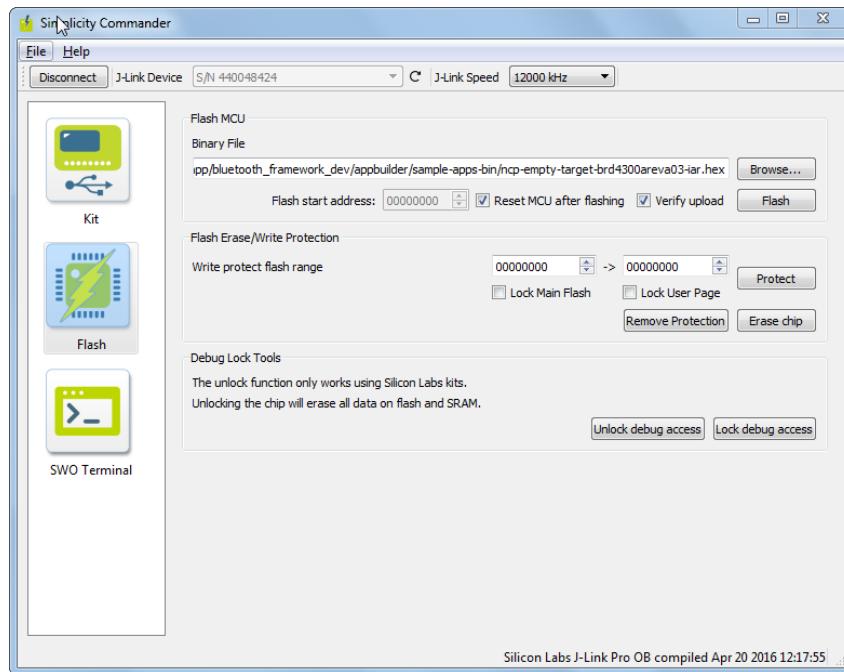

**Figure 7-2. Simplicity Commander**

## 7.5 BGTool Application

The BGTool application can be used to test and evaluate the Bluetooth SoCs and modules, and it can be used to control the Bluetooth hardware using the BGAPI Serial Protocol (NCP) over a Serial/UART interface.

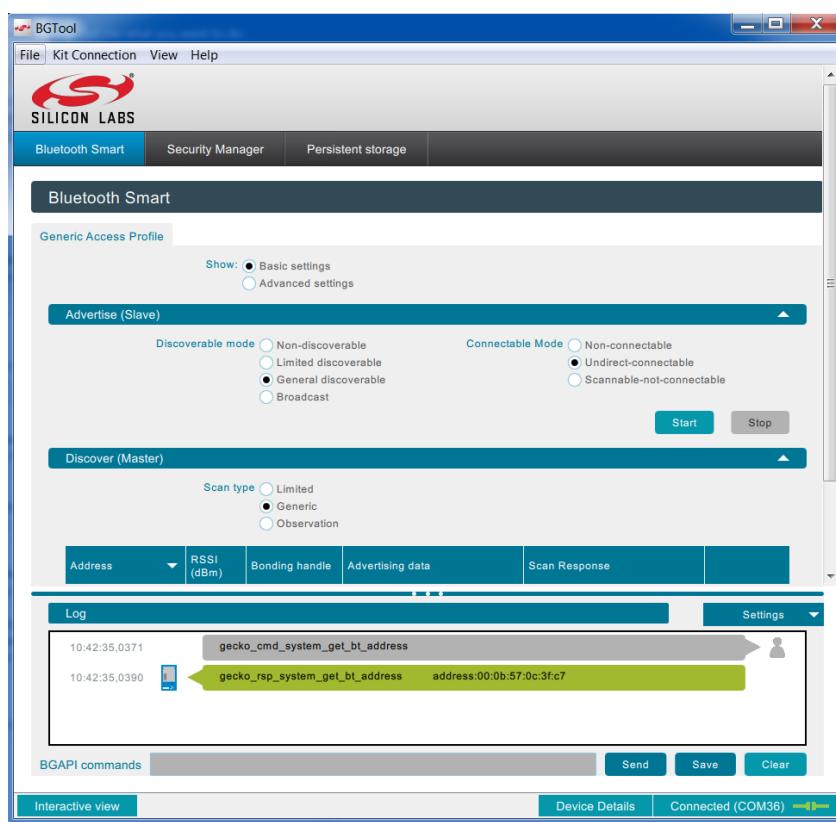


Figure 7-3. BGTool Application

## 7.6 IAR Embedded Workbench

IAR's Embedded Workbench can also be used as an IDE for developing and debugging Bluetooth applications. You must use the version of IAR that is compatible with the SDK version. See the SDK's release notes for compatible version information.

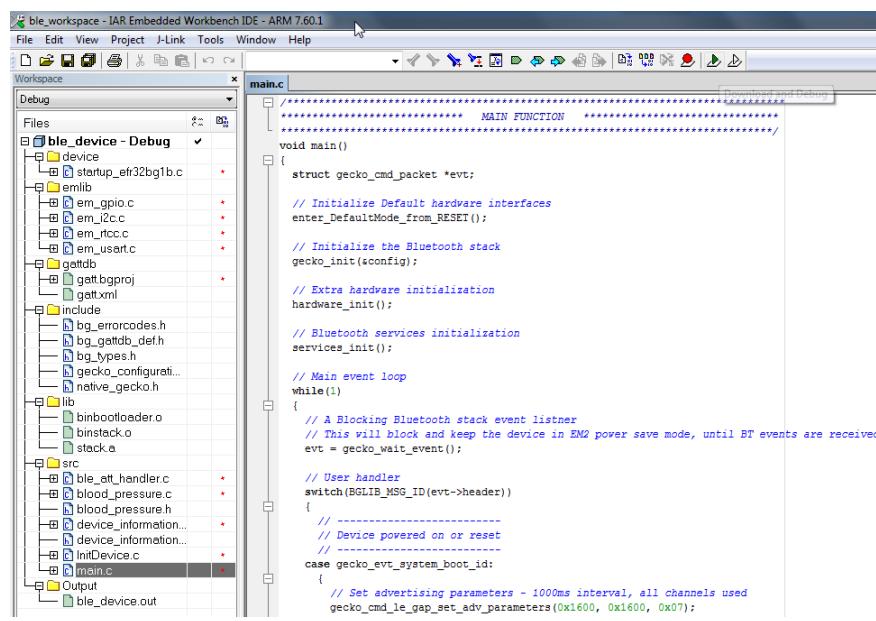


Figure 7-4. IAR Embedded Workbench

**Simplicity Studio**

One-click access to MCU and wireless tools, documentation, software, source code libraries & more. Available for Windows, Mac and Linux!



**IoT Portfolio**  
[www.silabs.com/IoT](http://www.silabs.com/IoT)



**SW/HW**  
[www.silabs.com/simplicity](http://www.silabs.com/simplicity)



**Quality**  
[www.silabs.com/quality](http://www.silabs.com/quality)



**Support and Community**  
[community.silabs.com](http://community.silabs.com)

#### Disclaimer

Silicon Labs intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Labs products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Labs reserves the right to make changes without further notice to the product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Without prior notification, Silicon Labs may update product firmware during the manufacturing process for security or reliability reasons. Such changes will not alter the specifications or the performance of the product. Silicon Labs shall have no liability for the consequences of use of the information supplied in this document. This document does not imply or expressly grant any license to design or fabricate any integrated circuits. The products are not designed or authorized to be used within any FDA Class III devices, applications for which FDA premarket approval is required or Life Support Systems without the specific written consent of Silicon Labs. A "Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Labs products are not designed or authorized for military applications. Silicon Labs products shall under no circumstances be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons. Silicon Labs disclaims all express and implied warranties and shall not be responsible or liable for any injuries or damages related to use of a Silicon Labs product in such unauthorized applications.

#### Trademark Information

Silicon Laboratories Inc.®, Silicon Laboratories®, Silicon Labs®, SiLabs® and the Silicon Labs logo®, Bluegiga®, Bluegiga Logo®, ClockBuilder®, CMEMS®, DSPLL®, EFM®, EFM32®, EFR, Ember®, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Ember®, EZLink®, EZRadio®, EZRadioPRO®, Gecko®, Gecko OS, Gecko OS Studio, ISOmodem®, Precision32®, ProSLIC®, Simplicity Studio®, SiPHY®, Telegesis, the Telegesis Logo®, USBXpress®, Zentri, the Zentri logo and Zentri DMS, Z-Wave®, and others are trademarks or registered trademarks of Silicon Labs. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. Wi-Fi is a registered trademark of the Wi-Fi Alliance. All other products or brand names mentioned herein are trademarks of their respective holders.



**Silicon Laboratories Inc.**  
400 West Cesar Chavez  
Austin, TX 78701  
USA

<http://www.silabs.com>