# Quick Start Guide

## 01 CONTENTS OF BOX

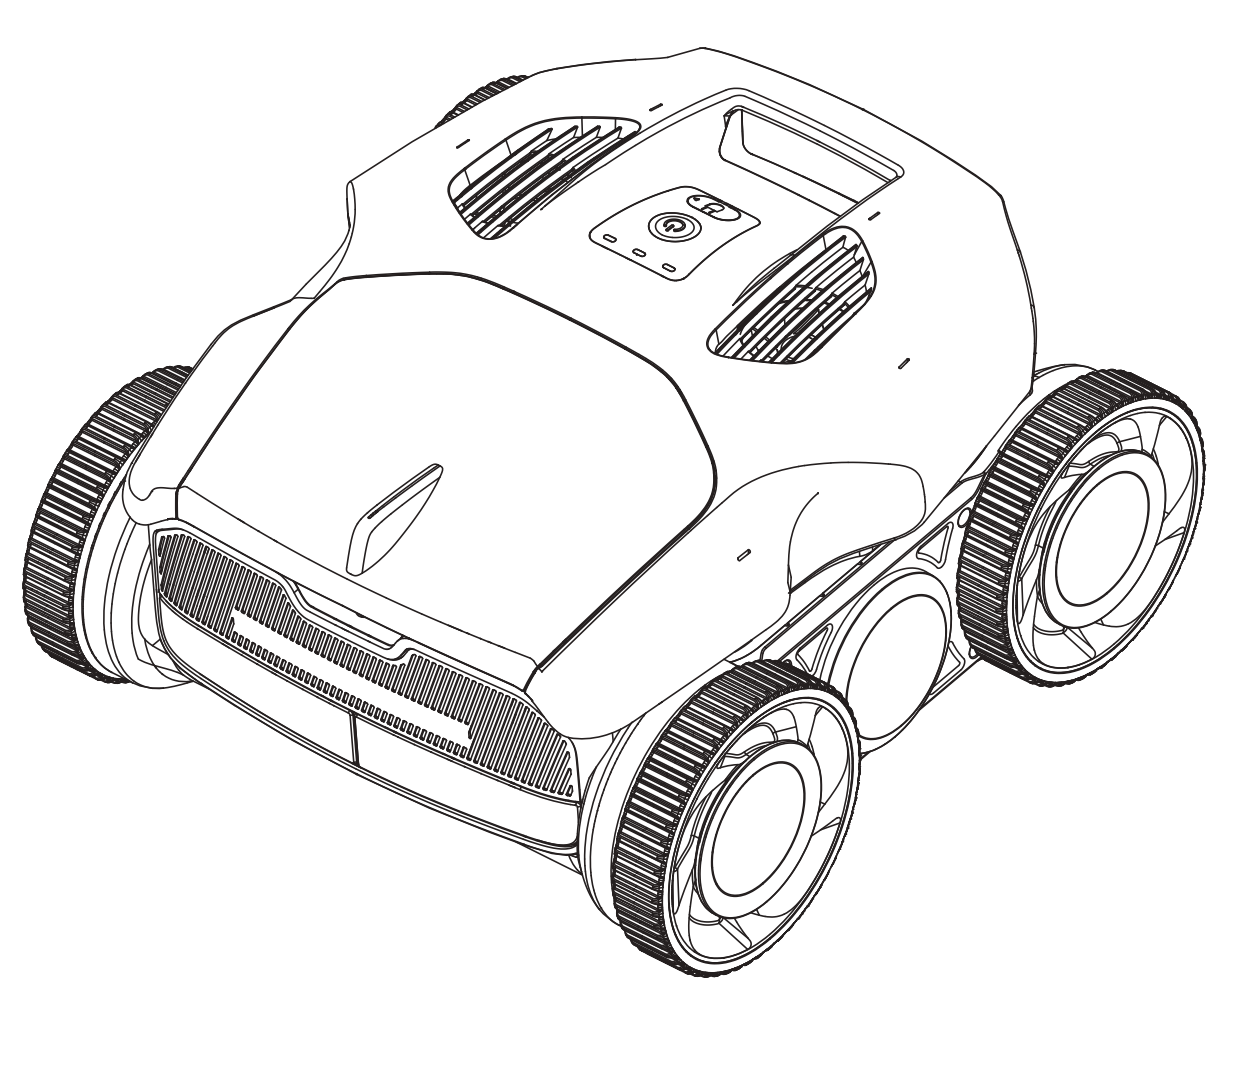

Robotic Pool Cleaner

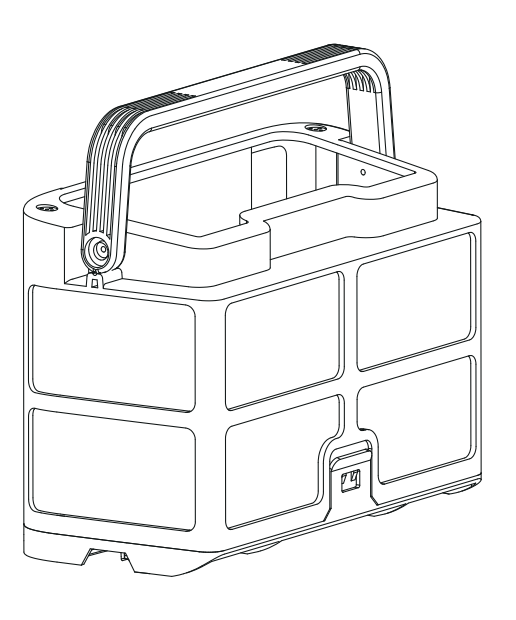

Filter Basket



Catch hook

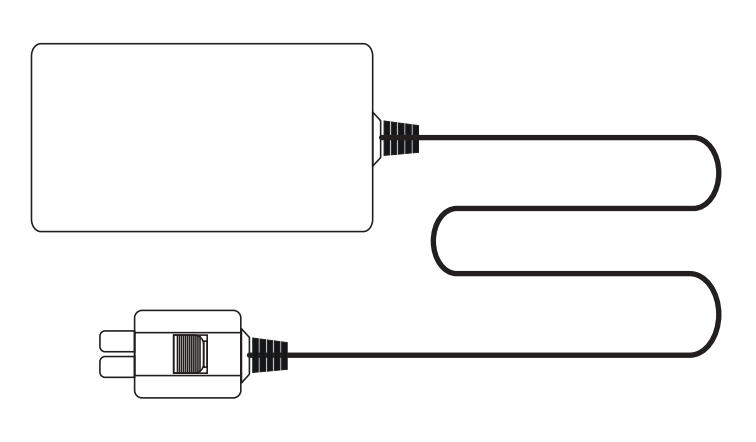

Charger

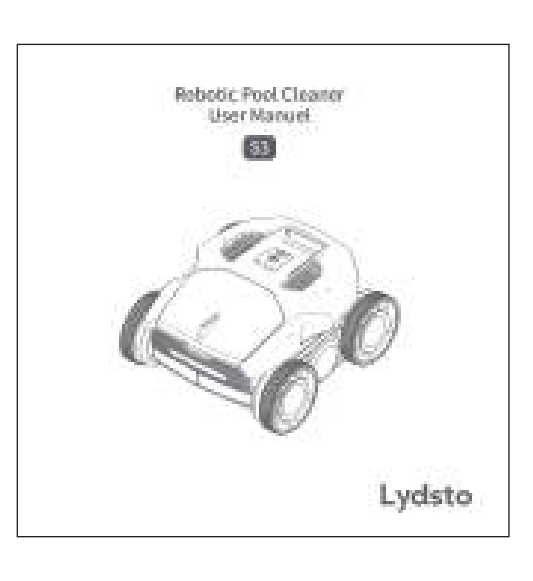

User Manual

## 02 PRODUCT USE

1. When charging, the front of the chassis needs to be facing upwards.

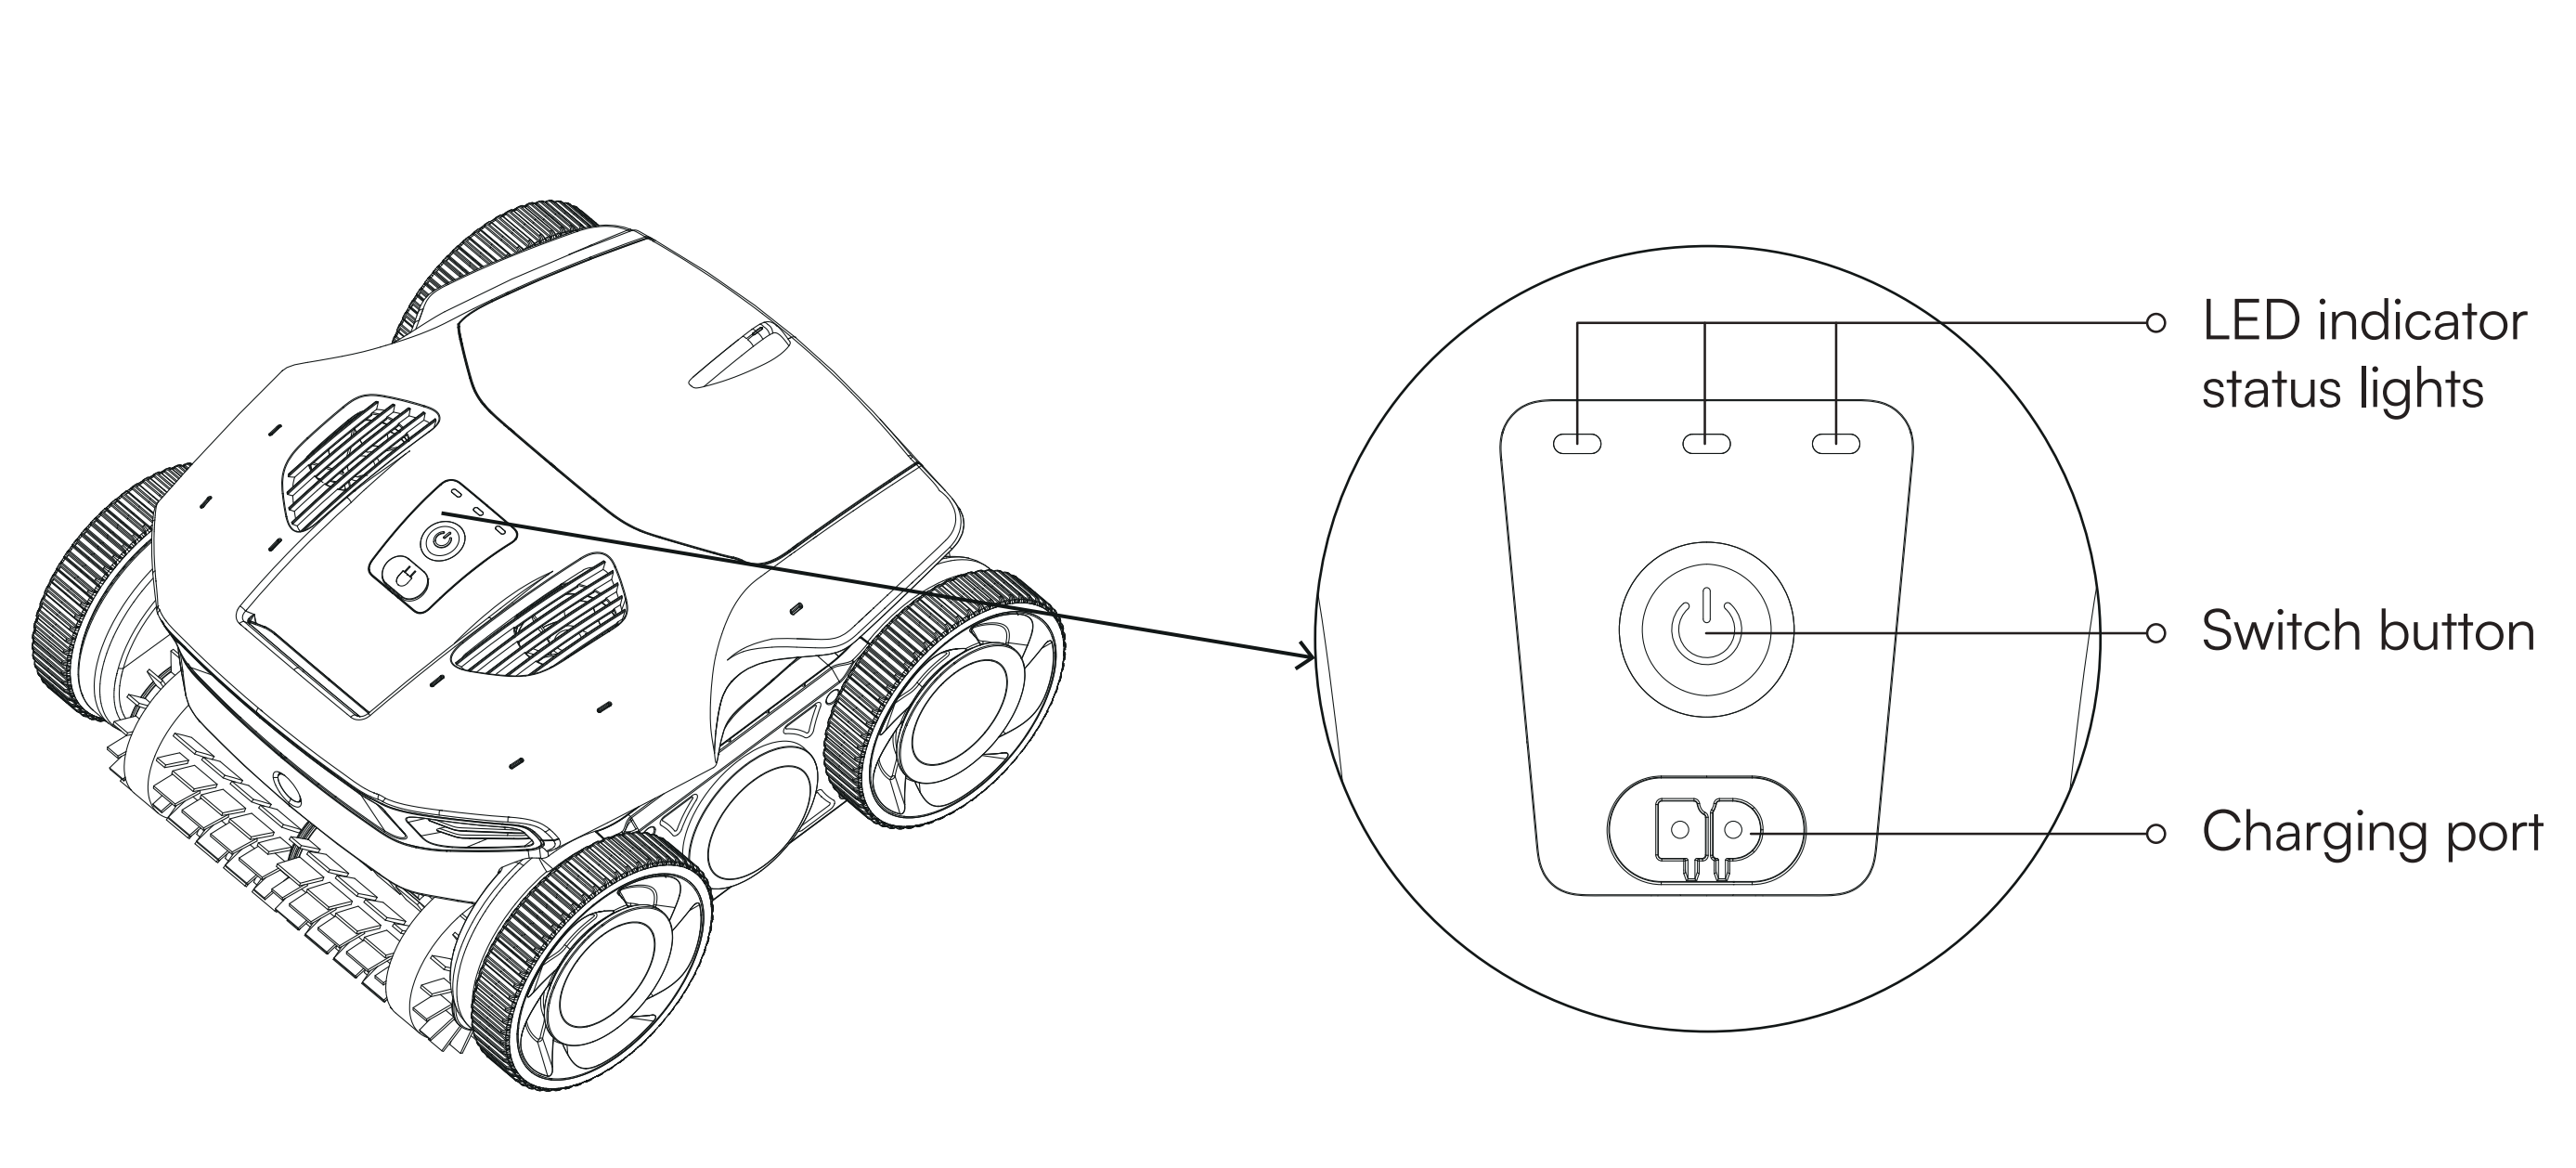

| LED indicator status | Meaning |
|---|---|
| Constant green light | Working |
| Red light breath when on charger | Charging |
| Constant green light when on charger | Charging Completed |
| Red light blinks while robot waits by pool wall | Low battery level |

## 02 PRODUCT USE

2. Place the bottom of the cleaner toward the pool to avoid scratches.

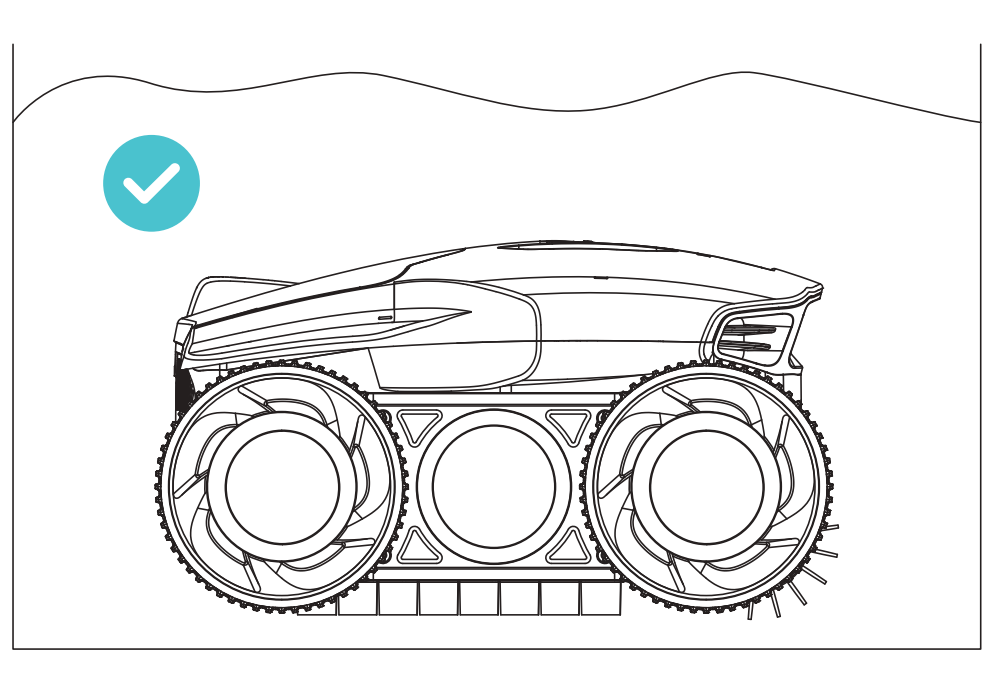

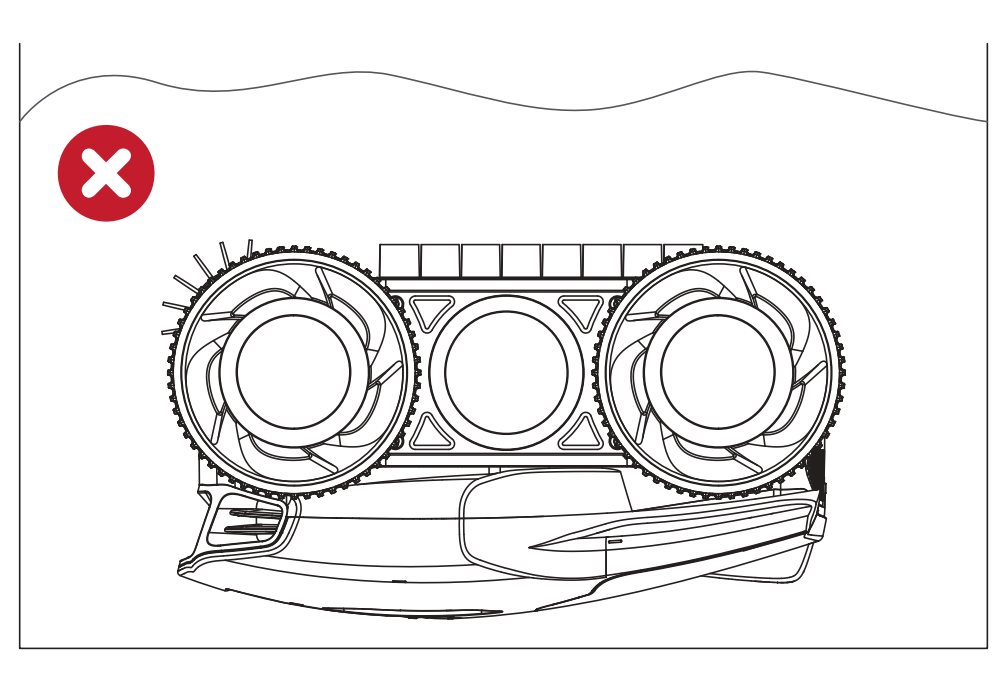

3. Please prepare a suitable tube for connection with the hook to facilitate retrieval of the machine from the water. The inner diameter of the tube is greater than 27.5-30mm.

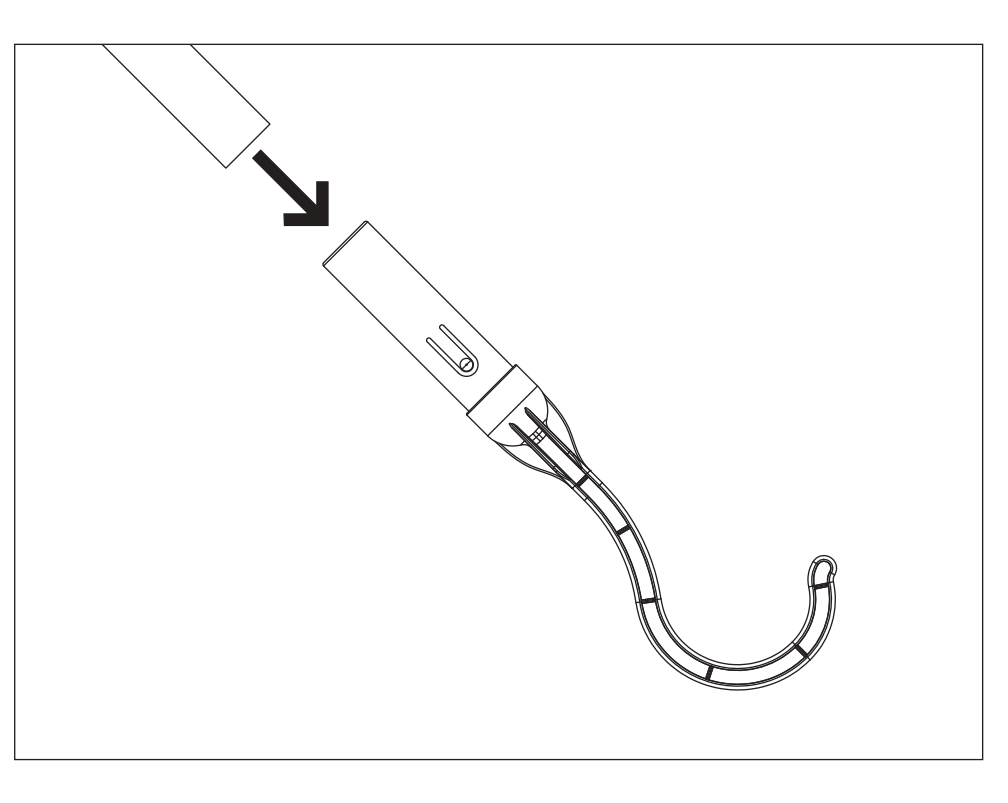

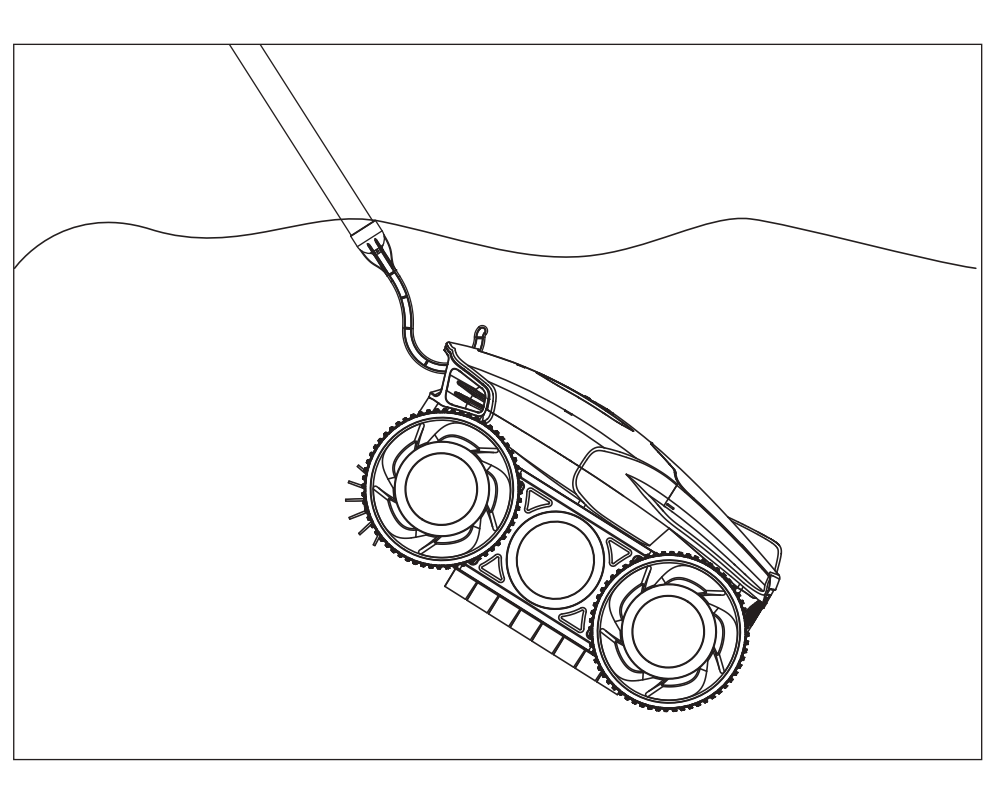

## 03 APPLICATION SET UP/USE

1.Download the Lydsto App by scanning the QR code or from your device's app store.

2.Open the Lydsto APP, sign up or log in. Select "Add Device", choose "Lydsto S3" from the product list, and follow the prompts to complete the setup.

3.Turn on the pool cleaner, quickly press the button to switch modes more than 10 times within 5seconds until the green lights blink, then the cleaner will enter the network distribution mode.

Make sure the Bluetooth on your phone is turned on, and add the device to the APP.

4.As shown in the figure, you can switch the robot's working modes (FLOOR/WALL/ALL) and check its working status via the APP.

You can also access the user manual, firmware version, consumable lifespan and other related information through the secondary menu.

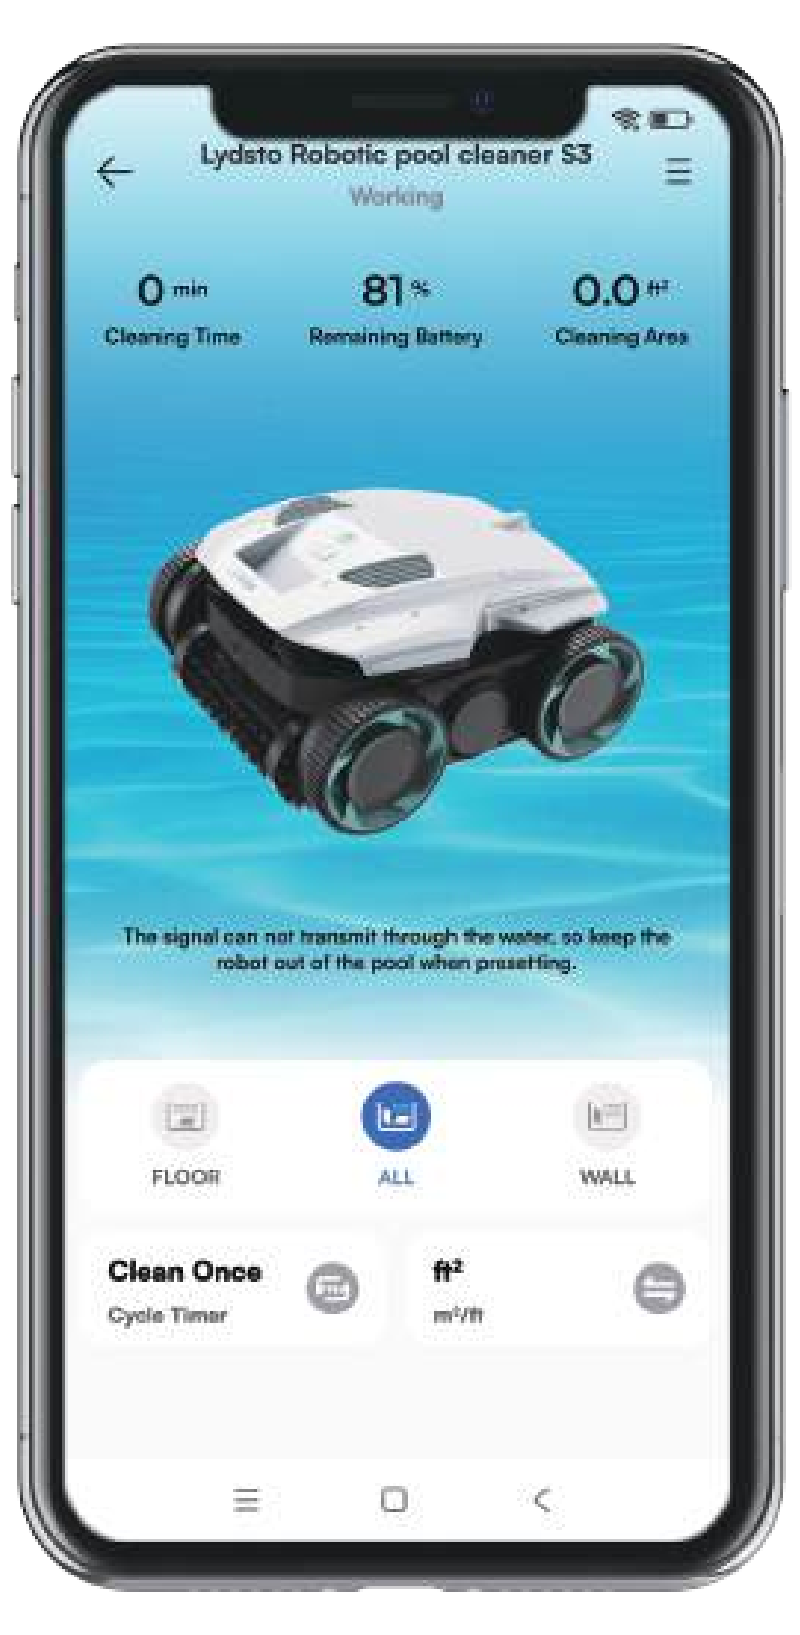

The signal can not transmit through the water, so keep the robot out of the pool when presetting.

Lydsto download QR code

## 04 CHARGING

1. For optimal battery performance, fully charge the device via the Power adapter before first use. Locate the charging port of the machine (see diagram). Ensure the charging port is completely dry. Charge at least 3.5m away from pools.
2. Replace charging port cap firmly.

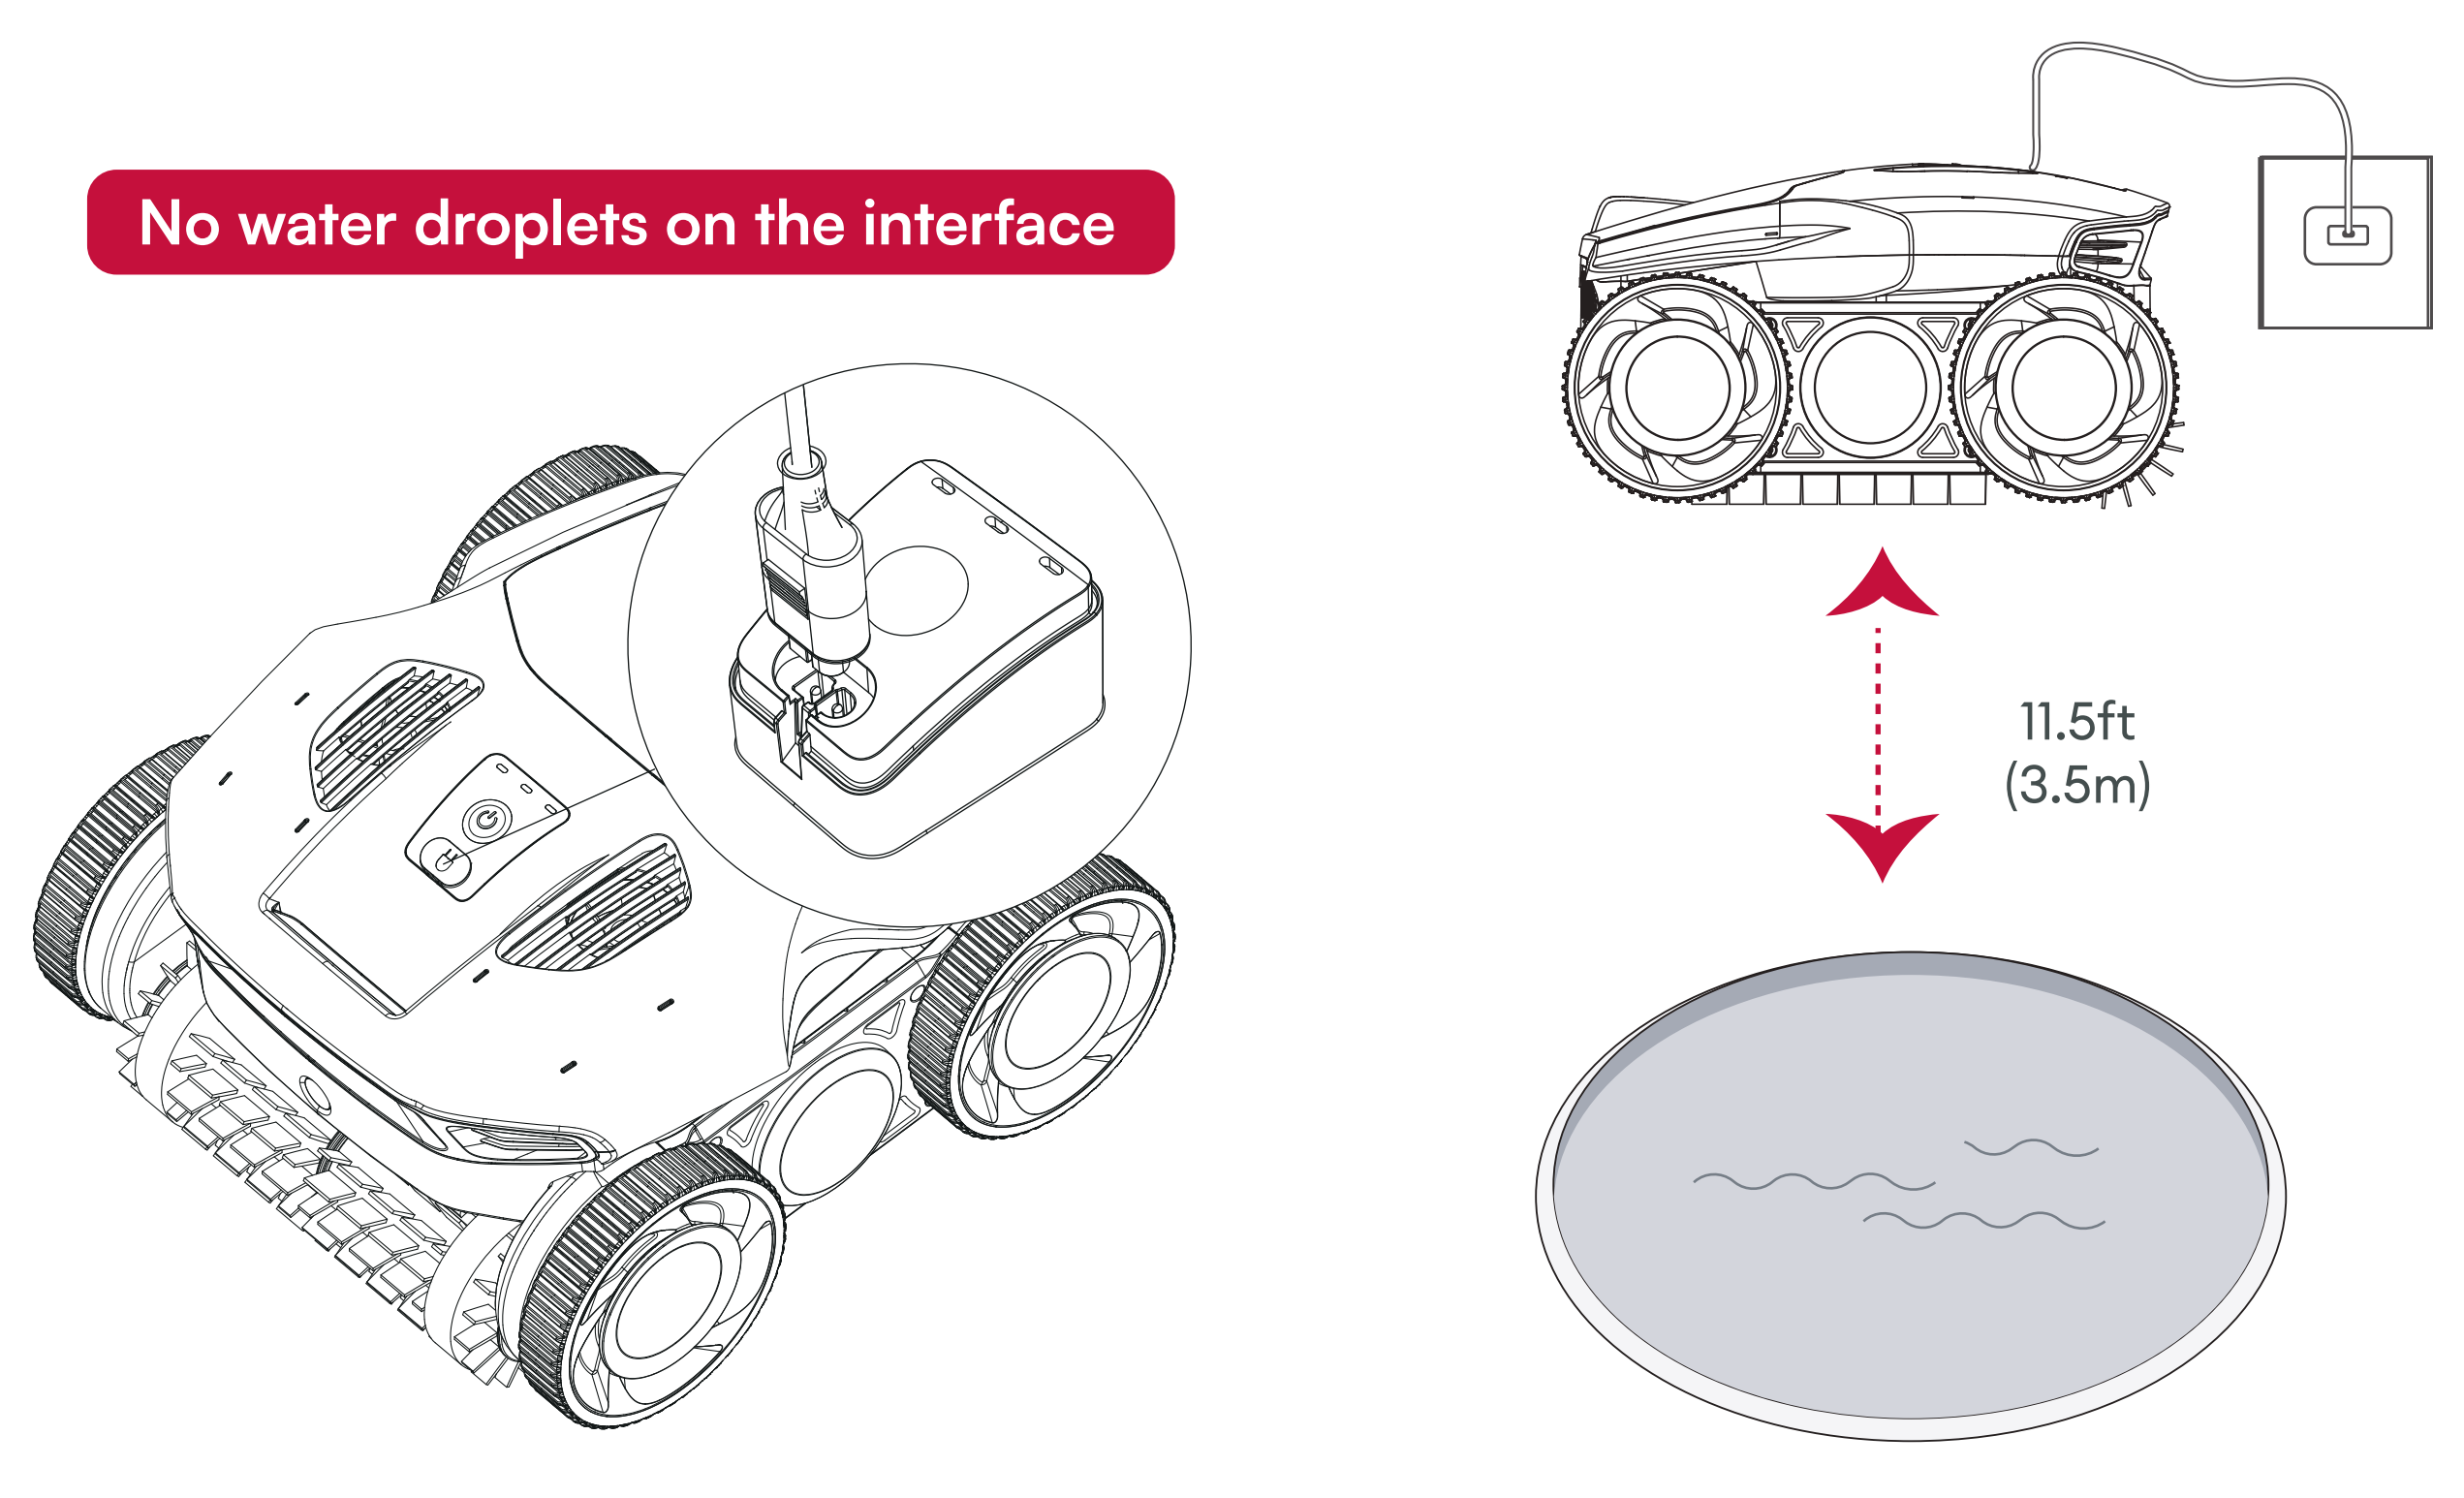

## 05 MAINTENANCE

1. Open the cleaner through the buckle.

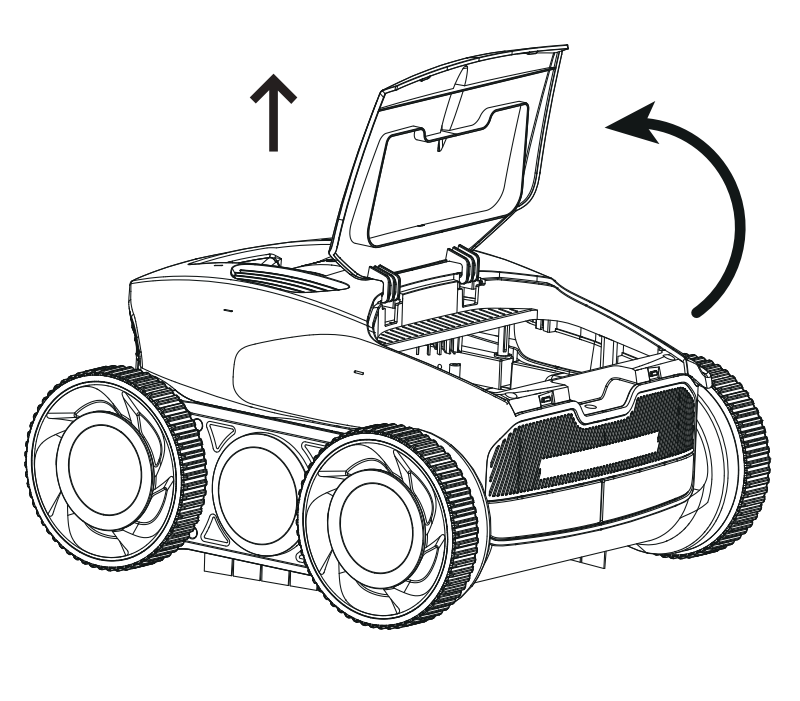

2. Remove the filter.

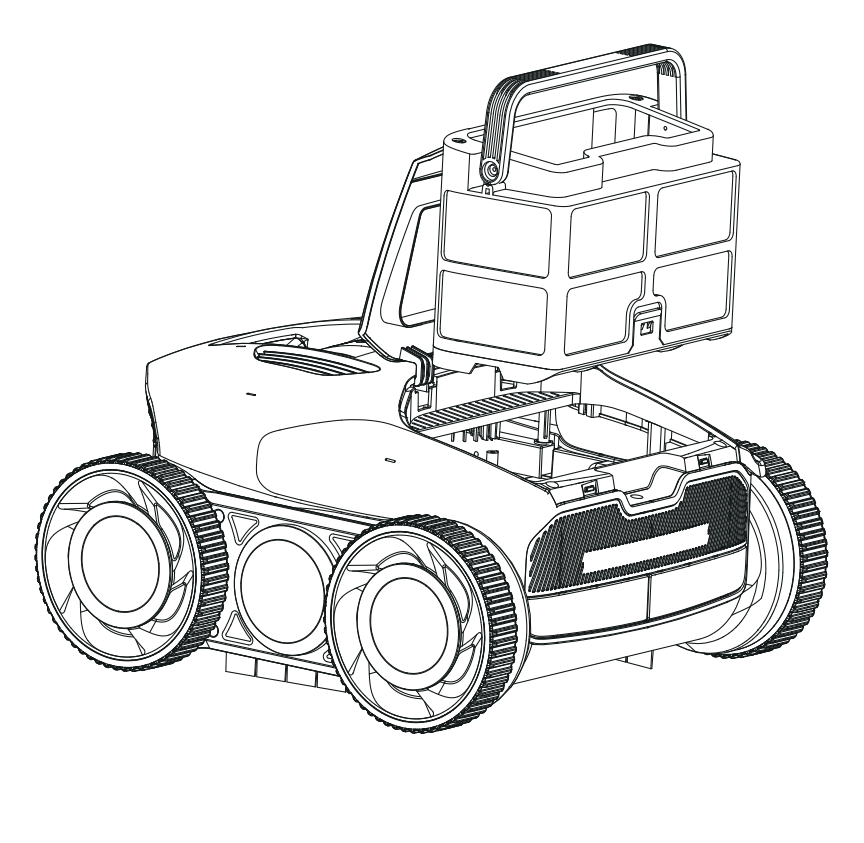

3. Clean the filter and chassis.

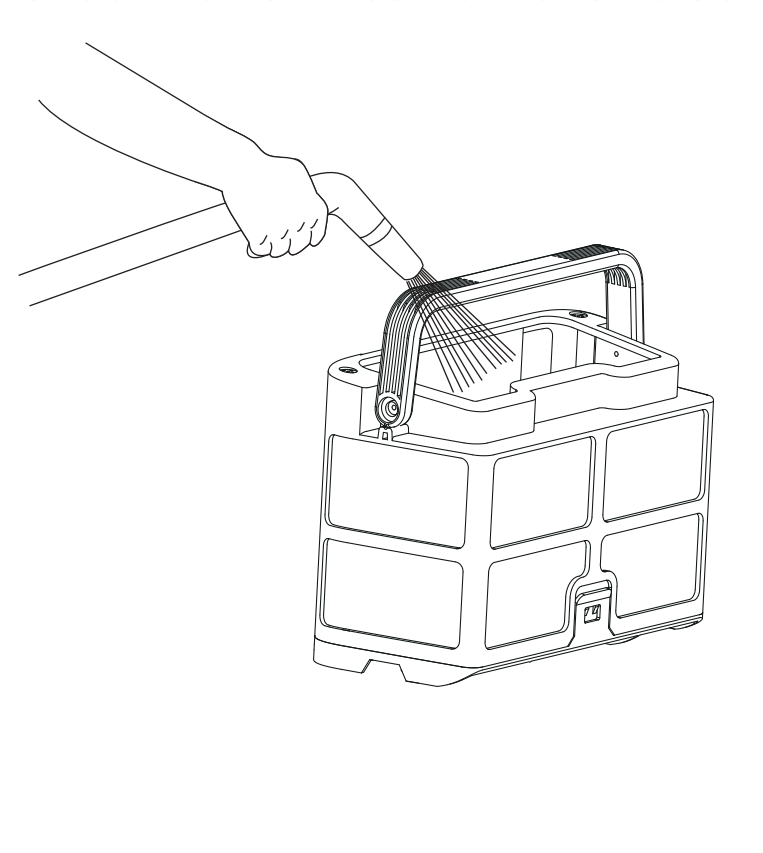

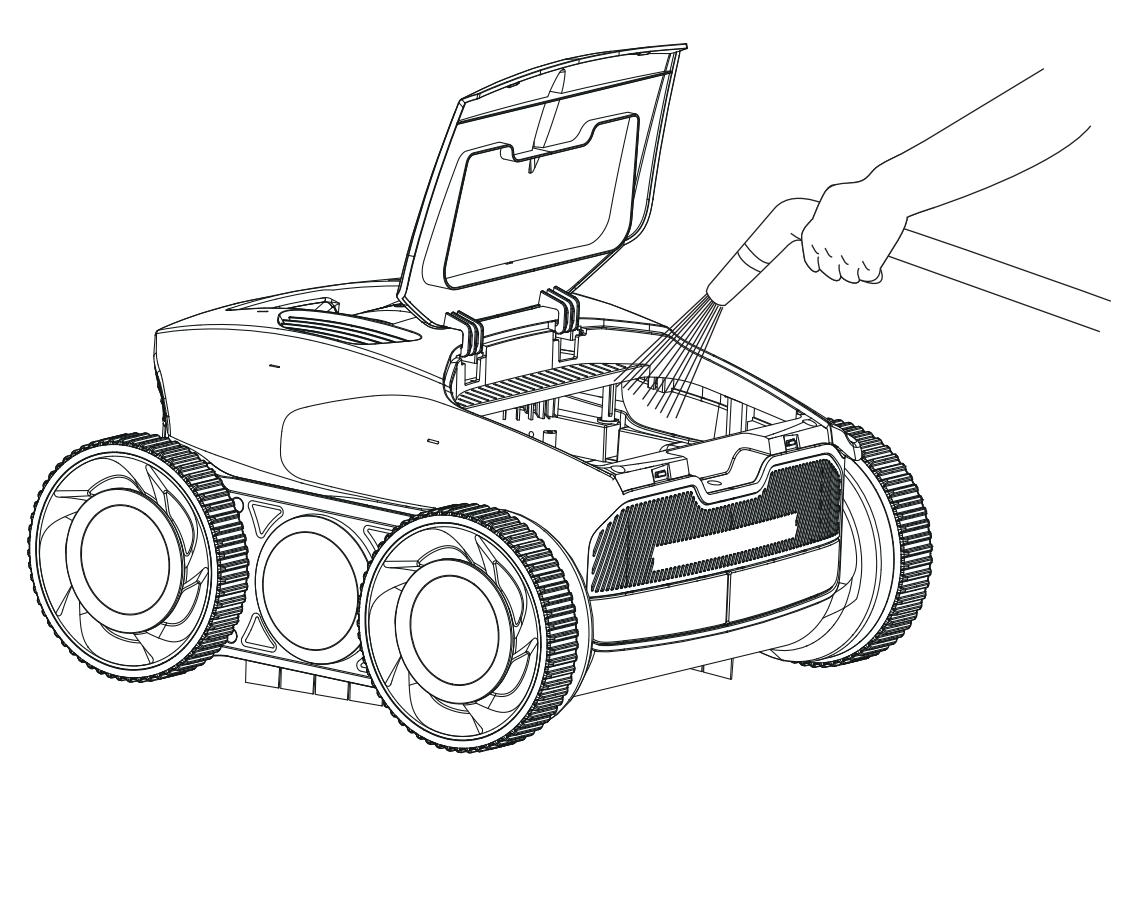

## 06 SAFETY INSTRUCTIONS

### WARNING

1. If the charger is damaged, including falling into the water, quickly and safely disconnect it from the power outlet. Do not use a charger that has been damaged.
2. Remove the robotic pool cleaner from the pool before allowing people to enter the pool.
3. When examining the robotic pool cleaner, make sure the robotic pool cleaner is switched OFF.
4. Charge the battery only in the temperature range between 6°C to 35°C / 43°F - 95°F.
5. Keep the robotic pool cleaner out of the reach of children or persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Cleaning and maintenance shall not be done by children.
6. The battery charger must be supplied through a power circuit protected by a residual current device (RCD) having a rated residual operating current not exceeding 30mA.
7. DO NOT USE the robotic pool cleaner and/or its battery / power pack in case of mechanical damage to the robotic pool cleaner and/or its battery.
8. To avoid the risk of fire and burns, DO NOT open, crush, heat, or burn the battery case.
9. Position the battery charger at least 3.5 m / 11.5 ft from pool edge during operation.
10. Keep hands and fingers away from impeller motor area and driving wheel mechanism to avoid injury.

## 07 FAQ

| No. | Symptom | Diagnose | Solution |
|---|---|---|---|
| 1 | Robot unable to climb walls | Filter basket may be full. | Please clean the filter basket. |
| 2 | Robot slows down in straight-line motion | Filter basket may be full. | Please clean the filter basket. |
| 3 | Robot full battery, but inoperable with rapid red light flashing after submersion | Initialization failed. | Please restart the device on a level surface, either on the water or on the ground. |
| 4 | Robot stops or gets stuck | Check the robot's working pool environment. | 1. Check if the cleaning scraper is stuck;<br>2. Check if the pool bottom is uneven;<br>3. Check for any objects obstructing the bottom |
| 5 | Robot's speed decreases and suction weakens | 1. Filter basket may be full;<br>2. The robot is low battery. | 1. Please clean the filter basket;<br>2. Please charge. |
| 6 | Charging port corroded due to electrolysis | Improper operation during charging. | 1. After each use, wipe the charging pins clean and dry them with a paper towel or cotton swab;<br>2. Always install the waterproof plug after charging. |
| 7 | Unable to connect to the APP | 1. Ensure your phone is near the robot and Bluetooth is enabled;<br>2. The robot is working or in standby underwater. | Due to the Bluetooth module's inability to communicate underwater, the APP will show a "failed to connect" or disconnected status. |