


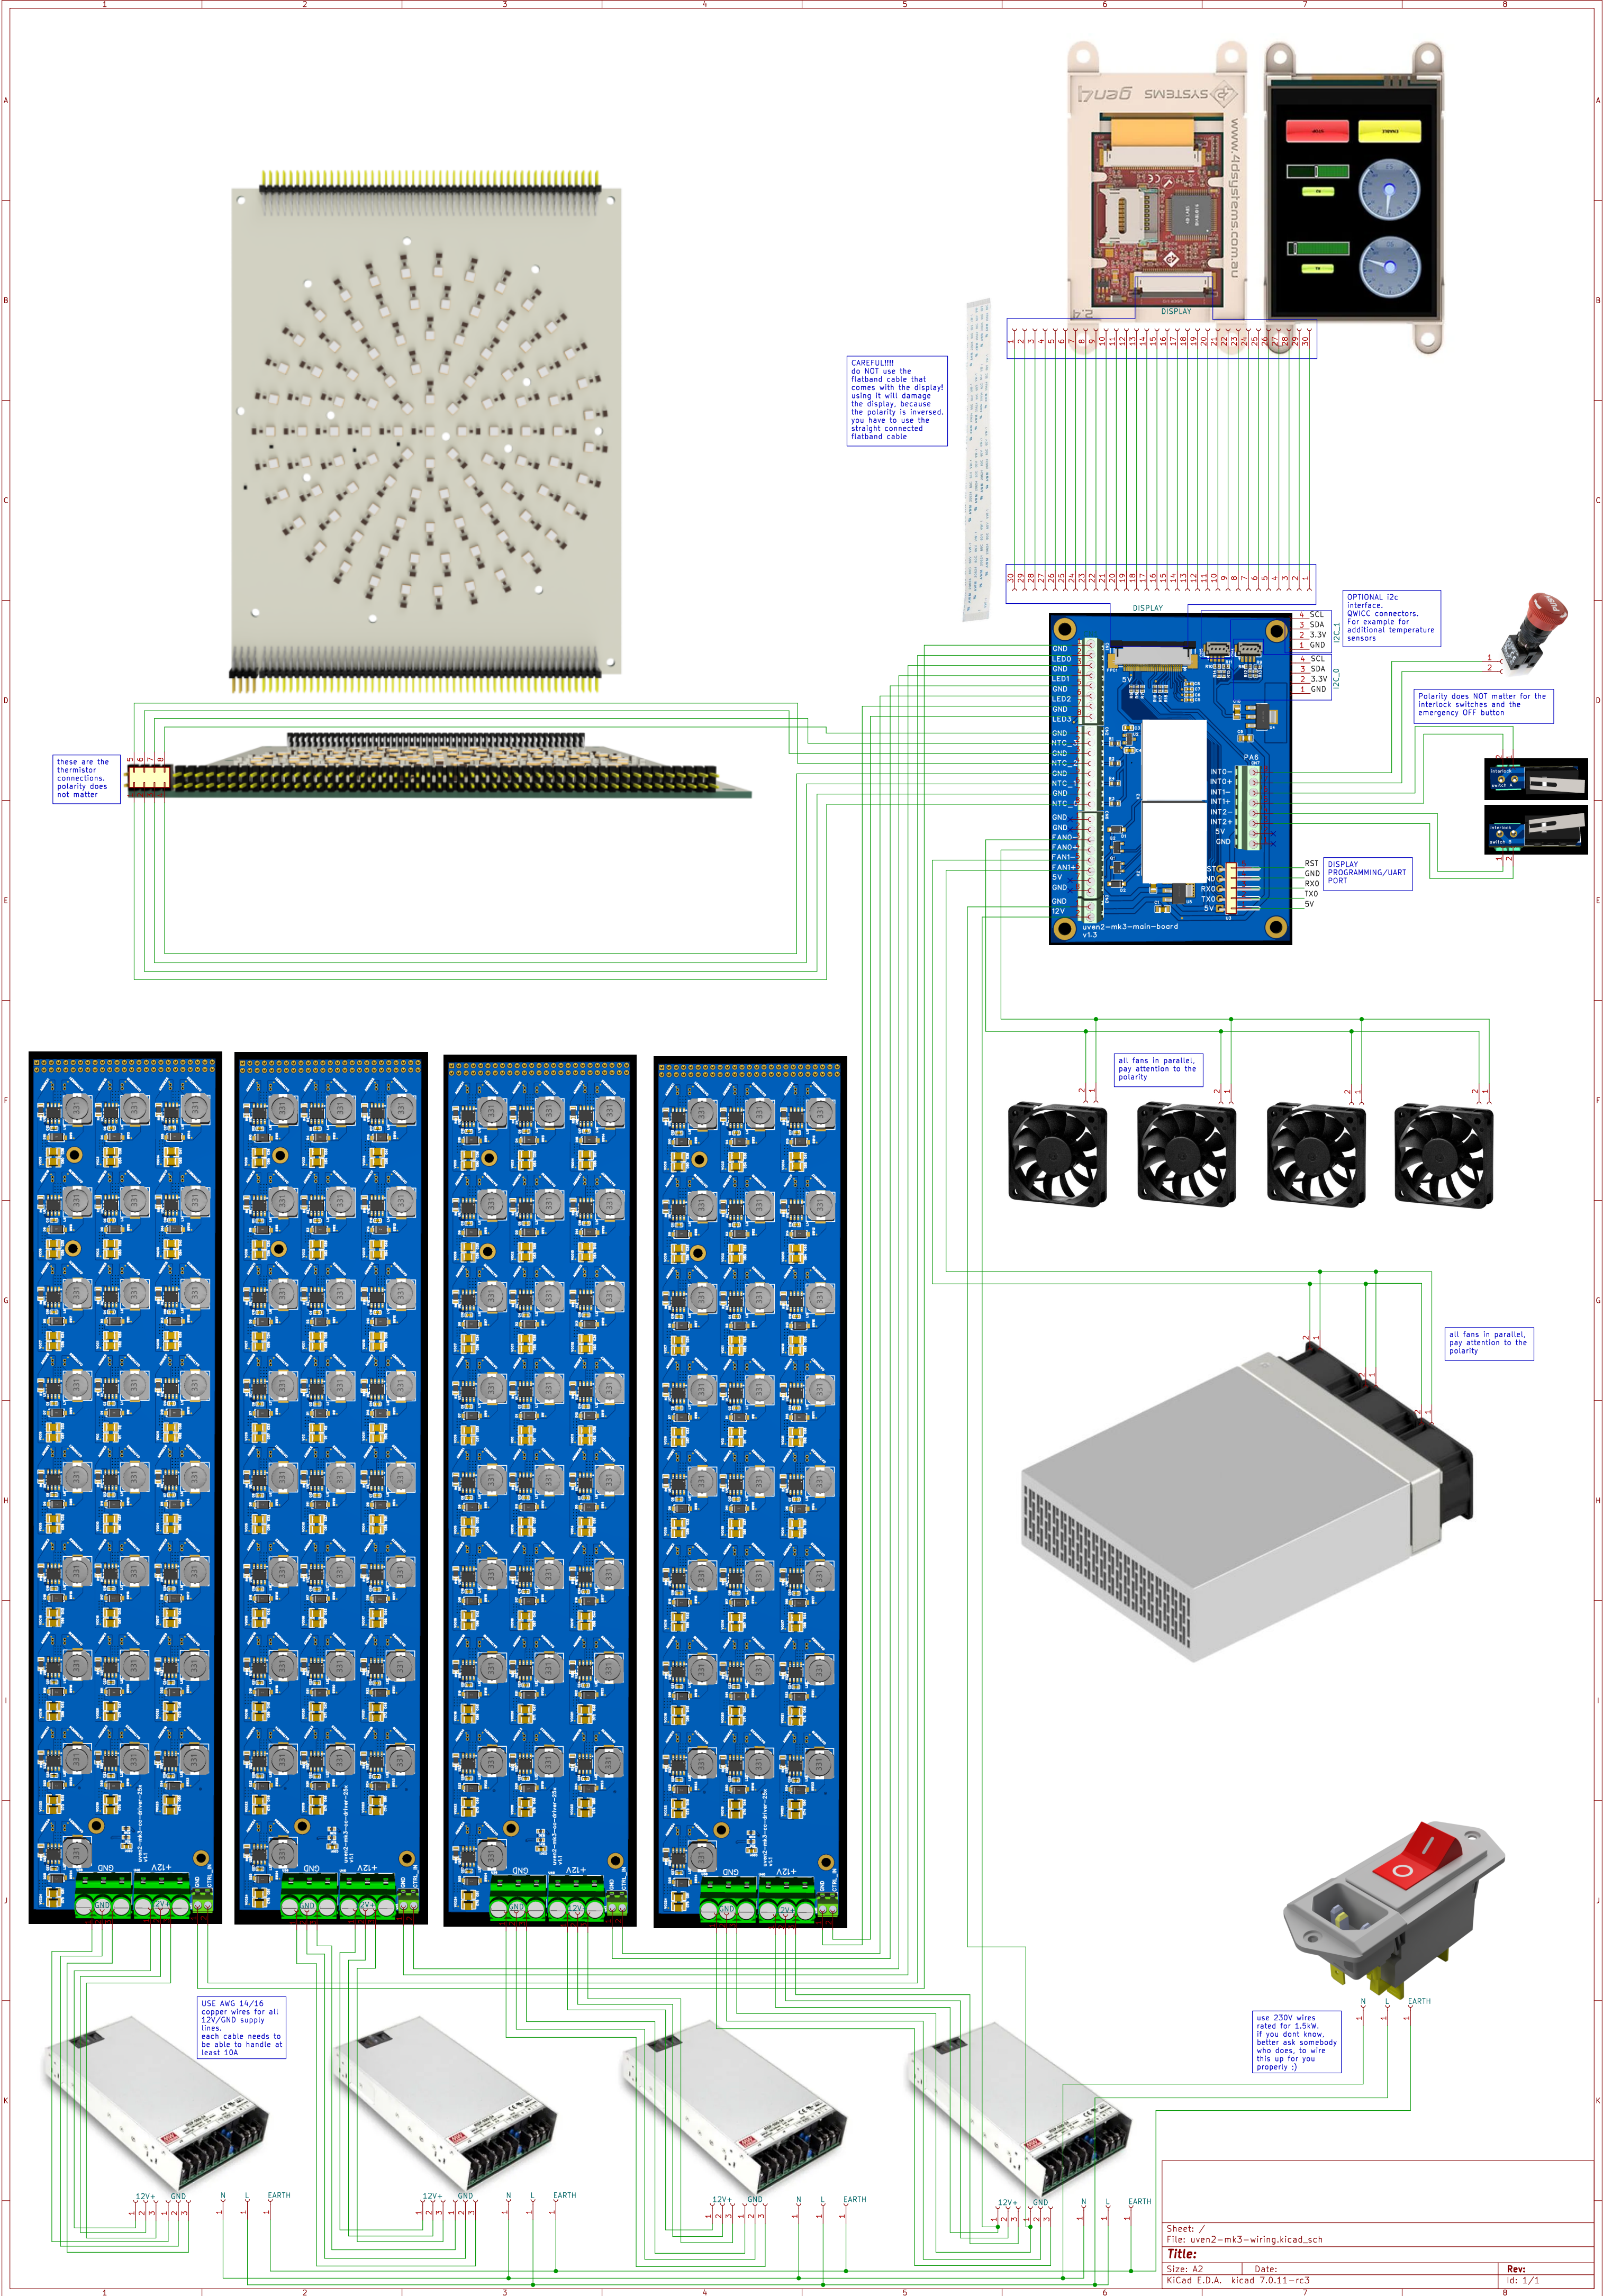

CAREFUL!!!!
Do NOT use the
flatband cable that
comes with the display!
using it will damage
the display, because
the polarity is inversed.
you have to use the
straight connected
flatband cable

these are the
thermistor
connections,
polarity does
not matter

OPTIONAL I2C
interface.
QWICC connectors.
For example for
additional temperature
sensors

Polarity does NOT matter for the
interlock switches and the
emergency OFF button

DISPLAY
PROGRAMMING/UART
PORT

all fans in parallel,
pay attention to the
polarity

all fans in parallel,
pay attention to the
polarity

USE AWG 14/16
copper wires for all
12V/GND supply
lines,
each cable needs to
be able to handle at
least 10A

use 230V wires
rated for 1.5kW.
if you dont know,
better ask somebody
who does, to wire
this up for you
properly :)