306u基础功能配置说明

AICXTEK Confidential

Documentation Serial Number:	
Documentation Classification:	**Confidential**
Documentation Owner:	**AICXTEK**
Documentation Version:	**1.1**

Author:	**R&D Center**
Date:	**2023.10**

版本更新记录			
版本号	日期	作者	版本更新描述
1.0	2024-03-26	R&D Center	文档建立

AICXTEK Confidential

本文档（包括任何附件，及其不时的修订）为归芯科技（深圳）有限公司及其关联公司（合称“归芯”）的保密信息。归芯有权不时修订本文档。本文档如有变更，恕不另行通知。
除非已另行获得归芯的明确授权，请勿向第三方透露本文档的任何内容，请勿将本文档的任何内容以任何方式进行复制、发布、修改、传播、分发、翻印、拆解、反向工程、反编译或者为任何目的使用。
归芯始终持有本文档的全部所有权和著作权、专利权、商业秘密、商标权和其他知识产权。除非归芯另行明确授予有关权利，本文档不提供有关上述知识产权的任何权利。
归芯按“现状”提供本文档及归芯产品或服务。归芯未对本文档中的任何内容或本文档涉及的归芯的产品或服务作出任何明示或暗示的陈述、保证或承诺，包括但不限于任何针对特定目的的适销性或适用性，准确性或完整性，或不侵权。
在法律允许的范围内，归芯不对与本文档有关或因本文档内容造成的任何损失承担责任。在任何情况下，归芯都不对因使用本文档造成的或与之有关的任何间接、偶然的、附带或惩罚性损失，或任何利润、收入的损失承担责任。

This document (including any attachment, as amended from time to time) is confidential information of AICXTEK technology co.,ltd. and its affiliates (collectively referred to as “AICXTEK”). AICXTEK reserves the right to amend this document from time to time. Any changes to this document will not be notified.
Unless otherwise expressly authorized by AICXTEK, you should not disclose any of this document to any third parties. Nor should you copy, publish, modify, broadcast, distribute, photocopy, disassemble, reverse engineer, or decompile any of this document or use it for any purpose.
AICXTEK retains all rights of ownership and copyright, patent rights, trade secrets, trademark rights and other intellectual property rights pertaining to this document. Except for rights otherwise expressly granted by AICXTEK, this document does not provide any rights to any of the above intellectual property rights.
AICXTEK provides this document and AICXTEK’s products or services on a “as-is” basis. AICXTEK does not provide any representations or warranties on any of this document, or AICXTEK’s products or services, whether express or implied, including without limitation, merchantability, fitness for a particular purpose, accuracy or completeness, or non-infringement.
To the extent permitted by law, AICXTEK is not liable for any loss relating to or arising from this document. AICXTEK is not in any event be liable for any indirect, incidental or punitive damages, or loss of profits or revenue.

AICXTEK Confidential

目录

目录 1


AICXTEK Confidential

306u基础功能配置说明


SDK中的306u_h1默认打开了FS、RNDIS/ECM/ HTTP/MQTT/ATNET、MBEDTLS、WIFISCAN、CMSIS等功能，方便进行功能测试。如果只需要使用TCPIP/SOCKET基础功能，可以参照本文档进行配置。

1. 通过./make.py ap kuconfig方式修改defconfig，关闭基础功能之外的feature


1）关闭Driver->USB Driver下的ecm/rndis/network

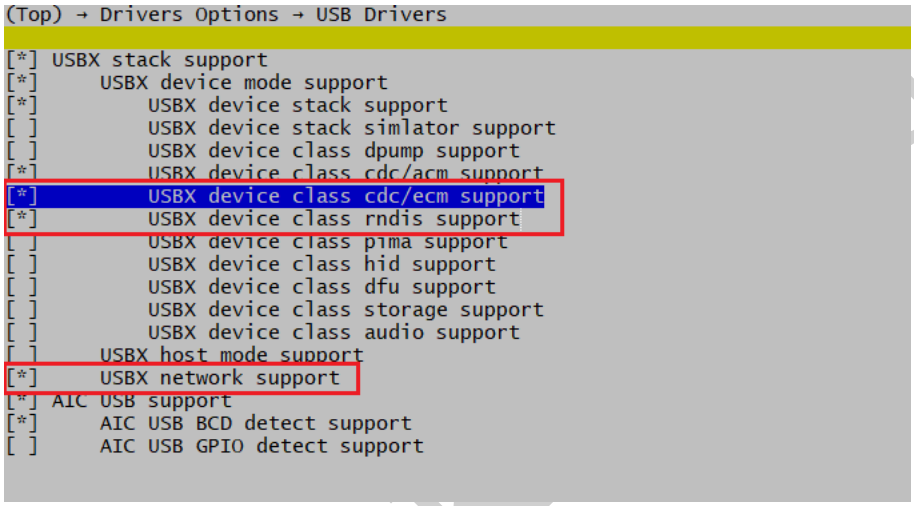

2）关闭Components Options->AT Config下的Net AT

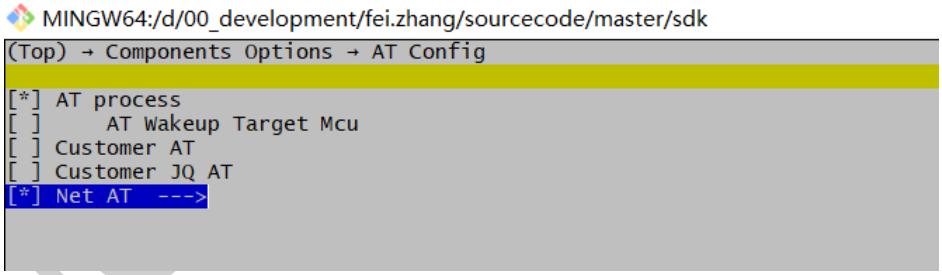


3）关闭Components Options->Crypto Component Configurations下的mbedtls

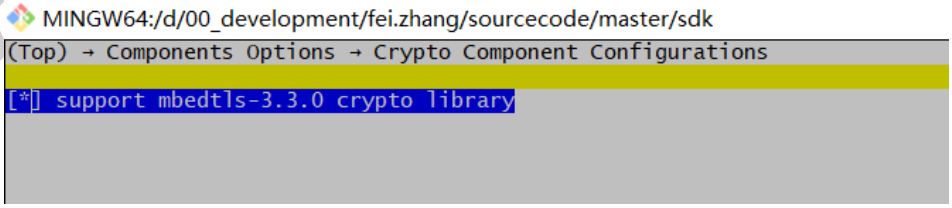


AICXTEK Confidential

4）关闭Network相关配置


4.1）Components Options->Network Configuration->Netxduo Configurations->Network Tethering下的Network Share

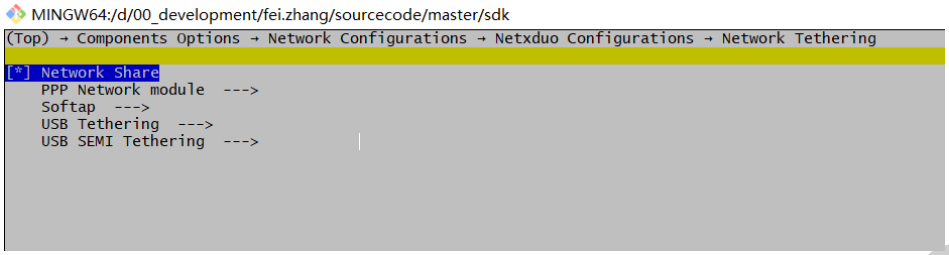


4.2）关闭Components Options->Network Configuration->Netxduo Configurations->Network Protocol下的MQTT

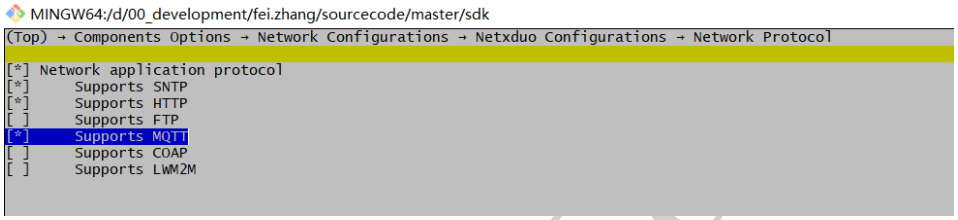

4.3）关闭Components Options->Network Configuration->Network Basic Configurations->Network Kernel Configurations下的IPV6 packet router

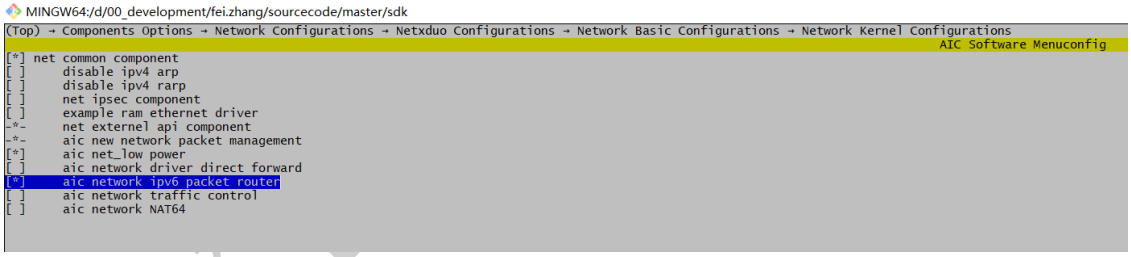

4.4）关闭Components Options->Network Configuration->Network Basic Configurations->Network Addons Configurations下的DHCP/NAT

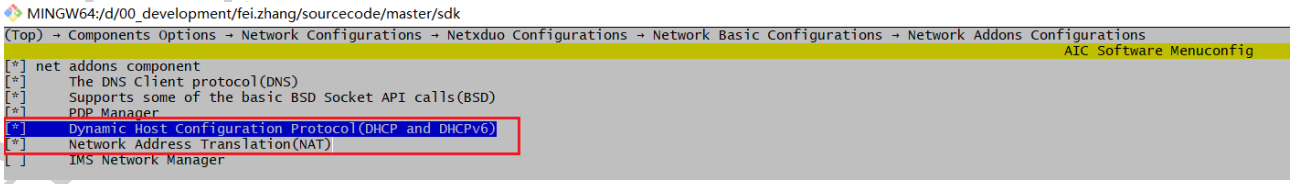

5）关闭FS和ICONV

5.1）关闭Components Options->File System Config下的FS

AICXTEK Confidential

MINGW64:/d/00_development/fei.zhang/sourcecode/master/sdk

```
(Top) → Components Options → File System Config

[*] File System (FS) support
        File System Device Select  --->
[ ]     FAT File System support  ----
[ ]     ROMFS file system
[*]     LittleFS File System support  --->
        File System AT Config  --->
        File System Test Select  --->
```

5.2）关闭Components Options->ICONV Config下的ICONV

MINGW64:/d/00_development/fei.zhang/sourcecode/master/sdk

```
(Top) → Components Options → ICONV Config

[*] Use iconv
[*]     converter between UTF8 and Unicode
[ ]     converter between GB2312 and Unicode
[ ]     converter between GBK and Unicode
```

6）关闭WIFISCAN/Location/FOTA CMIOT CMD/CMSIS

6.1）关闭Components Options->Wifi Config下的WIFISCAN

MINGW64:/d/00_development/fei.zhang/sourcecode/master/sdk

```
(Top) → Components Options → Wifi Config

[*] Wifi Scan Support
```

6.2）关闭Components Options->Location Config下的Location

MINGW64:/d/00_development/fei.zhang/sourcecode/master/sdk

```
(Top) → Components Options → Location Config

[*] Location Support
        Choice Location Server (Use OneOS Location Server)  --->
```

6.3）关闭Components Options->FOTA下的FOTA CMIOT CMD

MINGW64:/d/00_development/fei.zhang/sourcecode/master/sdk

```
(Top) → Components Options → FOTA

[*] fota
        seletct fota download type (HTTP type)  --->
[*]     fota AT command support
[ ]     fota https certificate support
[*]     fota use a complete upgrade package.
[*]     fota support cmiot at command
```


6.4）关闭Osa Options->Common Config下的CMSIS

MINGW64:/d/00_development/fei.zhang/sourcecode/master/sdk

```
(Top) → Osa Options → Common Config


[*] Printf Function Enable
[*] AIC OSA Enable
[ ] FSMMSG Enable
[*] Enable filename convert to file id.
[ ] Enable assert pass fewer param.
[ ] AIC OSA TEST Enable
[*] Enable Customer Memory Layout
[*] RTOS Threadx Enable
[*] TLSF Memory Mode Enable
[ ] Enable Block Pool
[*] Enable CMSIS-RTOSv2 API Adaptation Layer for ThreadX
```

2. 修改分区表，删除C盘分区，将省下的size给到ap或ap_extend

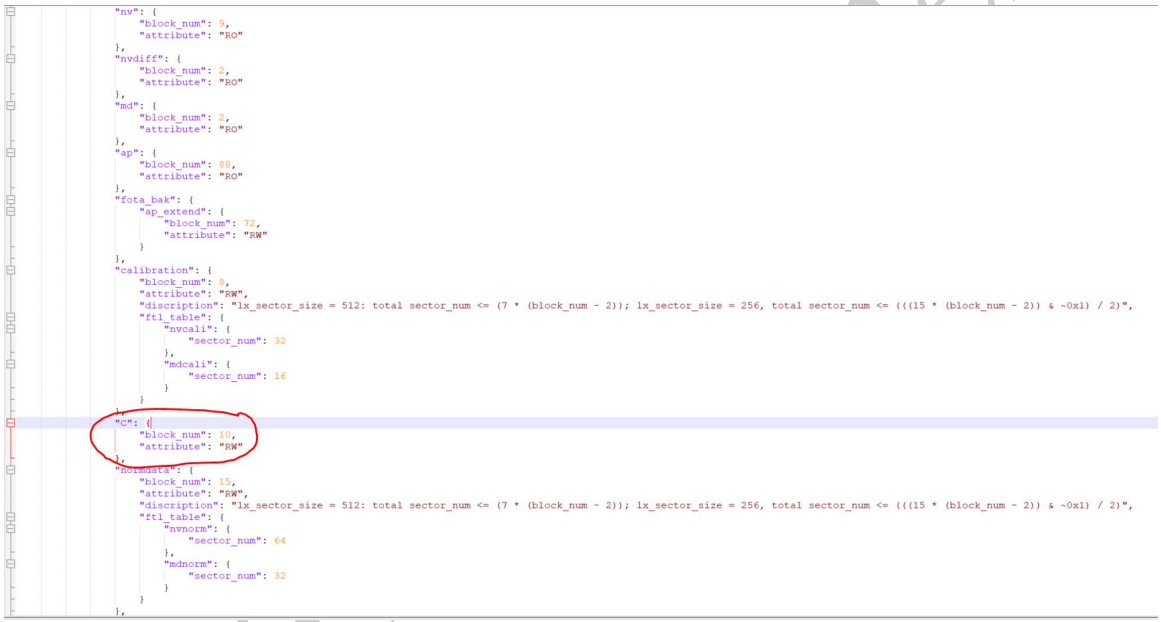

3. 根据实际需要，还可以修改sys_mem_config.h调整psram的ro/rw/heap空间

AICXTEK

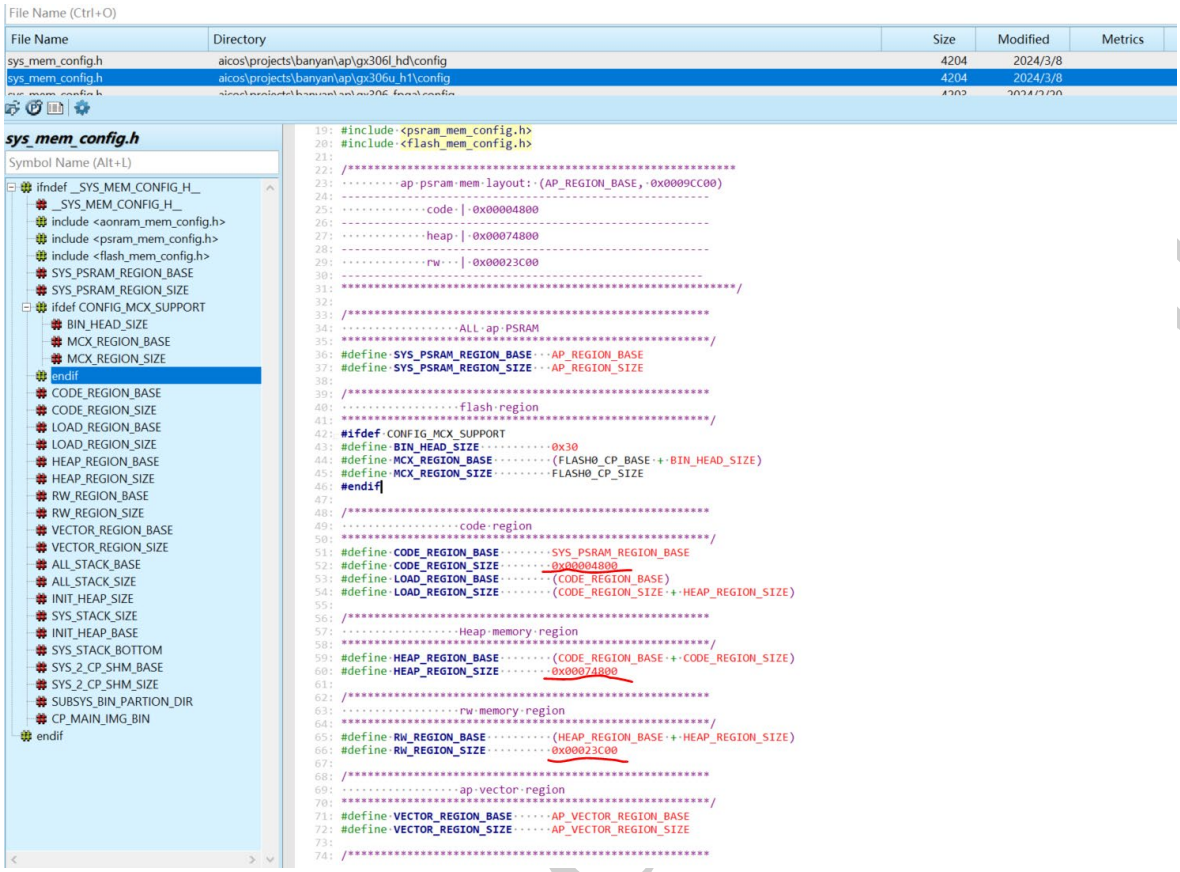

按照上述步骤，将306u_h1配置为基础功能后，size数据如下（供参考）：

Flash剩余约347KB，

RW剩余约70KB，

HEAP共466KB（开机驻网后剩余约305KB）

AICXTEK