

NAND Flash Memory

MT29F32G08CBACA, MT29F64G08CEACA, MT29F64G08CFACA, MT29F128G08CXACA, MT29F64G08CECCB

Features

- Open NAND Flash Interface (ONFI) 2.2-compliant1
- · Multiple-level cell (MLC) technology
- Organization
 - Page size x8: 4320 bytes (4096 + 224 bytes)
 - Block size: 256 pages (1024K + 56K bytes)
 - Plane size: 2 planes x 2048 blocks per plane
 - Device size: 32Gb: 4096 blocks;
 64Gb: 8192 blocks;
 128Gb: 16,384 blocks
- Synchronous I/O performance
 - Up to synchronous timing mode 5
 - Clock rate: 10ns (DDR)
 - Read/write throughput per pin: 200 MT/s
- Asynchronous I/O performance
 - Up to asynchronous timing mode 5
 - tRC/tWC: 20ns (MIN)
- Array performance
 - Read page: 50µs (MAX)
 - Program page: 1300µs (TYP)
 - Erase block: 3ms (TYP)
- Operating Voltage Range
 - V_{CC}: 2.7-3.6V
 - V_{CCQ}: 1.7–1.95V, 2.7–3.6V
- · Command set: ONFI NAND Flash Protocol
- · Advanced Command Set
 - Program cache
 - Read cache sequential
 - Read cache random
 - One-time programmable (OTP) mode
 - Multi-plane commands
 - Multi-LUN operations
 - Read unique ID
 - Copyback
- First block (block address 00h) is valid when shipped from factory. For minimum required ECC, see Error Management (page 101).
- RESET (FFh) required as first command after poweron

- Operation status byte provides software method for detecting
 - Operation completion
 - Pass/fail condition
 - Write-protect status
- Data strobe (DQS) signals provide a hardware method for synchronizing data DQ in the synchronous interface
- Copyback operations supported within the plane from which data is read
- · Quality and reliability
 - Data retention: 10 years
 - Endurance: 3000 PROGRAM/ERASE cycles
- Operating temperature:
 - Commercial: 0°C to +70°C
 - Industrial (IT): –40°C to +85°C
- Package
 - 52-pad LGA
 - 48-pin TSOP
 - 100-ball BGA


Note: 1. The ONFI 2.2 specification is available at www.onfi.org.



Part Numbering Information

Micron NAND Flash devices are available in different configurations and densities. Verify valid part numbers by using Micron's part catalog search at www.micron.com. To compare features and specifications by device type, visit www.micron.com/products. Contact the factory for devices not found.

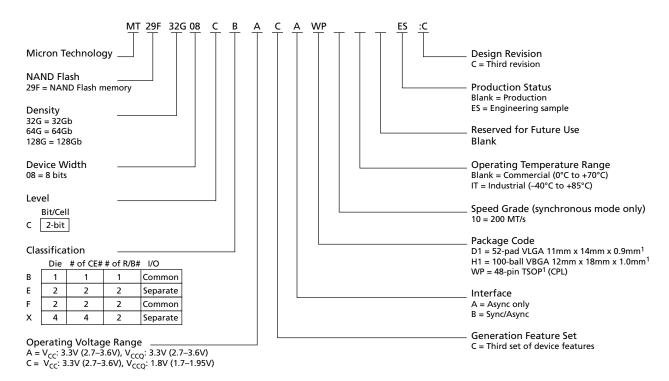Figure 1: Part Numbering



Note: 1. Pb-free package.



Contents	
General Description	9
Asynchronous and Synchronous Signal Descriptions	
Signal Assignments	
Package Dimensions	
Architecture	17
Device and Array Organization	
Bus Operation – Asynchronous Interface	
Asynchronous Enable/Standby	
Asynchronous Bus Idle	
Asynchronous Commands	
Asynchronous Addresses	
Asynchronous Data Input	
Asynchronous Data Output	
Write Protect	
Ready/Busy#	
Bus Operation – Synchronous Interface	
Synchronous Enable/Standby	
Synchronous Bus Idle/Driving	
Synchronous Commands	
Synchronous Addresses	
Synchronous DDR Data Input	
Synchronous DDR Data Output	
Write Protect	
Ready/Busy#	
Device Initialization	
Activating Interfaces	
Activating the Asynchronous Interface	
Activating the Synchronous Interface	
Command Definitions	
Reset Operations	
RESET (FFh)	
SYNCHRONOUS RESET (FCh)	
RESET LUN (FAh)	
Identification Operations	
READ ID (90h)	
READ ID (3011) READ ID Parameter Tables	
Configuration Operations	
SET FEATURES (EFh)	
GET FEATURES (EEH)	
READ PARAMETER PAGE (ECh)	
Parameter Page Data Structure Tables	
READ UNIQUE ID (EDh)	
Status Operations	
READ STATUS (70h)	
Column Address Operations	
CHANGE READ COLUMN (05h-E0h)	
CHANGE READ COLUMN ENHANCED (06h-E0h)	
CHANGE POW ADDRESS (95k)	
CHANGE ROW ADDRESS (85h)	, (



Read Operations 73 READ MODE (00h) 75 READ PAGE (00h-30h) 76 READ PAGE CACHE SEQUENTIAL (31h) 77 READ PAGE CACHE RANDOM (00h-31h) 78 READ PAGE CACHE LAST (3Fh) 80 READ PAGE MULTI-PLANE (00h-32h) 81 Program Operations 83 PROGRAM PAGE (80h-10h) 83 PROGRAM PAGE CACHE (80h-15h) 85 PROGRAM PAGE MULTI-PLANE 80h-11h 87 Erase Operations 89 ERASE BLOCK (60h-D0h) 89 ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
READ PAGE (00h-30h) 76 READ PAGE CACHE SEQUENTIAL (31h) 77 READ PAGE CACHE RANDOM (00h-31h) 78 READ PAGE CACHE LAST (3Fh) 80 READ PAGE MULTI-PLANE (00h-32h) 81 Program Operations 83 PROGRAM PAGE (80h-10h) 83 PROGRAM PAGE CACHE (80h-15h) 85 PROGRAM PAGE MULTI-PLANE 80h-11h 87 Erase Operations 89 ERASE BLOCK (60h-D0h) 89 ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (85h-11h) 94
READ PAGE CACHE SEQUENTIAL (31h) 77 READ PAGE CACHE RANDOM (00h-31h) 78 READ PAGE CACHE LAST (3Fh) 80 READ PAGE MULTI-PLANE (00h-32h) 81 Program Operations 83 PROGRAM PAGE (80h-10h) 83 PROGRAM PAGE CACHE (80h-15h) 85 PROGRAM PAGE MULTI-PLANE 80h-11h 87 Erase Operations 89 ERASE BLOCK (60h-D0h) 89 ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
READ PAGE CACHE RANDOM (00h-31h) 78 READ PAGE CACHE LAST (3Fh) 80 READ PAGE MULTI-PLANE (00h-32h) 81 Program Operations 83 PROGRAM PAGE (80h-10h) 83 PROGRAM PAGE CACHE (80h-15h) 85 PROGRAM PAGE MULTI-PLANE 80h-11h 87 Erase Operations 89 ERASE BLOCK (60h-D0h) 89 ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
READ PAGE CACHE LAST (3Fh) 80 READ PAGE MULTI-PLANE (00h-32h) 81 Program Operations 83 PROGRAM PAGE (80h-10h) 83 PROGRAM PAGE CACHE (80h-15h) 85 PROGRAM PAGE MULTI-PLANE 80h-11h 87 Erase Operations 89 ERASE BLOCK (60h-D0h) 89 ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (60h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
READ PAGE MULTI-PLANE (00h-32h) 81 Program Operations 83 PROGRAM PAGE (80h-10h) 83 PROGRAM PAGE CACHE (80h-15h) 85 PROGRAM PAGE MULTI-PLANE 80h-11h 87 Erase Operations 89 ERASE BLOCK (60h-D0h) 89 ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
Program Operations 83 PROGRAM PAGE (80h-10h) 85 PROGRAM PAGE MULTI-PLANE 80h-11h 87 Erase Operations 89 ERASE BLOCK (60h-D0h) 89 ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
PROGRAM PAGE (80h-10h) 83 PROGRAM PAGE CACHE (80h-15h) 85 PROGRAM PAGE MULTI-PLANE 80h-11h 87 Erase Operations 89 ERASE BLOCK (60h-D0h) 89 ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
PROGRAM PAGE CACHE (80h-15h) 85 PROGRAM PAGE MULTI-PLANE 80h-11h 87 Erase Operations 89 ERASE BLOCK (60h-D0h) 89 ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
PROGRAM PAGE MULTI-PLANE 80h-11h 87 Erase Operations 89 ERASE BLOCK (60h-D0h) 89 ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
Erase Operations 89 ERASE BLOCK (60h-D0h) 89 ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
ERASE BLOCK (60h-D0h) 89 ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
ERASE BLOCK MULTI-PLANE (60h-D1h) 90 Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
Copyback Operations 91 COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
COPYBACK READ (00h-35h) 92 COPYBACK PROGRAM (85h-10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
COPYBACK PROGRAM (85h–10h) 93 COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
COPYBACK READ MULTI-PLANE (00h-32h) 93 COPYBACK PROGRAM MULTI-PLANE (85h-11h) 94
COPYBACK PROGRAM MULTI-PLANE (85h-11h)
On a Time Due group and I (OTD) On anation a
One-Time Programmable (OTP) Operations
PROGRAM OTP PAGE (80h-10h)
PROTECT OTP AREA (80h-10h)
READ OTP PAGE (00h-30h)
Multi-Plane Operations
Multi-Plane Addressing
Interleaved Die (Multi-LÜN) Operations
Error Management
Output Drive Impedance
AC Overshoot/Undershoot Specifications
Synchronous Input Slew Rate
Output Slew Rate 107
Electrical Specifications
Electrical Specifications – DC Characteristics and Operating Conditions (Asynchronous)
Electrical Specifications – DC Characteristics and Operating Conditions (Synchronous)
Electrical Specifications – DC Characteristics and Operating Conditions (V _{CCO})
Electrical Specifications – AC Characteristics and Operating Conditions (Asynchronous)
Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)
Electrical Specifications – Array Characteristics
Asynchronous Interface Timing Diagrams
Synchronous Interface Timing Diagrams
Revision History
Rev. A – 3/10



	Tables	
Table 1: A	Asynchronous and Synchronous Signal Definitions	. (
Table 2: A	Array Addressing for Logical Unit (LUN)	22
	Asynchronous Interface Mode Selection	
Table 4: S	Synchronous Interface Mode Selection	33
	Command Set	
	Read ID Parameters for Address 00h	
	Read ID Parameters for Address 20h	
	Feature Address Definitions	
Table 9: I	Feature Address 01h: Timing Mode	53
	Feature Addresses 10h and 80h: Programmable Output Drive Strength	
Table 11:	Feature Addresses 81h: Programmable R/B# Pull-Down Strength	54
Table 12:	Feature Addresses 90h: Array Operation Mode	54
	Parameter Page Data Structure	
	Status Register Definition	
	OTP Area Details	
	Error Management Details	
Table 17:	Output Drive Strength Test Conditions (V _{CCQ} = 1.7–1.95V)	02
Table 18:	Output Drive Strength Impedance Values (V _{CCQ} = 1.7–1.95V)	02
Table 19:	Output Drive Strength Conditions ($V_{CCO} = 2.7-3.6V$)	03
Table 20:	Output Drive Strength Impedance Values (V _{CCQ} = 2.7–3.6V)	03
Table 21:	Pull-Up and Pull-Down Output Impedance Mismatch	04
Table 22:	Overshoot/Undershoot Parameters	.05
	Test Conditions for Input Slew Rate	
Table 24:	Input Slew Rate ($V_{CCQ} = 1.7-1.95V$)	.06
Table 25:	Test Conditions for Output Slew Rate	07
Table 26:	Output Slew Rate ($V_{CCQ} = 1.7 - 1.95V$)	07
Table 27:	Output Slew Rate ($V_{CCQ} = 2.7-3.6V$)	07
	Absolute Maximum Ratings by Device	
	Recommended Operating Conditions	
Table 30:	Valid Blocks per LUN	.08
Table 31:	Capacitance: 100-Ball BGA Package	05
	Capacitance: 48-Pin TSOP Package	
Table 33:	Capacitance: 52-Pad LGA Package	05
Table 34:	Test Conditions	05
Table 35:	DC Characteristics and Operating Conditions (Asynchronous Interface)	1(
	DC Characteristics and Operating Conditions (Synchronous Interface)	
Table 37:	DC Characteristics and Operating Conditions (3.3V V _{CCQ})	1
Table 38:	DC Characteristics and Operating Conditions (1.8V V _{CCO})	12
Table 39:	AC Characteristics: Asynchronous Command, Address, and Data	12
Table 40:	AC Characteristics: Synchronous Command, Address, and Data	14
Table 41:	Array Characteristics	17



List of	Figures	
	Part Numbering	. 2
	48-Pin TSOP Type 1 (Top View)	13
Figure 3:	52-Pad LGA (Ball-Down, Top View)	12
Figure 4:	100-Ball BGA (Ball-Down, Top View)	13
Figure 5:	48-Pin TSOP – Type 1 CPL (Package Code: WP)	14
	52-Pad VLGA – 11mm x 14mm (Package Code: D1)	
	100-Ball VBGA – 12mm x 18mm (Package Code: H1)	
	NAND Flash Die (LUN) Functional Block Diagram	
	Device Organization for Single-Die Package (TSOP)	
	Device Organization for Two-Die Package (TSOP)	
	Device Organization for Two-Die Package (BGA/LGA)	
	Device Organization for Four-Die Package with four CE# and two R/B# (LGA)	
	Array Organization per Logical Unit (LUN)	
	Asynchronous Command Latch Cycle	
	Asynchronous Address Latch Cycle	
	Asynchronous Data Input Cycles	
	Asynchronous Data Output Cycles	
	Asynchronous Data Output Cycles (EDO Mode)	
	READ/BUSY# Open Drain	
	t Fall and t Rise ($V_{CCO} = 2.7-3.6V$)	
	t Fall and t Rise ($V_{CCO} = 1.7-1.95V$)	
	IOL vs Rp ($V_{CCO} = 2.7-3.6V$)	
Figure 23:	IOL vs Rp ($V_{CCO} = 1.7-1.95V$)	31
	TC vs Rp	
Figure 25:	Synchronous Bus Idle/Driving Behavior	35
	Synchronous Command Cycle	
Figure 27:	Synchronous Address Cycle	37
Figure 28:	Synchronous DDR Data Input Cycles	38
Figure 29:	Synchronous DDR Data Output Cycles	4(
Figure 30:	R/B# Power-On Behavior	4]
Figure 31:	Activating the Synchronous Interface	43
	RESET (FFh) Operation	
Figure 33:	SYNCHRONOUS RESET (FCh) Operation	47
Figure 34:	RESET LUN (FAh) Operation	48
Figure 35:	READ ID (90h) with 00h Address Operation	49
	READ ID (90h) with 20h Address Operation	
Figure 37:	SET FEATURES (EFh) Operation	52
Figure 38:	GET FEATURES (EEh) Operation	52
	READ PARAMETER (ECh) Operation	
Figure 40:	READ UNIQUE ID (EDh) Operation	64
Figure 41:	READ STATUS (70h) Operation	67
	READ STATUS ENHANCED (78h) Operation	
	CHANGE READ COLUMN (05h-E0h) Operation	
	CHANGE READ COLUMN ENHANCED (06h-E0h) Operation	
	CHANGE WRITE COLUMN (85h) Operation	
	CHANGE ROW ADDRESS (85h) Operation	
	READ PAGE (00h-30h) Operation	
	READ PAGE CACHE SEQUENTIAL (31h) Operation	
	READ PAGE CACHE RANDOM (00h-31h) Operation	
Figure 50:	READ PAGE CACHE LAST (3Fh) Operation	80



Figure 51:	READ PAGE MULTI-PLANE (00h-32h) Operation	. 82
Figure 52:	PROGRAM PAGE (80h-10h) Operation	. 84
Figure 53:	PROGRAM PAGE CACHE (80h–15h) Operation (Start)	. 86
Figure 54:	PROGRAM PAGE CACHE (80h–15h) Operation (End)	. 86
Figure 55:	PROGRAM PAGE MULTI-PLANE (80h–11h) Operation	. 88
Figure 56:	ERASE BLOCK (60h-D0h) Operation	. 89
Figure 57:	ERASE BLOCK MULTI-PLANE (60h–D1h) Operation	. 90
Figure 58:	COPYBACK READ (00h-35h) Operation	. 92
Figure 59:	COPYBACK READ (00h-35h) with CHANGE READ COLUMN (05h-E0h) Operation	. 92
Figure 60:	COPYBACK PROGRAM (85h–10h) Operation	. 93
Figure 61:	COPYBACK PROGRAM (85h-10h) with CHANGE WRITE COLUMN (85h) Operation	. 93
Figure 62:	COPYBACK PROGRAM MULTI-PLANE (85h-11h) Operation	. 94
	PROGRAM OTP PAGE (80h-10h) Operation	
Figure 64:	PROGRAM OTP PAGE (80h-10h) with CHANGE WRITE COLUMN (85h) Operation	. 97
	PROTECT OTP AREA (80h-10h) Operation	
	READ OTP PAGE (00h-30h) Operation	
	Overshoot	
Figure 68:	Undershoot	105
	RESET Operation	
	RESET LUN Operation	
	READ STATUS Cycle	
	READ STATUS ENHANCED Cycle	
	READ PARAMETER PAGE	
	READ PAGE	
	READ PAGE Operation with CE# "Don't Care"	
	CHANGE READ COLUMN	
Figure 77:	READ PAGE CACHE SEQUENTIAL	123
	READ PAGE CACHE RANDOM	
	READ ID Operation	
	PROGRAM PAGE Operation	
Figure 81:	PROGRAM PAGE Operation with CE# "Don't Care"	126
Figure 82:	PROGRAM PAGE Operation with CHANGE WRITE COLUMN	126
	PROGRAM PAGE CACHE	
	PROGRAM PAGE CACHE Ending on 15h	
	COPYBACK	
	ERASE BLOCK Operation	
Figure 87:	SET FEATURES Operation	129
	READ ID Operation	
	GET FEATURES Operation	
-	RESET (FCh) Operation	
-	READ STATUS Cycle	
	READ STATUS ENHANCED Operation	
0	READ PARAMETER PAGE Operation	
	READ PAGE Operation	
	CHANGE READ COLUMN	
	READ PAGE CACHE SEQUENTIAL (1 of 2)	
	READ PAGE CACHE SEQUENTIAL (2 of 2)	
	READ PAGE CACHE RANDOM (1 of 2)	
	READ PAGE CACHE RANDOM (2 of 2)	
	Multi-Plane Read Page (1 of 2)	
	Multi-Plane Read Page (2 of 2)	
Figure 102	PROGRAM PAGE Operation (1 of 2)	143
1 15010 102	The statistical operation (1 of 2)	113



Figure 103:	PROGRAM PAGE Operation (2 of 2)	143
Figure 104:	CHANGE WRITE COLUMN	144
	Multi-Plane Program Page	
	ERASE BLOCK	
Figure 107:	COPYBACK (1 of 3)	146
	COPYBACK (2 of 3)	
Figure 109:	COPYBACK (3 of 3)	147
	READ OTP PAGE	
Figure 111:	PROGRAM OTP PAGE (1 of 2)	149
Figure 112:	PROGRAM OTP PAGE (2 of 2)	149
Figure 113:	PROTECT OTP AREA	150



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND General Description

General Description

Micron NAND Flash devices include an asynchronous data interface for high-performance I/O operations. These devices use a highly multiplexed 8-bit bus (DQx) to transfer commands, address, and data. There are five control signals used to implement the asynchronous data interface: CE#, CLE, ALE, WE#, and RE#. Additional signals control hardware write protection (WP#) and monitor device status (R/B#).

This Micron NAND Flash device additionally includes a synchronous data interface for high-performance I/O operations. When the synchronous interface is active, WE# becomes CLK and RE# becomes W/R#. Data transfers include a bidirectional data strobe (DOS).

This hardware interface creates a low pin-count device with a standard pinout that remains the same from one density to another, enabling future upgrades to higher densities with no board redesign.

A target is the unit of memory accessed by a chip enable signal. A target contains one or more NAND Flash die. A NAND Flash die is the minimum unit that can independently execute commands and report status. A NAND Flash die, in the ONFI specification, is referred to as a logical unit (LUN). For further details, see Device and Array Organization.

Asynchronous and Synchronous Signal Descriptions

Table 1: Asynchronous and Synchronous Signal Definitions

Asynchronous Signal ¹	Synchronous Signal ¹	Туре	Description ²
ALE	ALE	Input	Address latch enable: Loads an address from DQx into the address register.
CE#	CE#	Input	Chip enable: Enables or disables one or more die (LUNs) in a target ¹ .
CLE	CLE	Input	Command latch enable: Loads a command from DQx into the command register.
DQx	DQx	I/O	Data inputs/outputs: The bidirectional I/Os transfer address, data, and command information.
_	DQS	I/O	Data strobe: Provides a synchronous reference for data input and output.
RE#	W/R#	Input	Read enable and write/read: RE# transfers serial data from the NAND Flash to the host system when the asynchronous interface is active. When the synchronous interface is active, W/R# controls the direction of DQx and DQS.
WE#	CLK	Input	Write enable and clock: WE# transfers commands, addresses, and serial data from the host system to the NAND Flash when the asynchronous interface is active. When the synchronous interface is active, CLK latches command and address cycles.
WP#	WP#	Input	Write protect: Enables or disables array PROGRAM and ERASE operations.
R/B#	R/B#	Output	Ready/busy: An open-drain, active-low output that requires an external pull-up resistor. This signal indicates target array activity.
V _{CC}	V _{CC}	Supply	V _{CC} : Core power supply



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND **Asynchronous and Synchronous Signal Descriptions**

Table 1: Asynchronous and Synchronous Signal Definitions (Continued)

Asynchronous Signal ¹	Synchronous Signal ¹	Туре	Description ²
V _{CCQ}	V_{CCQ}	Supply	V _{CCQ} : I/O power supply
V _{SS}	V_{SS}	Supply	V _{ss} : Core ground connection
V_{SSQ}	V_{SSQ}	Supply	V _{SSQ} : I/O ground connection
NC	NC	П	No connect: NCs are not internally connected. They can be driven or left unconnected.
DNU	DNU	_	Do not use: DNUs must be left unconnected.
RFU	RFU	1	Reserved for future use: RFUs must be left unconnected.

- Notes: 1. See Device and Array Organization for detailed signal connections.
 - 2. See Bus Operation Asynchronous Interface (page 23) and Bus Operation Synchronous Interface (page 33) for detailed asynchronous and synchronous interface signal descriptions.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND **Signal Assignments**

Signal Assignments

Figure 2: 48-Pin TSOP Type 1 (Top View)


Sync	Async		Async	Sync
x8	x8		х8	х8
NC	NC	1 ● 48		DNU/V _{SSQ} ²
NC	NC	2 \ \ \ 47	□ NC	NC
NC	NC	3 46	□ NC	NC
NC	NC	3 4 45	□ NC	NC
NC	NC	5 \ \ \ 44	□ NC □ DQ7	DQ7
R/B2# ¹	R/B2# ¹	6 \ \ \ 43	□ DQ7 □ DQ6	DQ7 DQ6
R/B#	R/B#	7	□ DQ6 □ DQ5	DQ5
W/R#	RE#	8 \ \ \ 41	□ DQ3 □ DQ4	DQ3 DQ4
CE#	CE#	9 \ \ \ 40	□ DQ4 □ NC	NC
CE2# ¹	CE2# ¹	10		DNU/V _{CCQ} ²
NC	NC		☐ DNU/V _{CCQ}	DNU/V _{CCQ}
V _{CC}	V _{cc}	-	□ V _{cc}	V _{CC}
V _{SS} NC	V _{SS} NC	1 1	□ V _{SS} □ DNU	V _{SS} DQS
NC NC	NC NC	1 1		
CLE	CLE			DNU/V _{CCQ} ²
		16	□ NC	NC
ALE	ALE	17 32 31 31 31	□ DQ3	DQ3
CLK	WE#	1.9	DQ2	DQ2
WP#	WP#	19	□ DQ1	DQ1
NC	NC	20 \ \ \ 29	□ DQ0	DQ0
NC	NC	21 28	□ NC	NC
NC	NC	22	□ NC	NC
NC	NC	23	□ DNU	DNU
NC	NC	24 25	☐ DNU/V _{SSQ} ²	DNU/V _{SSQ} ²

- Notes: 1. CE2# and R/B2# are available on dual die packages. They are NC for other configurations.
 - 2. These V_{CCQ} and V_{SSQ} pins are for compatibility with ONFI 2.2. If not supplying V_{CCQ} or V_{SSQ} to these pins, do not use them.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Signal Assignments

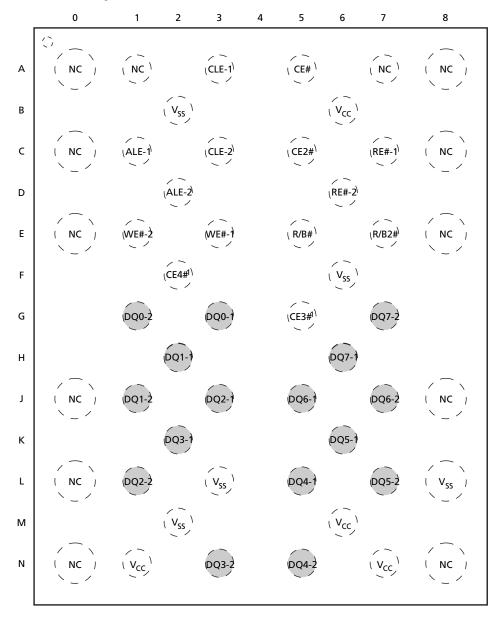Figure 3: 52-Pad LGA (Ball-Down, Top View)




Top View, Pads Down

Note: 1. These signals are available on quad die packages. They are NC for other configurations.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Signal Assignments

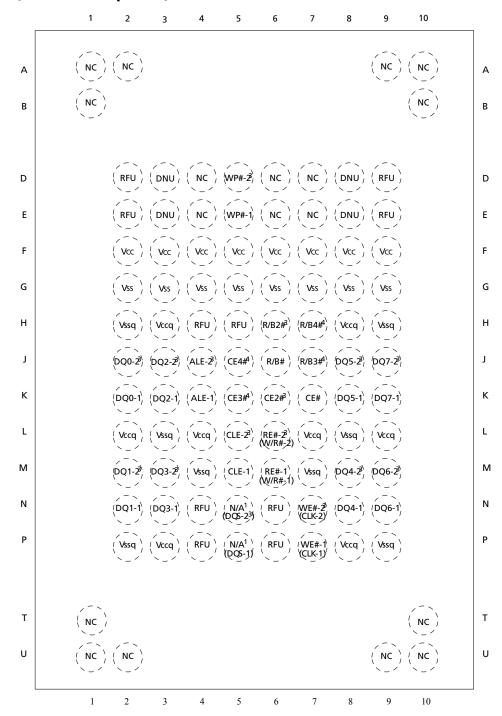Figure 4: 100-Ball BGA (Ball-Down, Top View)



Notes:


- 1. N/A: This signal is tri-stated when the asynchronous interface is active.
- 2. Signal names in parentheses are the signal names when the synchronous interface is active.
- 3. These signals are available on dual die packages. They are NC for other configurations.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Package Dimensions

Package Dimensions

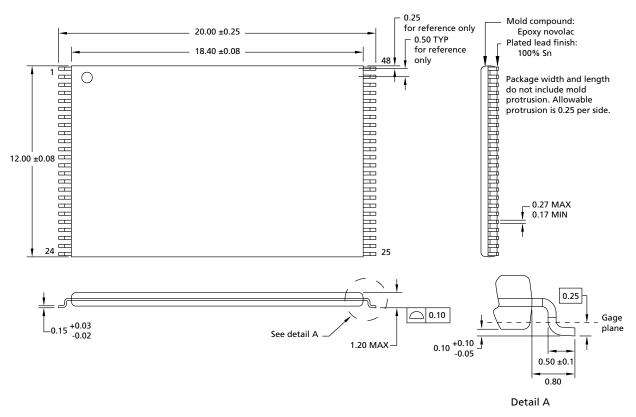Figure 5: 48-Pin TSOP - Type 1 CPL (Package Code: WP)




Note: 1. All dimensions are in millimeters.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Package Dimensions

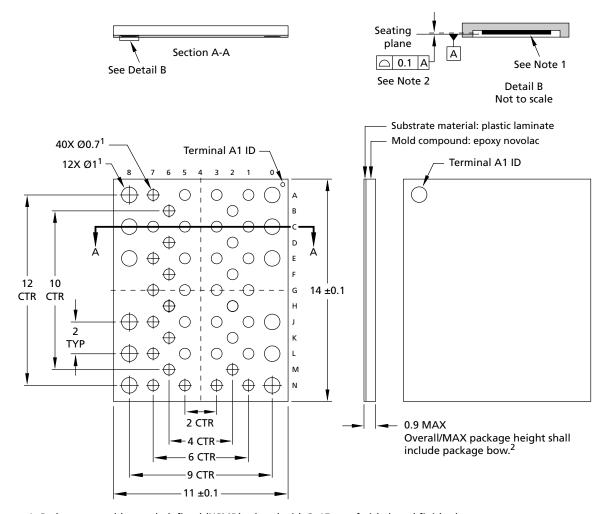Figure 6: 52-Pad VLGA - 11mm x 14mm (Package Code: D1)



- Notes: 1. Pads are nonsolder mask defined (NSMD), plated with 3–15µm of nickel, and finished with a minimum of 0.1µm of soft wire bondable gold.
 - 2. Total warpage (convex or concave) to be less than or equal to 75μm from room temperature through 260°C and back to room temperature.


Notes

- Primary datum A (seating plane) is defined by the bottom terminal surface. Metallized
 test terminal lands or interconnect terminals need not extend below the package bottom surface.
- 2. All dimensions are in millimeters.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Package Dimensions

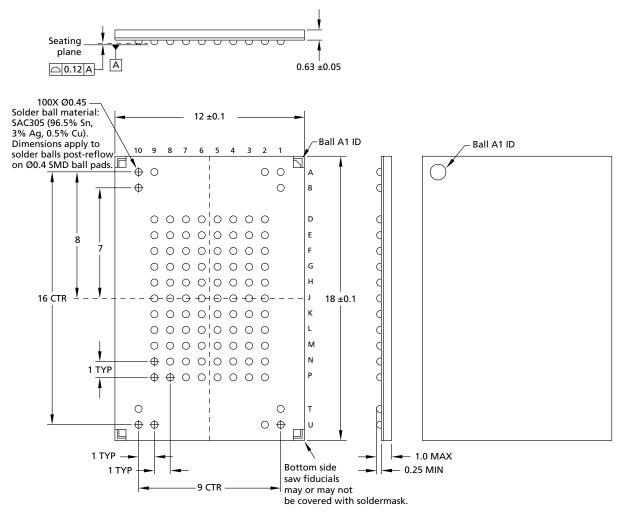Figure 7: 100-Ball VBGA - 12mm x 18mm (Package Code: H1)



Note: 1. All dimensions are in millimeters.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Architecture

Architecture


These devices use NAND Flash electrical and command interfaces. Data, commands, and addresses are multiplexed onto the same pins and received by I/O control circuits. The commands received at the I/O control circuits are latched by a command register and are transferred to control logic circuits for generating internal signals to control device operations. The addresses are latched by an address register and sent to a row decoder to select a row address, or to a column decoder to select a column address.

Data is transferred to or from the NAND Flash memory array, byte by byte, through a data register and a cache register.

The NAND Flash memory array is programmed and read using page-based operations and is erased using block-based operations. During normal page operations, the data and cache registers act as a single register. During cache operations, the data and cache registers operate independently to increase data throughput.

The status register reports the status of die (LUN) operations.

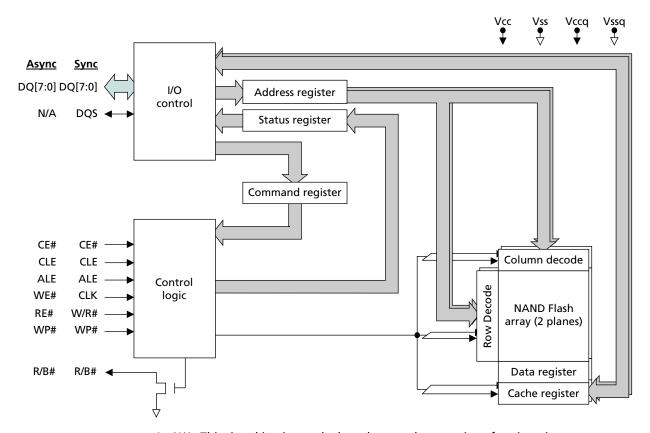Figure 8: NAND Flash Die (LUN) Functional Block Diagram




- 1. N/A: This signal is tri-stated when the asynchronous interface is active.
- 2. Some devices do not include the synchronous interface.



Device and Array Organization

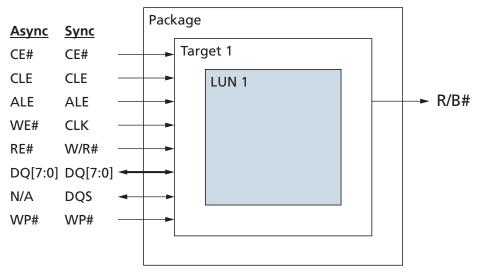
Figure 9: Device Organization for Single-Die Package (TSOP)



Note: 1. TSOP devices do not support the synchronous interface.



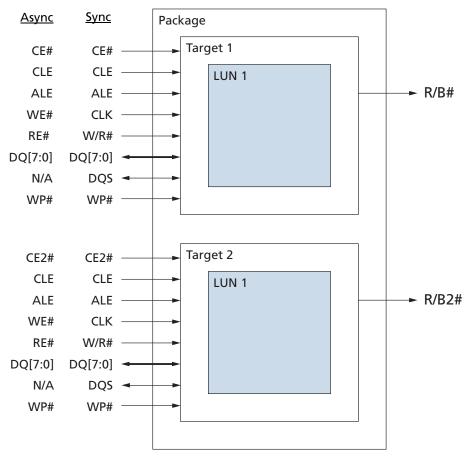
Figure 10: Device Organization for Two-Die Package (TSOP)



Note: 1. TSOP devices do not support the synchronous interface.



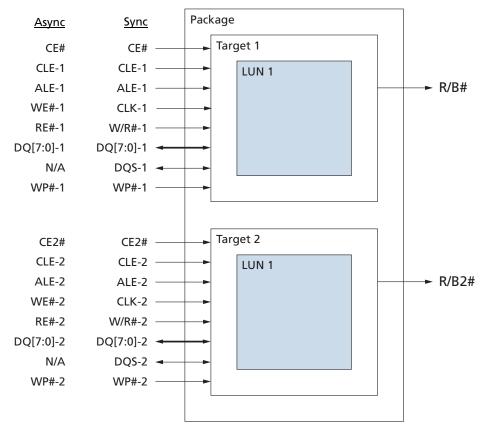
Figure 11: Device Organization for Two-Die Package (BGA/LGA)



Note: 1. LGA devices do not support the synchronous interface.



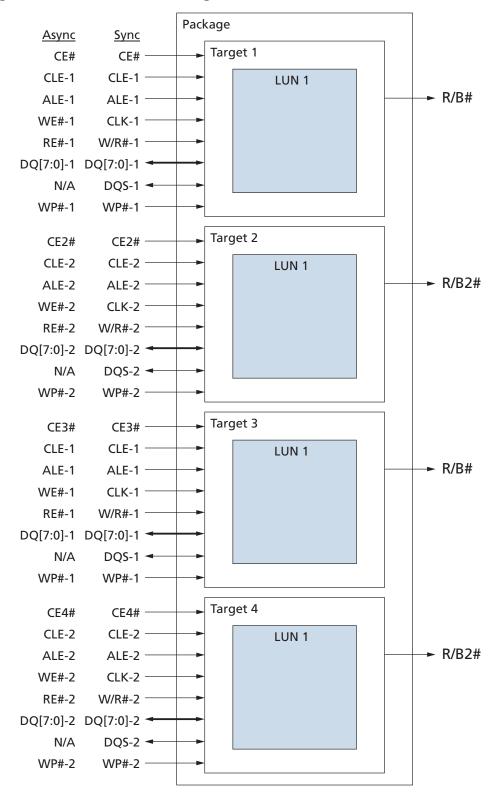Figure 12: Device Organization for Four-Die Package with four CE# and two R/B# (LGA)



Note: 1. LGA devices do not support the synchronous interface.



Figure 13: Array Organization per Logical Unit (LUN)

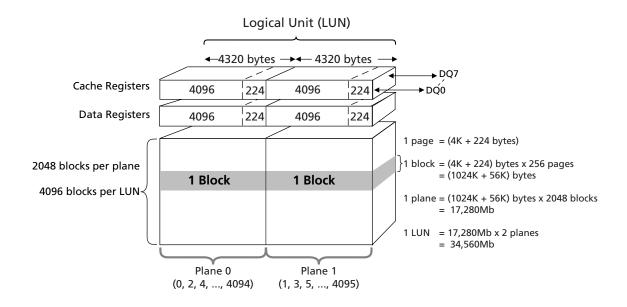


Table 2: Array Addressing for Logical Unit (LUN)

Cycle	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0
First	CA7	CA6	CA5	CA4	CA3	CA2	CA1	CA0 ²
Second	LOW	LOW	LOW	CA12 ³	CA11	CA10	CA9	CA8
Third	PA7	PA6	PA5	PA4	PA3	PA2	PA1	PA0
Fourth	BA15	BA14	BA13	BA12	BA11	BA10	BA9	BA8 ⁴
Fifth	LOW	LOW	LOW	LA0 ⁵	BA19	BA18	BA17	BA16

Notes:

- 1. CAx = column address, PAx = page address, BAx = block address, LAx = LUN address; the page address, block address, and LUN address are collectively called the row address.
- 2. When using the synchronous interface, CA0 is forced to 0 internally; one data cycle always returns one even byte and one odd byte.
- 3. Column addresses 4320 (10E0h) through 8191 (1FFFh) are invalid, out of bounds, do not exist in the device, and cannot be addressed.
- 4. BA[8] is the plane-select bit:

Plane 0: BA[8] = 0Plane 1: BA[8] = 1

5. LA0 is the LUN-select bit. It is present only when two LUNs are shared on the target; otherwise, it should be held LOW.

LUN 0: LA0 = 0 LUN 1: LA0 = 1



Bus Operation – Asynchronous Interface

The asynchronous interface is active when the NAND Flash device powers on. The I/O bus, DQ[7:0], is multiplexed sharing data I/O, addresses, and commands. The DQS signal, if present, is tri-stated when the asynchronous interface is active.

Asynchronous interface bus modes are summarized below.

Table 3: Asynchronous Interface Mode Selection

Mode	CE#	CLE	ALE	WE#	RE#	DQS	DQx	WP#	Notes
Standby	Н	Х	Х	Х	Х	Х	Х	0V/V _{CCQ} ²	2
Bus idle	L	Х	Х	Н	Н	Х	Х	Х	
Command input	L	Н	L	L	Н	Х	input	Н	
Address input	L	L	Н	L	Н	Х	input	Н	
Data input	L	L	L	L	Н	Х	input	Н	
Data output	L	L	L	Н	 €	Х	output	Х	
Write protect	Х	Х	Х	Х	Х	Х	Х	L	

Notes

- 1. DQS is tri-stated when the asynchronous interface is active.
- 2. WP# should be biased to CMOS LOW or HIGH for standby.
- 3. Mode selection settings for this table: H = Logic level HIGH; L = Logic level LOW; $X = V_{IH}$ or V_{IL} .

Asynchronous Enable/Standby

A chip enable (CE#) signal is used to enable or disable a target. When CE# is driven LOW, all of the signals for that target are enabled. With CE# LOW, the target can accept commands, addresses, and data I/O. There may be more than one target in a NAND Flash package. Each target is controlled by its own chip enable; the first target (Target 0) is controlled by CE#; the second target (if present) is controlled by CE2#, etc.

A target is disabled when CE# is driven HIGH, even when the target is busy. When disabled, all of the target's signals are disabled except CE#, WP#, and R/B#. This functionality is also known as CE# "Don't Care". While the target is disabled, other devices can utilize the disabled NAND signals that are shared with the NAND Flash.

A target enters low-power standby when it is disabled and is not busy. If the target is busy when it is disabled, the target enters standby after all of the die (LUNs) complete their operations. Standby helps reduce power consumption.

Asynchronous Bus Idle

A target's bus is idle when CE# is LOW, WE# is HIGH, and RE# is HIGH.

During bus idle, all of the signals are enabled except DQS, which is not used when the asynchronous interface is active. No commands, addresses, and data are latched into the target; no data is output.




Asynchronous Commands

An asynchronous command is written from DQ[7:0] to the command register on the rising edge of WE# when CE# is LOW, ALE is LOW, CLE is HIGH, and RE# is HIGH.

Commands are typically ignored by die (LUNs) that are busy (RDY = 0); however, some commands, including READ STATUS (70h) and READ STATUS ENHANCED (78h), are accepted by die (LUNs) even when they are busy.

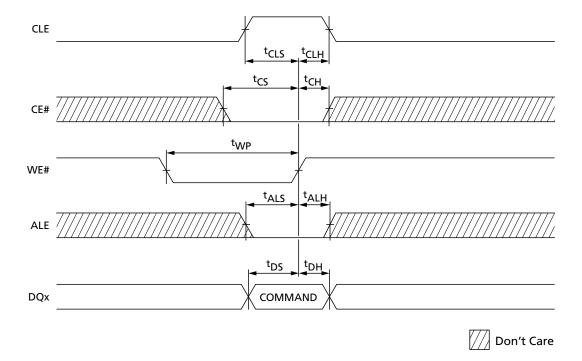Figure 14: Asynchronous Command Latch Cycle






Asynchronous Addresses

An asynchronous address is written from DQ[7:0] to the address register on the rising edge of WE# when CE# is LOW, ALE is HIGH, CLE is LOW, and RE# is HIGH.

Bits that are not part of the address space must be LOW (see Device and Array Organization). The number of cycles required for each command varies. Refer to the command descriptions to determine addressing requirements (see Command Definitions).

Addresses are typically ignored by die (LUNs) that are busy (RDY = 0); however, some addresses are accepted by die (LUNs) even when they are busy; for example, address cycles that follow the READ STATUS ENHANCED (78h) command.

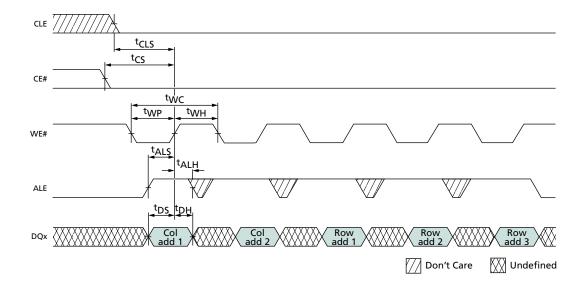Figure 15: Asynchronous Address Latch Cycle






Asynchronous Data Input

Data is written from DQ[7:0] to the cache register of the selected die (LUN) on the rising edge of WE# when CE# is LOW, ALE is LOW, CLE is LOW, and RE# is HIGH.

Data input is ignored by die (LUNs) that are not selected or are busy (RDY = 0).

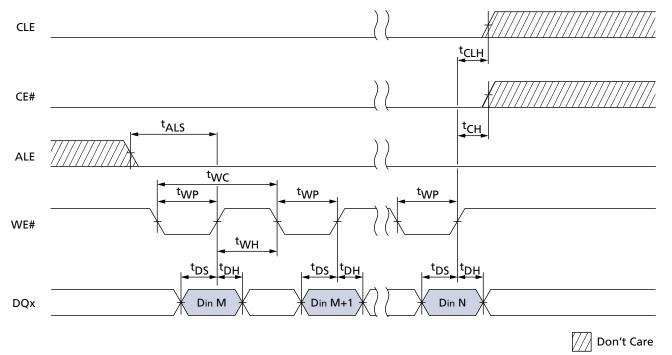Figure 16: Asynchronous Data Input Cycles





Asynchronous Data Output

Data can be output from a die (LUN) if it is in a READY state. Data output is supported following a READ operation from the NAND Flash array. Data is output from the cache register of the selected die (LUN) to DQ[7:0] on the falling edge of RE# when CE# is LOW, ALE is LOW, CLE is LOW, and WE# is HIGH.

If the host controller is using a ^tRC of 30ns or greater, the host can latch the data on the rising edge of RE# (see Figure 17 for proper timing). If the host controller is using a ^tRC of less than 30ns, the host can latch the data on the next falling edge of RE# (see Figure 18 (page 28) for extended data output (EDO) timing).

Using the READ STATUS ENHANCED (78h) command prevents data contention following an interleaved die (multi-LUN) operation. After issuing the READ STATUS ENHANCED (78h) command, to enable data output, issue the READ MODE (00h) command.

Data output requests are typically ignored by a die (LUN) that is busy (RDY = 0); however, it is possible to output data from the status register even when a die (LUN) is busy by first issuing the READ STATUS (70h) or READ STATUS ENHANCED (78h) command.

Figure 17: Asynchronous Data Output Cycles


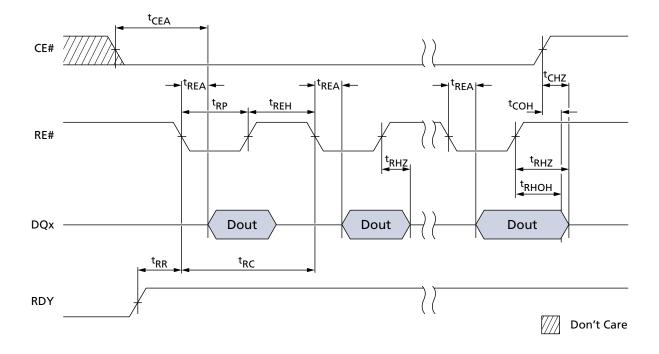




Figure 18: Asynchronous Data Output Cycles (EDO Mode)

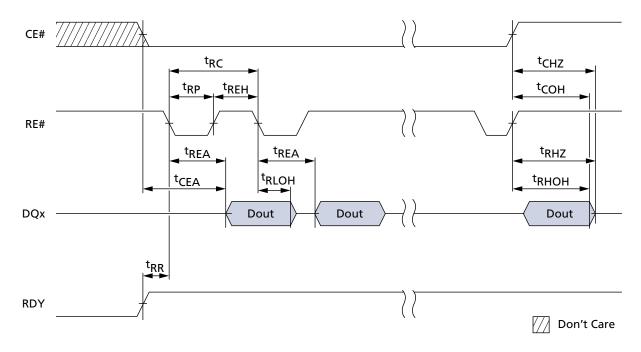

Write Protect

The write protect# (WP#) signal enables or disables PROGRAM and ERASE operations to a target. When WP# is LOW, PROGRAM and ERASE operations are disabled. When WP# is HIGH, PROGRAM and ERASE operations are enabled.

It is recommended that the host drive WP# LOW during power-on until Vcc and Vccq are stable to prevent inadvertent PROGRAM and ERASE operations (see Device Initialization (page 41) for additional details).

WP# must be transitioned only when the target is not busy and prior to beginning a command sequence. After a command sequence is complete and the target is ready, WP# can be transitioned. After WP# is transitioned, the host must wait tww before issuing a new command.

The WP# signal is always an active input, even when CE# is HIGH. This signal should not be multiplexed with other signals.

Ready/Busy#

The ready/busy# (R/B#) signal provides a hardware method of indicating whether a target is ready or busy. A target is busy when one or more of its die (LUNs) are busy (RDY = 0). A target is ready when all of its die (LUNs) are ready (RDY = 1). Because each die (LUN) contains a status register, it is possible to determine the independent status of each die (LUN) by polling its status register instead of using the R/B# signal (see Status Operations (page 65) for details regarding die (LUN) status).

This signal requires a pull-up resistor, Rp, for proper operation. R/B# is HIGH when the target is ready, and transitions LOW when the target is busy. The signal's open-drain



driver enables multiple R/B# outputs to be OR-tied. Typically, R/B# is connected to an interrupt pin on the system controller (see Figure 19 (page 29)).

The combination of Rp and capacitive loading of the R/B# circuit determines the rise time of the R/B# signal. The actual value used for Rp depends on the system timing requirements. Large values of Rp cause R/B# to be delayed significantly. Between the 10-to 90-percent points on the R/B# waveform, the rise time is approximately two time constants (TC).

$$TC = R \times C$$

Where R = Rp (resistance of pull-up resistor), and C = total capacitive load.

The fall time of the R/B# signal is determined mainly by the output impedance of the R/B# signal and the total load capacitance. Approximate Rp values using a circuit load of 100pF are provided in Figure 24 (page 32).

The minimum value for Rp is determined by the output drive capability of the R/B# signal, the output voltage swing, and Vccq.

$$Rp = \frac{Vcc (MAX) - Vol (MAX)}{IOL + \Sigma iI}$$

Where Σ il is the sum of the input currents of all devices tied to the R/B# pin.

Figure 19: READ/BUSY# Open Drain

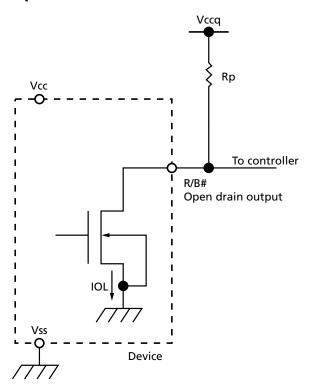
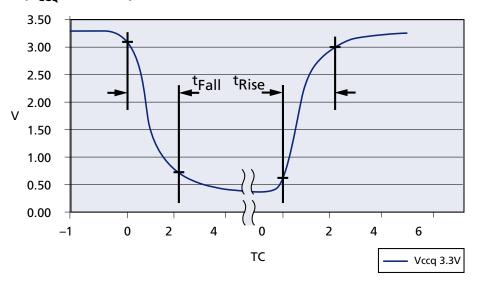


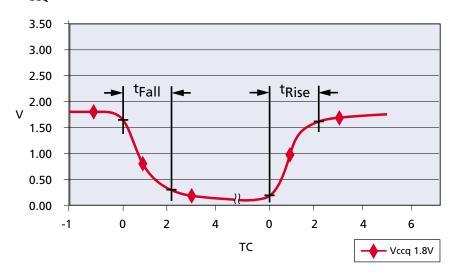


Figure 20: ^tFall and ^tRise (V_{CCQ} = 2.7-3.6V)



- Notes: 1. ${}^{t}FALL$ is $V_{OH(DC)}$ to $V_{OL(AC)}$ and ${}^{t}RISE$ is $V_{OL(DC)}$ to $V_{OH(AC)}$.
 - 2. tRise dependent on external capacitance and resistive loading and output transistor impedance.
 - 3. ^tRise primarily dependent on external pull-up resistor and external capacitive loading.
 - 4. ^tFall = 10ns at 3.3V
 - 5. See TC values in Figure 24 (page 32) for approximate Rp value and TC.

Figure 21: ^tFall and ^tRise (V_{CCQ} = 1.7-1.95V)



- Notes: 1. ${}^{t}FALL$ is $V_{OH(DC)}$ to $V_{OL(AC)}$ and ${}^{t}RISE$ is $V_{OL(DC)}$ to $V_{OH(AC)}$.
 - 2. ^tRise is primarily dependent on external pull-up resistor and external capacitive loading.
 - 3. ${}^{t}Fall \approx 7 \text{ ns at } 1.8 \text{ V}.$
 - 4. See TC values in Figure 24 (page 32) for TC and approximate Rp value.



Figure 22: IOL vs Rp ($V_{CCQ} = 2.7-3.6V$)

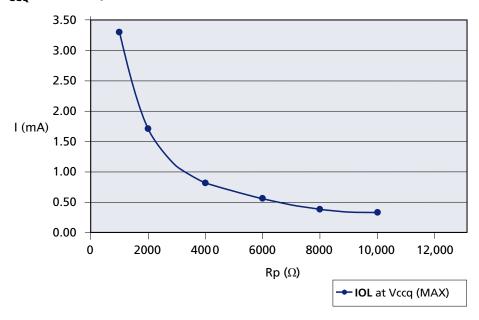


Figure 23: IOL vs Rp (V_{CCQ} = 1.7-1.95V)


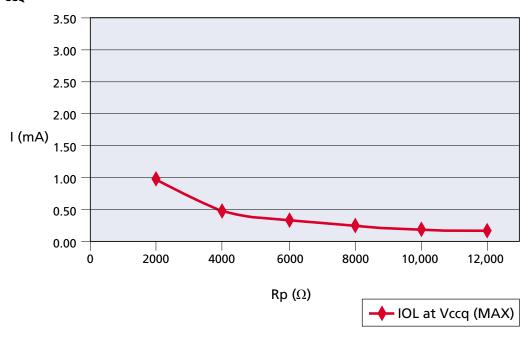




Figure 24: TC vs Rp

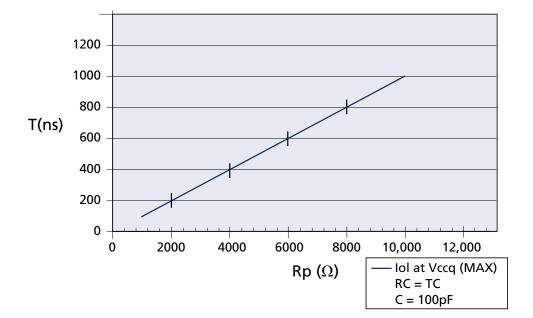



Bus Operation – Synchronous Interface

These NAND Flash devices have two interfaces—a synchronous interface for fast data I/O transfer and an asynchronous interface that is backward compatible with existing NAND Flash devices.

The NAND Flash command protocol for both the asynchronous and synchronous interfaces is identical. However, there are some differences between the asynchronous and synchronous interfaces when issuing command, address, and data I/O cycles using the NAND Flash signals.

When the synchronous interface is activated on a target (see Activating Interfaces (page 42)), the target is capable of high-speed DDR data transfers. Existing signals are redefined for high-speed DDR I/O. The WE# signal becomes CLK. DQS is enabled. The RE# signal becomes W/R#. CLK provides a clock reference to the NAND Flash device.

DQS is a bidirectional data strobe. During data output, DQS is driven by the NAND Flash device. During data input, DQS is controlled by the host controller while inputting data on DQ[7:0].

The direction of DQS and DQ[7:0] is controlled by the W/R# signal. When the W/R# signal is latched HIGH, the controller is driving the DQ bus and DQS. When the W/R# is latched LOW, the NAND Flash is driving the DQ bus and DQS.

The synchronous interface bus modes are summarized below.

Table 4: Synchronous Interface Mode Selection

Mode	CE#	CLE	ALE	CLK	W/R#	DQS	DQ[7:0]	WP#	Notes
Standby	Н	Х	Х	Х	Х	Х	Х	0V/V _{CCQ}	1, 2
Bus idle	L	L	L	□	Н	X	Х	X	
Bus driv- ing	L	L	L	I ₽	L	output	output	Х	
Command input	L	Н	L	□	Н	X	input	Н	3
Address input	L	L	Н	I ■	Н	Х	input	Н	3
Data input	L	Н	Н	₽	Н	₽ ₹	input	Н	4
Data out- put	L	Н	Н	₽₹	L	See Note 5	output	Х	5
Write pro- tect	Х	Х	Х	X	X	X	Х	L	
Undefined	L	L	Н	□	L	output	output	X	
Undefined	L	Н	L	□	L	output	output	Х	

Notes:

- 1. CLK can be stopped when the target is disabled, even when R/B# is LOW.
- 2. WP# should be biased to CMOS LOW or HIGH for standby.
- 3. Commands and addresses are latched on the rising edge of CLK.
- 4. During data input to the device, DQS is the "clock" that latches the data in the cache register.



- During data output from the NAND Flash device, DQS is an output generated from CLK after ^tDQSCK delay.
- 6. Mode selection settings for this table: H = Logic level HIGH; L = Logic level LOW; $X = V_{IH}$ or V_{IL} .

Synchronous Enable/Standby

In addition to the description in the section Asynchronous Enable/Standby (page 23), the following requirements also apply when the synchronous interface is active.

Before enabling a target, CLK must be running and ALE and CLE must be LOW. When CE# is driven LOW, all of the signals for the selected target are enabled. The target is not enabled until ^tCS completes; the target's bus is then idle.

Prior to disabling a target, the target's bus must be idle. A target is disabled when CE# is driven HIGH, even when it is busy. All of the target's signals are disabled except CE#, WP#, and R/B#. After the target is disabled, CLK can be stopped.

A target enters low-power standby when it is disabled and is not busy. If the target is busy when it is disabled, the target enters standby after all of the die (LUNs) complete their operations.

Synchronous Bus Idle/Driving


A target's bus is idle or driving when CLK is running, CE# is LOW, ALE is LOW, and CLE is LOW.

The bus is idle when W/R# transitions HIGH and is latched by CLK. During the bus idle mode, all signals are enabled; DQS and DQ[7:0] are inputs. No commands, addresses, or data are latched into the target; no data is output. When entering the bus idle mode, the host must wait a minimum of ^tCAD before changing the bus mode. In the bus idle mode, the only valid bus modes supported are: bus driving, command, address, and DDR data input.

The bus is driving when W/R# transitions LOW and is latched by CLK. During the bus driving mode, all signals are enabled; DQS is LOW and DQ[7:0] is driven LOW or HIGH, but no valid data is output. Following the bus driving mode, the only valid bus modes supported are bus idle and DDR data output.



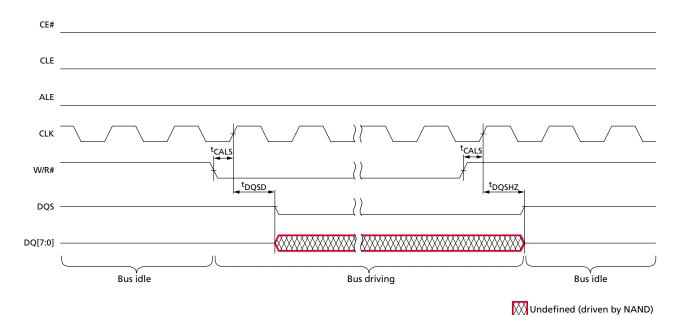Figure 25: Synchronous Bus Idle/Driving Behavior



Note: 1. Only the selected die (LUN) drives DQS and DQ[7:0]. During an interleaved die (multi-LUN) operation, the host must use the READ STATUS ENHANCED (78h) to prevent data output contention.

Synchronous Commands


A command is written from DQ[7:0] to the command register on the rising edge of CLK when CE# is LOW, ALE is LOW, CLE is HIGH, and W/R# is HIGH.

After a command is latched—and prior to issuing the next command, address, or data I/O—the bus must go to bus idle mode on the next rising edge of CLK, except when the clock period, ^tCK, is greater than ^tCAD.

Commands are typically ignored by die (LUNs) that are busy (RDY = 0); however, some commands, such as READ STATUS (70h) and READ STATUS ENHANCED (78h), are accepted by die (LUNs), even when they are busy.



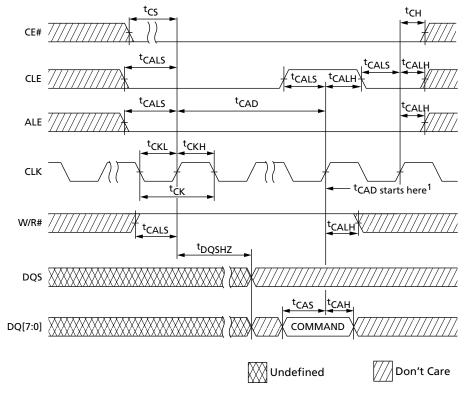Figure 26: Synchronous Command Cycle



Note: 1. When CE# remains LOW, ^tCAD begins at the rising edge of the clock from which the command cycle is latched for subsequent command, address, data input, or data output cycle(s).

Synchronous Addresses

A synchronous address is written from DQ[7:0] to the address register on the rising edge of CLK when CE# is LOW, ALE is HIGH, CLE is LOW, and W/R# is HIGH.


After an address is latched—and prior to issuing the next command, address, or data I/O—the bus must go to bus idle mode on the next rising edge of CLK, except when the clock period, ^tCK, is greater than ^tCAD.

Bits not part of the address space must be LOW (see Device and Array Organization). The number of address cycles required for each command varies. Refer to the command descriptions to determine addressing requirements.

Addresses are typically ignored by die (LUNs) that are busy (RDY = 0); however, some addresses such as address cycles that follow the READ STATUS ENHANCED (78h) command, are accepted by die (LUNs), even when they are busy.



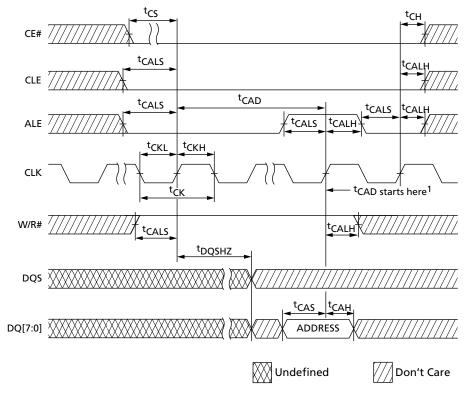Figure 27: Synchronous Address Cycle



Note: 1. When CE# remains LOW, ^tCAD begins at the rising edge of the clock from which the command cycle is latched for subsequent command, address, data input, or data output cycle(s).

Synchronous DDR Data Input

To enter the DDR data input mode, the following conditions must be met:

- CLK is running
- CE# is LOW
- W/R# is HIGH
- tCAD is met
- DQS is LOW
- ALE and CLE are HIGH on the rising edge of CLK

Upon entering the DDR data input mode after ^tDQSS, data is written from DQ[7:0] to the cache register on each and every rising and falling edge of DQS (center-aligned) when CLK is running and the DQS to CLK skew meets ^tDSH and ^tDSS, CE# is LOW, W/R# is HIGH, and ALE and CLE are HIGH on the rising edge of CLK.

To exit DDR data input mode, the following conditions must be met:

- CLK is running and the DQS to CLK skew meets ^tDSH and ^tDSS
- · CE# is LOW
- W/R# is HIGH




- · ALE and CLE are latched LOW on the rising edge of CLK
- The final two data bytes of the data input sequence are written to DQ[7:0] to the cache register on the rising and falling edges of DQS after the last cycle in the data input sequence in which ALE and CLE are latched HIGH.
- DQS is held LOW for tWPST (after the final falling edge of DQS)

Following ^tWPST, the bus enters bus idle mode and ^tCAD begins on the next rising edge of CLK. After ^tCAD starts, the host can disable the target if desired.

Data input is ignored by die (LUNs) that are not selected or are busy.

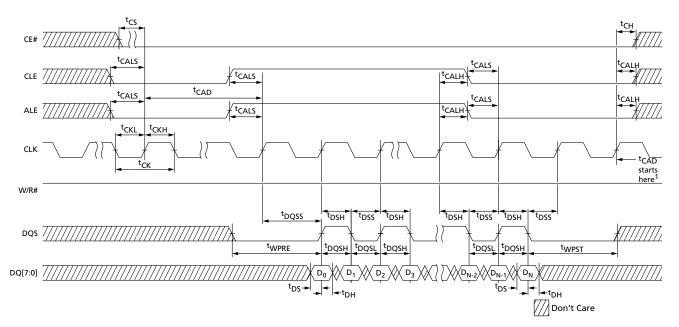Figure 28: Synchronous DDR Data Input Cycles



Notes:

- When CE# remains LOW, ^tCAD begins at the first rising edge of the clock after ^tWPST completes.
- 2. ^tDSH (MIN) generally occurs during ^tDQSS (MIN).
- 3. ^tDSS (MIN) generally occurs during ^tDQSS (MAX).

Synchronous DDR Data Output

Data can be output from a die (LUN) if it is ready. Data output is supported following a READ operation from the NAND Flash array.

To enter the DDR data output mode, the following conditions must be met:

- · CLK is running
- CE# is LOW
- The host has released the DQ[7:0] bus and DQS
- W/R# is latched LOW on the rising edge of CLK to enable the selected die (LUN) to take ownership of the DQ[7:0] bus and DQS within ^tWRCK
- tCAD is met
- ALE and CLE are HIGH on the rising edge of CLK



Upon entering the DDR data output mode, DQS will toggle HIGH and LOW with a delay of ^tDQSCK from the respective rising and falling edges of CLK. DQ[7:0] will output data edge-aligned to the rising and falling edges of DQS, with the first transition delayed by no more than ^tAC.

DDR data output mode continues as long as CLK is running, CE# is LOW, W/R# is LOW, and ALE and CLE are HIGH on the rising edge of CLK.

To exit DDR data output mode, the following conditions must be met:


- · CLK is running
- CE# is LOW
- W/R# is LOW
- · ALE and CLE are latched LOW on the rising edge of CLK

The final two data bytes are output on DQ[7:0] on the final rising and falling edges of DQS. The final rising and falling edges of DQS occur ^tDQSCK after the last cycle in the data output sequence in which ALE and CLE are latched HIGH. After ^tCKWR, the bus enters bus idle mode and ^tCAD begins on the next rising edge of CLK. Once ^tCAD starts the host can disable the target if desired.

Data output requests are typically ignored by a die (LUN) that is busy (RDY = 0); however, it is possible to output data from the status register even when a die (LUN) is busy by issuing the READ STATUS (70h) or READ STATUS ENHANCED (78h) command.



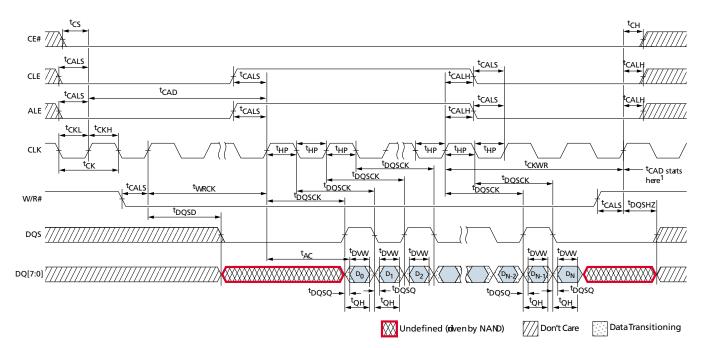Figure 29: Synchronous DDR Data Output Cycles



Notes:

- 1. When CE# remains LOW, ^tCAD begins at the rising edge of the clock after ^tCKWR for subsequent command or data output cycle(s).
- 2. See Figure 26 (page 36) for details of W/R# behavior.
- 3. tAC is the DQ output window relative to CLK and is the long-term component of DQ skew.
- 4. For W/R# transitioning HIGH, DQ[7:0] and DQS go to tri-state.
- 5. For W/R# transitioning LOW, DQ[7:0] drives current state and DQS goes LOW.
- 6. After final data output, DQ[7:0] is driven until W/R# goes HIGH, but is not valid.

Write Protect

See Write Protect (page 28).

Ready/Busy#

See Ready/Busy# (page 28).



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Device Initialization

Device Initialization


Some NAND Flash devices do not support V_{CCQ} . For these devices all references to V_{CCQ} are replaced with V_{CC} .

Micron NAND Flash devices are designed to prevent data corruption during power transitions. V_{CC} is internally monitored. (The WP# signal supports additional hardware protection during power transitions.) When ramping V_{CC} and V_{CCQ} , use the following procedure to initialize the device:

- 1. Ramp V_{CC}.
- 2. Ramp V_{CCO} . V_{CCO} must not exceed V_{CC} .
- 3. The host must wait for R/B# to be valid and HIGH before issuing RESET (FFh) to any target (see Figure 30). The R/B# signal becomes valid when 50 μ s has elapsed since the beginning the V_{CC} ramp, and 10 μ s has elapsed since V_{CCQ} reaches V_{CCQ} (MIN) and V_{CC} reaches V_{CC} (MIN).
- 4. If not monitoring R/B#, the host must wait at least 100 μ s after V_{CCQ} reaches V_{CCQ} (MIN) and V_{CC} reaches V_{CC} (MIN). If monitoring R/B#, the host must wait until R/B# is HIGH.
- 5. The asynchronous interface is active by default for each target. Each LUN draws less than an average of 10mA (I_{ST}) measured over intervals of 1ms until the RESET (FFh) command is issued.
- 6. The RESET (FFh) command must be the first command issued to all targets (CE#s) after the NAND Flash device is powered on. Each target will be busy for ^tPOR after a RESET command is issued. The RESET busy time can be monitored by polling R/B# or issuing the READ STATUS (70h) command to poll the status register.
- 7. The device is now initialized and ready for normal operation.

At power-down, V_{CCQ} must go LOW, either before, or simultaneously with, V_{CC} going LOW.

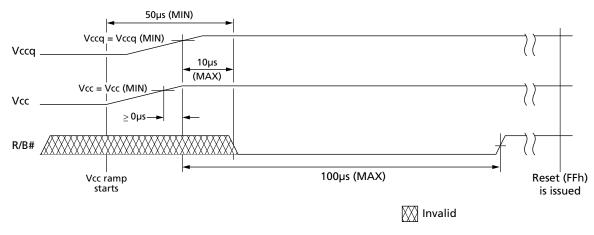Figure 30: R/B# Power-On Behavior



Note: 1. Disregard V_{CCQ} for devices that use only V_{CC}.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Activating Interfaces

Activating Interfaces

After performing the steps under Device Initialization (page 41), the asynchronous interface is active for all targets on the device.

Each target's interface is independent of other targets, so the host is responsible for changing the interface for each target.

If the host and NAND Flash device, through error, are no longer using the same interface, then steps under Activating the Asynchronous Interface are performed to resynchronize the interfaces.

Activating the Asynchronous Interface

To activate the asynchronous NAND interface, once the synchronous interface is active, the following steps are repeated for each target:

- 1. The host pulls CE# HIGH, disables its input to CLK, and enables its asynchronous interface.
- 2. The host pulls CE# LOW and issues the RESET (FFh) command, using an asynchronous command cycle.
- 3. R/B# goes LOW for ^tRST.
- 4. After ^tITC, and during ^tRST, the device enters the asynchronous NAND interface. READ STATUS (70h) and READ STATUS ENHANCED (78h) are the only commands that can be issued.
- 5. After ^tRST, R/B# goes HIGH. Timing mode feature address (01h), subfeature parameter P1 is set to 00h, indicating that the asynchronous NAND interface is active and that the device is set to timing mode 0.

For further details, see Reset Operations.

Activating the Synchronous Interface


To activate the synchronous NAND Flash interface, the following steps are repeated for each target:

- 1. Issue the SET FEATURES (EFh) command.
- 2. Write address 01h, which selects the timing mode.
- 3. Write P1 with 1Xh, where "X" is the timing mode used in the synchronous interface (see Configuration Operations).
- 4. Write P2-P4 as 00h-00h-00h.
- 5. R/B# goes LOW for ^tITC. The host should pull CE# HIGH. During ^tITC, the host should not issue any type of command, including status commands, to the NAND Flash device
- 6. After ^tITC, R/B# goes HIGH and the synchronous interface is enabled. Before pulling CE# LOW, the host should enable the clock.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Activating Interfaces

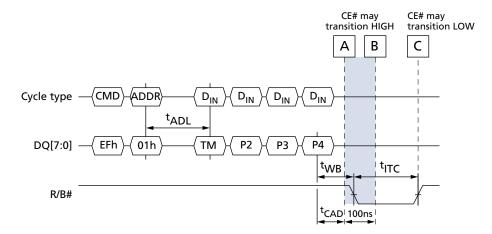Figure 31: Activating the Synchronous Interface



Note: 1. TM = Timing mode.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Command Definitions

Command Definitions

Table 5: Command Set

		Number of					
	Command	Valid Address	Data Input	Command	Valid While Selected LUN	Valid While Other LUNs	
Command	Cycle #1	Cycles	Cycles	Cycle #2	is Busy ¹	are Busy ²	Notes
Reset Operations	-	-	-			-	
RESET	FFh	0	_	_	Yes	Yes	
SYNCHRONOUS RESET	FCh	0	_	_	Yes	Yes	
RESET LUN	FAh	3	_	_	Yes	Yes	
Identification Operatio	ns		3	•			
READ ID	90h	1	_	_			3
READ PARAMETER PAGE	ECh	1	_	_			
READ UNIQUE ID	EDh	1	_	_			
Configuration Operation	ns			·			
GET FEATURES	EEh	1	_	_			3
SET FEATURES	EFh	1	4	_			4
Status Operations				·			
READ STATUS	70h	0	_	_	Yes		
READ STATUS ENHANCED	78h	3	_	_	Yes	Yes	
Column Address Opera	tions						,
CHANGE READ COLUMN	05h	2	_	E0h		Yes	
CHANGE READ COLUMN ENHANCED	06h	5	_	E0h		Yes	
CHANGE WRITE COLUMN	85h	2	Optional	_		Yes	
CHANGE ROW ADDRESS	85h	5	Optional	_		Yes	5
Read Operations				·			
READ MODE	00h	0	_	_		Yes	
READ PAGE	00h	5	_	30h		Yes	6
READ PAGE MULTI- PLANE	00h	5	_	32h		Yes	
READ PAGE CACHE SEQUENTIAL	31h	0	_	_		Yes	7
READ PAGE CACHE RANDOM	00h	5	_	31h		Yes	6,7
READ PAGE CACHE LAST	3Fh	0	_	_		Yes	7
Program Operations							
PROGRAM PAGE	80h	5	Yes	10h		Yes	
PROGRAM PAGE MULTI-PLANE	80h	5	Yes	11h		Yes	
PROGRAM PAGE CACHE	80h	5	Yes	15h		Yes	8



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND **Command Definitions**

Table 5: Command Set (Continued)

Command	Command Cycle #1	Number of Valid Address Cycles	Data Input Cycles	Command Cycle #2	Valid While Selected LUN is Busy ¹	Valid While Other LUNs are Busy ²	Notes
Erase Operations							
ERASE BLOCK	60h	3	-	D0h		Yes	
ERASE BLOCK MULTI-PLANE	60h	3	_	D1h		Yes	
Copyback Operations			,				
COPYBACK READ	00h	5	-	35h		Yes	6
COPYBACK PROGRAM	85h	5	Optional	10h		Yes	
COPYBACK PROGRAM MULTI-PLANE	85h	5	Optional	11h		Yes	

- Notes: 1. Busy means RDY = 0.
 - 2. These commands can be used for interleaved die (multi-LUN) operations (see Interleaved Die (Multi-LUN) Operations (page 100)).
 - 3. The READ ID (90h) and GET FEATURES (EEh) output identical data on rising and falling DQS edges.
 - 4. The SET FEATURES (EFh) command requires data transition prior to the rising edge of CLK, with identical data for the rising and falling edges.
 - 5. Command cycle #2 of 11h is conditional. See CHANGE ROW ADDRESS (85h) (page 71) for more details.
 - 6. This command can be preceded by up to one READ PAGE MULTI-PLANE (00h-32h) command to accommodate a maximum simultaneous two-plane array operation.
 - 7. Issuing a READ PAGE CACHE-series (31h, 00h-31h, 00h-32h, 3Fh) command when the array is busy (RDY = 1, ARDY = 0) is supported if the previous command was a READ PAGE (00h-30h) or READ PAGE CACHE-series command; otherwise, it is prohibited.
 - 8. Issuing a PROGRAM PAGE CACHE (80h-15h) command when the array is busy (RDY = 1, ARDY = 0) is supported if the previous command was a PROGRAM PAGE CACHE (80h-15h) command; otherwise, it is prohibited.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Reset Operations

Reset Operations

RESET (FFh)

The RESET (FFh) command is used to put a target into a known condition and to abort command sequences in progress. This command is accepted by all die (LUNs), even when they are busy.


When FFh is written to the command register, the target goes busy for ^tRST. During ^tRST, the selected target (CE#) discontinues all array operations on all die (LUNs). All pending single- and multi-plane operations are cancelled. If this command is issued while a PROGRAM or ERASE operation is occurring on one or more die (LUNs), the data may be partially programmed or erased and is invalid. The command register is cleared and ready for the next command. The data register and cache register contents are invalid.

RESET must be issued as the first command to each target following power-up (see Device Initialization (page 41)). Use of the READ STATUS ENHANCED (78h) command is prohibited during the power-on RESET. To determine when the target is ready, use READ STATUS (70h).

If the RESET (FFh) command is issued when the synchronous interface is enabled, the target's interface is changed to the asynchronous interface and the timing mode is set to 0. The RESET (FFh) command can be issued asynchronously when the synchronous interface is active, meaning that CLK does not need to be continuously running when CE# is transitioned LOW and FFh is latched on the rising edge of CLK. After this command is latched, the host should not issue any commands during ^tTC. After ^tTC, and during or after ^tRST, the host can poll each LUN's status register.

If the RESET (FFh) command is issued when the asynchronous interface is active, the target's asynchronous timing mode remains unchanged. During or after ^tRST, the host can poll each LUN's status register.

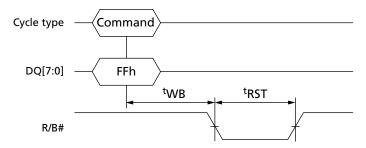Figure 32: RESET (FFh) Operation





32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Reset Operations

SYNCHRONOUS RESET (FCh)


When the synchronous interface is active, the SYNCHRONOUS RESET (FCh) command is used to put a target into a known condition and to abort command sequences in progress. This command is accepted by all die (LUNs), even when they are BUSY.

When FCh is written to the command register, the target goes busy for ^tRST. During ^tRST, the selected target (CE#) discontinues all array operations on all die (LUNs). All pending single- and multi-plane operations are cancelled. If this command is issued while a PROGRAM or ERASE operation is occurring on one or more die (LUNs), the data may be partially programmed or erased and is invalid. The command register is cleared and ready for the next command. The data register and cache register contents are invalid and the synchronous interface remains active.

During or after ^tRST, the host can poll each LUN's status register.

SYNCHRONOUS RESET is only accepted while the synchronous interface is active. Its use is prohibited when the asynchronous interface is active.

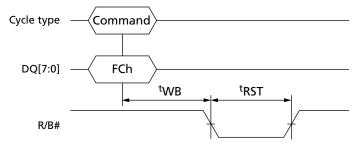Figure 33: SYNCHRONOUS RESET (FCh) Operation





32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Reset Operations

RESET LUN (FAh)

The RESET LUN (FAh) command is used to put a particular LUN on a target into a known condition and to abort command sequences in progress. This command is accepted by only the LUN addressed by the RESET LUN (FAh) command, even when that LUN is busy.

When FAh is written to the command register, the addressed LUN goes busy for ^tRST. During ^tRST, the selected LUN discontinues all array operations. All pending single-and multi-plane operations are canceled. If this command is issued while a PROGRAM or ERASE operation is occurring on the addressed LUN, the data may be partially programmed or erased and is invalid. The command register is cleared and ready for the next command. The data register and cache register contents are invalid.

If the RESET LUN (FAh) command is issued when the synchronous interface is enabled, the targets's interface remains in synchronous mode.


If the RESET LUN (FAh) command is issued when the asynchronous interface is enabled, the target's interface remains in asynchronous mode.

During or after ^tRST, the host can poll each LUN's status register.

The RESET LUN (FAh) command is prohibited when not in the default array operation mode.

The RESET LUN (FAh) command can only be issued to a target (CE#) after the RESET (FFh) command has been issued as the first command to a target following power-up.

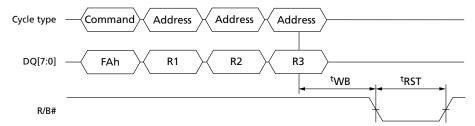Figure 34: RESET LUN (FAh) Operation





32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Identification Operations

Identification Operations

READ ID (90h)

The READ ID (90h) command is used to read identifier codes programmed into the target. This command is accepted by the target only when all die (LUNs) on the target are idle.


Writing 90h to the command register puts the target in read ID mode. The target stays in this mode until another valid command is issued.

When the 90h command is followed by a 00h address cycle, the target returns a 5-byte identifier code that includes the manufacturer ID, device configuration, and part-specific information.

When the 90h command is followed by a 20h address cycle, the target returns the 4-byte ONFI identifier code.


After the 90h and address cycle are written to the target, the host enables data output mode to read the identifier information. When the asynchronous interface is active, one data byte is output per RE# toggle. When the synchronous interface is active, one data byte is output per rising edge of DQS when ALE and CLE are HIGH; the data byte on the falling edge of DQS is identical to the data byte output on the previous rising edge of DQS.

Figure 35: READ ID (90h) with 00h Address Operation



Note: 1. See the READ ID Parameter tables for byte definitions.

Figure 36: READ ID (90h) with 20h Address Operation



Note: 1. See the READ ID Parameter tables for byte definitions.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND READ ID Parameter Tables

READ ID Parameter Tables

Table 6: Read ID Parameters for Address 00h

Device	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
MT29F32G08CBACA	2Ch	68h	04h	4Ah	A9h	00h	00h	00h
MT29F64G08CEACA	2Ch	68h	04h	4Ah	A9h	00h	00h	00h
MT29F64G08CECCB	2Ch	68h	04h	4Ah	A9h	00h	00h	00h
MT29F64G08CFACA	2Ch	68h	04h	4Ah	A9h	00h	00h	00h
MT29F128G08CXACA	2Ch	68h	04h	4Ah	A9h	00h	00h	00h

Note: 1. h = hexadecimal.

Table 7: Read ID Parameters for Address 20h

Device	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	
All	4Fh	4Eh	46h	49h	XXh	

Notes: 1. h = hexadecimal.

2. XXh = Undefined.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Configuration Operations

Configuration Operations

The SET FEATURES (EFh) and GET FEATURES (EEh) commands are used to modify the target's default power-on behavior. These commands use a one-byte feature address to determine which subfeature parameters will be read or modified. Each feature address (in the 00h to FFh range) is defined in Table 8. The SET FEATURES (EFh) command writes subfeature parameters (P1-P4) to the specified feature address. The GET FEATURES command reads the subfeature parameters (P1-P4) at the specified feature address.

Unless otherwise specifed, the values of the feature addresses do not change when RE-SET (FFh, FCh) is issued by the host.

Feature Address	Definition
00h	Reserved
01h	Timing mode
02h–0Fh	Reserved
10h	Programmable output drive strength
11h–7Fh	Reserved
80h	Programmable output drive strength
81h	Programmable RB# pull-down strength
82h–8Fh	Reserved
90h	Array operation mode
91h–FFh	Reserved

SET FEATURES (EFh)

The SET FEATURES (EFh) command writes the subfeature parameters (P1-P4) to the specified feature address to enable or disable target-specific features. This command is accepted by the target only when all die (LUNs) on the target are idle.

Writing EFh to the command register puts the target in the set features mode. The target stays in this mode until another command is issued.

The EFh command is followed by a valid feature address as specified in Table 8. The host waits for ^tADL before the subfeature parameters are input. When the asynchronous interface is active, one subfeature parameter is latched per rising edge of WE#. When the synchronous interface is active, one subfeature parameter is latched per rising edge of DQS. The data on the falling edge of DQS should be identical to the subfeature parameter input on the previous rising edge of DQS. The device is not required to wait for the repeated data byte before beginning internal actions.


After all four subfeature parameters are input, the target goes busy for ^tFEAT. The READ STATUS (70h) command can be used to monitor for command completion.

Feature address 01h (timing mode) operation is unique. If SET FEATURES is used to modify the interface type, the target will be busy for ^tITC. See Activating Interfaces (page 42) for details.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Configuration Operations

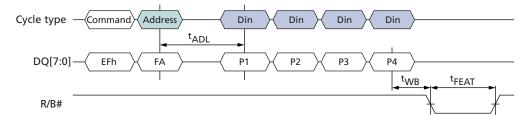Figure 37: SET FEATURES (EFh) Operation



GET FEATURES (EEh)


The GET FEATURES (EEh) command reads the subfeature parameters (P1-P4) from the specified feature address. This command is accepted by the target only when all die (LUNs) on the target are idle.

Writing EEh to the command register puts the target in get features mode. The target stays in this mode until another valid command is issued.

When the EEh command is followed by a feature address, the target goes busy for FEAT. If the READ STATUS (70h) command is used to monitor for command completion, the READ MODE (00h) command must be used to re-enable data output mode. During and prior to data output, use of the READ STATUS ENHANCED (78h) command is prohibited.

After ^tFEAT completes, the host enables data output mode to read the subfeature parameters. When the asynchronous interface is active, one data byte is output per RE# toggle. When the synchronous interface is active, one subfeature parameter is output per DQS toggle on rising or falling edge of DQS.

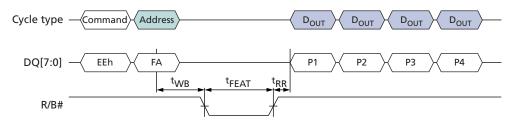Figure 38: GET FEATURES (EEh) Operation





32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND **Configuration Operations**

Table 9: Feature Address 01h: Timing Mode

Subfeature Pa-											
rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
P1											
Timing mode	Mode 0 (default)					0	0	0	0	x0h	1, 2
	Mode 1					0	0	0	1	x1h	
	Mode 2					0	0	1	0	x2h	
	Mode 3					0	0	1	1	x3h	
	Mode 4					0	1	0	0	x4h	
	Mode 5					0	1	0	1	x5h	
Data interface	Asynchronous (default)			0	0					0xh	1
	Synchronous DDR			0	1					1xh	
	Reserved			1	х					2xh	
Program clear	Program com- mand clears all cache registers on a target (default)		0							0b	
	Program com- mand clears only addressed LUN cache register on a target		1							1b	
Reserved		0								0b	
P2											
Reserved		0	0	0	0	0	0	0	0	00h	
Р3			•	•							,
Reserved		0	0	0	0	0	0	0	0	00h	
P4			•	•						<u>. </u>	
Reserved		0	0	0	0	0	0	0	0	00h	

- Notes: 1. Asynchronous timing mode 0 is the default, power-on value.
 - 2. If the synchronous interface is active, a RESET (FFh) command will change the timing mode and data interface bits of feature address 01h to their default values. If the asynchronous interface is active, a RESET (FFh) command will not change the values of the timing mode or data interface bits to their default valued.

Table 10: Feature Addresses 10h and 80h: Programmable Output Drive Strength

Subfeature Pa- rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
P1											



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Configuration Operations

Table 10: Feature Addresses 10h and 80h: Programmable Output Drive Strength (Continued)

Subfeature Pa- rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
Output drive	Overdrive 2							0	0	00h	1
strength	Overdrive 1							0	1	01h	
	Nominal (de- fault)							1	0	02h	
	Underdrive							1	1	03h	
Reserved		0	0	0	0	0	0			00h	
P2	·										
Reserved		0	0	0	0	0	0	0	0	00h	
Р3	·							,			
Reserved		0	0	0	0	0	0	0	0	00h	
P4		•						,		•	
Reserved		0	0	0	0	0	0	0	0	00h	

Note: 1. See Output Drive Impedance (page 102) for details.

Table 11: Feature Addresses 81h: Programmable R/B# Pull-Down Strength

Subfeature Pa- rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
P1										1	
R/B# pull-down	Full (default)							0	0	00h	1
strength	Three-quarter							0	1	01h	
	One-half							1	0	02h	
	One-quarter							1	1	03h	
Reserved		0	0	0	0	0	0			00h	
P2	•									•	,
Reserved		0	0	0	0	0	0	0	0	00h	
P3	•									•	,
Reserved		0	0	0	0	0	0	0	0	00h	
P4	1	,		1				1		•	
Reserved		0	0	0	0	0	0	0	0	00h	

Note: 1. This feature address is used to change the default R/B# pull-down strength. Its strength should be selected based on the expected loading of R/B#. Full strength is the default, power-on value.

Table 12: Feature Addresses 90h: Array Operation Mode

Subfeature Pa- rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
P1											



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND **Configuration Operations**

Table 12: Feature Addresses 90h: Array Operation Mode (Continued)

Subfeature Pa- rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
Array Operation Mode	Normal (de- fault)	-	-			-		-	0	00h	
	OTP Block								1	01h	1
Reserved		0	0	0	0	0	0	0		00h	
P2											
Reserved		0	0	0	0	0	0	0	0	00h	
Р3											
Reserved		0	0	0	0	0	0	0	0	00h	
P4			•	1				1			
Reserved		0	0	0	0	0	0	0	0	00h	

- Notes: 1. See One-Time Programmable (OTP) Operations for details.
 - 2. A RESET (FFh) command will cause the bits of the array operation mode to change to their default values.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND READ PARAMETER PAGE (ECh)

READ PARAMETER PAGE (ECh)

The READ PARAMETER PAGE (ECh) command is used to read the ONFI parameter page programmed into the target. This command is accepted by the target only when all die (LUNs) on the target are idle.

Writing ECh to the command register puts the target in read parameter page mode. The target stays in this mode until another valid command is issued.


When the ECh command is followed by an 00h address cycle, the target goes busy for ^tR. If the READ STATUS (70h) command is used to monitor for command completion, the READ MODE (00h) command must be used to re-enable data output mode. Use of the READ STATUS ENHANCED (78h) command is prohibited while the target is busy and during data output.

After ^tR completes, the host enables data output mode to read the parameter page. When the asynchronous interface is active, one data byte is output per RE# toggle. When the synchronous interface is active, one data byte is output for each rising or falling edge of DQS.

A minimum of three copies of the parameter page are stored in the device. Each parameter page is 256 bytes. If desired, the CHANGE READ COLUMN (05h-E0h) command can be used to change the location of data output. Use of the CHANGE READ COLUMN ENHANCED (06h-E0h) command is prohibited.

The READ PARAMETER PAGE (ECh) output data can be used by the host to configure its internal settings to properly use the NAND Flash device. Parameter page data is static per part, however the value can be changed through the product cycle of NAND Flash. The host should interpret the data and configure itself accordingly.

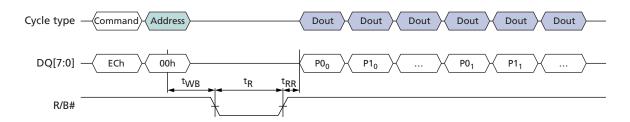Figure 39: READ PARAMETER (ECh) Operation





Parameter Page Data Structure Tables

Table 13: Parameter Page Data Structure

Byte	Description	Device	Values
Revision i	nformation and features block		
0–3	Parameter page signature Byte 0: 4Fh, "O" Byte 1: 4Eh, "N" Byte 2: 46h, "F" Byte 3: 49h, "I"	-	4Fh, 4Eh, 46h, 49h
4–5	Revision number Bit[15:5]: Reserved (0) Bit 4: 1 = supports ONFI verion 2.2 Bit 3: 1 = supports ONFI verion 2.1 Bit 2: 1 = supports ONFI version 2.0 Bit 1: 1 = supports ONFI version 1.0 Bit 0: Reserved (0)	-	1Eh, 00h
6–7	Features supported	MT29F32G08CBACA	D8h, 01h
	Bit[15:9]: Reserved (0)	MT29F64G08CEACA	-
	Bit 8: 1 = supports program page register clear enhancement	MT29F64G08CFACA	-
	Bit 7: 1 = supports extended parameter page	MT29F128G08CXACA	
	Bit 6: 1 = supports interleaved (multi-plane) read operations Bit 5: 1 = supports synchronous interface Bit 4: 1 = supports odd-to-even page copyback Bit 3: 1 = supports interleaved (multi-plane) program and erase operations Bit 2: 1 = supports non-sequential page programming Bit 1: 1 = supports multiple LUN operations Bit 0: 1 = supports 16-bit data bus width	MT29F64G08CECCB	F8h, 01h
8–9 Optional commands supported Bit[15:10]: Reserved (0) Bit 9: 1 = supports RESET LUN command Bit 8: 1 = supports small data move Bit 7: 1 = supports CHANGE ROW ADDRESS Bit 6: 1 = supports CHANGE READ COLUMN ENHANCED Bit 5: 1 = supports READ UNIQUE ID Bit 4: 1 = supports COPYBACK Bit 3: 1 = supports READ STATUS ENHANCED Bit 2: 1 = supports GET FEATURES and SET FEATURES Bit 1: 1 = supports read cache commands Bit 0: 1 = supports PROGRAM PAGE CACHE			FFh, 03h
10–11 Reserved (0)		_	All 00h
12–13	Extended parameter page length	-	03h, 00h
14	Number of parameter pages	-	03h
15–31	Reserved (0)	_	All 00h



Table 13: Parameter Page Data Structure (Continued)

Byte	Description	Values	
Manufact	urer information block		
32–43	Device manufacturer (12 ASCII characters) Micron	-	4Dh, 49h, 43h, 52h, 4Fh, 4Eh, 20h, 20h, 20h, 20h, 20h, 20h
44–63	Device model (20 ASCII characters)	MT29F32G08CBACAWP	4Dh, 54h, 32h, 39h, 46h, 33h, 32h, 47h, 30h, 38h, 43h, 42h, 41h, 43h, 41h, 57h, 50h, 20h, 20h, 20h
		MT29F64G08CFACAWP	4Dh, 54h, 32h, 39h, 46h, 36h, 34h, 47h, 30h, 38h, 43h, 46h, 41h, 43h, 41h, 57h, 50h, 20h, 20h, 20h
		MT29F64G08CEACAD1	4Dh, 54h, 32h, 39h, 46h, 36h, 34h, 47h, 30h, 38h, 43h, 45h, 41h, 43h, 41h, 44h, 31h, 20h, 20h, 20h
		MT29F128G08CXACAD1	4Dh, 54h, 32h, 39h, 46h, 31h, 32h, 38h, 47h, 30h, 38h, 43h, 58h, 41h, 43h, 41h, 44h, 31h, 20h, 20h
		MT29F64G08CECCBH1	4Dh, 54h, 32h, 39h, 46h, 36h, 34h, 47h, 30h, 38h, 43h, 45h, 43h, 43h, 42h, 48h, 31h, 20h, 20h, 20h
64	JEDEC manufacturer ID	_	2Ch
65–66	Date code	_	00h, 00h
67–79	Reserved (0)	_	All 00h
Memory o	organization block		
80–83	Number of data bytes per page	_	00h, 10h, 00h, 00h
84–85	Number of spare bytes per page	_	E0h, 00h
86–91	Reserved (0)	_	All 00h
92–95	Number of pages per block		00h, 01h, 00h, 00h
96–99	Number of blocks per LUN	_	00h, 10h, 00h, 00h
100	Number of LUNs per chip enable	MT29F32G08CBACAWP MT29F64G08CFACAWP	01h
		MT29F64G08CEACAD1	
		MT29F128G08CXACAD1	
		MT29F64G08CECCBH1	



Byte	Description	Device	Values	
101	Number of address cycles Bit[7:4]: Column address cycles Bit[3:0]: Row address cycles	-	23h	
102	Number of bits per cell	_	02h	
103–104	Bad blocks maximum per LUN	-	64h, 00h	
105–106	Block endurance	-	03h, 03h	
107	Guaranteed valid blocks at beginning of target	-	01h	
108–109	Block endurance for guaranteed valid blocks	-	00h, 00h	
110	Number of programs per page	-	01h	
111	Partial programming attributes Bit[7:5]: Reserved Bit 4: 1 = partial page layout is partial page data followed by partial page spare Bit[3:1]: Reserved Bit 0: 1 = partial page programming has constraints	_	00h	
112	Number of bits ECC correctability	_	FFh	
113	Number of interleaved address bits Bit[7:4]: Reserved (0) Bit[3:0]: Number of interleaved address bits	-	01h	
114	Interleaved operation attributes Bit[7:5]: Reserved (0) Bit 4: 1 = supports read cache Bit 3: Address restrictions for cache operations Bit 2: 1 = supports program cache Bit 1: 1 = no block address restrictions Bit 0: Overlapped/concurrent interleaving support	_	1Eh	
115–127	Reserved (0)	-	All 00h	
Electrical	parameters block			
128	I/O pin capacitance per chip enable	MT29F32G08CBACAWP	05h	
		MT29F64G08CFACAWP	0Ah	
		MT29F64G08CEACAD1	05h	
		MT29F128G08CXACAD1	07h	
		MT29F64G08CECCBH1	05h	
129–130	Timing mode support Bit[15:6]: Reserved (0) Bit 5: 1 = supports timing mode 5 Bit 4: 1 = supports timing mode 4 Bit 3: 1 = supports timing mode 3 Bit 2: 1 = supports timing mode 2 Bit 1: 1 = supports timing mode 1 Bit 0: 1 = supports timing mode 0, shall be 1	_	3Fh, 00h	
131–132	Reserved (0)	-	All 00h	
133–134	^t PROG Maximum PROGRAM PAGE time (µs)	_	98h, 08h	



Byte	Description	Device	Values
135–136	^t BERS Maximum BLOCK ERASE time (μs)	-	10h, 27h
137–138	^t R Maximum PAGE READ time (µs)	-	32h, 00h
139–140	^t CCS Minimum change column setup time (ns)	-	C8h, 00h
141–142	Source synchronous timing mode support	MT29F32G08CBACAWP	00h, 00h
	Bit[15:6]: Reserved (0)	MT29F64G08CFACAWP	
	Bit 5: 1 = supports timing mode 5 Bit 4: 1 = supports timing mode 4	MT29F64G08CEACAD1	
	Bit 3: 1 = supports timing mode 3	MT29F128G08CXACAD1	
	Bit 2: 1 = supports timing mode 2 Bit 1: 1 = supports timing mode 1 Bit 0: 1 = supports timing mode 0	MT29F64G08CECCBH1	3Fh, 00h
143	Source synchronous features	MT29F32G08CBACAWP	00h
	Bit[7:3]: Reserved (0)	MT29F64G08CFACAWP	
	Bit 2: 1 = devices support CLK stopped for data input Bit 1: 1 = typical capacitance values present	MT29F64G08CEACAD1	
	Bit 0: 0 = use ^t CAD MIN value	MT29F128G08CXACAD1	
		MT29F64G08CECCBH1	02h
144–145	CLK input pin capacitance, typical	MT29F32G08CBACAWP	00h, 00h
		MT29F64G08CFACAWP	
		MT29F64G08CEACAD1	
		MT29F128G08CXACAD1	
		MT29F64G08CECCBH1	23h, 00h
146–147	I/O pin capacitance, typical	MT29F32G08CBACAWP	00h, 00h
		MT29F64G08CFACAWP	
		MT29F64G08CEACAD1	
		MT29F128G08CXACAD1	
		MT29F64G08CECCBH1	2Dh, 00h
148–149	Input capacitance, typical	MT29F32G08CBACAWP	00h, 00h
		MT29F64G08CFACAWP	
		MT29F64G08CEACAD1	
		MT29F128G08CXACAD1	
		MT29F64G08CECCBH1	28h, 00h
150	Input pin capacitance, maximum	MT29F32G08CBACAWP	0Ah
		MT29F64G08CFACAWP	07h
		MT29F64G08CEACAD1	08h
		MT29F128G08CXACAD1	05h
		MT29F64G08CECCBH1	05h



Byte	Description	Device	Values	
151	Driver strength support Bit[7:3]: Reserved (0) Bit 2: 1 = Supports Overdrive 2 drive strength Bit 1: 1 = Supports Overdrive 1 drive strength Bit 0: 1 = Supports driver strength settings	-	07h	
152–153	^t R maximum interleaved (multi-plane) page read time (μs)	-	32h, 00h	
154-155	^t ADL program register clear enhancement values (ns)	-	46h, 00h	
156–163	Reserved (0)	-	All 00h	
Vendor bl	ock			
164–165	Vendor-specific revision number	-	01h, 00h	
166	TWO-PLANE PAGE READ support Bit[7:1]: Reserved (0) Bit 0: 1 = Support for TWO-PLANE PAGE READ	-	01h	
167	Read cache support Bit[7:1]: Reserved (0) Bit 0: 0 = Does not support Micron-specific read cache function	-	00h	
168	READ UNIQUE ID support Bit[7:1]: Reserved (0) Bit 0: 0 = Does not support Micron-specific READ UNIQUE ID	-	00h	
169	Programmable DQ output impedance support Bit[7:1]: Reserved (0) Bit 0: 0 = No support for programmable DQ output impedance by B8h command	-	00h	
170	Number of programmable DQ output impedance settings Bit[7:3]: Reserved (0) Bit [2:0] = Number of programmable DQ output impedance settings	-	04h	
171	Programmable DQ output impedance feature address Bit[7:0] = Programmable DQ output impedance feature address	-	10h	
172	Programmable R/B# pull-down strength support Bit[7:1]: Reserved (0) Bit 0: 1 = Support programmable R/B# pull-down strength	-	01h	
173	Programmable R/B# pull-down strength feature address Bit[7:0] = Feature address used with programmable R/B# pull-down strength	-	81h	
174	Number of programmable R/B# pull-down strength settings Bit[7:3]: Reserved (0) Bit[2:0] = Number of programmable R/B# pull-down strength settings	-	04h	



Table 13: Parameter Page Data Structure (Continued)

Byte	Description	Device	Values
175	OTP mode support Bit[7:2]: Reserved (0) Bit 1: 1 = Supports Get/Set Features command set Bit 0: 0 = Does not support A5h/A0h/AFh OTP command set	_	02h
176	OTP page start Bit[7:0] = Page where OTP page space begins	-	02h
177	OTP DATA PROTECT address Bit[7:0] = Page address to use when issuing OTP DATA PROTECT command	_	01h
178	Number of OTP pages Bit[15:5]: Reserved (0) Bit[4:0] = Number of OTP pages	-	1Eh
179	OTP Feature Address	_	90h
180–252	Reserved (0)	-	All 00h
253	Parameter page revision	-	01h
254–255	Integrity CRC	MT29F32G08CBACAWP	17h, E4h
		MT29F64G08CFACAWP	16h, FBh
		MT29F64G08CEACAD1	9Ch, 63h
		MT29F128G08CXACAD1	8Ch, E4h
		MT29F64G08CECCBH1	D1h, 76h
Redundan	t parameter pages		
256–511	Value of bytes 0–255	_	See bytes 0–255
512–767	Value of bytes 0–255	_	See bytes 0–255
Extended	parameter pages		
768–769	Extended parameter page Integrity CRC	_	BCh, 71h
770-773	Extended parameter page signature Byte 0: 45h, "E" Byte 1: 50h, "P" Byte 2: 50h, "P" Byte 3: 53h, "S"	_	45h, 50h, 50h, 53h
774-783	Reserved (0)	_	All 00h
784	Section 0 type	-	02h
785	Section 0 length	_	01h
786-799	Reserved (0)	_	All 00h
800	Number of bits ECC correctability	-	18h
801	ECC codeword size	-	0Ah
802-803	Bad blocks maximum per LUN		64h, 00h
804-805	Block endurance	_	03h, 03h
806-815	Reserved (0)	_	All 00h
816-863	Value of bytes 768-815		See bytes 768-815



Byte	Description	Device	Values
864-911	Value of bytes 768-815	_	See bytes 768-815



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND READ UNIQUE ID (EDh)

READ UNIQUE ID (EDh)

The READ UNIQUE ID (EDh) command is used to read a unique identifier programmed into the target. This command is accepted by the target only when all die (LUNs) on the target are idle.


Writing EDh to the command register puts the target in read unique ID mode. The target stays in this mode until another valid command is issued.

When the EDh command is followed by a 00h address cycle, the target goes busy for ^tR. If the READ STATUS (70h) command is used to monitor for command completion, the READ MODE (00h) command must be used to re-enable data output mode.

After ^tR completes, the host enables data output mode to read the unique ID. When the asynchronous interface is active, one data byte is output per RE# toggle. When the synchronous interface is active, two data bytes are output, one byte for each rising or falling edge of DQS.

Sixteen copies of the unique ID data are stored in the device. Each copy is 32 bytes. The first 16 bytes of a 32-byte copy are unique data, and the second 16 bytes are the complement of the first 16 bytes. The host should XOR the first 16 bytes with the second 16 bytes. If the result is 16 bytes of FFh, then that copy of the unique ID data is correct. In the event that a non-FFh result is returned, the host can repeat the XOR operation on a subsequent copy of the unique ID data. If desired, the CHANGE READ COLUMN (05h-E0h) command can be used to change the data output location. Use of the CHANGE READ COLUMN ENHANCED (06h-E0h) command is prohibited.

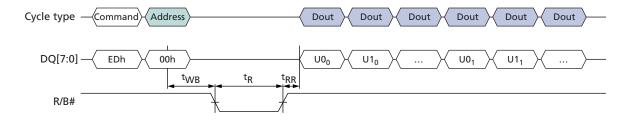Figure 40: READ UNIQUE ID (EDh) Operation





32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Status Operations

Status Operations

Each die (LUN) provides its status independently of other die (LUNs) on the same target through its 8-bit status register.

After the READ STATUS (70h) or READ STATUS ENHANCED (78h) command is issued, status register output is enabled. The contents of the status register are returned on DQ[7:0] for each data output request.

When the asynchronous interface is active and status register output is enabled, changes in the status register are seen on DQ[7:0] as long as CE# and RE# are LOW; it is not necessary to toggle RE# to see the status register update.

When the synchronous interface is active and status register output is enabled, changes in the status register are seen on DQ[7:0] as long as CE# and W/R# are LOW and ALE and CLE are HIGH. DQS also toggles while ALE and CLE are HIGH.

While monitoring the status register to determine when a data transfer from the Flash array to the data register (^tR) is complete, the host must issue the READ MODE (00h) command to disable the status register and enable data output (see READ MODE (00h) (page 75)).

The READ STATUS (70h) command returns the status of the most recently selected die (LUN). To prevent data contention during or following an interleaved die (multi-LUN) operation, the host must enable only one die (LUN) for status output by using the READ STATUS ENHANCED (78h) command (see Interleaved Die (Multi-LUN) Operations (page 100)).

Table 14: Status Register Definition

SR Bit	Definition	Independent per Plane ¹	Description
7	WP#	_	Write Protect: 0 = Protected 1 = Not protected In the normal array mode, this bit indicates the value of the WP# signal. In OTP mode this bit is set to 0 if a PROGRAM OTP PAGE operation is attempted and the OTP area is protected.
6	RDY	_	Ready/Busy I/O: 0 = Busy 1 = Ready This bit indicates that the selected die (LUN) is not available to accept new commands, address, or data I/O cycles with the exception of RESET (FFh), SYNCHRONOUS RESET (FCh), READ STATUS (70h), and READ STATUS ENHANCED (78h). This bit applies only to the selected die (LUN).
5	ARDY	-	Ready/Busy Array: 0 = Busy 1 = Ready This bit goes LOW (busy) when an array operation is occurring on any plane of the selected die (LUN). It goes HIGH when all array operations on the selected die (LUN) finish. This bit applies only to the selected die (LUN).
4	_	_	Reserved (0)
3	_	_	Reserved (0)



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Status Operations

Table 14: Status Register Definition (Continued)

SR Bit	Definition	Independent per Plane ¹	Description
2	_	_	Reserved (0)
1	FAILC	Yes	Pass/Fail (-1): 0 = Pass 1 = Fail This bit is set if the previous operation on the selected die (LUN) failed. This bit is valid only when RDY (SR bit 6) is 1. It applies to PROGRAM-, and COPY-BACK PROGRAM-series operations (80h-10h, 80h-15h, 85h-10h). This bit is not valid following an ERASE-series or READ-series operation.
0	FAIL	Yes	Pass/Fail (N): 0 = Pass 1 = Fail This bit is set if the most recently finished operation on the selected die (LUN) failed. This bit is valid only when ARDY (SR bit 5) is 1. It applies to PROGRAM-, ERASE-, and COPYBACK PROGRAM-series operations (80h-10h, 80h-15h, 60h-D0h, 85h-10h). This bit is not valid following a READ-series operation.

Note

1. After a multi-plane operation begins, the FAILC and FAIL bits are ORed together for the active planes when the READ STATUS (70h) command is issued. After the READ STATUS ENHANCED (78h) command is issued, the FAILC and FAIL bits reflect the status of the plane selected.

READ STATUS (70h)

The READ STATUS (70h) command returns the status of the last-selected die (LUN) on a target. This command is accepted by the last-selected die (LUN) even when it is busy (RDY = 0).

If there is only one die (LUN) per target, the READ STATUS (70h) command can be used to return status following any NAND command.


In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select the die (LUN) that should report status. In this situation, using the READ STATUS (70h) command will result in bus contention, as two or more die (LUNs) could respond until the next operation is issued. The READ STATUS (70h) command can be used following all single die (LUN) operations.

If following a multi-plane operation, regardless of the number of LUNs per target, the READ STATUS (70h) command indicates an error occurred (FAIL = 1), use the READ STATUS ENHANCED (78h) command—once for each plane—to determine which plane operation failed.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Status Operations

Figure 41: READ STATUS (70h) Operation



READ STATUS ENHANCED (78h)

The READ STATUS ENHANCED (78h) command returns the status of the addressed die (LUN) on a target even when it is busy (RDY = 0). This command is accepted by all die (LUNs), even when they are BUSY (RDY = 0).


Writing 78h to the command register, followed by three row address cycles containing the page, block, and LUN addresses, puts the selected die (LUN) into read status mode. The selected die (LUN) stays in this mode until another valid command is issued. Die (LUNs) that are not addressed are deselected to avoid bus contention.

The selected LUN's status is returned when the host requests data output. The RDY and ARDY bits of the status register are shared for all of the planes of the selected die (LUN). The FAILC and FAIL bits are specific to the plane specified in the row address.

The READ STATUS ENHANCED (78h) command also enables the selected die (LUN) for data output. To begin data output following a READ-series operation after the selected die (LUN) is ready (RDY = 1), issue the READ MODE (00h) command, then begin data output. If the host needs to change the cache register that will output data, use the CHANGE READ COLUMN ENHANCED (06h-E0h) command after the die (LUN) is ready (see CHANGE READ COLUMN ENHANCED (06h-E0h) (page 69)).

Use of the READ STATUS ENHANCED (78h) command is prohibited during the power-on RESET (FFh) command and when OTP mode is enabled. It is also prohibited following some of the other reset, identification, and configuration operations. See individual operations for specific details.

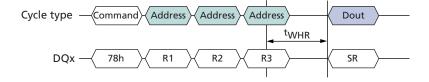Figure 42: READ STATUS ENHANCED (78h) Operation





Column Address Operations

The column address operations affect how data is input to and output from the cache registers within the selected die (LUNs). These features provide host flexibility for managing data, especially when the host internal buffer is smaller than the number of data bytes or words in the cache register.

When the asynchronous interface is active, column address operations can address any byte in the selected cache register.

When the synchronous interface is active, column address operations are aligned to word boundaries (CA0 is forced to 0), because as data is transferred on DQ[7:0] in two-byte units.


CHANGE READ COLUMN (05h-E0h)

The CHANGE READ COLUMN (05h-E0h) command changes the column address of the selected cache register and enables data output from the last selected die (LUN). This command is accepted by the selected die (LUN) when it is ready (RDY = 1; ARDY = 1). It is also accepted by the selected die (LUN) during CACHE READ operations (RDY = 1; ARDY = 0).

Writing 05h to the command register, followed by two column address cycles containing the column address, followed by the E0h command, puts the selected die (LUN) into data output mode. After the E0h command cycle is issued, the host must wait at least ^tCCS before requesting data output. The selected die (LUN) stays in data output mode until another valid command is issued.

In devices with more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be issued prior to issuing the CHANGE READ COLUMN (05h-E0h). In this situation, using the CHANGE READ COLUMN (05h-E0h) command without the READ STATUS ENHANCED (78h) command will result in bus contention, as two or more die (LUNs) could output data.

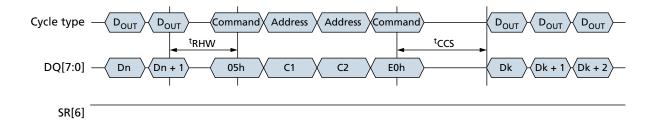Figure 43: CHANGE READ COLUMN (05h-E0h) Operation





CHANGE READ COLUMN ENHANCED (06h-E0h)

The CHANGE READ COLUMN ENHANCED (06h-E0h) command enables data output on the addressed die's (LUN's) cache register at the specified column address. This command is accepted by a die (LUN) when it is ready (RDY = 1; ARDY = 1).

Writing 06h to the command register, followed by two column address cycles and three row address cycles, followed by E0h, enables data output mode on the address LUN's cache register at the specified column address. After the E0h command cycle is issued, the host must wait at least ^tCCS before requesting data output. The selected die (LUN) stays in data output mode until another valid command is issued.

Following a multi-plane read page operation, the CHANGE READ COLUMN ENHANCED (06h-E0h) command is used to select the cache register to be enabled for data output. After data output is complete on the selected plane, the command can be issued again to begin data output on another plane.

In devices with more than one die (LUN) per target, after all of the die (LUNs) on the target are ready (RDY = 1), the CHANGE READ COLUMN ENHANCED (06h-E0h) command can be used following an interleaved die (multi-LUN) read operation. Die (LUNs) that are not addressed are deselected to avoid bus contention.

In devices with more than one die (LUN) per target, during interleaved die (multi-LUN) operations where more than one or more die (LUNs) are busy (RDY = 1; ARDY = 0 or RDY = 0; ARDY = 0), the READ STATUS ENHANCED (78h) command must be issued to the die (LUN) to be selected prior to issuing the CHANGE READ COLUMN ENHANCED (06h-E0h). In this situation, using the CHANGE READ COLUMN ENHANCED (06h-E0h) command without the READ STATUS ENHANCED (78h) command will result in bus contention, as two or more die (LUNs) could output data.

If there is a need to update the column address without selecting a new cache register or LUN, the CHANGE READ COLUMN (05h-E0h) command can be used instead.

Figure 44: CHANGE READ COLUMN ENHANCED (06h-E0h) Operation





CHANGE WRITE COLUMN (85h)


The CHANGE WRITE COLUMN (85h) command changes the column address of the selected cache register and enables data input on the last-selected die (LUN). This command is accepted by the selected die (LUN) when it is ready (RDY = 1; ARDY = 1). It is also accepted by the selected die (LUN) during cache program operations (RDY = 1; ARDY = 0).

Writing 85h to the command register, followed by two column address cycles containing the column address, puts the selected die (LUN) into data input mode. After the second address cycle is issued, the host must wait at least ^tCCS before inputting data. The selected die (LUN) stays in data input mode until another valid command is issued. Though data input mode is enabled, data input from the host is optional. Data input begins at the column address specified.

The CHANGE WRITE COLUMN (85h) command is allowed after the required address cycles are specified, but prior to the final command cycle (10h, 11h, 15h) of the following commands while data input is permitted: PROGRAM PAGE (80h-10h), PROGRAM PAGE MULTI-PLANE (80h-11h), PROGRAM PAGE CACHE (80h-15h), COPYBACK PROGRAM (85h-10h), and COPYBACK PROGRAM MULTI-PLANE (85h-11h).

In devices that have more than one die (LUN) per target, the CHANGE WRITE COL-UMN (85h) command can be used with other commands that support interleaved die (multi-LUN) operations.

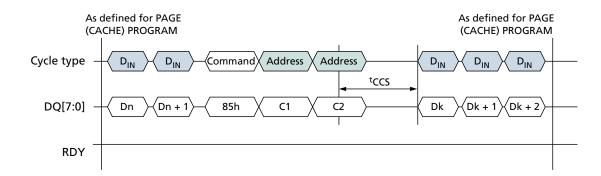Figure 45: CHANGE WRITE COLUMN (85h) Operation





CHANGE ROW ADDRESS (85h)

The CHANGE ROW ADDRESS (85h) command changes the row address (block and page) where the cache register contents will be programmed in the NAND Flash array. It also changes the column address of the selected cache register and enables data input on the specified die (LUN). This command is accepted by the selected die (LUN) when it is ready (RDY = 1; ARDY = 1). It is also accepted by the selected die (LUN) during cache programming operations (RDY = 1; ARDY = 0).

Write 85h to the command register. Then write two column address cycles and three row address cycles. This updates the page and block destination of the selected plane for the addressed LUN and puts the cache register into data input mode. After the fifth address cycle is issued the host must wait at least ^tCCS before inputting data. The selected LUN stays in data input mode until another valid command is issued. Though data input mode is enabled, data input from the host is optional. Data input begins at the column address specified.

The CHANGE ROW ADDRESS (85h) command is allowed after the required address cycles are specified, but prior to the final command cycle (10h, 11h, 15h) of the following commands while data input is permitted: PROGRAM PAGE (80h-10h), PROGRAM PAGE MULTI-PLANE (80h-11h), PROGRAM PAGE CACHE (80h-15h), COPYBACK PROGRAM (85h-10h), and COPYBACK PROGRAM MULTI-PLANE (85h-11h). When used with these commands, the LUN address and plane select bits are required to be identical to the LUN address and plane select bits originally specified.

The CHANGE ROW ADDRESS (85h) command enables the host to modify the original page and block address for the data in the cache register to a new page and block address


In devices that have more than one die (LUN) per target, the CHANGE ROW ADDRESS (85h) command can be used with other commands that support interleaved die (multi-LUN) operations.

The CHANGE ROW ADDRESS (85h) command can be used with the CHANGE READ COLUMN (05h-E0h) or CHANGE READ COLUMN ENHANCED (06h-E0h) commands to read and modify cache register contents in small sections prior to programming cache register contents to the NAND Flash array. This capability can reduce the amount of buffer memory used in the host controller.

To modify the cache register contents in small sections, first issue a PAGE READ (00h-30h) or COPYBACK READ (00h-35h) operation. When data output is enabled, the host can output a portion of the cache register contents. To modify the cache register contents, issue the 85h command, the column and row addresses, and input the new data. The host can re-enable data output by issuing the 11h command, waiting ^tDBSY, and then issuing the CHANGE READ COLUMN (05h-E0h) or CHANGE READ COLUMN ENHANCED (06h-E0h) command. It is possible toggle between data output and data input multiple times. After the final CHANGE ROW ADDRESS (85h) operation is complete, issue the 10h command to program the cache register to the NAND Flash array.



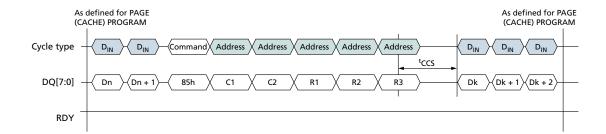Figure 46: CHANGE ROW ADDRESS (85h) Operation





Read Operations

Read operations are used to copy data from the NAND Flash array of one or more of the planes to their respective cache registers and to enable data output from the cache registers to the host through the DQ bus.

Read Operations

The READ PAGE (00h-30h) command, when issued by itself, reads one page from the NAND Flash array to its cache register and enables data output for that cache register.

During data output the following commands can be used to read and modify the data in the cache registers: CHANGE READ COLUMN (05h-E0h) and CHANGE ROW ADDRESS (85h).

Read Cache Operations

To increase data throughput, the READ PAGE CACHE-series (31h, 00h-31h) commands can be used to output data from the cache register while concurrently copying a page from the NAND Flash array to the data register.

To begin a read page cache sequence, begin by reading a page from the NAND Flash array to its corresponding cache register using the READ PAGE (00h-30h) command. R/B# goes LOW during ^tR and the selected die (LUN) is busy (RDY = 0, ARDY = 0). After ^tR (R/B# is HIGH and RDY = 1, ARDY = 1), issue either of these commands:

- READ PAGE CACHE SEQUENTIAL (31h)—copies the next sequential page from the NAND Flash array to the data register
- READ PAGE CACHE RANDOM (00h-31h)—copies the page specified in this command from the NAND Flash array (any plane) to its corresponding data register

After the READ PAGE CACHE-series (31h, 00h-31h) command has been issued, R/B# goes LOW on the target, and RDY = 0 and ARDY = 0 on the die (LUN) for t RCBSY while the next page begins copying data from the array to the data register. After t RCBSY, R/B# goes HIGH and the die's (LUN's) status register bits indicate the device is busy with a cache operation (RDY = 1, ARDY = 0). The cache register becomes available and the page requested in the READ PAGE CACHE operation is transferred to the data register. At this point, data can be output from the cache register, beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data output by the die (LUN).

After outputting the desired number of bytes from the cache register, either an additional READ PAGE CACHE-series (31h, 00h-31h) operation can be started or the READ PAGE CACHE LAST (3Fh) command can be issued.

If the READ PAGE CACHE LAST (3Fh) command is issued, R/B# goes LOW on the target, and RDY = 0 and ARDY = 0 on the die (LUN) for t RCBSY while the data register is copied into the cache register. After t RCBSY, R/B# goes HIGH and RDY = 1 and ARDY = 1, indicating that the cache register is available and that the die (LUN) is ready. Data can then be output from the cache register, beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data being output.

For READ PAGE CACHE-series (31h, 00h-31h, 3Fh), during the die (LUN) busy time, ^tRCBSY, when RDY = 0 and ARDY = 0, the only valid commands are status operations (70h, 78h) and RESET (FFh, FCh). When RDY = 1 and ARDY = 0, the only valid commands during READ PAGE CACHE-series (31h, 00h-31h) operations are status opera-



tions (70h, 78h), READ MODE (00h), READ PAGE CACHE-series (31h, 00h-31h), CHANGE READ COLUMN (05h-E0h), and RESET (FFh, FCh).

Multi-Plane Read Operations

Multi-plane read page operations improve data throughput by copying data from more than one plane simultaneously to the specified cache registers. This is done by prepending one or more READ PAGE MULTI-PLANE (00h-32h) commands in front of the READ PAGE (00h-30h) command.

When the die (LUN) is ready, the CHANGE READ COLUMN ENHANCED (06h-E0h) command determines which plane outputs data. During data output, the following commands can be used to read and modify the data in the cache registers: CHANGE READ COLUMN (05h-E0h) and CHANGE ROW ADDRESS (85h). See Multi-Plane Operations for details.

Multi-Plane Read Cache Operations

Multi-plane read cache operations can be used to output data from more than one cache register while concurrently copying one or more pages from the NAND Flash array to the data register. This is done by prepending READ PAGE MULTI-PLANE (00h-32h) commands in front of the PAGE READ CACHE RANDOM (00h-31h) command.

To begin a multi-plane read page cache sequence, begin by issuing a MULTI-PLANE READ PAGE operation using the READ PAGE MULTI-PLANE (00h-32h) and READ PAGE (00h-30h) commands. R/B# goes LOW during ${}^{t}R$ and the selected die (LUN) is busy (RDY = 0, ARDY = 0). After ${}^{t}R$ (R/B# is HIGH and RDY = 1, ARDY = 1), issue either of these commands:

- READ PAGE CACHE SEQUENTIAL (31h)—copies the next sequential page from the previously addressed planes from the NAND Flash array to the data registers.
- READ PAGE MULTI-PLANE (00h-32h) commands, if desired, followed by the READ PAGE CACHE RANDOM (00h-31h) command—copies the pages specified from the NAND Flash array to the corresponding data registers.

After the READ PAGE CACHE-series (31h, 00h-31h) command has been issued, R/B# goes LOW on the target, and RDY = 0 and ARDY = 0 on the die (LUN) for ^tRCBSY while the next pages begin copying data from the array to the data registers. After ^tRCBSY, R/B# goes HIGH and the LUN's status register bits indicate the device is busy with a cache operation (RDY = 1, ARDY = 0). The cache registers become available and the pages requested in the READ PAGE CACHE operation are transferred to the data registers. Issue the CHANGE READ COLUMN ENHANCED (06h-E0h) command to determine which cache register will output data. After data is output, the CHANGE READ COLUMN ENHANCED (06h-E0h) command can be used to output data from other cache registers. After a cache register has been selected, the CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data output.

After outputting data from the cache registers, either an additional MULTI-PLANE READ CACHE-series (31h, 00h-31h) operation can be started or the READ PAGE CACHE LAST (3Fh) command can be issued.

If the READ PAGE CACHE LAST (3Fh) command is issued, R/B# goes LOW on the target, and RDY = 0 and ARDY = 0 on the die (LUN) for ^tRCBSY while the data registers are copied into the cache registers. After ^tRCBSY, R/B# goes HIGH and RDY = 1 and ARDY = 1, indicating that the cache registers are available and that the die (LUN) is ready. Issue the CHANGE READ COLUMN ENHANCED (06h-E0h) command to determine which



cache register will output data. After data is output, the CHANGE READ COLUMN EN-HANCED (06h-E0h) command can be used to output data from other cache registers. After a cache register has been selected, the CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data output.

For READ PAGE CACHE-series (31h, 00h-31h, 3Fh), during the die (LUN) busy time, ^tRCBSY, when RDY = 0 and ARDY = 0, the only valid commands are status operations (70h, 78h) and RESET (FFh, FCh). When RDY = 1 and ARDY = 0, the only valid commands during READ PAGE CACHE-series (31h, 00h-31h) operations are status operations (70h, 78h), READ MODE (00h), multi-plane read cache-series (31h, 00h-32h, 00h-31h), CHANGE READ COLUMN (05h-E0h, 06h-E0h), and RESET (FFh, FCh).

See Multi-Plane Operations for additional multi-plane addressing requirements.

READ MODE (00h)

The READ MODE (00h) command disables status output and enables data output for the last-selected die (LUN) and cache register after a READ operation (00h-30h, 00h-35h) has been monitored with a status operation (70h, 78h). This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) during READ PAGE CACHE (31h, 3Fh, 00h-31h) operations (RDY = 1 and ARDY = 0).

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) prior to issuing the READ MODE (00h) command. This prevents bus contention.



READ PAGE (00h-30h)

The READ PAGE (00h–30h) command copies a page from the NAND Flash array to its respective cache register and enables data output. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1).

To read a page from the NAND Flash array, write the 00h command to the command register, the write five address cycles to the address registers, and conclude with the 30h command. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for ${}^{t}R$ as data is transferred.


To determine the progress of the data transfer, the host can monitor the target's R/B# signal or, alternatively, the status operations (70h, 78h) can be used. If the status operations are used to monitor the LUN's status, when the die (LUN) is ready (RDY = 1, ARDY = 1), the host disables status output and enables data output by issuing the READ MODE (00h) command. When the host requests data output, output begins at the column address specified.

During data output the CHANGE READ COLUMN (05h-E0h) command can be issued.

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) prior to the issue of the READ MODE (00h) command. This prevents bus contention.

The READ PAGE (00h-30h) command is used as the final command of a multi-plane read operation. It is preceded by one or more READ PAGE MULTI-PLANE (00h-32h) commands. Data is transferred from the NAND Flash array for all of the addressed planes to their respective cache registers. When the die (LUN) is ready (RDY = 1, ARDY = 1), data output is enabled for the cache register linked to the plane addressed in the READ PAGE (00h-30h) command. When the host requests data output, output begins at the column address last specified in the READ PAGE (00h-30h) command. The CHANGE READ COLUMN ENHANCED (06h-E0h) command is used to enable data output in the other cache registers. See Multi-Plane Operations for additional multi-plane addressing requirements.

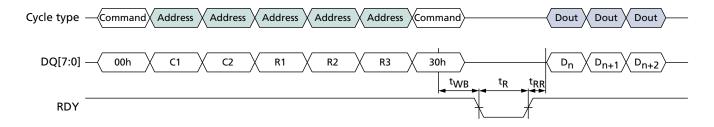Figure 47: READ PAGE (00h-30h) Operation





READ PAGE CACHE SEQUENTIAL (31h)


The READ PAGE CACHE SEQUENTIAL (31h) command reads the next sequential page within a block into the data register while the previous page is output from the cache register. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) during READ PAGE CACHE (31h, 00h-31h) operations (RDY = 1 and ARDY = 0).

To issue this command, write 31h to the command register. After this command is issued, R/B# goes LOW and the die (LUN) is busy (RDY = 0, ARDY = 0) for t RCBSY. After t RCBSY, R/B# goes HIGH and the die (LUN) is busy with a cache operation (RDY = 1, ARDY = 0), indicating that the cache register is available and that the specified page is copying from the NAND Flash array to the data register. At this point, data can be output from the cache register beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data being output from the cache register.

The READ PAGE CACHE SEQUENTIAL (31h) command can be used to cross block boundaries. If the READ PAGE CACHE SEQUENTIAL (31h) command is issued after the last page of a block is read into the data register, the next page read will be the next logical block in the plane which the 31h command was issued. Do not issue the READ PAGE CACHE SEQUENTIAL (31h) to cross die (LUN) boundaries. Instead, issue the READ PAGE CACHE LAST (3Fh) command.

If the READ PAGE CACHE SEQUENTIAL (31h) command is issued after a MULTI-PLANE READ PAGE operation (00h-32h, 00h-30h), the next sequential pages are read into the data registers while the previous pages can be output from the cache registers. After the die (LUN) is ready (RDY = 1, ARDY = 0), the CHANGE READ COLUMN ENHANCED (06h-E0h) command is used to select which cache register outputs data.

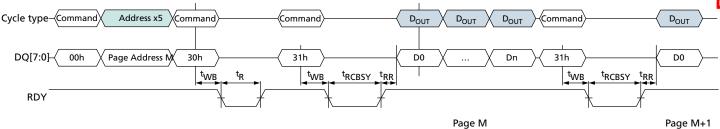Figure 48: READ PAGE CACHE SEQUENTIAL (31h) Operation





READ PAGE CACHE RANDOM (00h-31h)

The READ PAGE CACHE RANDOM (00h-31h) command reads the specified block and page into the data register while the previous page is output from the cache register. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) during READ PAGE CACHE (31h, 00h-31h) operations (RDY = 1 and ARDY = 0).

To issue this command, write 00h to the command register, then write five address cycles to the address register, and conclude by writing 31h to the command register. The column address in the address specified is ignored. The die (LUN) address must match the same die (LUN) address as the previous READ PAGE (00h-30h) command or, if applicable, the previous READ PAGE CACHE RANDOM (00h-31h) command. There is no restriction on the plane address.


After this command is issued, R/B# goes LOW and the die (LUN) is busy (RDY = 0, ARDY = 0) for t RCBSY. After t RCBSY, R/B# goes HIGH and the die (LUN) is busy with a cache operation (RDY = 1, ARDY = 0), indicating that the cache register is available and that the specified page is copying from the NAND Flash array to the data register. At this point, data can be output from the cache register beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data being output from the cache register.


In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations the READ STATUS ENHANCED (78h) command followed by the READ MODE (00h) command must be used to select only one die (LUN) and prevent bus contention.

If a MULTI-PLANE CACHE RANDOM (00h-32h, 00h-31h) command is issued after a MULTI-PLANE READ PAGE operation (00h-32h, 00h-30h), then the addressed pages are read into the data registers while the previous pages can be output from the cache registers. After the die (LUN) is ready (RDY = 1, ARDY = 0), the CHANGE READ COLUMN ENHANCED (06h-E0h) command is used to select which cache register outputs data.



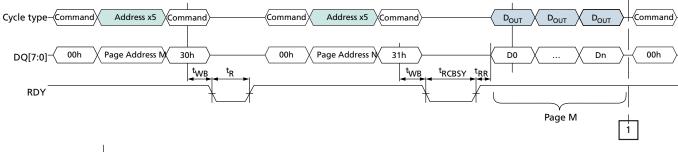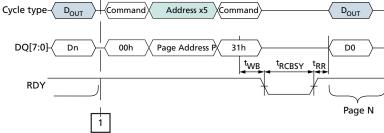Figure 49: READ PAGE CACHE RANDOM (00h-31h) Operation







READ PAGE CACHE LAST (3Fh)


The READ PAGE CACHE LAST (3Fh) command ends the read page cache sequence and copies a page from the data register to the cache register. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) during READ PAGE CACHE (31h, 00h-31h) operations (RDY = 1 and ARDY = 0).

To issue the READ PAGE CACHE LAST (3Fh) command, write 3Fh to the command register. After this command is issued, R/B# goes LOW and the die (LUN) is busy (RDY = 0, ARDY = 0) for t RCBSY. After t RCBSY, R/B# goes HIGH and the die (LUN) is ready (RDY = 1, ARDY = 1). At this point, data can be output from the cache register, beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data being output from the cache register.

In devices that have more than one LUN per target, during and following interleaved die (multi-LUN) operations the READ STATUS ENHANCED (78h) command followed by the READ MODE (00h) command must be used to select only one die (LUN) and prevent bus contention.

If the READ PAGE CACHE LAST (3Fh) command is issued after a MULTI-PLANE READ PAGE CACHE operation (31h; 00h-32h, 00h-30h), the die (LUN) goes busy until the pages are copied from the data registers to the cache registers. After the die (LUN) is ready (RDY = 1, ARDY = 1), the CHANGE READ COLUMN ENHANCED (06h-E0h) command is used to select which cache register outputs data.

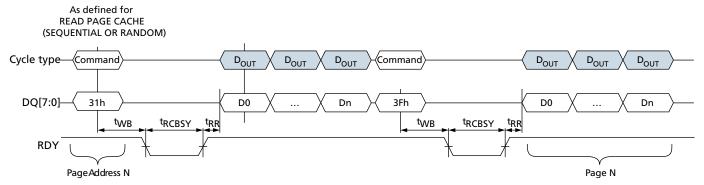Figure 50: READ PAGE CACHE LAST (3Fh) Operation





READ PAGE MULTI-PLANE (00h-32h)

The READ PAGE MULTI-PLANE (00h-32h) command queues a plane to transfer data from the NAND flash array to its cache register. This command can be issued one or more times. Each time a new plane address is specified, that plane is also queued for data transfer. The READ PAGE (00h-30h) command is issued to select the final plane and to begin the read operation for all previously queued planes. All queued planes will transfer data from the NAND Flash array to their cache registers.

To issue the READ PAGE MULTI-PLANE (00h-32h) command, write 00h to the command register, then write five address cycles to the address register, and conclude by writing 32h to the command register. The column address in the address specified is ignored.

After this command is issued, R/B# goes LOW and the die (LUN) is busy (RDY = 0, ARDY = 0) for 'DBSY. After 'DBSY, R/B# goes HIGH and the die (LUN) is ready (RDY = 1, ARDY = 1). At this point, the die (LUN) and block are queued for data transfer from the array to the cache register for the addressed plane. During 'DBSY, the only valid commands are status operations (70h, 78h) and reset commands (FFh, FCh). Following 'DBSY, to continue the MULTI-PLANE READ operation, the only valid commands are status operations (70h, 78h), READ PAGE MULTI-PLANE (00h-32h), READ PAGE (00h-30h), and READ PAGE CACHE RANDOM (00h-31h).

Additional READ PAGE MULTI-PLANE (00h-32h) commands can be issued to queue additional planes for data transfer.

If the READ PAGE (00h-30h) command is used as the final command of a MULTI-PLANE READ operation, data is transferred from the NAND Flash array for all of the addressed planes to their respective cache registers. When the die (LUN) is ready (RDY = 1, ARDY = 1), data output is enabled for the cache register linked to the plane addressed in the READ PAGE (00h-30h) command. When the host requests data output, it begins at the column address specified in the READ PAGE (00h-30h) command. To enable data output in the other cache registers, use the CHANGE READ COLUMN ENHANCED (06h-E0h) command. Additionally, the CHANGE READ COLUMN (05h-E0h) command can be used to change the column address within the currently selected plane.

If the READ PAGE CACHE SEQUENTIAL (31h) is used as the final command of a MULTI-PLANE READ CACHE operation, data is copied from the previously read operation from each plane to each cache register and then data is transferred from the NAND Flash array for all previously addressed planes to their respective data registers. When the die (LUN) is ready (RDY = 1, ARDY = 0), data output is enabled. The CHANGE READ COL-UMN ENHANCED (06h-E0h) command is used to determine which cache register outputs data first. To enable data output in the other cache registers, use the CHANGE READ COLUMN ENHANCED (06h-E0h) command. Additionally, the CHANGE READ COLUMN (05h-E0h) command can be used to change the column address within the currently selected plane.


If the READ PAGE CACHE RANDOM (00h-31h) command is used as the final command of a MULTI-PLANE READ CACHE operation, data is copied from the previously read operation from the data register to the cache register and then data is transferred from the NAND Flash array for all of the addressed planes to their respective data registers. When the die (LUN) is ready (RDY = 1, ARDY = 0), data output is enabled. The CHANGE READ COLUMN ENHANCED (06h-E0h) command is used to determine which cache register outputs data first. To enable data output in the other cache registers, use the CHANGE READ COLUMN ENHANCED (06h-E0h) command. Additionally, the



CHANGE READ COLUMN (05h-E0h) command can be used to change the column address within the currently selected plane.

See Multi-Plane Operations for additional multi-plane addressing requirements.

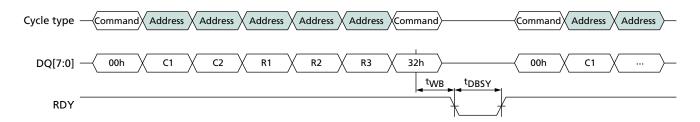Figure 51: READ PAGE MULTI-PLANE (00h-32h) Operation





Program Operations

Program operations are used to move data from the cache or data registers to the NAND array of one or more planes. During a program operation the contents of the cache and/or data registers are modified by the internal control logic.

Within a block, pages must be programmed sequentially from the least significant page address to the most significant page address (i.e. 0, 1, 2, 3, ...). Programming pages out of order within a block is prohibited.

Program Operations

The PROGRAM PAGE (80h-10h) command, when not preceded by the PROGRAM PAGE MULTI-PLANE (80h-11h) command, programs one page from the cache register to the NAND Flash array. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host should check the FAIL bit to verify that the operation has completed successfully.

Program Cache Operations

The PROGRAM PAGE CACHE (80h-15h) command can be used to improve program operation system performance. When this command is issued, the die (LUN) goes busy (RDY = 0, ARDY = 0) while the cache register contents are copied to the data register, and the die (LUN) is busy with a program cache operation (RDY = 1, ARDY = 0. While the contents of the data register are moved to the NAND Flash array, the cache register is available for an additional PROGRAM PAGE CACHE (80h-15h) or PROGRAM PAGE (80h-10h) command.

For PROGRAM PAGE CACHE-series (80h-15h) operations, during the die (LUN) busy times, ^tCBSY and ^tLPROG, when RDY = 0 and ARDY = 0, the only valid commands are status operations (70h, 78h) and reset (FFh, FCh). When RDY = 1 and ARDY = 0, the only valid commands during PROGRAM PAGE CACHE-series (80h-15h) operations are status operations (70h, 78h), PROGRAM PAGE CACHE (80h-15h), PROGRAM PAGE (80h-10h), CHANGE WRITE COLUMN (85h), CHANGE ROW ADDRESS (85h), and reset (FFh, FCh).

Multi-Plane Program Operations

The PROGRAM PAGE MULTI-PLANE (80h-11h) command can be used to improve program operation system performance by enabling multiple pages to be moved from the cache registers to different planes of the NAND Flash array. This is done by prepending one or more PROGRAM PAGE MULTI-PLANE (80h-11h) commands in front of the PROGRAM PAGE (80h-10h) command. See Multi-Plane Operations for details.

Multi-Plane Program Cache Operations

The PROGRAM PAGE MULTI-PLANE (80h-11h) command can be used to improve program cache operation system performance by enabling multiple pages to be moved from the cache registers to the data registers and, while the pages are being transferred from the data registers to different planes of the NAND Flash array, free the cache registers to receive data input from the host. This is done by prepending one or more PROGRAM PAGE MULTI-PLANE (80h-11h) commands in front of the PROGRAM PAGE CACHE (80h-15h) command. See Multi-Plane Operations for details.

PROGRAM PAGE (80h-10h)

The PROGRAM PAGE (80h-10h) command enables the host to input data to a cache register, and moves the data from the cache register to the specified block and page ad-



dress in the array of the selected die (LUN). This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) when it is busy with a PROGRAM PAGE CACHE (80h-15h) operation (RDY = 1, ARDY = 0).


To input a page to the cache register and move it to the NAND array at the block and page address specified, write 80h to the command register. Unless this command has been preceded by a PROGRAM PAGE MULTI-PLANE (80h-11h) command, issuing the 80h to the command register clears all of the cache registers' contents on the selected target. Then write five address cycles containing the column address and row address. Data input cycles follow. Serial data is input beginning at the column address specified. At any time during the data input cycle the CHANGE WRITE COLUMN (85h) and CHANGE ROW ADDRESS (85h) commands may be issued. When data input is complete, write 10h to the command register. The selected LUN will go busy (RDY = 0, ARDY = 0) for ^tPROG as data is transferred.

To determine the progress of the data transfer, the host can monitor the target's R/B# signal or, alternatively, the status operations (70h, 78h) may be used. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host should check the status of the FAIL bit.

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) for status output. Use of the READ STATUS (70h) command could cause more than one die (LUN) to respond, resulting in bus contention.

The PROGRAM PAGE (80h-10h) command is used as the final command of a multiplane program operation. It is preceded by one or more PROGRAM PAGE MULTI-PLANE (80h-11h) commands. Data is transferred from the cache registers for all of the addressed planes to the NAND array. The host should check the status of the operation by using the status operations (70h, 78h). See Multi-Plane Operations for multi-plane addressing requirements.

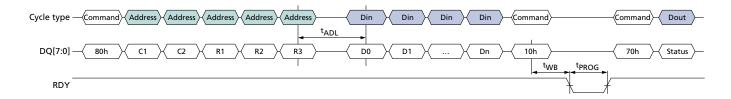Figure 52: PROGRAM PAGE (80h-10h) Operation





PROGRAM PAGE CACHE (80h-15h)

The PROGRAM PAGE CACHE (80h-15h) command enables the host to input data to a cache register; copies the data from the cache register to the data register; then moves the data register contents to the specified block and page address in the array of the selected die (LUN). After the data is copied to the data register, the cache register is available for additional PROGRAM PAGE CACHE (80h-15h) or PROGRAM PAGE (80h-10h) commands. The PROGRAM PAGE CACHE (80h-15h) command is accepted by the die (LUN) when it is ready (RDY =1, ARDY = 1). It is also accepted by the die (LUN) when busy with a PROGRAM PAGE CACHE (80h-15h) operation (RDY = 1, ARDY = 0).

To input a page to the cache register to move it to the NAND array at the block and page address specified, write 80h to the command register. Unless this command has been preceded by a PROGRAM PAGE MULTI-PLANE (80h-11h) command, issuing the 80h to the command register clears all of the cache registers' contents on the selected target. Then write five address cycles containing the column address and row address. Data input cycles follow. Serial data is input beginning at the column address specified. At any time during the data input cycle the CHANGE WRITE COLUMN (85h) and CHANGE ROW ADDRESS (85h) commands may be issued. When data input is complete, write 15h to the command register. The selected LUN will go busy (RDY = 0, ARDY = 0) for ^tCBSY to allow the data register to become available from a previous program cache operation, to copy data from the cache register to the data register, and then to begin moving the data register contents to the specified page and block address.

To determine the progress of ^tCBSY, the host can monitor the target's R/B# signal or, alternatively, the status operations (70h, 78h) can be used. When the LUN's status shows that it is busy with a PROGRAM CACHE operation (RDY = 1, ARDY = 0), the host should check the status of the FAILC bit to see if a previous cache operation was successful.

If, after ^tCBSY, the host wants to wait for the program cache operation to complete, without issuing the PROGRAM PAGE (80h-10h) command, the host should monitor ARDY until it is 1. The host should then check the status of the FAIL and FAILC bits.

In devices with more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) for status output. Use of the READ STATUS (70h) command could cause more than one die (LUN) to respond, resulting in bus contention.

The PROGRAM PAGE CACHE (80h-15h) command is used as the final command of a multi-plane program cache operation. It is preceded by one or more PROGRAM PAGE MULTI-PLANE (80h-11h) commands. Data for all of the addressed planes is transferred from the cache registers to the corresponding data registers, then moved to the NAND Flash array. The host should check the status of the operation by using the status operations (70h, 78h). See Multi-Plane Operations for multi-plane addressing requirements.



Figure 53: PROGRAM PAGE CACHE (80h-15h) Operation (Start)


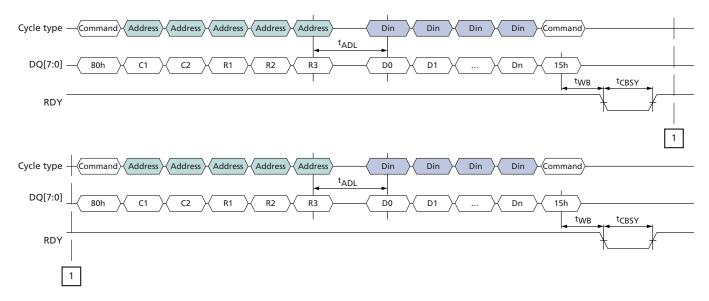


Figure 54: PROGRAM PAGE CACHE (80h-15h) Operation (End)

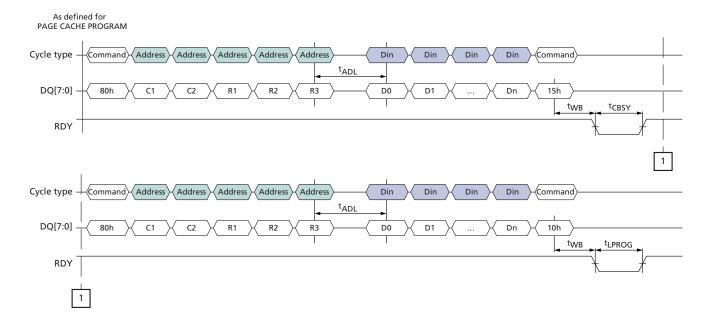



PROGRAM PAGE MULTI-PLANE 80h-11h

The PROGRAM PAGE MULTI-PLANE (80h-11h) command enables the host to input data to the addressed plane's cache register and queue the cache register to ultimately be moved to the NAND Flash array. This command can be issued one or more times. Each time a new plane address is specified that plane is also queued for data transfer. To input data for the final plane and to begin the program operation for all previously queued planes, issue either the PROGRAM PAGE (80h-10h) command or the PROGRAM PAGE CACHE (80h-15h) command. All of the queued planes will move the data to the NAND Flash array. This command is accepted by the die (LUN) when it is ready (RDY = 1).

To input a page to the cache register and queue it to be moved to the NAND Flash array at the block and page address specified, write 80h to the command register. Unless this command has been preceded by a PROGRAM PAGE MULTI-PLANE (80h-11h) command, issuing the 80h to the command register clears all of the cache registers' contents on the selected target. Write five address cycles containing the column address and row address; data input cycles follow. Serial data is input beginning at the column address specified. At any time during the data input cycle, the CHANGE WRITE COLUMN (85h) and CHANGE ROW ADDRESS (85h) commands can be issued. When data input is complete, write 11h to the command register. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for ^tDBSY.

To determine the progress of tDBSY , the host can monitor the target's R/B# signal or, alternatively, the status operations (70h, 78h) can be used. When the LUN's status shows that it is ready (RDY = 1), additional PROGRAM PAGE MULTI-PLANE (80h-11h) commands can be issued to queue additional planes for data transfer. Alternatively, the PROGRAM PAGE (80h-10h) or PROGRAM PAGE CACHE (80h-15h) commands can be issued.


When the PROGRAM PAGE (80h-10h) command is used as the final command of a multiplane program operation, data is transferred from the cache registers to the NAND Flash array for all of the addressed planes during ^tPROG. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host should check the status of the FAIL bit for each of the planes to verify that programming completed successfully.

When the PROGRAM PAGE CACHE (80h-15h) command is used as the final command of a MULTI-PLANE PROGRAM CACHE operation, data is transferred from the cache registers to the data registers after the previous array operations finish. The data is then moved from the data registers to the NAND Flash array for all of the addressed planes. This occurs during ^tCBSY. After ^tCBSY, the host should check the status of the FAILC bit for each of the planes from the previous program cache operation, if any, to verify that programming completed successfully.

For the PROGRAM PAGE MULTI-PLANE (80h-11h), PROGRAM PAGE (80h-10h), and PROGRAM PAGE CACHE (80h-15h) commands, see Multi-Plane Operations for multiplane addressing requirements.



Figure 55: PROGRAM PAGE MULTI-PLANE (80h-11h) Operation





Erase Operations

Erase operations are used to clear the contents of a block in the NAND Flash array to prepare its pages for program operations.

Erase Operations

The ERASE BLOCK (60h-D0h) command, when not preceded by the ERASE BLOCK MUL-TI-PLANE (60h-D1h) command, erases one block in the NAND Flash array. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host should check the FAIL bit to verify that this operation completed successfully.

MULTI-PLANE ERASE Operations

The ERASE BLOCK MULTI-PLANE (60h-D1h) command can be used to further system performance of erase operations by allowing more than one block to be erased in the NAND array. This is done by prepending one or more ERASE BLOCK MULTI-PLANE (60h-D1h) commands in front of the ERASE BLOCK (60h-D0h) command. See Multi-Plane Operations for details.

ERASE BLOCK (60h-D0h)

The ERASE BLOCK (60h-D0h) command erases the specified block in the NAND Flash array. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1).


To erase a block, write 60h to the command register. Then write three address cycles containing the row address; the page address is ignored. Conclude by writing D0h to the command register. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for ^tBERS while the block is erased.

To determine the progress of an ERASE operation, the host can monitor the target's R/B# signal, or alternatively, the status operations (70h, 78h) can be used. When the die (LUN) is ready (RDY = 1, ARDY = 1) the host should check the status of the FAIL bit.

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) for status output. Use of the READ STATUS (70h) command could cause more than one die (LUN) to respond, resulting in bus contention.

The ERASE BLOCK (60h-D0h) command is used as the final command of a MULTI-PLANE ERASE operation. It is preceded by one or more ERASE BLOCK MULTI-PLANE (60h-D1h) commands. All of blocks in the addressed planes are erased. The host should check the status of the operation by using the status operations (70h, 78h). See Multi-Plane Operations for multi-plane addressing requirements.

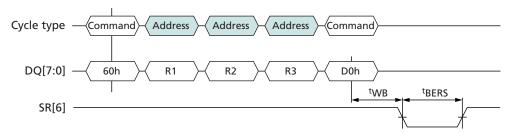Figure 56: ERASE BLOCK (60h-D0h) Operation





ERASE BLOCK MULTI-PLANE (60h-D1h)


The ERASE BLOCK MULTI-PLANE (60h-D1h) command queues a block in the specified plane to be erased in the NAND Flash array. This command can be issued one or more times. Each time a new plane address is specified, that plane is also queued for a block to be erased. To specify the final block to be erased and to begin the ERASE operation for all previously queued planes, issue the ERASE BLOCK (60h-D0h) command. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1).

To queue a block to be erased, write 60h to the command register, then write three address cycles containing the row address; the page address is ignored. Conclude by writing D1h to the command register. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for ^tDBSY.

To determine the progress of ${}^{t}DBSY$, the host can monitor the target's R/B# signal, or alternatively, the status operations (70h, 78h) can be used. When the LUN's status shows that it is ready (RDY = 1, ARDY = 1), additional ERASE BLOCK MULTI-PLANE (60h-D1h) commands can be issued to queue additional planes for erase. Alternatively, the ERASE BLOCK (60h-D0h) command can be issued to erase all of the queued blocks.

For multi-plane addressing requirements for the ERASE BLOCK MULTI-PLANE (60h-D1h) and ERASE BLOCK (60h-D0h) commands, see Multi-Plane Operations.

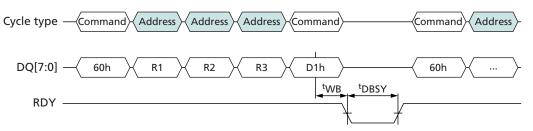Figure 57: ERASE BLOCK MULTI-PLANE (60h-D1h) Operation





Copyback Operations

COPYBACK operations make it possible to transfer data within a plane from one page to another using the cache register. This is particularly useful for block management and wear leveling.

The COPYBACK operation is a two-step process consisting of a COPYBACK READ (00h-35h) and a COPYBACK PROGRAM (85h-10h) command. To move data from one page to another on the same plane, first issue the COPYBACK READ (00h-35h) command. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host can transfer the data to a new page by issuing the COPYBACK PROGRAM (85h-10h) command. When the die (LUN) is again ready (RDY = 1, ARDY = 1), the host should check the FAIL bit to verify that this operation completed successfully.

To prevent bit errors from accumulating over multiple COPYBACK operations, it is recommended that the host read the data out of the cache register after the COPYBACK READ (00h-35h) completes prior to issuing the COPYBACK PROGRAM (85h-10h) command. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address. The host should check the data for ECC errors and correct them. When the COPYBACK PROGRAM (85h-10h) command is issued, any corrected data can be input. The CHANGE ROW ADDRESS (85h) command can be used to change the column address.

It is not possible to use the COPYBACK operation to move data from one plane to another or from one die (LUN) to another. Instead, use a READ PAGE (00h-30h) or COPY-BACK READ (00h-35h) command to read the data out of the NAND, and then use a PROGRAM PAGE (80h-10h) command with data input to program the data to a new plane or die (LUN).

Between the COPYBACK READ (00h-35h) and COPYBACK PROGRAM (85h-10h) commands, the following commands are supported: status operations (70h, 78h), and column address operations (05h-E0h, 06h-E0h, 85h). Reset operations (FFh, FCh) can be issued after COPYBACK READ (00h-35h), but the contents of the cache registers on the target are not valid.

In devices which have more than one die (LUN) per target, once the COPYBACK READ (00h-35h) is issued, interleaved die (multi-LUN) operations are prohibited until after the COPYBACK PROGRAM (85h-10h) command is issued.

Multi-Plane Copyback Operations

Multi-plane copyback read operations improve read data throughput by copying data simultaneously from more than one plane to the specified cache registers. This is done by prepending one or more READ PAGE MULTI-PLANE (00h-32h) commands in front of the COPYBACK READ (00h-35h) command.

The COPYBACK PROGRAM MULTI-PLANE (85h-11h) command can be used to further system performance of COPYBACK PROGRAM operations by enabling movement of multiple pages from the cache registers to different planes of the NAND Flash array. This is done by prepending one or more COPYBACK PROGRAM (85h-11h) commands in front of the COPYBACK PROGRAM (85h-10h) command. See Multi-Plane Operations for details.



COPYBACK READ (00h-35h)

The COPYBACK READ (00h-35h) command is functionally identical to the READ PAGE (00h-30h) command, except that 35h is written to the command register instead of 30h. See READ PAGE (00h-30h) (page 76) for further details.

Though it is not required, it is recommended that the host read the data out of the device to verify the data prior to issuing the COPYBACK PROGRAM (85h-10h) command to prevent the propagation of data errors.

Figure 58: COPYBACK READ (00h-35h) Operation


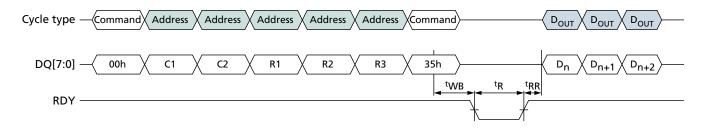


Figure 59: COPYBACK READ (00h-35h) with CHANGE READ COLUMN (05h-E0h) Operation

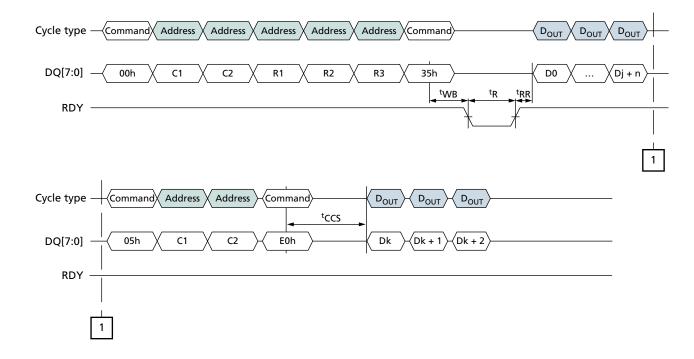



COPYBACK PROGRAM (85h-10h)

The COPYBACK PROGRAM (85h-10h) command is functionally identical to the PRO-GRAM PAGE (80h-10h) command, except that when 85h is written to the command register, cache register contents are not cleared. See PROGRAM PAGE (80h-10h) (page 83) for further details.

Figure 60: COPYBACK PROGRAM (85h-10h) Operation


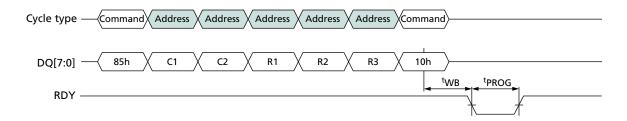


Figure 61: COPYBACK PROGRAM (85h-10h) with CHANGE WRITE COLUMN (85h) Operation

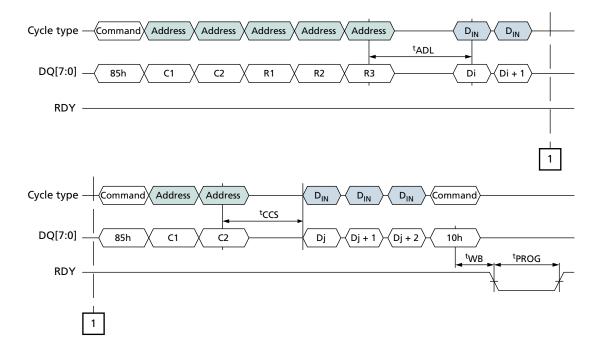

COPYBACK READ MULTI-PLANE (00h-32h)


The COPYBACK READ MULTI-PLANE (00h-32h) command is functionally identical to the READ PAGE MULTI-PLANE (00h-32h) command, except that the 35h command is written as the final command. The complete command sequence for the COPYBACK READ PAGE MULTI-PLANE is 00h-32h-00h-35h. See READ PAGE MULTI-PLANE (00h-32h) (page 81) for further details.



COPYBACK PROGRAM MULTI-PLANE (85h-11h)

The COPYBACK PROGRAM MULTI-PLANE (85h-11h) command is functionally identical to the PROGRAM PAGE MULTI-PLANE (80h-11h) command, except that when 85h is written to the command register, cache register contents are not cleared. See PROGRAM PAGE MULTI-PLANE 80h-11h (page 87) for further details.

Figure 62: COPYBACK PROGRAM MULTI-PLANE (85h-11h) Operation





One-Time Programmable (OTP) Operations

This Micron NAND Flash device offers a protected, one-time programmable NAND Flash memory area. Each target has a an OTP area with a range of OTP pages (see Table 15 (page 96)); the entire range is guaranteed to be good. Customers can use the OTP area in any way they desire; typical uses include programming serial numbers or other data for permanent storage.

The OTP area leaves the factory in an erased state (all bits are 1). Programming an OTP page changes bits that are 1 to 0, but cannot change bits that are 0 to 1. The OTP area cannot be erased, even if it is not protected. Protecting the OTP area prevents further programming of the pages in the OTP area.

Enabling the OTP Operation Mode

The OTP area is accessible while the OTP operation mode is enabled. To enable OTP operation mode, issue the SET FEATURES (EFh) command to feature address 90h and write 01h to P1, followed by three cycles of 00h to P2 through P4.

When the target is in OTP operation mode, all subsequent PAGE READ (00h-30h) and PROGRAM PAGE (80h-10h) commands are applied to the OTP area.

ERASE commands are not valid while the target is in OTP operation mode.

Programming OTP Pages

Each page in the OTP area is programming using the PROGRAM OTP PAGE (80h-10h) command. Each page can be programmed more than once, in sections, up to the maximum number allowed (see NOP in Table 15 (page 96)). The pages in the OTP area must be programmed in ascending order.

If the host issues a PAGE PROGRAM (80h-10h) command to an address beyond the maximum page-address range, the target will be busy for ^tOBSY and the WP# status register bit will be 0, meaning that the page is write-protected.

Protecting the OTP Area

To protect the OTP area, issue the OTP PROTECT (80h-10h) command to the OTP Protect Page. When the OTP area is protected it cannot be programmed further. It is not possible to unprotect the OTP area after it has been protected.

Reading OTP Pages

To read pages in the OTP area, whether the OTP area is protected or not, issue the PAGE READ (00h-30h) command.

If the host issues the PAGE READ (00h-30h) command to an address beyond the maximum page-address range, the data output will not be valid. To determine whether the target is busy during an OTP operation, either monitor R/B# or use the READ STATUS (70h) command. Use of the READ STATUS ENHANCED (78h) command is prohibited while the OTP operation is in progress.

Returning to Normal Array Operation Mode

To exit OTP operation mode and return to normal array operation mode, issue the SET FEATURES (EFh) command to feature address 90h and write 00h to P1 through P4.

If the RESET (FFh) command is issued while in OTP operation mode, the target will exit OTP operation mode and enter normal operating mode. If the synchronous interface is active, the target will exit OTP operation and enable the asynchronous interface.



If the SYNCHRONOUS RESET (FCh) command is issued while in the OTP operation mode, the target will exit OTP operation mode and the synchronous interface remains active.

Table 15: OTP Area Details

Description	Value
Number of OTP pages	30
OTP protect page address	01h
OTP start page address	02h
Number of partial page programs (NOP) to each OTP page	4

PROGRAM OTP PAGE (80h-10h)

The PROGRAM OTP PAGE (80h-10h) command is used to write data to the pages within the OTP area. To program data in the OTP area, the target must be in OTP operation mode.

To use the PROGRAM OTP PAGE (80h-10h) command, issue the 80h command. Issue five address cycles including the column address, the page address within the OTP page range, and a block address of 0. Next, write the data to the cache register using data input cycles. After data input is complete, issue the 10h command.

R/B# goes LOW for the duration of the array programming time, ^tPROG. The READ STATUS (70h) command is the only valid command for reading status in OTP operation mode. The RDY bit of the status register will reflect the state of R/B#. Use of the READ STATUS ENHANCED (78h) command is prohibited.

When the target is ready, read the FAIL bit of the status register to determine whether the operation passed or failed (see Table 14 (page 65)).

The PROGRAM OTP PAGE (80h-10h) command also accepts the CHANGE WRITE COL-UMN (85h) command during data input.

If a PROGRAM PAGE command is issued to the OTP area after the area has been protected, then R/B# goes LOW for ^tOBSY. After ^tOBSY, the status register is set to 60h.

Figure 63: PROGRAM OTP PAGE (80h-10h) Operation







Figure 64: PROGRAM OTP PAGE (80h-10h) with CHANGE WRITE COLUMN (85h) Operation

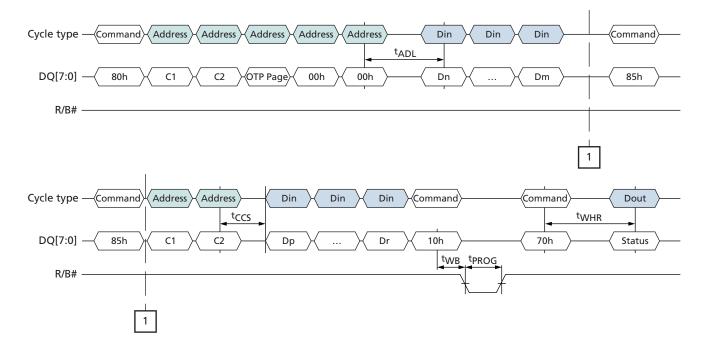

PROTECT OTP AREA (80h-10h)

The PROTECT OTP AREA (80h-10h) command is used to prevent further programming of the pages in the OTP area. The protect the OTP area, the target must be in OTP operation mode.

To protect all data in the OTP area, issue the 80h command. Issue five address cycles including the column address, OTP protect page address and block address; the column and block addresses are fixed to 0. Next, write 00h data for the first byte location and issue the 10h command.


R/B# goes LOW for the duration of the array programming time, ^tPROG. The READ STATUS (70h) command is the only valid command for reading status in OTP operation mode. The RDY bit of the status register will reflect the state of R/B#. Use of the READ STATUS ENHANCED (78h) command is prohibited.

When the target is ready, read the FAIL bit of the status register to determine if the operation passed or failed (see Table 14 (page 65)).

If the PROTECT OTP AREA (80h-10h) command is issued after the OTP area has already been protected, R/B# goes LOW for ^tOBSY. After ^tOBSY, the status register is set to 60h.



Figure 65: PROTECT OTP AREA (80h-10h) Operation



Note: 1. OTP data is protected following a status confirmation.

READ OTP PAGE (00h-30h)

The READ OTP PAGE (00h-30h) command is used to read data from the pages in the OTP area. To read data in the OTP area, the target must be in OTP operation mode.


To use the READ OTP PAGE (00h-30h) command, issue the 00h command. Issue five address cycles including the column address, the page address within the OTP page range, and a block address of 0. Next, issue the 30h command. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for ${}^{\rm t}{\rm R}$ as data is transferred.

To determine the progress of the data transfer, the host can monitor the target's R/B# signal, or alternatively the READ STATUS (70h) command can be used. If the status operations are used to monitor the die's (LUN's) status, when the die (LUN) is ready (RDY = 1, ARDY = 1) the host disables status output and enables data output by issuing the READ MODE (00h) command. When the host requests data output, it begins at the column address specified.

Additional pages within the OTP area can be read by repeating the READ OTP PAGE (00h-30h) command.

The READ OTP PAGE (00h-30h) command is compatible with the CHANGE READ COL-UMN (05h-E0h) command. Use of the READ STATUS ENHANCED (78h) and CHANGE READ COLUMN ENHANCED (06h-E0h) commands are prohibited.

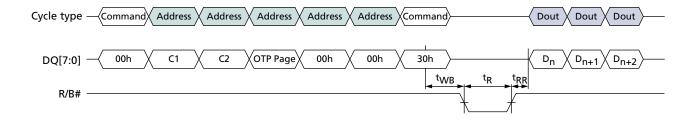Figure 66: READ OTP PAGE (00h-30h) Operation





32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Multi-Plane Operations

Multi-Plane Operations

Each NAND Flash logical unit (LUN) is divided into multiple physical planes. Each plane contains a cache register and a data register independent of the other planes. The planes are addressed via the low-order block address bits. Specific details are provided in Device and Array Organization.

Multi-plane operations make better use of the NAND Flash arrays on these physical planes by performing concurrent READ, PROGRAM, or ERASE operations on multiple planes, significantly improving system performance. Multi-plane operations must be of the same type across the planes; for example, it is not possible to perform a PROGRAM operation on one plane with an ERASE operation on another.

When issuing MULTI-PLANE PROGRAM or ERASE operations, use the READ STATUS (70h) command and check whether the previous operation(s) failed. If the READ STATUS (70h) command indicates that an error occurred (FAIL = 1 and/or FAILC = 1), use the READ STATUS ENHANCED (78h) command—time for each plane—to determine which plane operation failed.

Multi-Plane Addressing

Multi-plane commands require an address per operational plane. For a given multiplane operation, these addresses are subject to the following requirements:

- The LUN address bit(s) must be identical for all of the issued addresses.
- The plane select bit, BA[8], must be different for each issued address.
- The page address bits, PA[7:0], must be identical for each issued address.

The READ STATUS (70h) command should be used following MULTI-PLANE PROGRAM PAGE and ERASE BLOCK operations on a single die (LUN).



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Interleaved Die (Multi-LUN) Operations

Interleaved Die (Multi-LUN) Operations

In devices that have more than one die (LUN) per target, it is possible to improve performance by interleaving operations between the die (LUNs). An interleaved die (multi-LUN) operation is one that is issued to an idle die (LUN) (RDY = 1) while another die (LUN) is busy (RDY = 0).

Interleaved die (multi-LUN) operations are prohibited following RESET (FFh, FCh), identification (90h, ECh, EDh), and configuration (EEh, EFh) operations until ARDY =1 for all of the die (LUNs) on the target.

During an interleaved die (multi-LUN) operation, there are two methods to determine operation completion. The R/B# signal indicates when all of the die (LUNs) have finished their operations. R/B# remains LOW while any die (LUN) is busy. When R/B# goes HIGH, all of the die (LUNs) are idle and the operations are complete. Alternatively, the READ STATUS ENHANCED (78h) command can report the status of each die (LUN) individually.

If a die (LUN) is performing a cache operation, like PROGRAM PAGE CACHE (80h-15h), then the die (LUN) is able to accept the data for another cache operation when status register bit 6 is 1. All operations, including cache operations, are complete on a die when status register bit 5 is 1.

Use the READ STATUS ENHANCED (78h) command to monitor status for the addressed die (LUN). When multi-plane commands are used with interleaved die (multi-LUN) operations, the multi-plane commands must also meet the requirements, see Multi-Plane Operations for details. After the READ STATUS ENHANCED (78h) command has been issued, the READ STATUS (70h) command may be issued for the previously addressed die (LUN).

See Command Definitions for the list of commands that can be issued while other die (LUNs) are busy.

During an interleaved die (multi-LUN) operation that involves a PROGRAM-series (80h-10h, 80h-15h, 80h-11h) operation and a READ operation, the PROGRAM-series operation must be issued before the READ-series operation. The data from the READ-series operation must be output to the host before the next PROGRAM-series operation is issued. This is because the 80h command clears the cache register contents of all cache registers on all planes.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Error Management

Error Management

Each NAND Flash die (LUN) is specified to have a minimum number of valid blocks (NVB) of the total available blocks. This means the die (LUNs) could have blocks that are invalid when shipped from the factory. An invalid block is one that contains at least one page that has more bad bits than can be corrected by the minimum required ECC. Additional blocks can develop with use. However, the total number of available blocks per die (LUN) will not fall below NVB during the endurance life of the product.

Although NAND Flash memory devices could contain bad blocks, they can be used quite reliably in systems that provide bad-block management and error-correction algorithms. This type of software environment ensures data integrity.

Internal circuitry isolates each block from other blocks, so the presence of a bad block does not affect the operation of the rest of the NAND Flash array.

NAND Flash devices are shipped from the factory erased. The factory identifies invalid blocks before shipping by attempting to program the bad-block mark into every location in the first page of each invalid block. It may not be possible to program every location with the bad-block mark. However, the first spare area location in each bad block is guaranteed to contain the bad-block mark. This method is compliant with ON-FI Factory Defect Mapping requirements. See the following table for the first spare area location and the bad-block mark.

System software should check the first spare area location on the first page of each block prior to performing any PROGRAM or ERASE operations on the NAND Flash device. A bad block table can then be created, enabling system software to map around these areas. Factory testing is performed under worst-case conditions. Because invalid blocks could be marginal, it may not be possible to recover this information if the block is erased.

Over time, some memory locations may fail to program or erase properly. In order to ensure that data is stored properly over the life of the NAND Flash device, the following precautions are required:

- Always check status after a PROGRAM or ERASE operation
- Under typical conditions, use the minimum required ECC (see table below)
- Use bad-block management and wear-leveling algorithms

The first block (physical block address 00h) for each CE# is guaranteed to be valid with ECC when shipped from the factory.

Table 16: Error Management Details

Description	Requirement
Minimum number of valid blocks (NVB) per LUN	3996
Total available blocks per LUN	4096
First spare area location	Byte 4096
Bad-block mark	00h
Minimum required ECC	24-bit ECC per 1080 bytes of data



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Output Drive Impedance

Output Drive Impedance

Because NAND Flash is designed for use in systems that are typically point-to-point connections, an option to control the drive strength of the output buffers is provided. Drive strength should be selected based on the expected loading of the memory bus. There are four supported settings for the output drivers: overdrive 2, overdrive 1, nominal, and underdrive.

The nominal output drive strength setting is the power-on default value. The host can select a different drive strength setting using the SET FEATURES (EFh) command.

The output impedance range from minimum to maximum covers process, voltage, and temperature variations. Devices are not guaranteed to be at the nominal line.

Table 17: Output Drive Strength Test Conditions (V_{CCQ} = 1.7–1.95V)

Range	Process	Voltage	Temperature
Maximum	Fast-Fast	1.95V	−25°C
Nominal	Typical-Typical	1.8V	+25°C
Minimum	Slow-Slow	1.7V	+85°C

Table 18: Output Drive Strength Impedance Values (V_{CCO} = 1.7-1.95V)

Output Strength	Rpd/Rpu	V _{OUT} to V _{SSQ}	Minimum	Nominal	Maximum	Unit
Overdrive 2	Rpd	$V_{CCQ} \times 0.2$	7.5	13.5	34	ohms
		$V_{CCQ} \times 0.5$	9	18	31	ohms
		$V_{CCQ} \times 0.8$	11	23.5	44	ohms
	Rpu	V _{CCQ} × 0.2	11	23.5	44	ohms
		V _{CCQ} × 0.5	9	18	31	ohms
		V _{CCQ} × 0.8	7.5	13.5	34	ohms
Overdrive 1	Rpd	V _{CCQ} × 0.2	10.5	19	47	ohms
		V _{CCQ} × 0.5	13	25	44	ohms
		V _{CCQ} × 0.8	16	32.5	61.5	ohms
	Rpu	V _{CCQ} × 0.2	16	32.5	61.5	ohms
		$V_{CCQ} \times 0.5$	13	25	44	ohms
		V _{CCQ} × 0.8	10.5	19	47	ohms
Nominal	Rpd	V _{CCQ} × 0.2	15	27	66.5	ohms
		V _{CCQ} × 0.5	18	35	62.5	ohms
		V _{CCQ} × 0.8	22	52	88	ohms
	Rpu	V _{CCQ} × 0.2	22	52	88	ohms
		V _{CCQ} × 0.5	18	35	62.5	ohms
		V _{CCQ} × 0.8	15	27	66.5	ohms



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Output Drive Impedance

Table 18: Output Drive Strength Impedance Values ($V_{CCQ} = 1.7-1.95V$) (Continued)

Output Strength	Rpd/Rpu	V _{OUT} to V _{SSQ}	Minimum	Nominal	Maximum	Unit
Underdrive	Rpd	$V_{CCQ} \times 0.2$	21.5	39	95	ohms
		$V_{CCQ} \times 0.5$	26	50	90	ohms
		$V_{CCQ} \times 0.8$	31.5	66.5	126.5	ohms
	Rpu	$V_{CCQ} \times 0.2$	31.5	66.5	126.5	ohms
		$V_{CCQ} \times 0.5$	26	50	90	ohms
		V _{CCQ} × 0.8	21.5	39	95	ohms

Table 19: Output Drive Strength Conditions (V_{CCQ} = 2.7–3.6V)

Range	Process	Voltage	Temperature
Maximum	Fast-Fast	3.6V	−40°C
Nominal	Typical-Typical	3.3V	+25°C
Minimum	Slow-Slow	2.7V	+85°C

Table 20: Output Drive Strength Impedance Values (V_{CCQ} = 2.7–3.6V)

Output Strength	Rpd/Rpu	V _{OUT} to V _{SSQ}	Minimum	Nominal	Maximum	Unit
Overdrive 2	Rpd	V _{CCQ} X 0.2	6.0	10.0	18.0	ohms
		V _{CCQ} X 0.5	10.0	18.0	35.0	ohms
		V _{CCQ} X 0.8	15.0	25.0	49.0	ohms
	Rpu	V _{CCQ} X 0.2	15.0	25.0	49.0	ohms
		V _{CCQ} X 0.5	10.0	18.0	35.0	ohms
		V _{CCQ} X 0.8	6.0	10.0	18.0	ohms
Overdrive 1	Rpd	V _{CCQ} X 0.2	8.0	15.0	30.0	ohms
		V _{CCQ} X 0.5	15.0	25.0	45.0	ohms
		V _{CCQ} X 0.8	20.0	35.0	65.0	ohms
	Rpu	V _{CCQ} X 0.2	20.0	35.0	65.0	ohms
		V _{CCQ} X 0.5	15.0	25.0	45.0	ohms
		V _{CCQ} X 0.8	8.0	15.0	30.0	ohms
Nominal	Rpd	V _{CCQ} X 0.2	12.0	22.0	40.0	ohms
		V _{CCQ} X 0.5	20.0	35.0	65.0	ohms
		V _{CCQ} X 0.8	25.0	50.0	100.0	ohms
	Rpu	V _{CCQ} X 0.2	25.0	50.0	100.0	ohms
		V _{CCQ} X 0.5	20.0	35.0	65.0	ohms
		V _{CCQ} X 0.8	12.0	22.0	40.0	ohms



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND **Output Drive Impedance**

Table 20: Output Drive Strength Impedance Values ($V_{CCQ} = 2.7-3.6V$) (Continued)

Output Strength	Rpd/Rpu	V _{OUT} to V _{SSQ}	Minimum	Nominal	Maximum	Unit
Underdrive	Rpd	V _{CCQ} X 0.2	18.0	32.0	55.0	ohms
		V _{CCQ} X 0.5	29.0	50.0	100.0	ohms
		V _{CCQ} X 0.8	40.0	75.0	150.0	ohms
	Rpu	V _{CCQ} X 0.2	40.0	75.0	150.0	ohms
		V _{CCQ} X 0.5	29.0	50.0	100.0	ohms
		V _{CCQ} X 0.8	18.0	32.0	55.0	ohms

Table 21: Pull-Up and Pull-Down Output Impedance Mismatch

Drive Strength	Minimum	Maximum	Unit	Notes
Overdrive 2	0	6.3	ohms	1, 2
Overdrive 1	0	8.8	ohms	1, 2
Nominal	0	12.3	ohms	1, 2
Underdrive	0	17.5	ohms	1, 2

- Notes: 1. Mismatch is the absolute value between pull-up and pull-down impedances. Both are measured at the same temperature and voltage.
 - 2. Test conditions: $V_{CCQ} = V_{CCQ}$ (MIN), $V_{OUT} = V_{CCQ} \times 0.5$, $T_A = T_{OPER}$.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND AC Overshoot/Undershoot Specifications

AC Overshoot/Undershoot Specifications

The supported AC overshoot and undershoot area depends on the timing mode selected by the host.

Table 22: Overshoot/Undershoot Parameters

		Timing Mode									
Parameter	0	1	2	3	4	5	Unit				
Maximum peak amplitude provided for overshoot area	1	1	1	1	1	1	V				
Maximum peak amplitude provided for undershoot area	1	1	1	1	1	1	V				
Maximum overshoot area above V _{CCQ}	3	3	3	2.25	1.8	1.5	V-ns				
Maximum undershoot area below V _{SSQ}	3	3	3	2.25	1.8	1.5	V-ns				

Figure 67: Overshoot


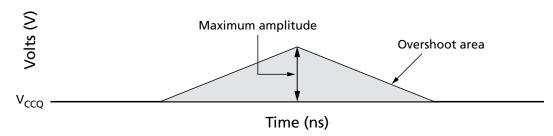


Figure 68: Undershoot

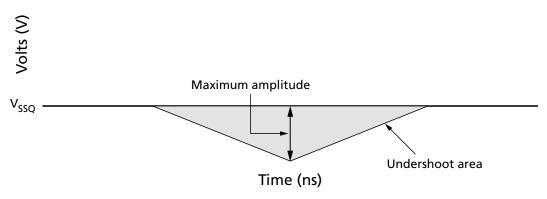



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Synchronous Input Slew Rate

Synchronous Input Slew Rate

Though all AC timing parameters are tested with a nominal input slew rate of 1 V/ns, it is possible to run the device at a slower slew rate. The input slew rates shown below are sampled, and not 100% tested. When using slew rates slower than the minimum values, timing must be derated by the host.

Table 23: Test Conditions for Input Slew Rate

Parameter	Value
Rising edge	V _{IL(DC)} To V _{IH(AC)}
Falling edge	V _{IH(DC)} To V _{IL(AC)}
Temperature range	T _A

Table 24: Input Slew Rate (V_{CCQ} = 1.7-1.95V)

Command/	CLK/DQS Slew Rate Derating V _{IH(AC)} /V _{IL(AC)} = 540mV, V _{IH(DC)} /V _{IL(DC)} = 360mV																
Address	•	1	0	.9	0	.8	0	.7	0	.6	0	.5	0	.4	0	.3	
and DQ V/ns	set	hold	set	hold	set	hold	set	hold	set	hold	set	hold	set	hold	set	hold	Unit
1	0	0	0	0	-	-	ı	-	ı	-	ı	-	-	-	-	-	ps
0.9	0	0	0	0	0	0	ı	-	ı	-	ı	-	-	-	-	-	ps
0.8	-	-	0	0	0	0	0	0	ı	-	ı	-	-	-	-	-	ps
0.7	-	-	-	-	0	0	0	0	0	0	•	-	-	-	-	-	ps
0.6	-	-	-	-	-	-	0	0	0	0	0	0	-	-	-	-	ps
0.5	-	-	-	-	-	-	-	-	0	0	0	0	180	180	-	-	ps
0.4	-	-	-	-	-	-	-	-	-	-	180	180	360	360	660	660	ps
0.3	-	-	-	-	-	-	-	-	-	-	-	-	660	660	920	920	ps



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Output Slew Rate

Output Slew Rate

The output slew rate is tested using the following setup with only one die per DQ channel.

Table 25: Test Conditions for Output Slew Rate

Parameter	Value		
V _{OL(DC)}	0.3 × V _{CCQ}		
V _{OH(AC)}	0.7 × V _{CCQ}		
V _{OL(AC)}	0.2 × V _{CCQ}		
V _{OH(DC)}	0.8 × V _{CCQ}		
Rising edge (^t RISE)	V _{OL(DC)} to V _{OH(AC)}		
Falling edge (^t FALL)	V _{OH(DC)} to V _{OL(AC)}		
Output capacitive load (C _{LOAD})	5pF		
Temperature range	T _A		

Table 26: Output Slew Rate (V_{CCQ} = 1.7–1.95V)

Output Drive Strength	Min	Max	Unit
Overdrive 2	1	5.5	V/ns
Overdrive 1	0.85	5	V/ns
Nominal	0.75	4	V/ns
Underdrive	0.6	4	V/ns

Table 27: Output Slew Rate (V_{CCQ} = 2.7-3.6V)

Output Drive Strength	Min	Max	Unit	
Overdrive 2	1.5	10.0	V/ns	
Overdrive 1	1.5	9.0	V/ns	
Nominal	1.2	7.0	V/ns	
Underdrive	1.0	5.5	V/ns	



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications

Electrical Specifications

Stresses greater than those listed can cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not guaranteed. Exposure to absolute maximum rating conditions for extended periods can affect reliability.

Table 28: Absolute Maximum Ratings by Device

Parameter	Symbol	Min ¹	Max ¹	Unit
Voltage input	V _{IN}	-0.6	4.6	V
V _{CC} supply voltage	V _{CC}	-0.6	4.6	V
V _{CCQ} supply voltage	V _{CCQ}	-0.6	4.6	V
Storage temperature	T _{STG}	-65	150	°C

Note: 1. Voltage on any pin relative to V_{SS}.

Table 29: Recommended Operating Conditions

Parameter		Symbol	Min	Тур	Мах	Unit
Operating temperature	Commercial	T _A	0	_	70	°C
	Industrial		-40	_	85	
V _{CC} supply voltage	·	V _{CC}	2.7	3.3	3.6	V
V _{CCQ} supply voltage (1.8V)		V _{CCQ}	1.7	1.8	1.95	V
V _{CCQ} supply voltage (3.3V)			2.7	3.3	3.6	V
V _{SS} ground voltage		V _{SS}	0	0	0	V
V _{SSQ} ground voltage		V _{SSQ}	0	0	0	V

Table 30: Valid Blocks per LUN

Parameter	Symbol	Min	Max	Unit	Notes
Valid block number	NVB	3996	4096	Blocks	1

Note: 1. Invalid blocks are block that contain one or more bad bits beyond ECC. The device may contain bad blocks upon shipment. Additional bad blocks may develop over time; however, the total number of available blocks will not drop below NVB during the endurance life of the device. Do not erase or program blocks marked invalid from the factory.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications

Table 31: Capacitance: 100-Ball BGA Package

			Dual Die Package						
Description	Symbol	Min	Тур	Max	Unit	Notes			
Input capacitance (CLK)	C _{CK}	3.5	4.0	4.5	pF	3			
Input capacitance (ALE, CLE, W/R#)	C _{IN}	3.5	4.0	4.5	pF	3			
Input/output capacitance (DQ[7:0], DQS)	C _{IO}	4.0	4.5	5.0	pF	3			
Input capacitance (CE#, WP#)	C _{OTHER}	-	_	5	pF				
Delta clock capacitance	DC _{CK}	-	_	0.25	pF				
Delta input capacitance	DC _{IN}	_	_	0.5	pF				
Delta input/output capacitance	DC _{IO}	_	_	0.5	pF				

Notes:

- 1. Verified in device characterization; not 100% tested.
- 2. Test conditions: $T_A = 25$ °C, f = 100 MHz, $V_{IN} = 0$ V.
- 3. Values for C_{CK} , C_{IN} and C_{IO} (TYP) are estimates.

Table 32: Capacitance: 48-Pin TSOP Package

Description	Symbol	Device	Max	Unit	Notes
Input capacitance – ALE, CE#, CLE, RE#	C _{IN}	Single die package	10	pF	1
WE#, WP#		Dual die package	14		
Input/output capacitance – DQ[7:0], DQS	C _{IO}	Single die package	5	pF	1
		Dual die package	10		

Note: 1. These parameters are verified in device characterization and are not 100% tested. Test conditions: $T_C = 25$ °C; f = 1 MHz; $V_C = 0$ V.

Table 33: Capacitance: 52-Pad LGA Package

Description	Symbol	Device	Max	Unit	Notes
Input capacitance – ALE, CE#, CLE, RE#,	C _{IN}	Dual die package	8	pF	1
WE#, WP#		Quad die package	10		
Input/output capacitance – DQ[7:0]	C _{IO}	Dual die package	10	pF	1
		Quad die package	14		

Note: 1. These parameters are verified in device characterization and are not 100% tested. Test conditions: $T_C = 25$ °C; f = 1 MHz; $V_C = 0$ V.

Table 34: Test Conditions

Parameter	Value	Notes
Rising input transition	V _{IL(DC)} to V _{IH(AC)}	1
Falling input transition	$V_{IH(DC)}$ to $V_{IL(AC)}$	1



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications - DC Characteristics and Operating Conditions (Asynchronous)

Table 34: Test Conditions (Continued)

Parameter	Value	Notes
Input rise and fall slew rates	1 V/ns	_
Input and output timing levels	V _{CCQ} /2	_
Output load: Nominal output drive strength	C _L = 5pF	2, 3

- Notes: 1. The receiver will effectively switch as a result of the signal crossing the AC input level; it will remain in that status as long as the signal does not ring back above (below) the DC input LOW (HIGH) level.
 - 2. Transmission line delay is assumed to be very small.
 - 3. This test setup applies to all package configurations.

Electrical Specifications – DC Characteristics and Operating Conditions (Asynchronous)

Table 35: DC Characteristics and Operating Conditions (Asynchronous Interface)

Parameter	Conditions	Symbol	Min ¹	Typ ¹	Max ¹	Unit
Array read current (active)	_	I _{CC1_A}	_	20	50	mA
Array program current (active)	_	I _{CC2_A}	_	20	50	mA
Erase current (active)	_	I _{CC3_A}	_	20	50	mA
I/O burst read current	${}^{t}RC = {}^{t}RC \text{ (MIN); } I_{OUT} = 0\text{mA}$	I _{CC4R_A}	_	5	10	mA
I/O burst write current	$^{t}WC = {}^{t}WC (MIN)$	I _{CC4w_A}	_	5	10	mA
Bus idle current	_	I _{CC5_A}	_	3	5	mA
Current during first RESET command after power-on	-	I _{CC6}	_	_	10	mA
Standby current - V _{CC}	$CE# = V_{CCQ} - 0.2V;$ $WP# = 0V/V_{CCQ}$	I _{SB}	_	10	50	μΑ
Standby current - V _{CCQ}	$CE# = V_{CCQ} - 0.2V;$ $WP# = 0V/V_{CCQ}$	I _{SBQ}	_	3	10	μА
Staggered power-up current	^t RISE = 1ms; C _{LINE} = 0.1uF	I _{ST}	_	_	10	mA

Note: 1. All values are per die (LUN) unless otherwise specified.

Electrical Specifications - DC Characteristics and Operating Conditions (Synchronous)

Table 36: DC Characteristics and Operating Conditions (Synchronous Interface)

Parameter	Conditions	Symbol	Min ¹	Typ ¹	Max ¹	Unit
Array read current (active)	$CE# = V_{IL}$; ${}^{t}CK = {}^{t}CK$ (MIN)	I _{CC1_S}	_	25	50	mA
Array program current (active)	${}^{t}CK = {}^{t}CK $ (MIN)	I _{CC2_S}	_	25	50	mA
Erase current (active)	${}^{t}CK = {}^{t}CK \text{ (MIN)}$	I _{CC3_S}	_	25	50	mA
I/O burst read current	${}^{t}CK = {}^{t}CK \text{ (MIN)}$	I _{CC4R_S}	_	10	20	mA



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications – DC Characteristics and Operating Conditions (V_{CCQ})

Table 36: DC Characteristics and Operating Conditions (Synchronous Interface) (Continued)

Parameter	Conditions	Symbol	Min ¹	Typ ¹	Max ¹	Unit
I/O burst write current	^t CK = ^t CK (MIN)	I _{CC4W_S}	_	10	20	mA
Bus idle current	^t CK = ^t CK (MIN)	I _{CC5_S}	_	5	10	mA
Standby current - V _{CC}	$CE# = V_{CCQ} - 0.2V;$ $WP# = 0V/V_{CCQ}$	I _{SB}	_	10	50	μΑ
Standby Current - V _{CCQ}	$CE# = V_{CCQ} - 0.2V;$ $WP# = 0V/V_{CCQ}$	I _{SBQ}	_	3	10	μΑ

Note: 1. All values are per die (LUN) unless otherwise specified.

Electrical Specifications – DC Characteristics and Operating Conditions (V_{CCQ})

Table 37: DC Characteristics and Operating Conditions (3.3V V_{CCQ})

Parameter	Condition	Symbol	Min	Тур	Max	Unit	Notes
AC input high voltage	CE#, DQ[7:0], DQS, ALE, CLE, CLK	V _{IH(AC)}	0.8 × V _{CCQ}	_	V _{CCQ} + 0.3	V	
AC input low voltage	(WE#), W/R# (RE#), WP#	V _{IL(AC)}	-0.3	_	0.2 × V _{CCQ}	V	
DC input high voltage	DQ[7:0], DQS, ALE, CLE, CLK	V _{IH(DC)}	$0.7 \times V_{CCQ}$	_	V _{CCQ} + 0.3	V	
DC input low voltage	(WE#), W/R# (RE#)	V _{IL(DC)}	-0.3	_	0.3 × V _{CCQ}	V	
Input leakage current	Any input $V_{IN} = 0V$ to V_{CCQ} (all other pins under test = 0V)	I _{LI}	-	-	±10	μΑ	
Output leakage cur- rent	DQ are disabled; $V_{OUT} = 0V \text{ to } V_{CCQ}$	I _{LO}	-	-	±10	μΑ	1
Output low current (R/B#)	V _{OL} = 0.4V	I _{OL} (R/B#)	8	10	-	mA	2

Notes:

- 1. All leakage currents are per die (LUN). Two die (LUNs) have a maximum leakage current of $\pm 20\mu A$ and four die (LUNs) have a maximum leakage current of $\pm 40\mu A$ in the asynchronous interface.
- 2. DC characteristics may need to be relaxed if R/B# pull-down strength is not set to full strength. See Table 14 (page 65) for additional details.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications – AC Characteristics and Operating Conditions (Asynchronous)

Table 38: DC Characteristics and Operating Conditions (1.8V V_{CCO})

Parameter	Condition	Symbol	Min	Тур	Max	Unit	Notes
AC input high voltage	CE#, DQ[7:0], DQS, ALE, CLE, CLK	V _{IH(AC)}	$0.8 \times V_{CCQ}$	_	V _{CCQ} + 0.3	V	
AC input low voltage	(WE#), W/R# (R/E#), WP#	V _{IL(AC)}	-0.3	_	$0.2 \times V_{CCQ}$	V	
DC input high voltage	DQ[7:0], DQS, ALE, CLE, CLK	V _{IH(DC)}	$0.7 \times V_{CCQ}$	_	V _{CCQ} + 0.3	V	
DC input low voltage	(WE#), W/R# (R/E#)	V _{IL(DC)}	-0.3	_	$0.3 \times V_{CCQ}$	٧	
Input leakage current	Any input $V_{IN} = 0V$ to V_{CCQ} (all other pins under test = $0V$)	I _{LI}	ı	-	±10	μΑ	1
Output leakage current	DQ are disabled; Vout = 0V to V_{CCQ}	I _{LO}	_	-	±10	μΑ	1
Output low current (R/B#)	V _{OL} = 0.2V	I _{OL} (R/B#)	3	4	_	mA	

Note:

 All leakage currents are per die (LUN). Two die (LUNs) have a maximum leakage current of ±20μA and four die (LUNs) have a maximum leakage current of ±40μA in the asynchronous interface.

Electrical Specifications – AC Characteristics and Operating Conditions (Asynchronous)

Table 39: AC Characteristics: Asynchronous Command, Address, and Data

		Мо	de 0	Мо	de 1	Мо	de 2	Мо	de 3	Мо	de 4	Мо	de 5		
Parameter	Symbol	Min	Мах	Min	Мах	Min	Мах	Min	Мах	Min	Мах	Min	Max	Unit	Notes
Clock period		10	100		50		35		30		5	20		ns	
Frequency		æ	10	≈:	20	≈ <u>:</u>	28	≈(33	≈4	40	≈!	50	MHz	
ALE to data start	^t ADL	200	_	100	_	100	_	100	_	70	_	70	_	ns	1
ALE hold time	^t ALH	20	_	10	_	10	_	5	_	5	_	5	_	ns	
ALE setup time	^t ALS	50	_	25	_	15	_	10	_	10	_	10	_	ns	
ALE to RE# delay	^t AR	25	_	10	_	10	_	10	_	10	_	10	_	ns	
CE# access time	^t CEA	_	100	_	45	_	30	_	25	_	25	_	25	ns	
CE# hold time	^t CH	20	_	10	_	10	_	5	_	5	_	5	_	ns	
CE# HIGH to output High-Z	^t CHZ	-	100	-	50	-	50	_	50	_	30	_	30	ns	2
CLE hold time	^t CLH	20	_	10	_	10	_	5	_	5	_	5	_	ns	
CLE to RE# delay	^t CLR	20	_	10	_	10	_	10	_	10	_	10	_	ns	
CLE setup time	^t CLS	50	_	25	_	15	_	10	_	10	_	10	_	ns	
CE# HIGH to output hold	tCOH	0	-	15	_	15	-	15	-	15	-	15	_	ns	
CE# setup time	tCS	70	_	35	_	25	_	25	_	20	_	15	_	ns	
Data hold time	^t DH	20	_	10	_	5	_	5	_	5	_	5	-	ns	
Data setup time	^t DS	40	_	20	_	15	_	10	_	10	_	7	-	ns	
Output High-Z to RE# LOW	^t IR	10	-	0	-	0	-	0	-	0	-	0	-	ns	



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications – AC Characteristics and Operating Conditions (Asynchronous)

Table 39: AC Characteristics: Asynchronous Command, Address, and Data (Continued)

		Мо	de 0	Мо	de 1	Мо	de 2	Мо	de 3	Мо	de 4	Мо	de 5		
Parameter	Symbol	Min	Мах	Min	Мах	Min	Max	Min	Мах	Min	Мах	Min	Max	Unit	Notes
RE# cycle time	^t RC	100	_	50	_	35	_	30	_	25	_	20	_	ns	
RE# access time	^t REA	_	40	_	30	_	25	_	20	_	20	_	16	ns	3
RE# HIGH hold time	^t REH	30	_	15	_	15	_	10	_	10	_	7	_	ns	3
RE# HIGH to output hold	^t RHOH	0	_	15	_	15	_	15	_	15	_	15	_	ns	3
RE# HIGH to WE# LOW	tRHW	200	_	100	_	100	_	100	_	100	_	100	_	ns	
RE# HIGH to output High-Z	tRHZ	-	200	-	100	-	100	-	100	-	100	-	100	ns	2, 3
RE# LOW to output hold	tRLOH	0	-	0	-	0	-	0	-	5	-	5	_	ns	3
RE# pulse width	^t RP	50	_	25	_	17	_	15	_	12	_	10	_	ns	
Ready to RE# LOW	^t RR	40	_	20	_	20	_	20	_	20	_	20	_	ns	
WE# HIGH to R/B# LOW	tWB	_	200	_	100	-	100	_	100	-	100	_	100	ns	4
WE# cycle time	tWC	100	-	45	_	35	_	30	_	25	_	20	_	ns	
WE# HIGH hold time	^t WH	30	-	15	_	15	_	10	_	10	_	7	_	ns	
WE# HIGH to RE# LOW	tWHR	120	-	80	-	80	-	60	-	60	-	60	_	ns	
WE# pulse width	tWP	50	-	25	_	17	_	15	_	12	_	10	-	ns	
WP# transition to WE# LOW	tWW	100	-	100	-	100	-	100	-	100	-	100	-	ns	

Notes:

- 1. Timing for ^tADL begins in the address cycle, on the final rising edge of WE# and ends with the first rising edge of WE# for data input.
- 2. Data transition is measured ±200mV from steady-steady voltage with load. This parameter is sampled and not 100 percent tested.
- 3. AC characteristics may need to be relaxed if output drive strength is not set to at least nominal.
- 4. Do not issue a new command during ^tWB, even if R/B# or RDY is ready.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)

Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)

Table 40: AC Characteristics: Synchronous Command, Address, and Data

		Мо	de 0	Mode 1		Mode 2		Mode 3		Mode 4		Mode 5			
Parameter	Symbol	Min	Max	Min	Max	Min	Мах	Min	Max	Min	Max	Min	Max	Unit	Notes
Clock period	•	5	0	3	0	2	20	1	5	1	2	1	0	ns	
Frequency		≈2	20	≈:	33	≈:	50	*	67	≈	83	≈100		MHz	
Access window of DQ[7:0] from CLK	^t AC	10	20	10	20	10	20	10	20	10	20	10	20	ns	
ALE to data loading time	^t ADL	100	_	100	_	70	_	70	_	70	_	70	_	ns	
Command, address data delay	^t CAD	25	_	25	-	25	-	25	_	25	_	25	_	ns	1
ALE, CLE, W/R# hold	^t CALH	10	-	5	-	4	-	3	-	2.5	_	2	_	ns	
ALE, CLE, W/R# setup	^t CALS	10	_	5	-	4	-	3	_	2.5	_	2	_	ns	
DQ hold – com- mand, address	^t CAH	10	_	5	-	4	-	3	_	2.5	_	2	_	ns	
DQ setup – com- mand, address	^t CAS	10	-	5	-	4	-	3	-	2.5	_	2	-	ns	
CE# hold	^t CH	10	_	5	-	4	_	3	_	2.5	_	2	_	ns	
Average CLK cycle time	^t CK (avg)	50	100	30	50	20	30	15	20	12	15	10	12	ns	3
Absolute CLK cycle time, from rising edge to rising edge	^t CK (abs)							-	tJIT (pe					ns	
CLK cycle HIGH	^t CKH (abs)	0.43	0.57	0.43	0.57	0.43	0.57	0.43	0.57	0.43	0.57	0.43	0.57	^t CK	4
CLK cycle LOW	^t CKL (abs)	0.43	0.57	0.43	0.57	0.43	0.57	0.43	0.57	0.43	0.57	0.43	0.57	^t CK	4
Data output end to W/R# HIGH	^t CKWR	$^{t}CKWR(MIN) = RoundUp[(^{t}DQSCK(MAX) + {^{t}CK})/^{t}CK]$							^t CK						
CE# setup	tCS	35	_	25	_	15	_	15	_	15	_	15	_	ns	
Data In hold	^t DH	5	_	2.5	_	1.7	_	1.3	_	1.1	_	0.8	_	ns	
Access window of DQS from CLK	^t DQSCK	-	20	_	20	_	20	_	20	_	20	_	20	ns	
DQS, DQ[7:0] Driven by NAND	^t DQSD	-	18	-	18	-	18	-	18	-	18	-	18	ns	



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)

Table 40: AC Characteristics: Synchronous Command, Address, and Data (Continued)

		Мо	de 0	Mode 1		Mode 2		Мо	de 3	Mode 4		Mode 5			
Parameter	Symbol	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max	Unit	Notes
DQS, DQ[7:0] to tri-state	^t DQSHZ	_	20	-	20	-	20	-	20	-	20	-	20	ns	5
DQS input high pulse width	^t DQSH	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	^t CK	
DQS input low pulse width	^t DQSL	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	^t CK	
DQS-DQ skew	^t DQSQ	-	5	_	2.5	_	1.7	-	1.3	-	1.0	_	0.85	ns	
Data input	^t DQSS	0.75	1.25	0.75	1.25	0.75	1.25	0.75	1.25	0.75	1.25	0.75	1.25	^t CK	
Data In setup	^t DS	5	_	3	_	2	_	1.5	_	1.1	_	0.8	_	ns	
DQS falling edge from CLK rising – hold	^t DSH	0.2	_	0.2	_	0.2	_	0.2	_	0.2	_	0.2	_	^t CK	
DQS falling to CLK rising – set- up	^t DSS	0.2	_	0.2	_	0.2	_	0.2	_	0.2	_	0.2	_	^t CK	
Data valid win- dow	^t DVW		$^{t}DVW = {^{t}QH} - {^{t}DQSQ}$										ns		
Half clock peri- od	tHP		^t HP = Min(^t CKH, ^t CKL)									ns			
The deviation of a given ^t CK (abs) from a ^t CK (avg)	^t JIT (per)	-0.7	0.7	-0.7	0.7	-0.7	0.7	-0.6	0.6	-0.6	0.6	-0.5	0.5	ns	
DQ-DQS hold, DQS to first DQ to go nonvalid, per access	^t QH		${}^{t}QH = {}^{t}HP - {}^{t}QHS$										ns		
Data hold skew factor	^t QHS	-	6	-	3	_	2	_	1.5	_	1.2	_	1	ns	
Data output to command, ad- dress, or data in- put	^t RHW	100	_	100	_	100	_	100	_	100	_	100		ns	
Ready to data output	^t RR	20	_	20	_	20	_	20	_	20	_	20	_	ns	
CLK HIGH to R/ B# LOW	tWB	-	100	-	100	-	100	-	100	-	100	_	100	ns	
Command cycle to data output	tWHR	80	-	60	_	60	_	60	_	60	_	60	-	ns	
DQS write pre- amble	tWPRE	1.5	-	1.5	-	1.5	_	1.5	_	1.5	-	1.5	-	^t CK	



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND **Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)**

Table 40: AC Characteristics: Synchronous Command, Address, and Data (Continued)

		Мо	de 0	Mode 1		Mode 2		Mode 3		Mode 4		Mode 5			
Parameter	Symbol	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max	Unit	Notes
DQS write post- amble	tWPST	1.5	_	1.5	_	1.5	_	1.5	_	1.5	_	1.5	_	^t CK	
W/R# LOW to data output cy- cle	^t WRCK	20	_	20	_	20	_	20	_	20	_	20	_	ns	
WP# transition to command cy- cle	tWW	100	_	100	_	100	_	100	_	100	_	100	_	ns	

- Notes: 1. Delay is from start of command to next command, address, or data cycle; start of address to next command, address, or data cycle; and end of data to start of next command, address, or data cycle.
 - 2. This value is specified in the parameter page.
 - 3. ^tCK(avg) is the average clock period over any consecutive 200-cycle window.
 - 4. ^tCKH(abs) and ^tCKL(abs) include static offset and duty cycle jitter.
 - 5. ^tDQSHZ begins when W/R# is latched HIGH by CLK. This parameter is not referenced to a specific voltage level; it specifies when the device outputs are no longer driving.



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND **Electrical Specifications – Array Characteristics**

Electrical Specifications - Array Characteristics

Table 41: Array Characteristics

Parameter	Symbol	Тур	Max	Unit	Notes
Number of partial page programs	NOP	_	1	Cycles	1
ERASE BLOCK operation time	^t BERS	3	10	ms	
Cache busy	tCBSY	3	2200	μs	
Change column setup time to data in/out or next command	tCCS	_	200	ns	
Dummy busy time	^t DBSY	0.5	1	μs	
Cache read busy time	tRCBSY	3	50	μs	
Busy time for SET FEATURES and GET FEATURES operations	tFEAT	_	1	μs	
Busy time for interface change	^t ITC	_	1	μs	2
LAST PAGE PROGRAM operation time	^t LPROG	_	-	μs	3
Busy time for OTP DATA PROGRAM operation if OTP is protected	tOBSY	_	30	μs	
Power-on reset time	^t POR	_	1	ms	
PROGRAM PAGE operation time	^t PROG	1300	2200	μs	
READ PAGE operation time	^t R	_	50	μs	

- Notes: 1. The pages in the OTP Block have an NOP of 4.
 - 2. tITC (MAX) is the busy time when the interface changes from asynchronous to synchronous using the SET FEATURES (EFh) command or synchronous to asynchronous using the RESET (FFh) command. During the ^tITC time, any command, including READ STATUS (70h) and READ STATUS ENHANCED (78h), is prohibited.
 - 3. ^tLPROG = ^tPROG (last page) + ^tPROG (last page 1) command load time (last page) address load time (last page) - data load time (last page).



Asynchronous Interface Timing Diagrams

Figure 69: RESET Operation

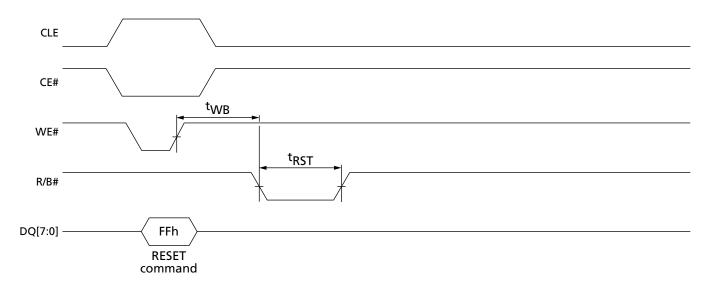


Figure 70: RESET LUN Operation






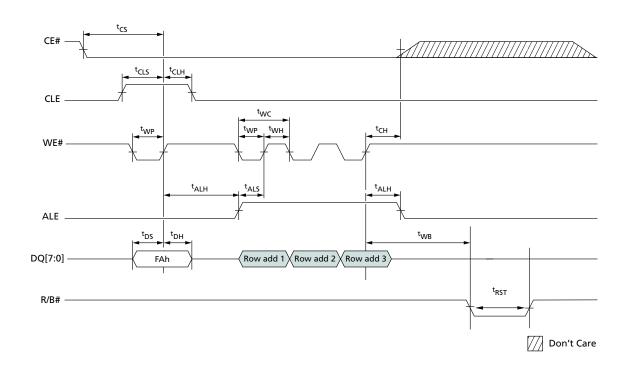Figure 71: READ STATUS Cycle

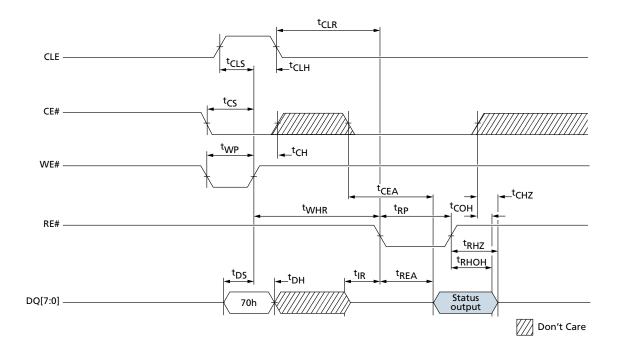


Figure 72: READ STATUS ENHANCED Cycle






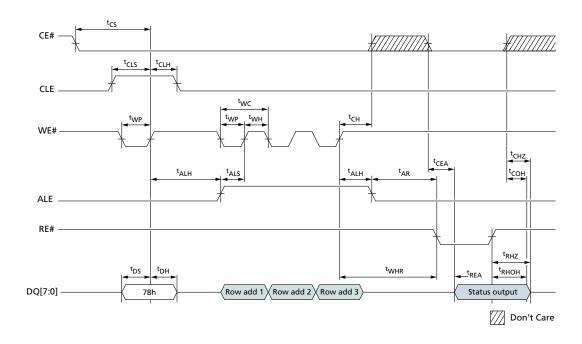Figure 73: READ PARAMETER PAGE

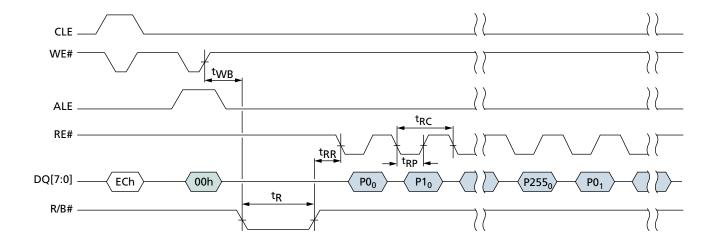


Figure 74: READ PAGE

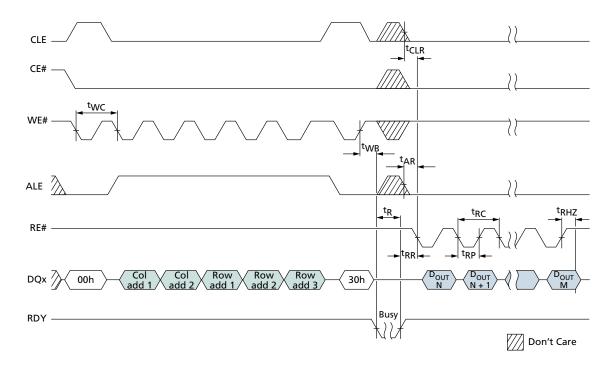




Figure 75: READ PAGE Operation with CE# "Don't Care"

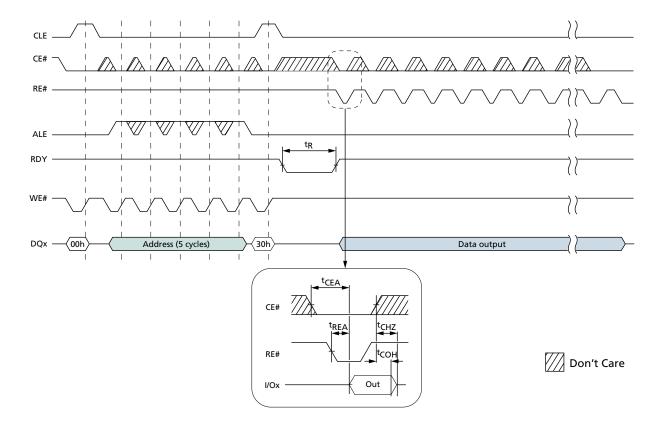




Figure 76: CHANGE READ COLUMN

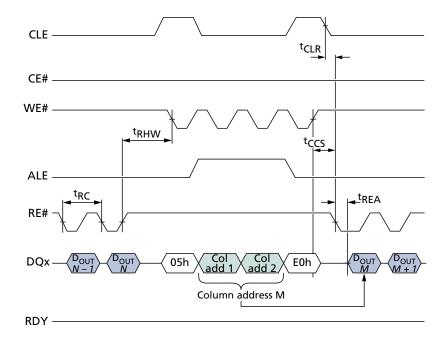




Figure 77: READ PAGE CACHE SEQUENTIAL

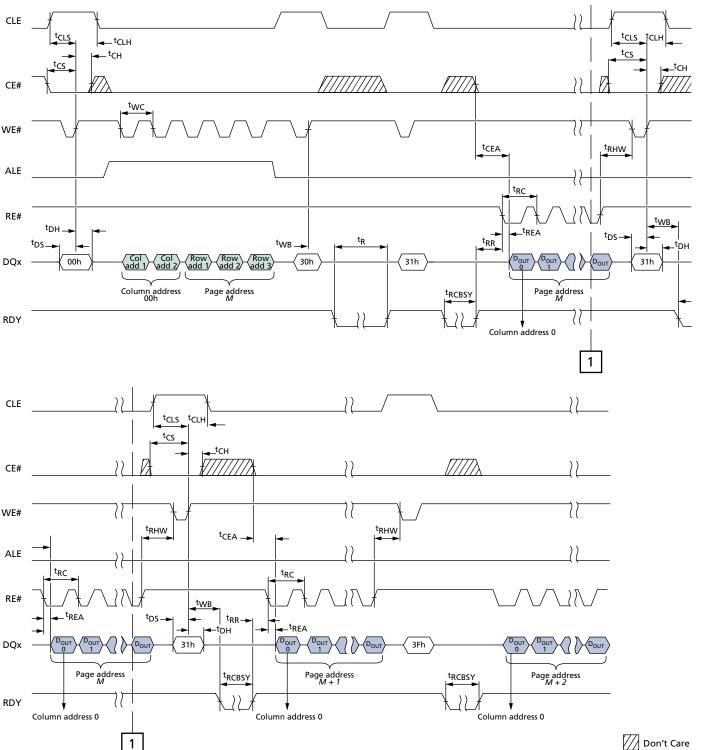




Figure 78: READ PAGE CACHE RANDOM






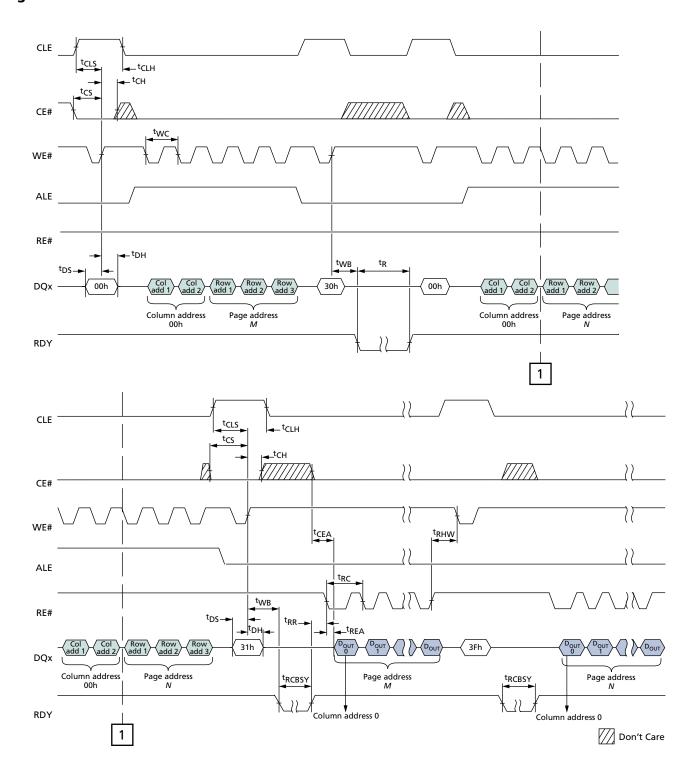Figure 79: READ ID Operation

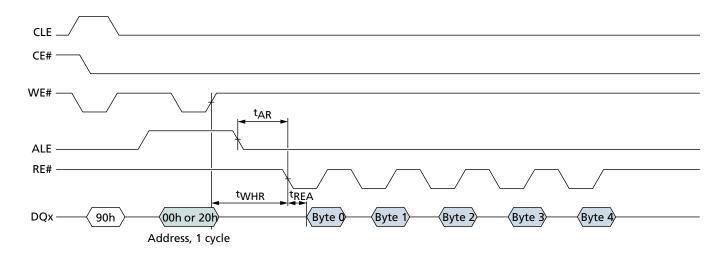


Figure 80: PROGRAM PAGE Operation






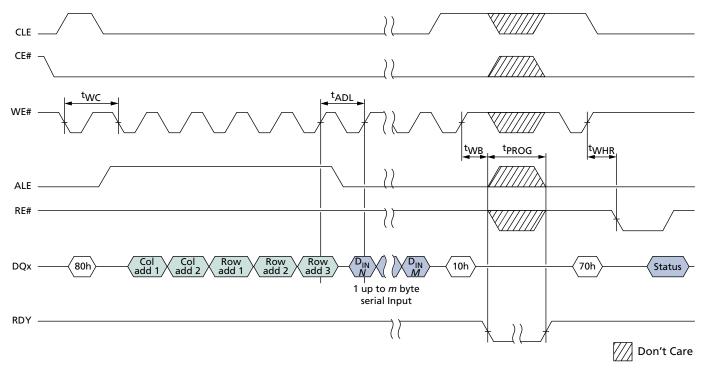Figure 81: PROGRAM PAGE Operation with CE# "Don't Care"

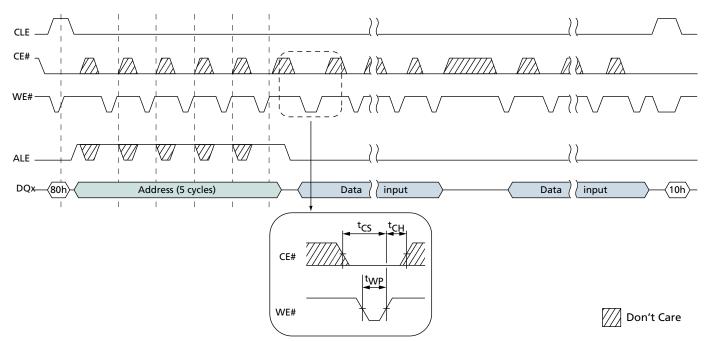


Figure 82: PROGRAM PAGE Operation with CHANGE WRITE COLUMN






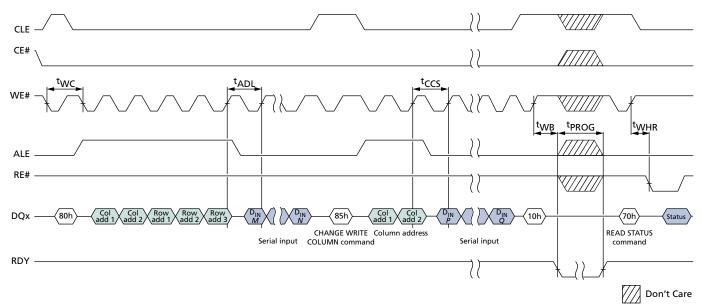Figure 83: PROGRAM PAGE CACHE

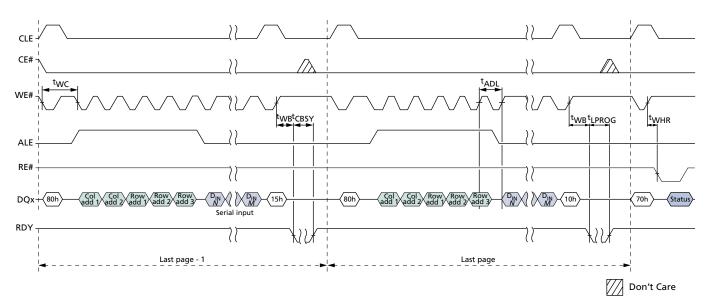


Figure 84: PROGRAM PAGE CACHE Ending on 15h






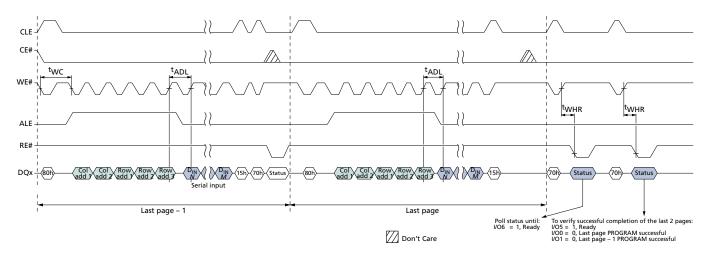Figure 85: COPYBACK


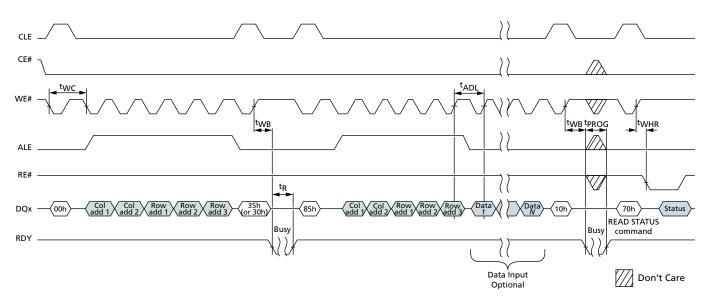



Figure 86: ERASE BLOCK Operation

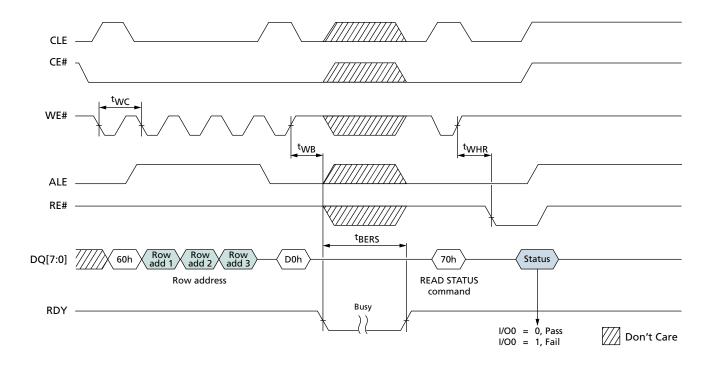



Synchronous Interface Timing Diagrams

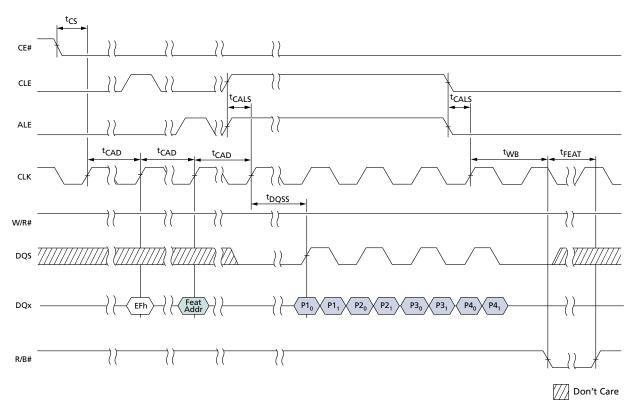Figure 87: SET FEATURES Operation



Notes:

- 1. When CE# remains LOW, ^tCAD begins at the rising edge of the clock from which the last data byte is input for the subsequent command or data input cycle(s).
- 2. ^tDSH (MIN) generally occurs during ^tDQSS (MIN).
- 3. ^tDSS (MIN) generally occurs during ^tDQSS (MAX).
- The cycle that ^tCAD is measured from may be an idle cycle (as shown), another command cycle, an address cycle, or a data cycle. The idle cycle is shown in this diagram for simplicity.



Figure 88: READ ID Operation


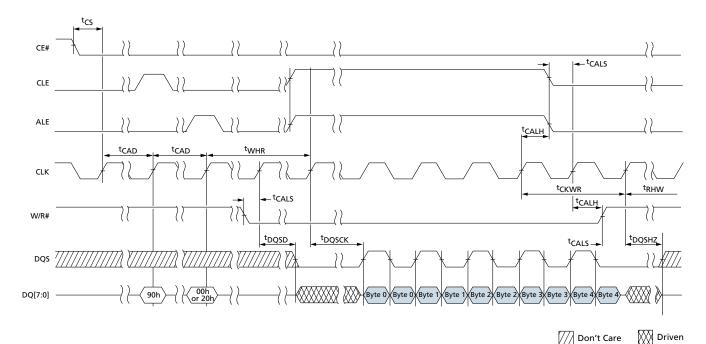




Figure 89: GET FEATURES Operation

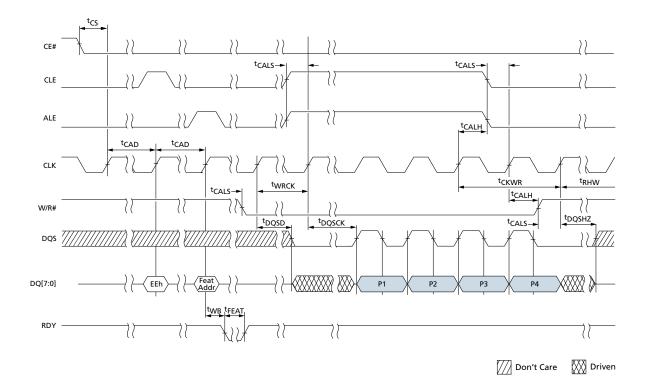

131



Figure 90: RESET (FCh) Operation

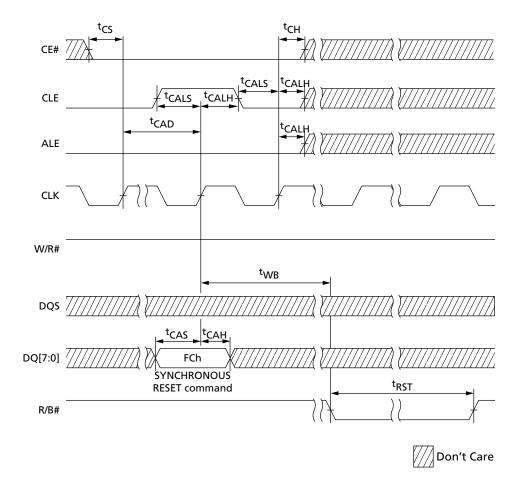




Figure 91: READ STATUS Cycle

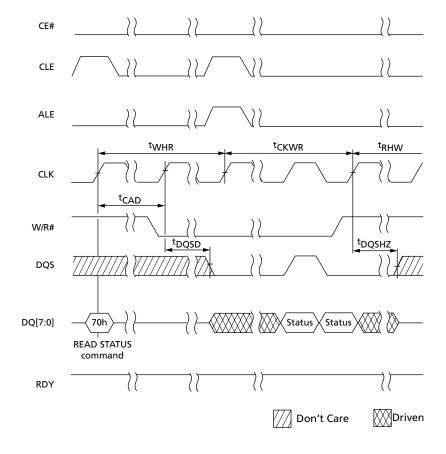




Figure 92: READ STATUS ENHANCED Operation

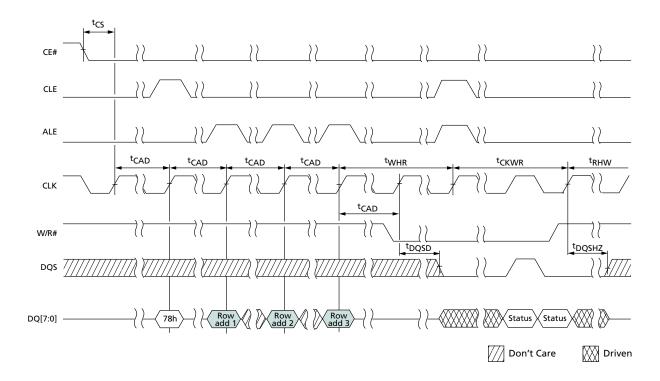




Figure 93: READ PARAMETER PAGE Operation

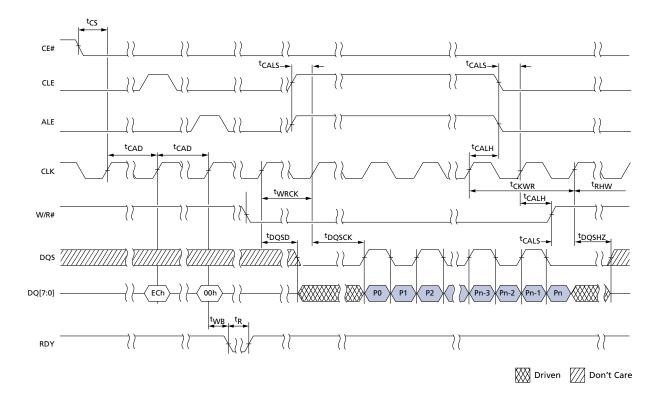




Figure 94: READ PAGE Operation

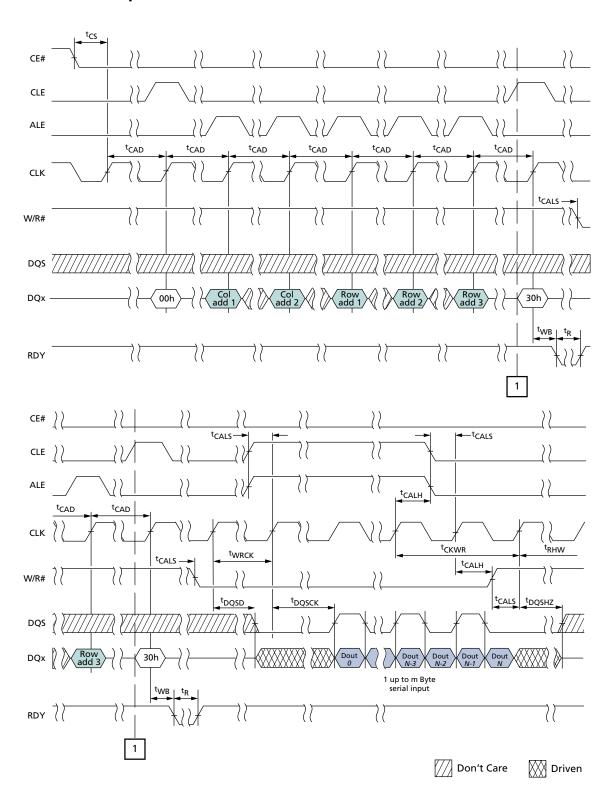




Figure 95: CHANGE READ COLUMN

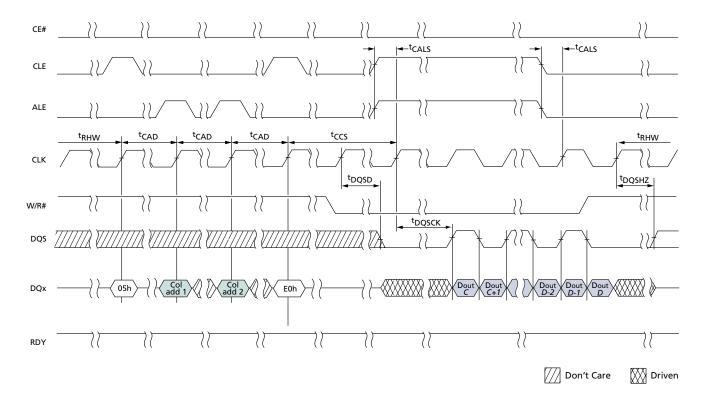




Figure 96: READ PAGE CACHE SEQUENTIAL (1 of 2)

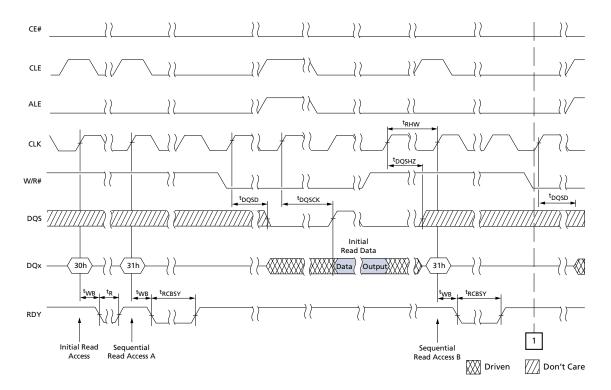




Figure 97: READ PAGE CACHE SEQUENTIAL (2 of 2)






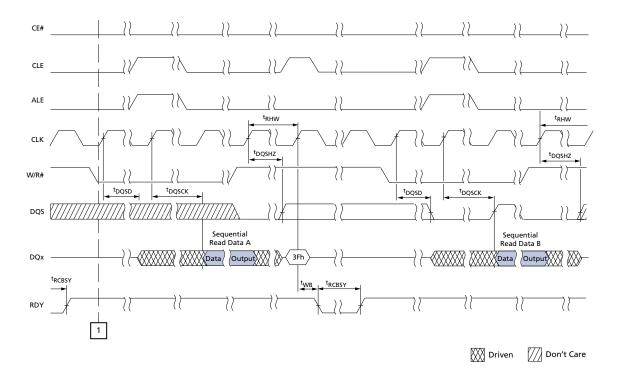Figure 98: READ PAGE CACHE RANDOM (1 of 2)

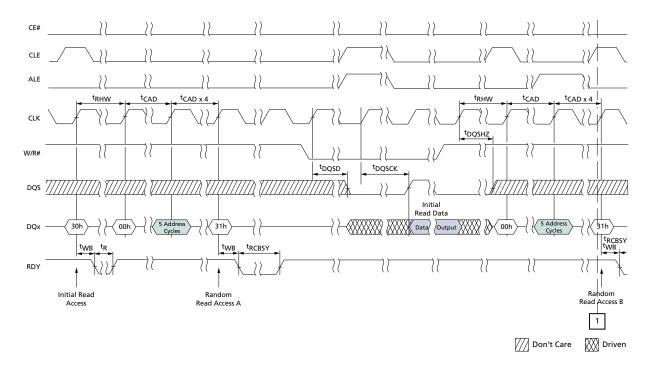


Figure 99: READ PAGE CACHE RANDOM (2 of 2)

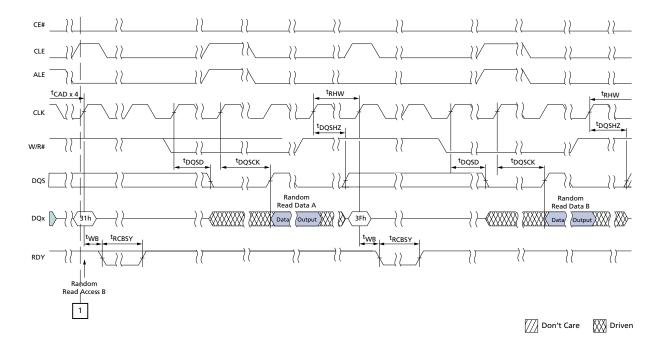




Figure 100: Multi-Plane Read Page (1 of 2)

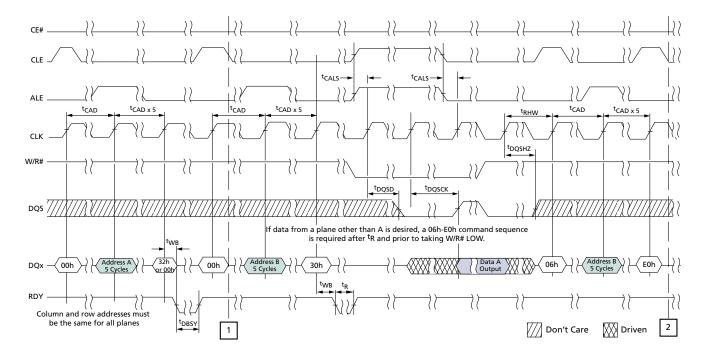




Figure 101: Multi-Plane Read Page (2 of 2)






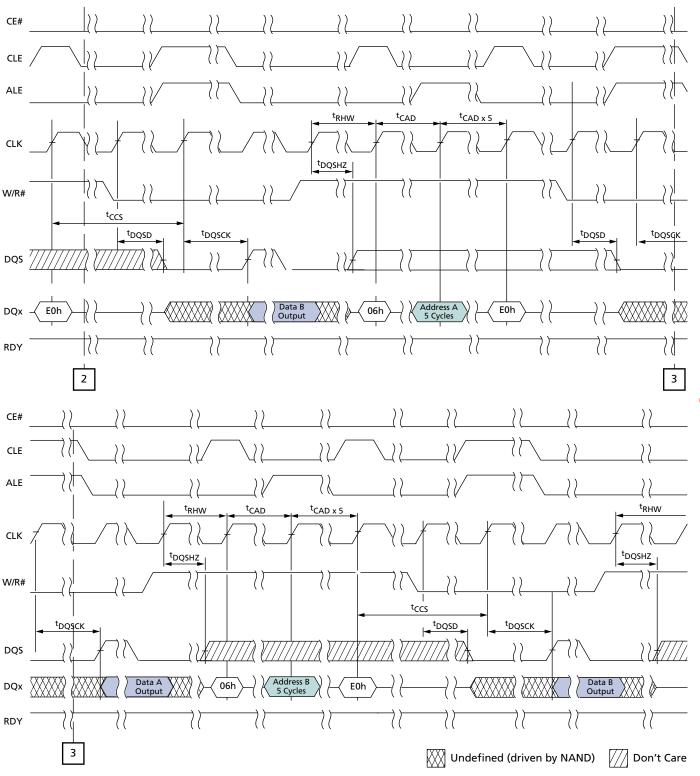Figure 102: PROGRAM PAGE Operation (1 of 2)

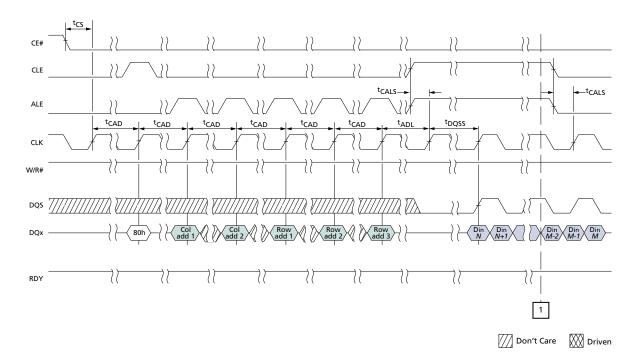


Figure 103: PROGRAM PAGE Operation (2 of 2)

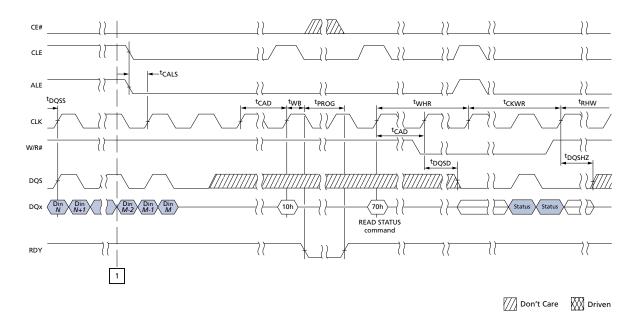




Figure 104: CHANGE WRITE COLUMN

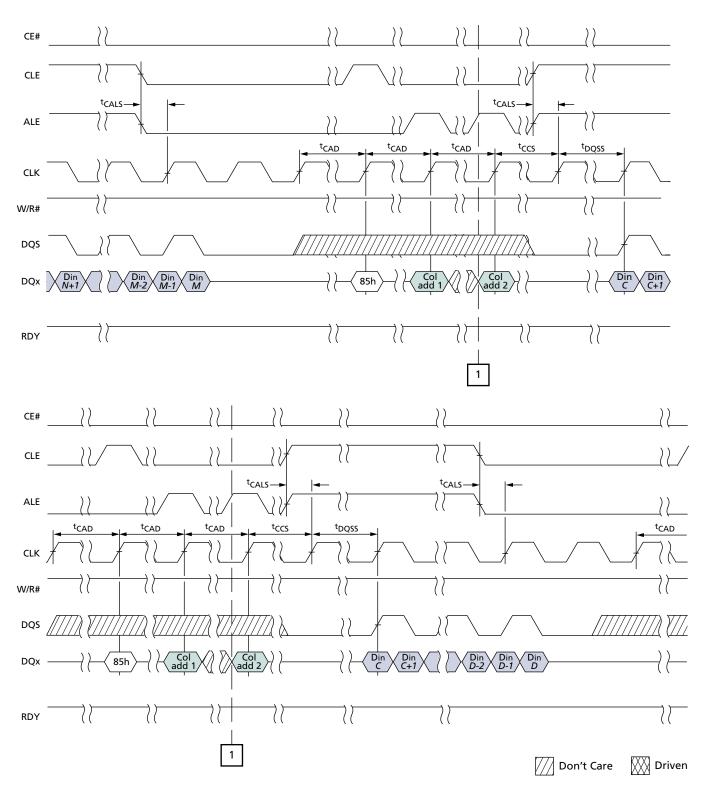




Figure 105: Multi-Plane Program Page






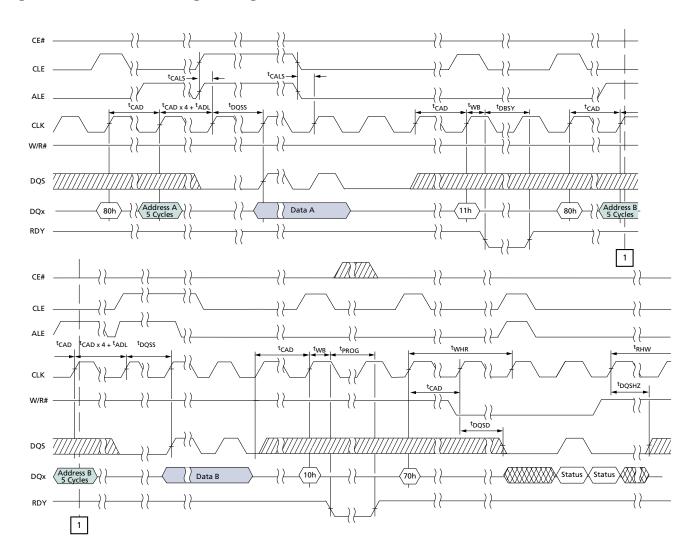Figure 106: ERASE BLOCK

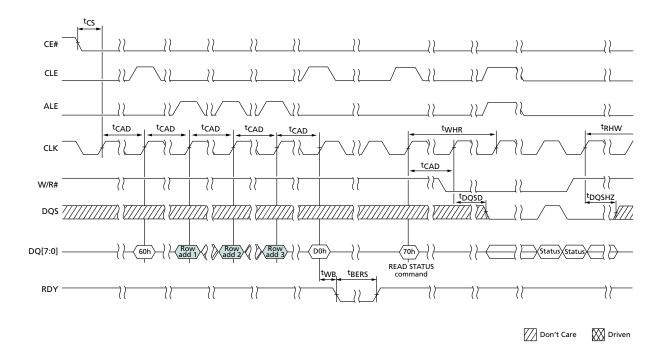


Figure 107: COPYBACK (1 of 3)






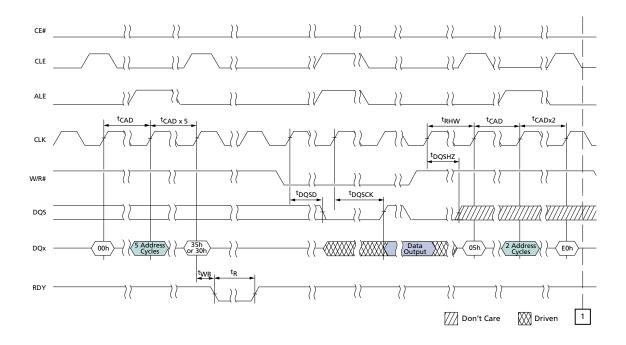Figure 108: COPYBACK (2 of 3)

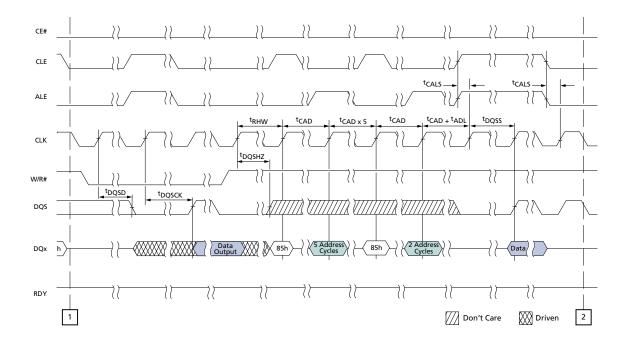


Figure 109: COPYBACK (3 of 3)

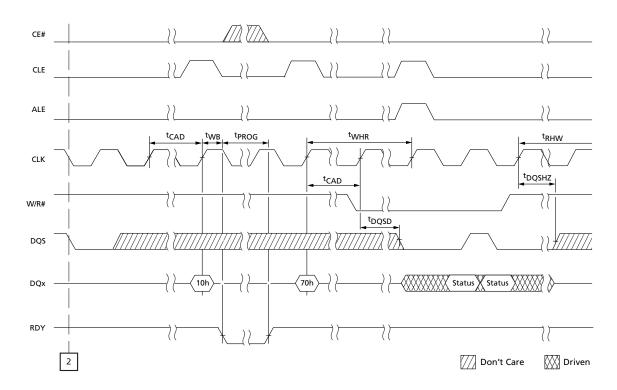




Figure 110: READ OTP PAGE






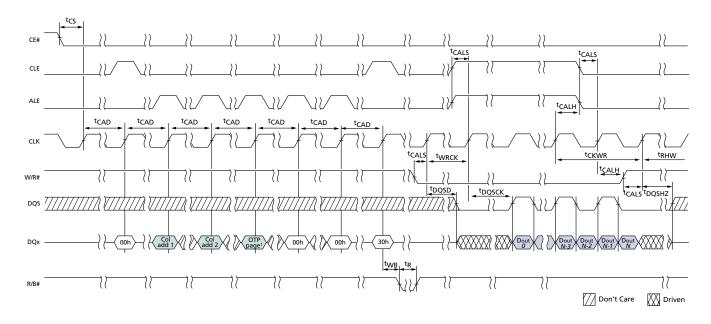Figure 111: PROGRAM OTP PAGE (1 of 2)

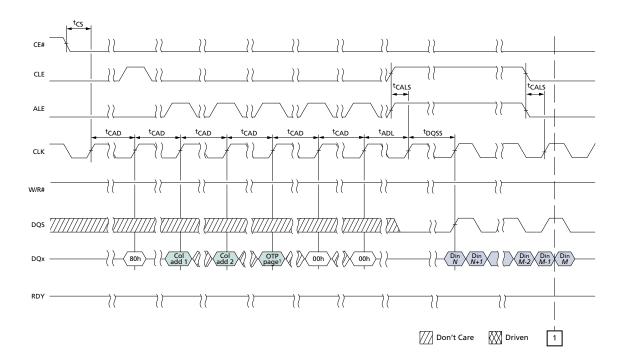


Figure 112: PROGRAM OTP PAGE (2 of 2)


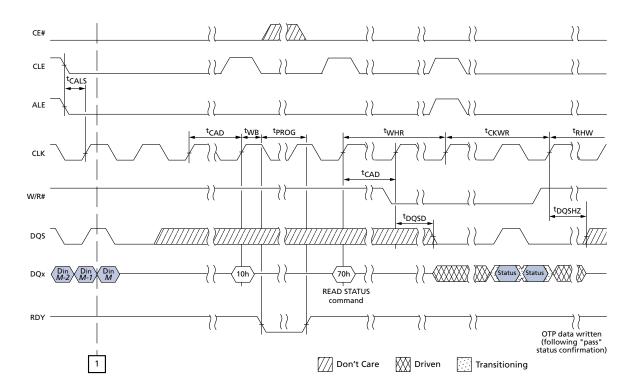




Figure 113: PROTECT OTP AREA

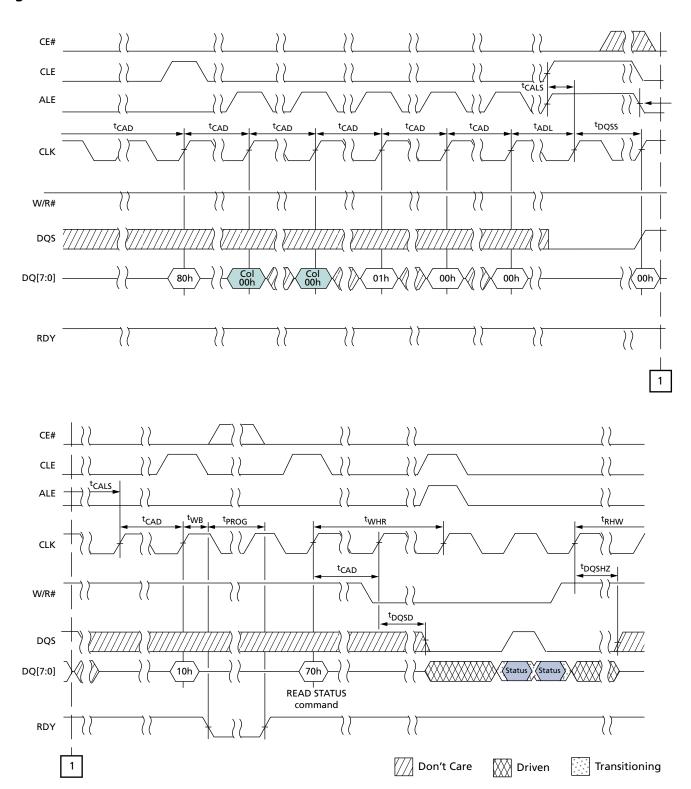



32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Revision History

Revision History

Rev. A - 3/10

· Initial release

8000 S. Federal Way, P.O. Box 6, Boise, ID 83707-0006, Tel: 208-368-3900 www.micron.com/productsupport Customer Comment Line: 800-932-4992 Micron and the Micron logo are trademarks of Micron Technology, Inc.
All other trademarks are the property of their respective owners.
This data sheet contains initial descriptions of products still under development.