


Windshield Washer Container (CR-4)

- Check level of water in Windshield washer reservoir. Top up with clean water if required.
 - Use good quality cleaning solvent available in the market in the ratio as specified by its manufacturer.
- 11. Check oil level in power steering hydraulic tank, where applicable.
- 12. Check and correct tyre inflation pressure (In cold condition).

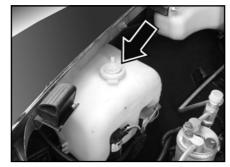

Windshield Washer Container (4SPTC)