



AB1620 Tool Introduction

CH Chuang



Update: 2026/4/16

Agenda

- ❑ Flash Tool
- ❑ Logging Tool
- ❑ UT APP
- ❑ MP Tool
- ❑ Lab Test Tool
- ❑ Config Tool






AB1620 Flash Tool




Update:

Flash tool

- ❑ SDK folder : [airoha/mcu/tools/pc_tools/IOT_Flash_Tool](#)
 - win/Airoha_Flash_Tool_v1.1.18.0.7z
 - Airoha_Flash_Tool_on_Windows_Users_Guide.pdf

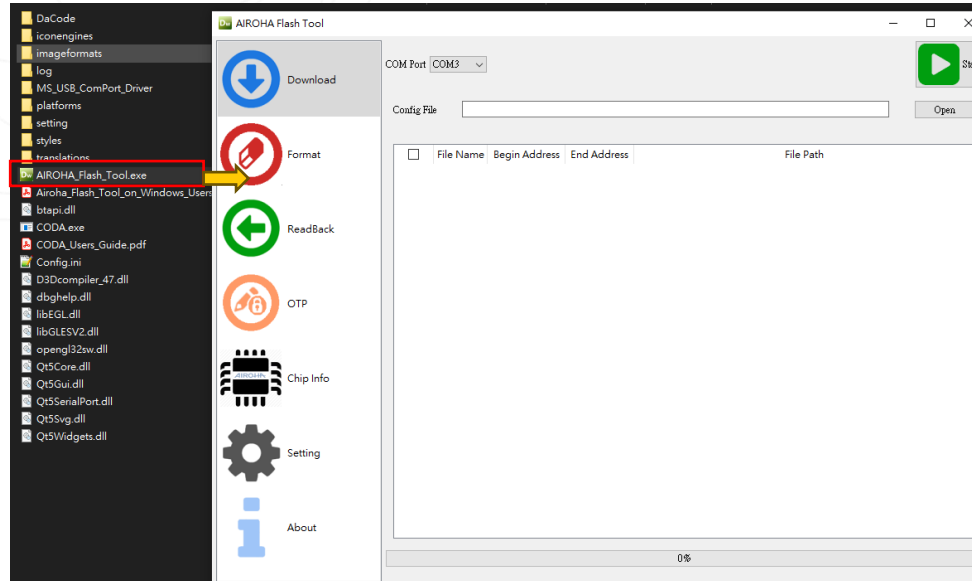

Build SDK output data

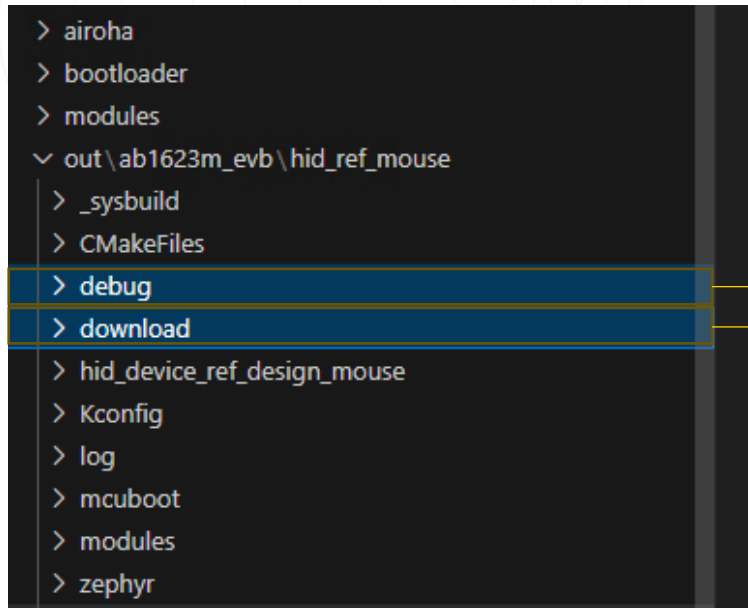

Using by Logging Tool

- mcu_log_str.bin
- risc_v_log_str.bin (optional)


Using by Flash Tool

- flash_download.cfg




Flash tool - UART download


- ❑ Step1
 - Select COM port
- ❑ Step2
 - Select “**flash_download.cfg**”
- ❑ Step3
 - Press “**Start**”
- ❑ Step4
 - Press “**Reset**” of EVK

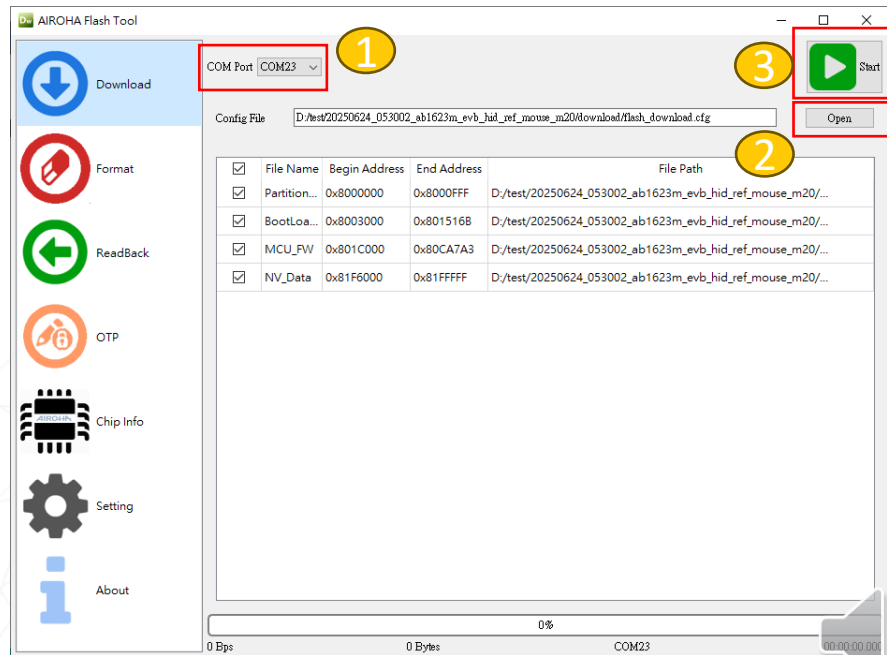

Flash tool UART download – EVK power by 5V adapter

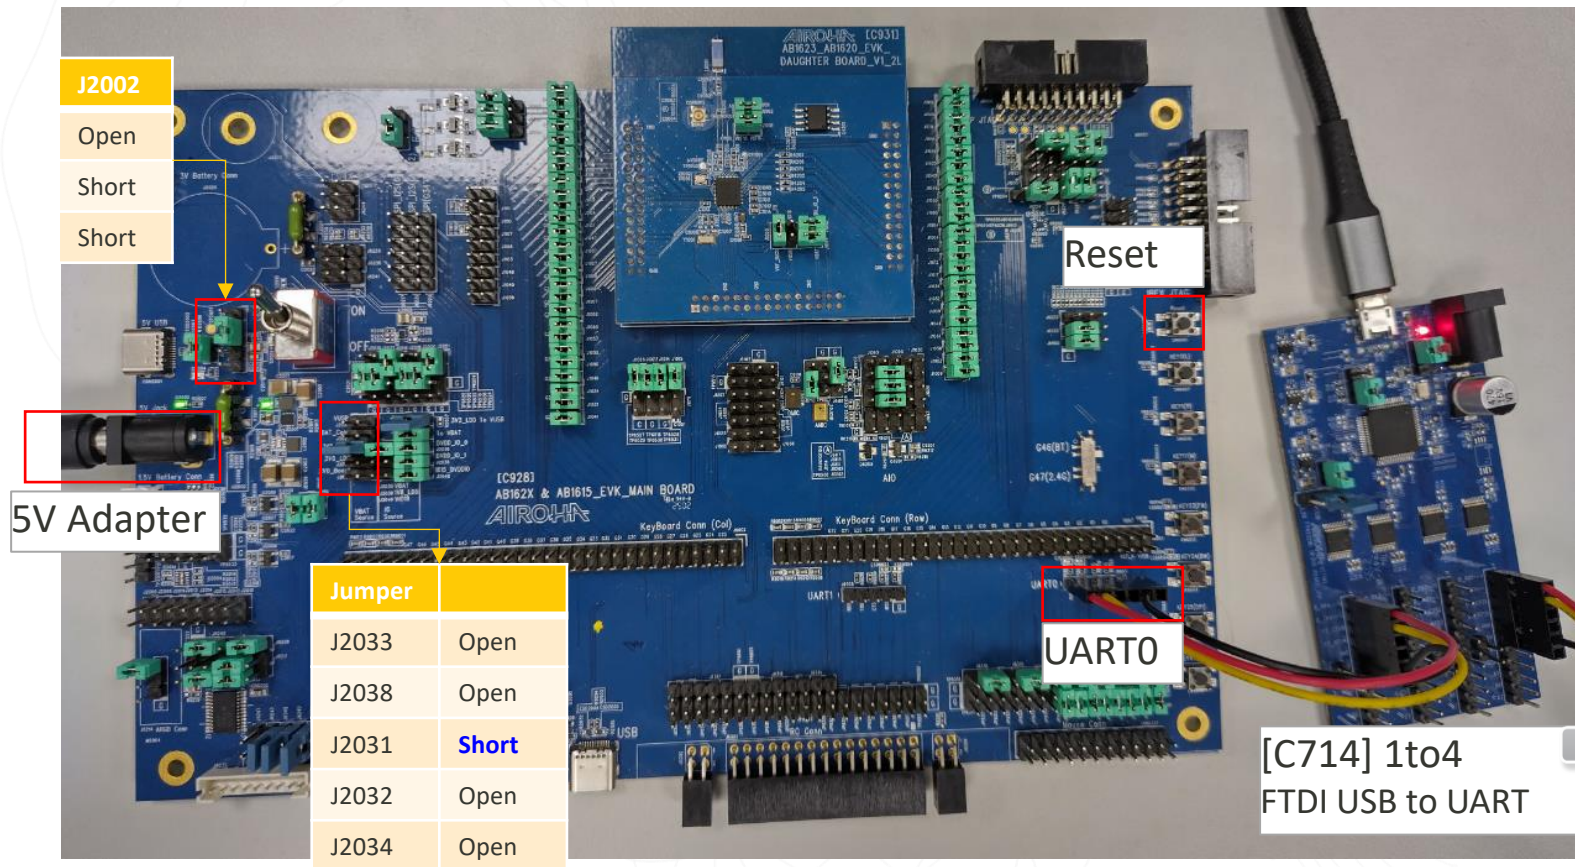

Flash tool UART download – EVK power by USB type C

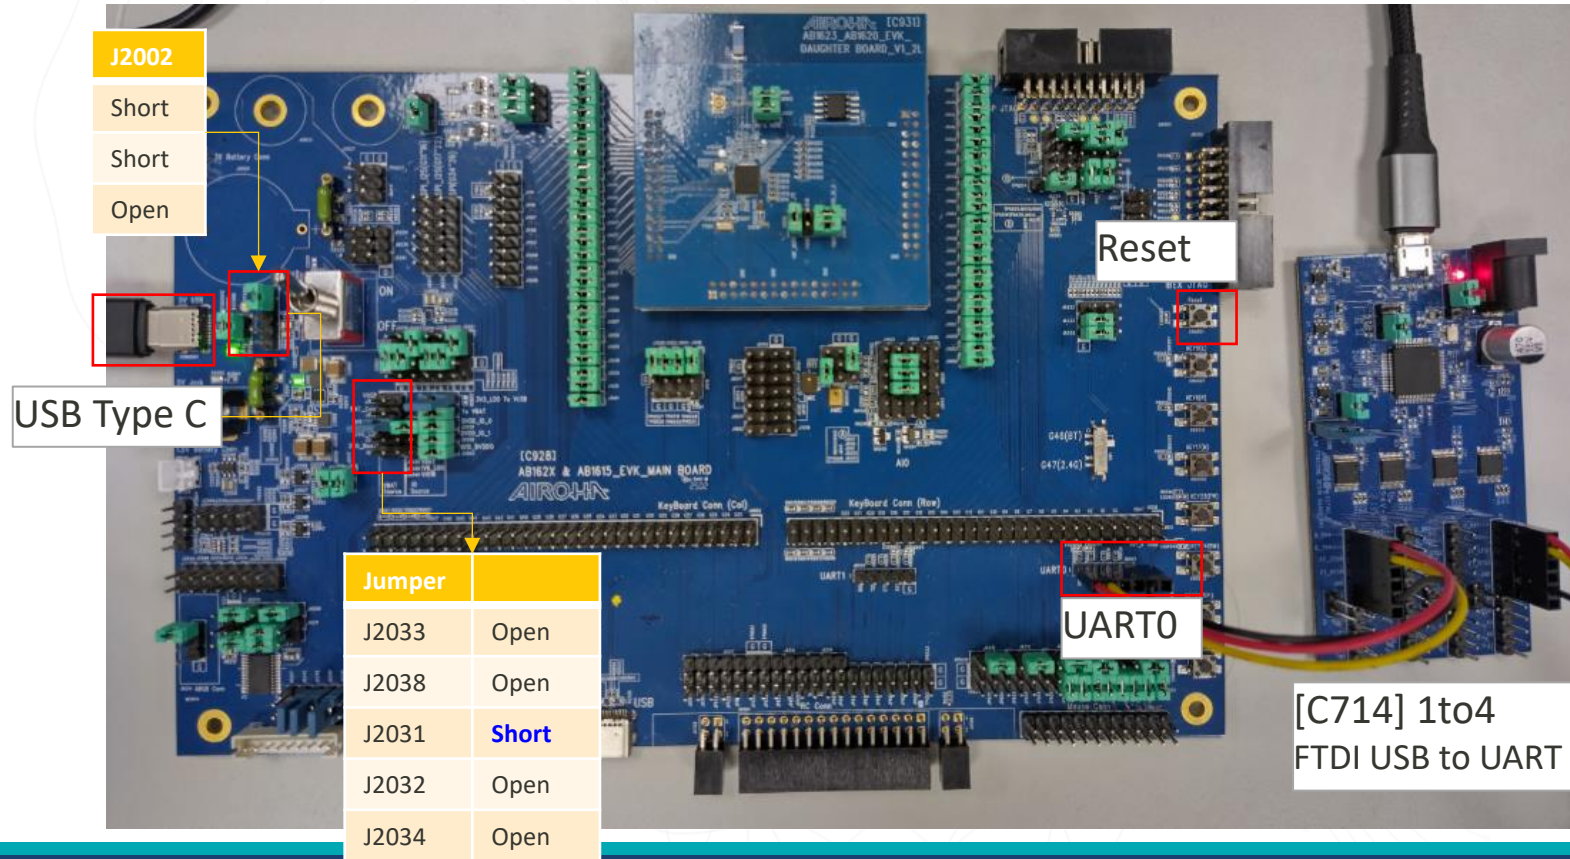



AIROHA





AB1620 Logging Tool



Update:

Logging Tool

- ❑ SDK folder : [airoha/mcu/tools/pc_tools/atk/ab162x](#)
 - AB1620_Airoha_Tool_Kit(ATK)_v1.0.0.4.7z

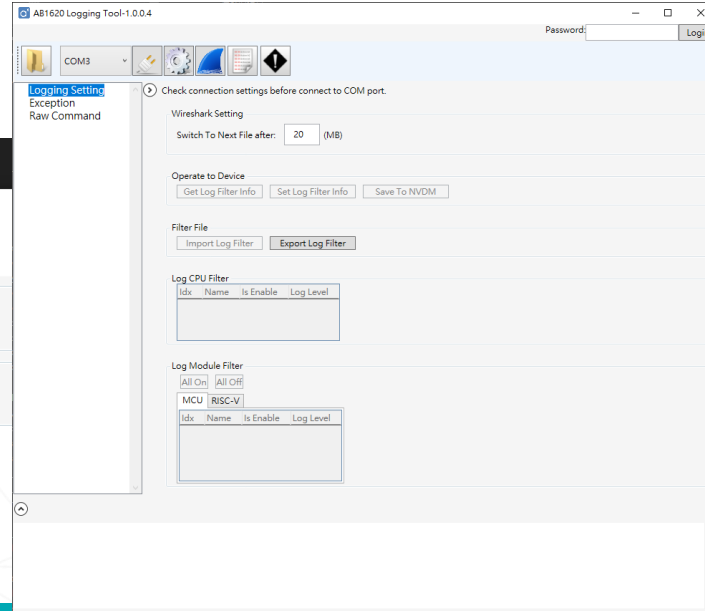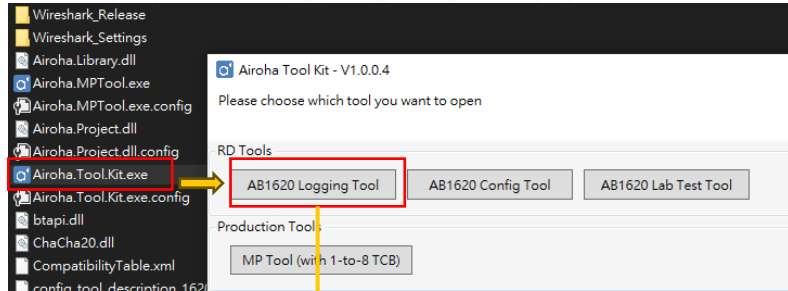

Logging Tool

- ❑ Default baud rate : 6M




[C714] 1to4
FTDI USB to UART
Support 6M baud rate



Logging Tool – log string bin


❑ Setup log string bin

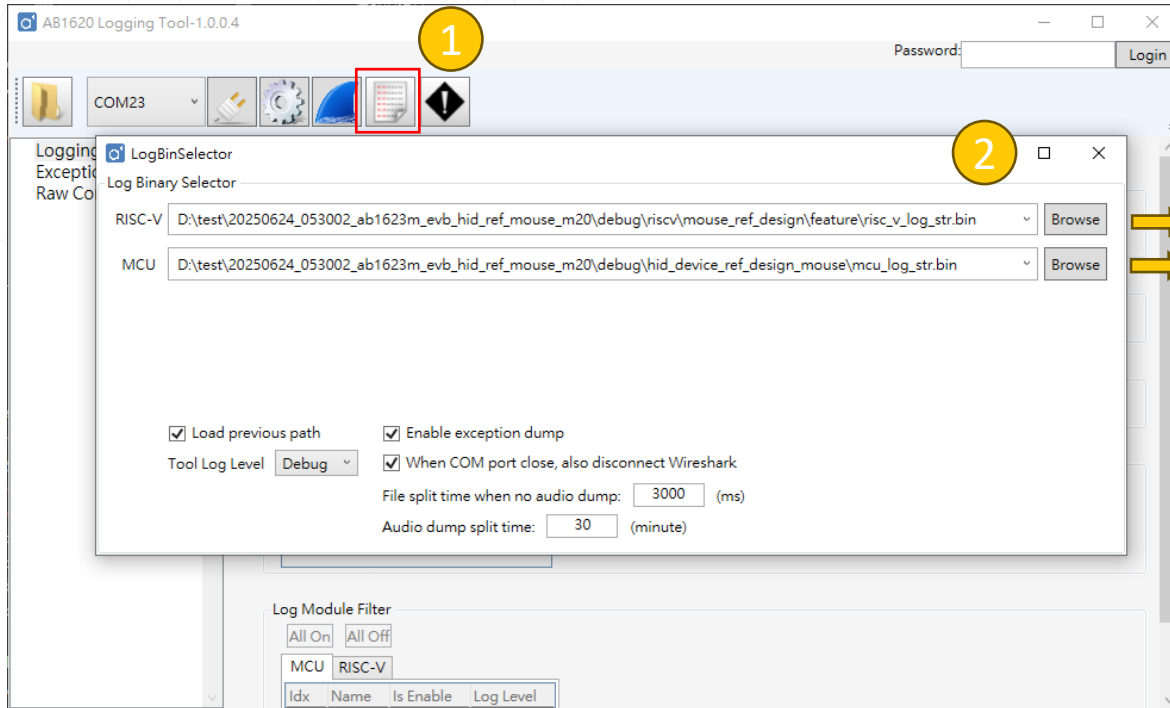

→ RISC-V : optional
→ MCU : must have


Logging Tool – log string bin

- ❑ Step1
 - Connect COM port
- ❑ Step2
 - Launch Wireshark

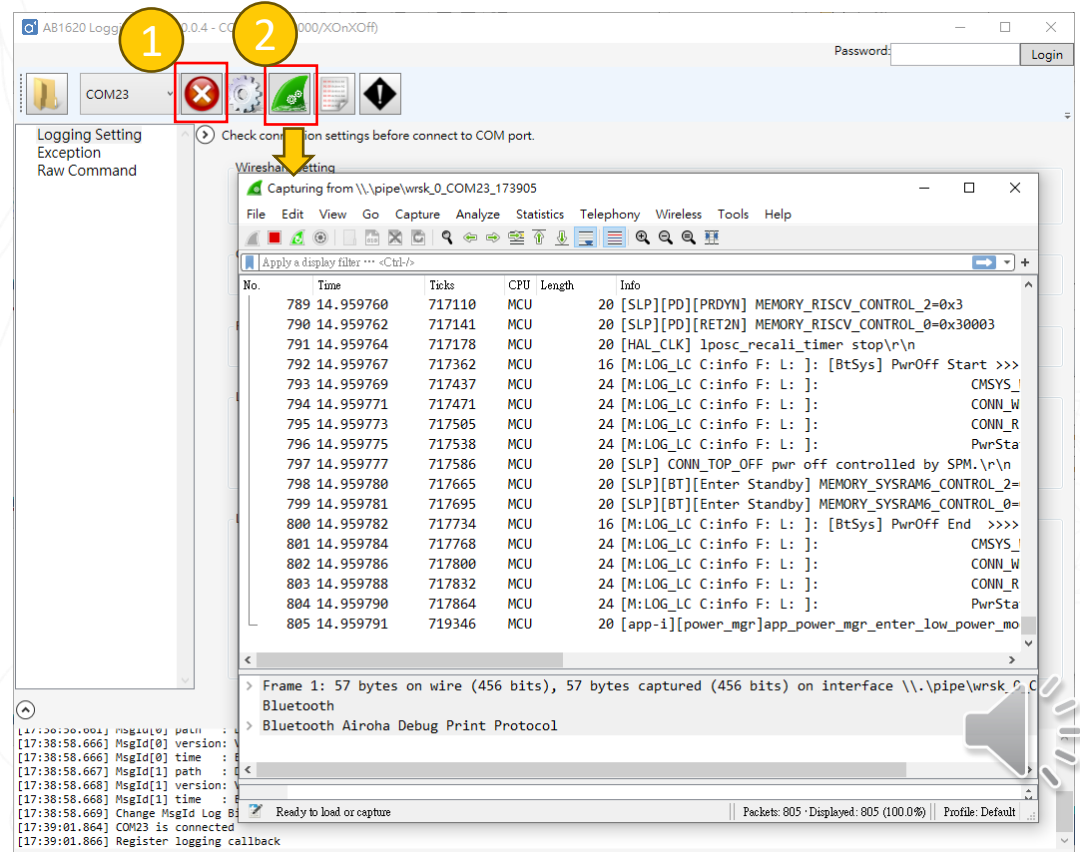

Logging Tool – log output file

- ❑ Log data will output to folder as bellow

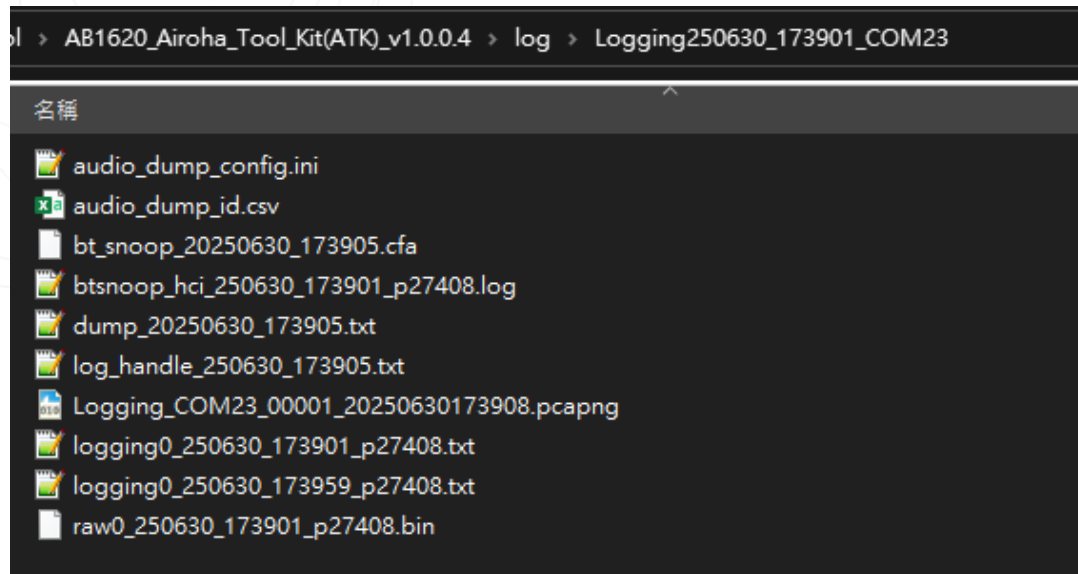

The Airoha logo features the word "AIROHA" in a bold, dark blue, sans-serif font. The letter "H" is stylized with a horizontal line passing through its center.

AIROHA




Airoha UT APP



Update:

Airoha UT APP

- ❑ SDK folder : [airoha/mcu/tools/pc_tools/atk/ab162x](#)
 - Airoha_Windows_UT_APP_5.6.0.102.7z
 - doc\Airoha_Windows_UT_SOP.pptx


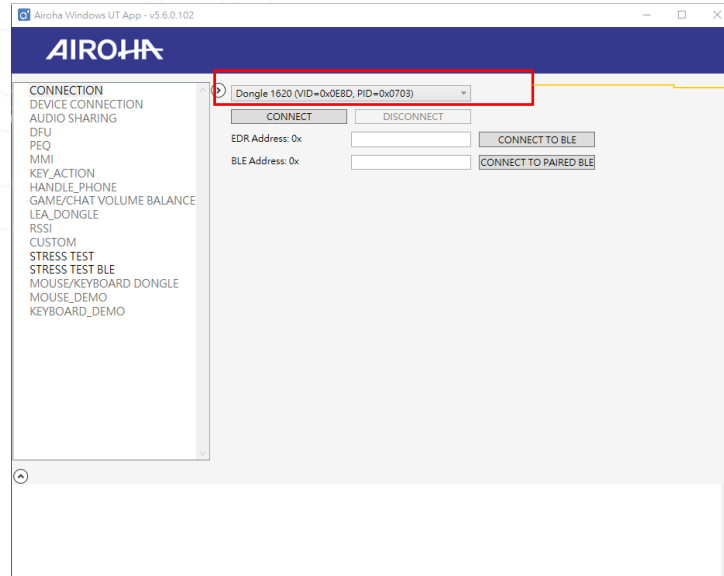


1. Select 1620 dongle
2. Press “**CONNET**”



Airoha UT APP

❑ Pairing Dongle & Mouse

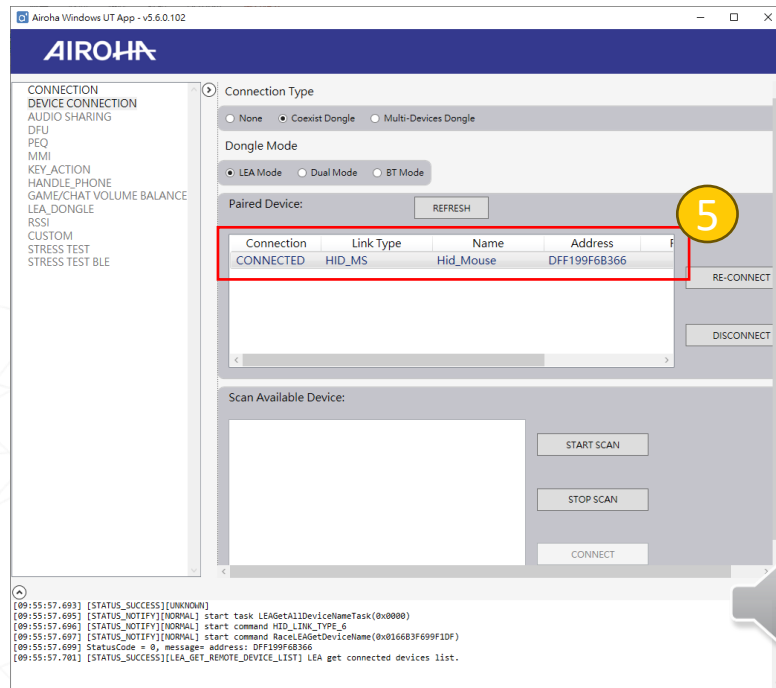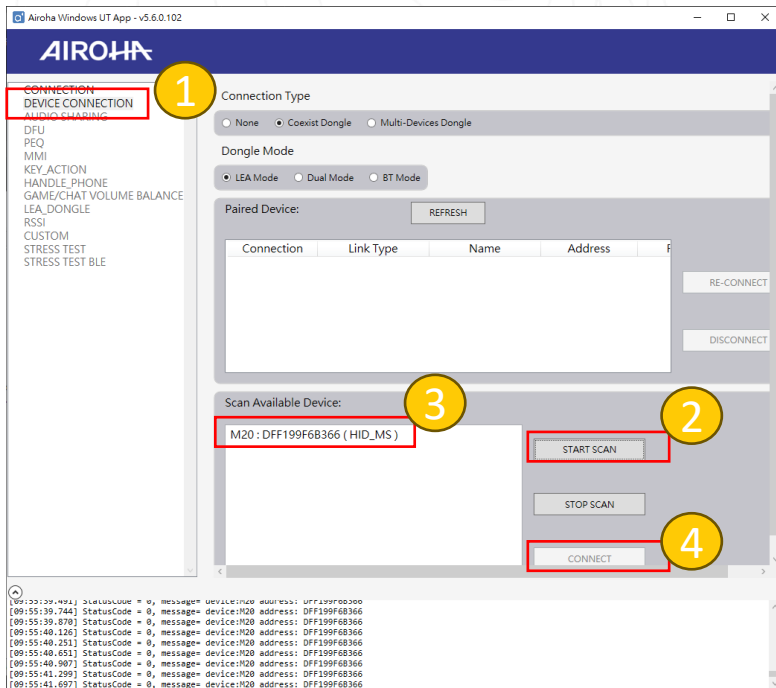



AIROHA




MP Tool



Update:

MP Tool

- ❑ SDK folder : [airoha/mcu/tools/pc_tools/atk/ab162x](#)
 - AB1620_MP_Tool_v1.0.0.4.7z
 - doc\Airoha_IoT_SDK_for_BT_Data_Mass_Production_Pack_Users_Guide.pdf

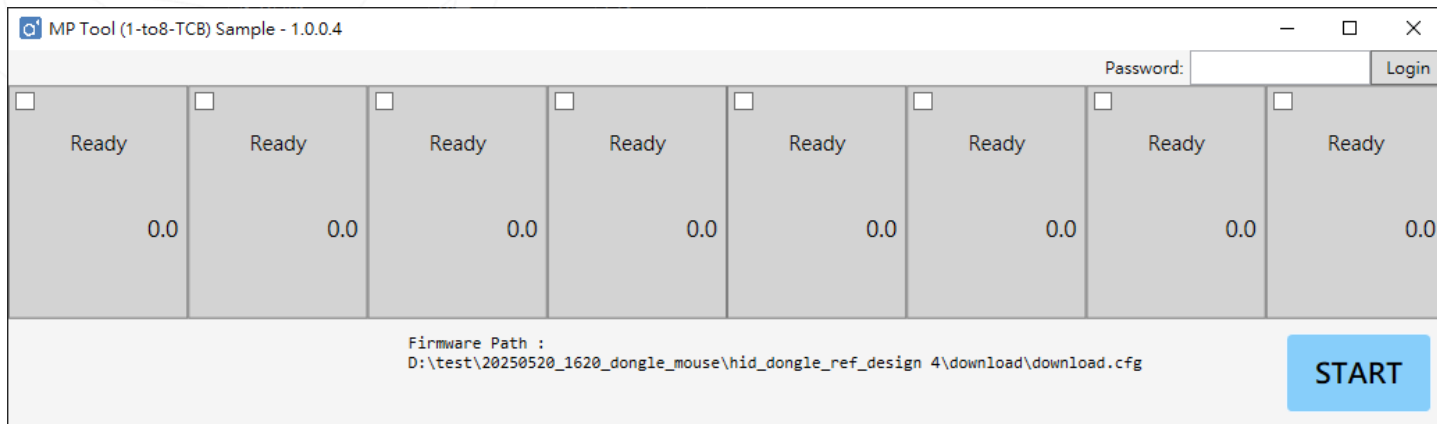

MP Tool

❑ Password : 11111

Setting

FlashBin: D:\test\20250701_053002_ab1623m_evb_hid_ref_mouse_m20\download\flash_download.cfg Load

Tcb1toPort: COM97 4

DeviceUart: SyncTcb1to8Port

DUT1	DUT2	DUT3	DUT4	DUT5	DUT6	DUT7	DUT8
COM9	COM10	COM11	COM12	COM5	COM6	COM7	COM8

WriteFlash: YES

CrystalTrim32M: YES

WriteBT4Address: NO

StartBT4Address: 112233445566

EndBT4Address: FFFFFFFF

Bt4AddressFromBarCode: NO

IsBarCodeModeAutoStart: YES

OK Cancel

1

Password: ●●●●● Logout

☐ Stress Test Interval 10000 ms

Ready 0.0 Ready 0.0

load.cfg

2

Setting START





AIROHA




Lab Test Tool



Update:


Lab Test Tool

- ❑ SDK folder : [airoha/mcu/tools/pc_tools/atk/ab162x](#)
 - AB1620_Airoha_Tool_Kit(ATK)_v1.0.0.4.7z
 - doc\Airoha_IoT_SDK_for_BT_Data_LabTest_Tool_Users_Guide.pdf

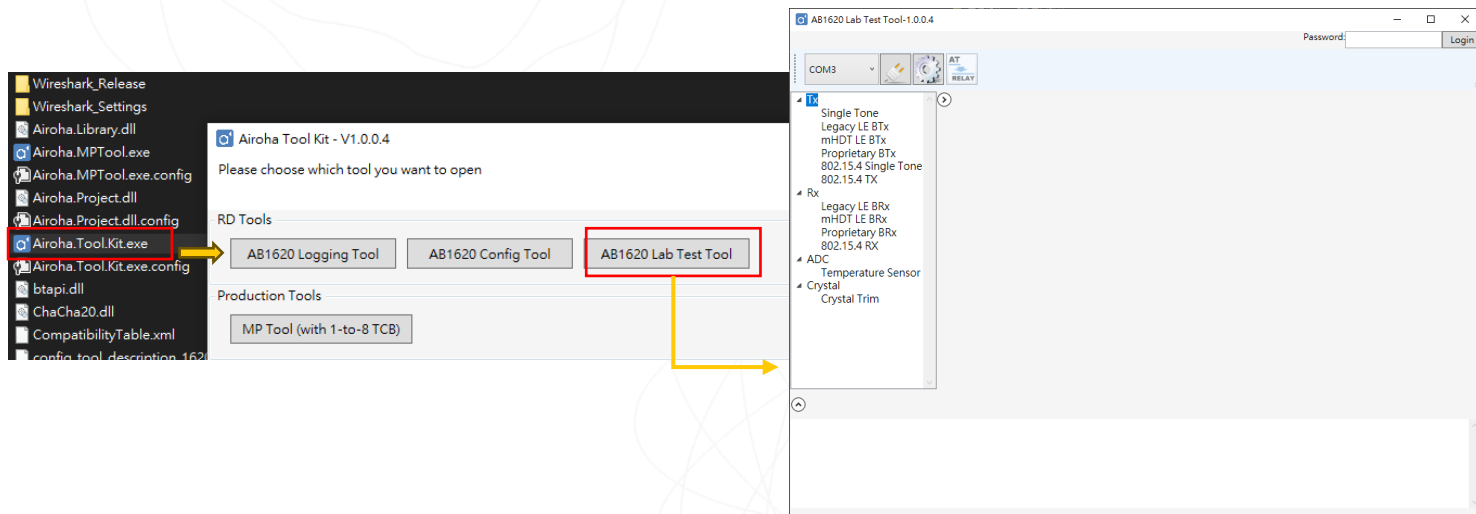

Lab Test Tool

- ❑ 1.Connect
- ❑ 2.Change to Relay Mode

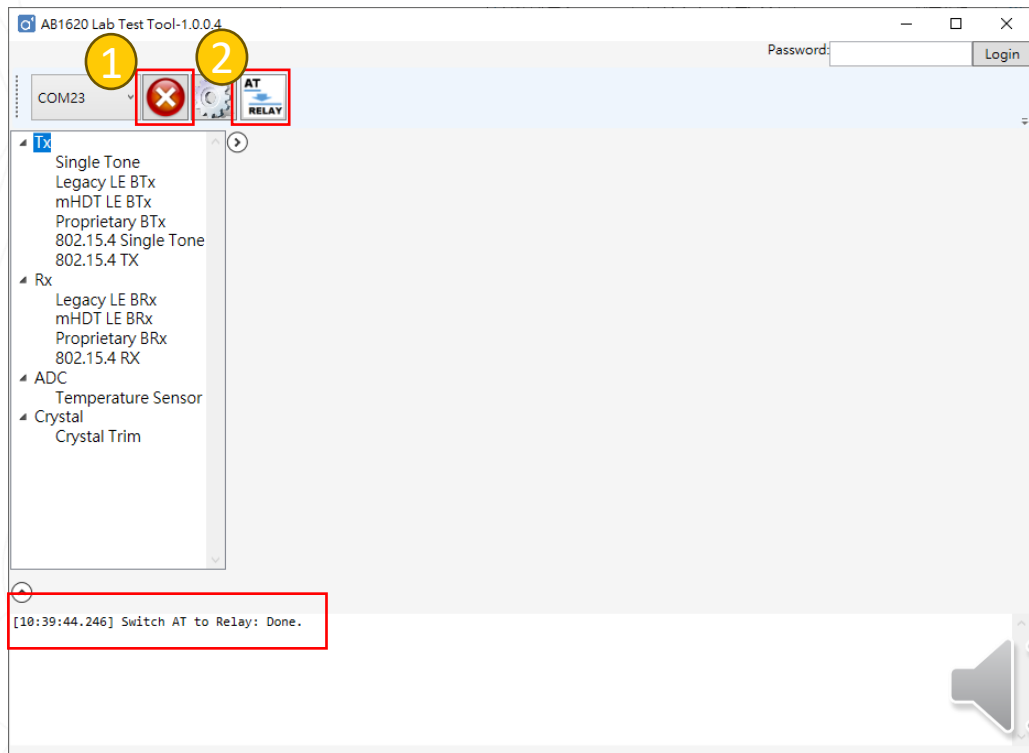



AIROHA




Config Tool



Update:

Config Tool

- ❑ SDK folder : [airoha/mcu/tools/pc_tools/atk/ab162x](#)
 - AB1620_Airoha_Tool_Kit(ATK)_v1.0.0.4.7z

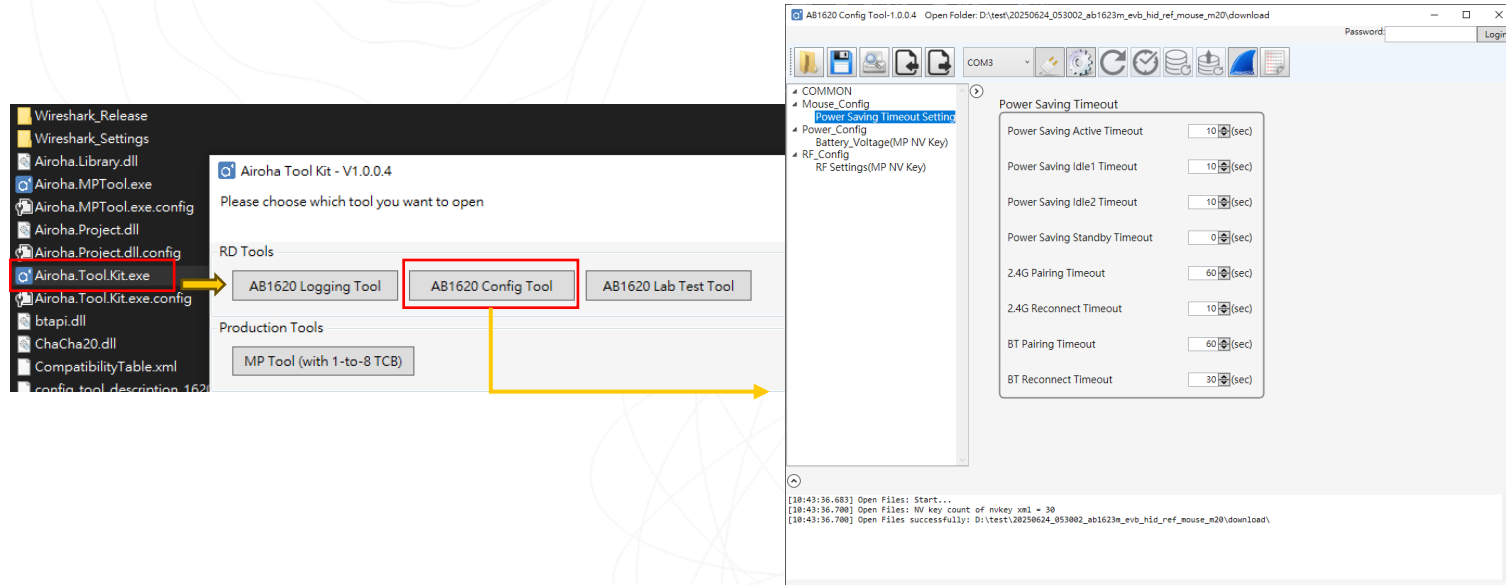



Thank you

Questions and Discussions



AIROHA

Business Unit & Product doodles (spec)



Bluetooth



GNSS



Broadband



Ethernet

