

改前 Before

改后 After

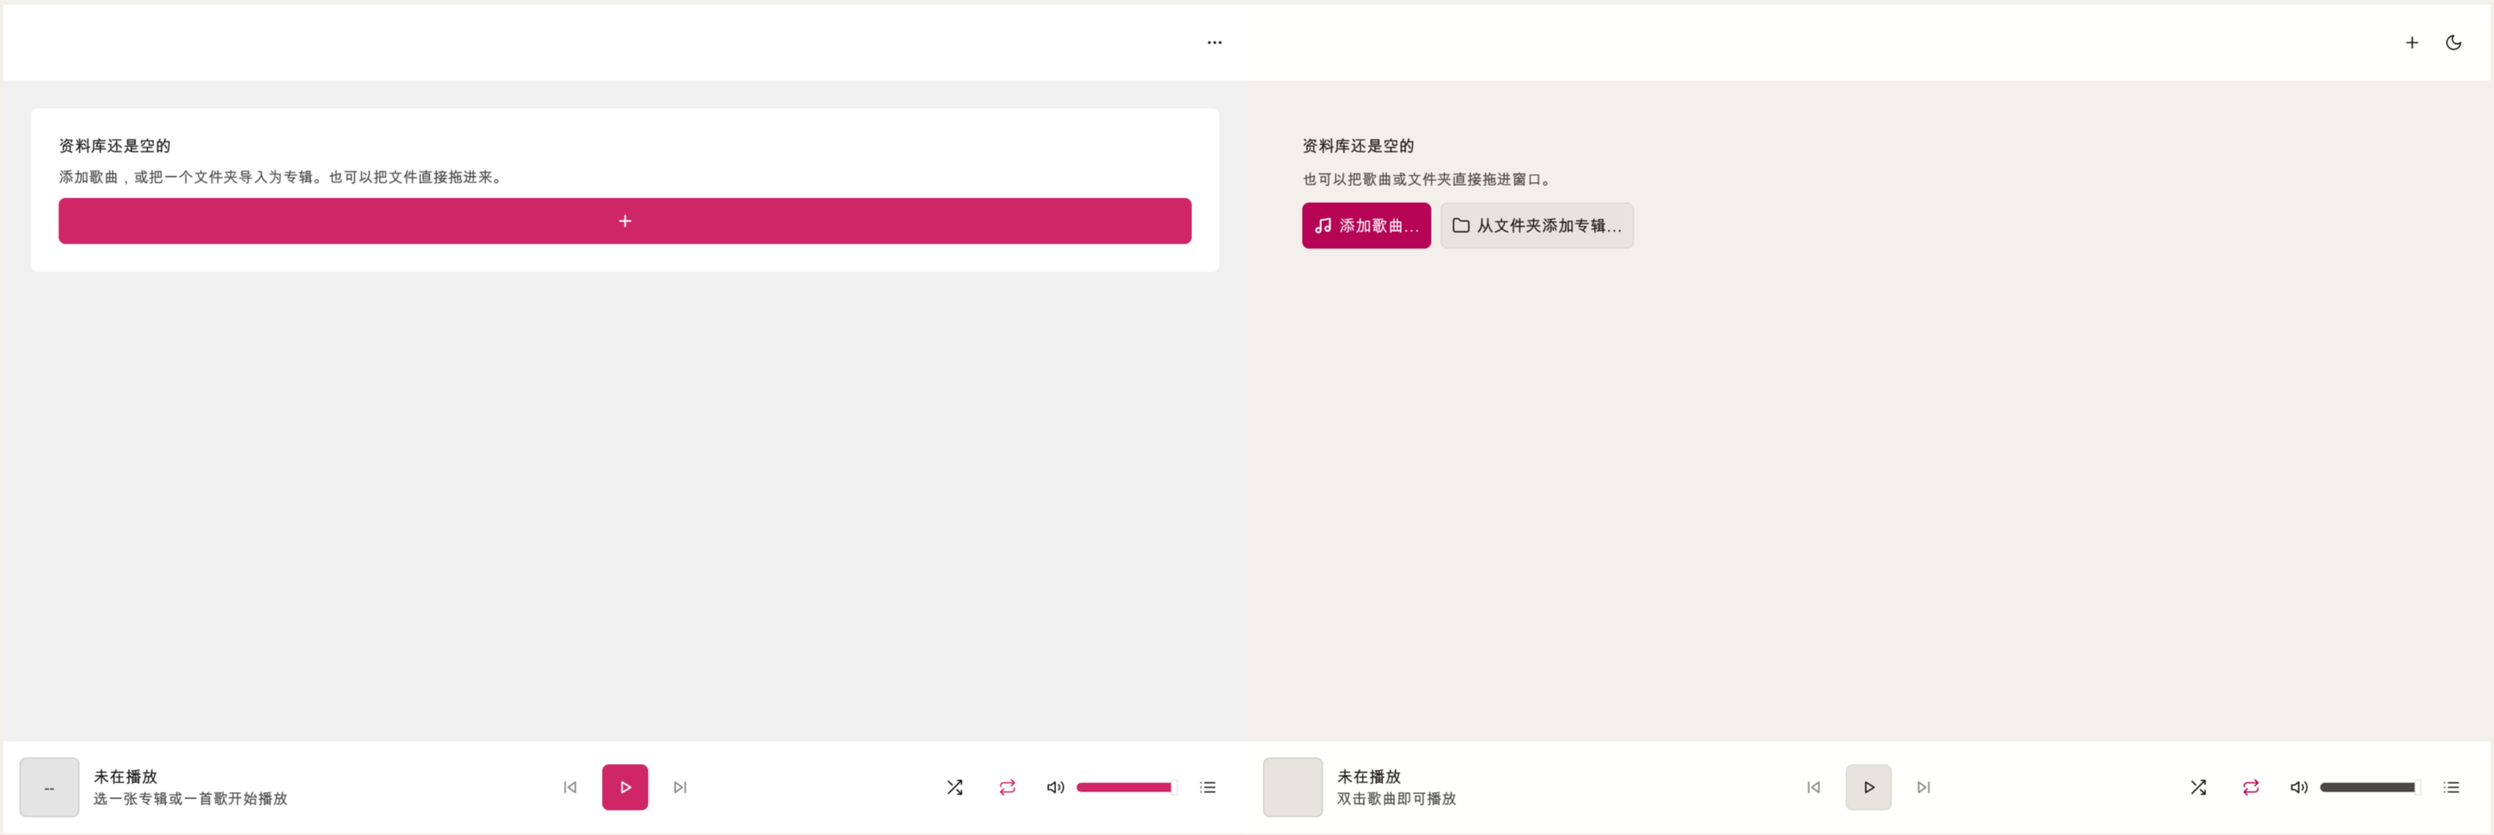

1


空资料库（新手第一屏）。改前：卡片里一整条没有文字的粉色“+”，点开才有菜单。改后：两个带文字的按钮直接给出两条路，拖拽提示放在按钮之后；去掉卡片，只保留一个强调色按钮；顶部“⋯”换成始终可见的“+ 添加音乐”和深浅色切换；还没有歌时底栏不再说“双击歌曲”。

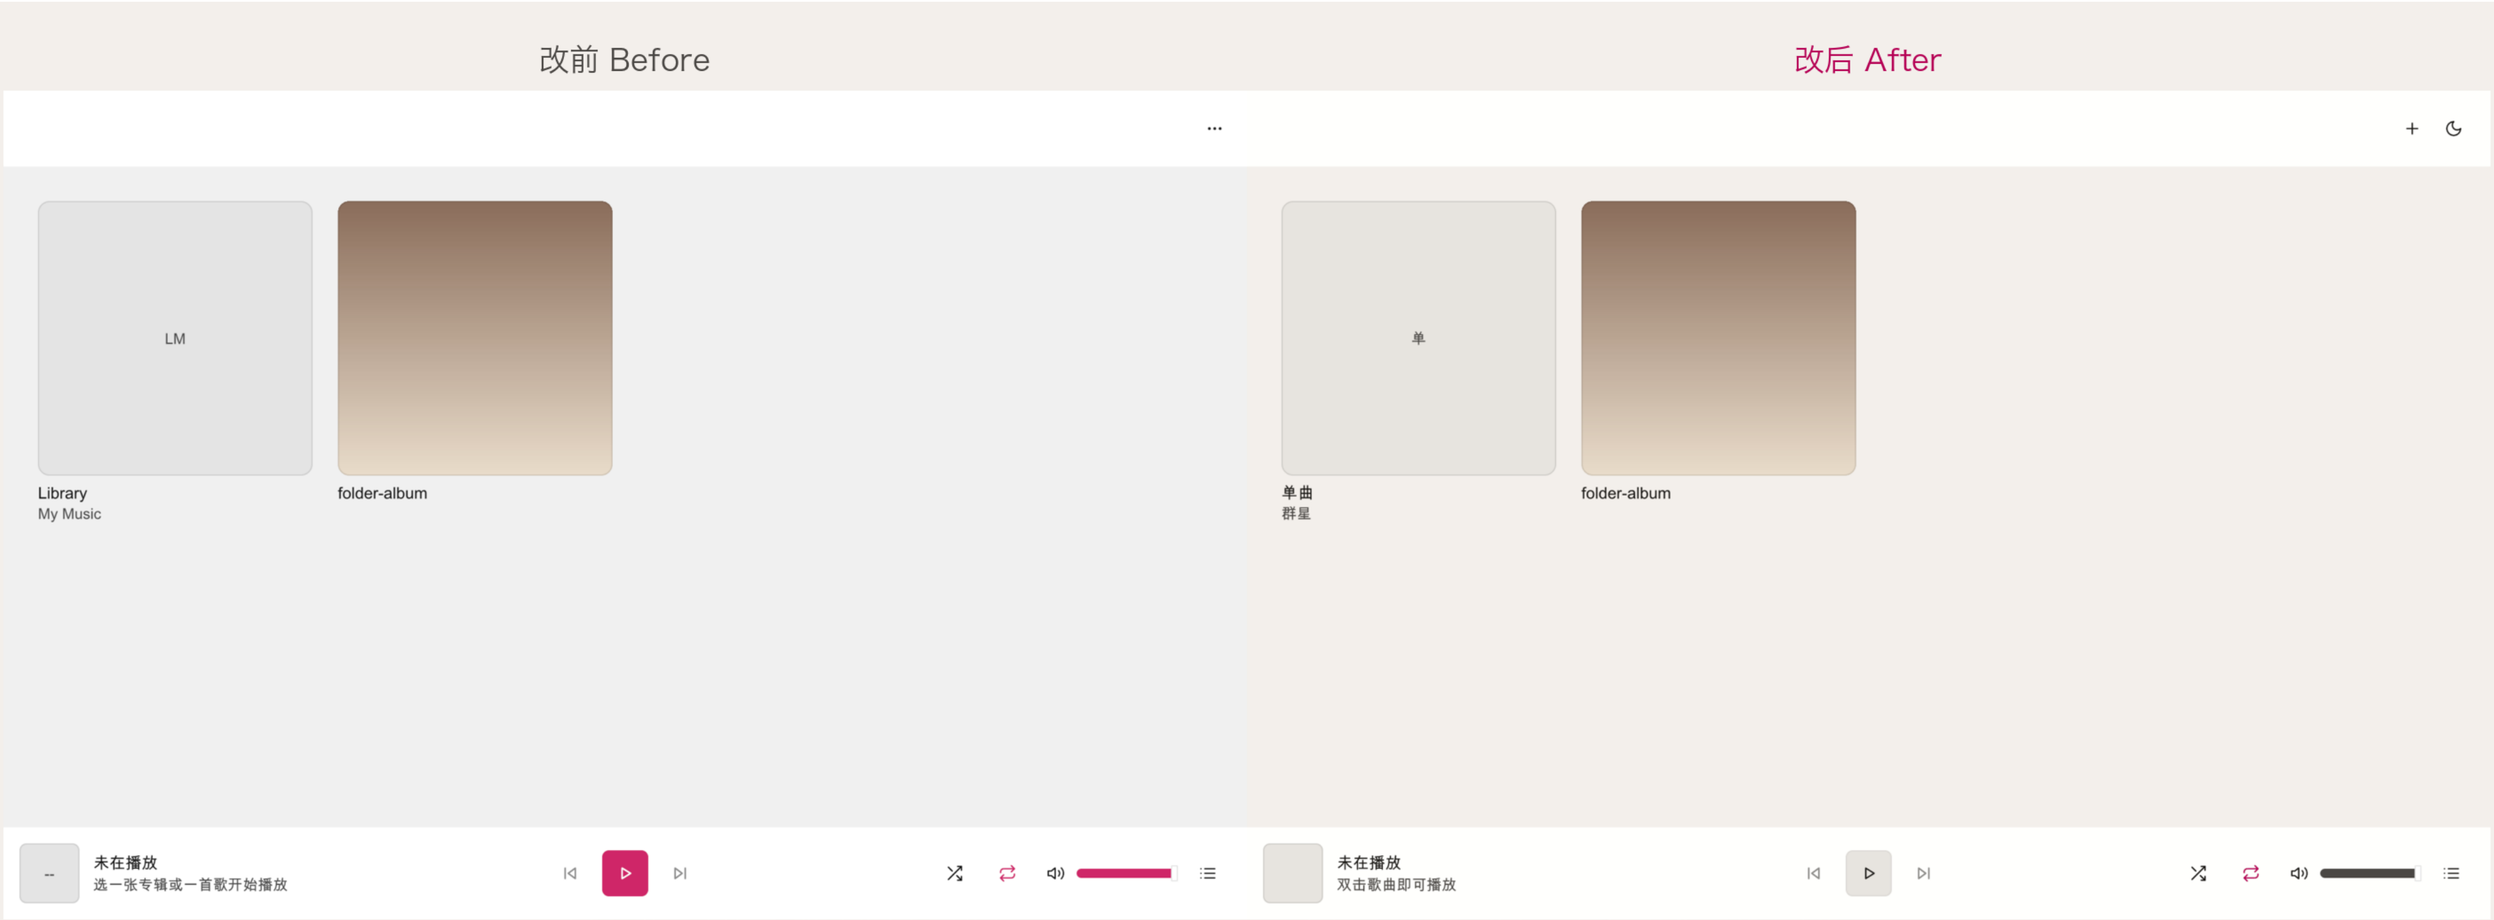

2 专辑网格。改前：零散歌曲专辑叫英文 Library / My Music，中文界面里也是英文。改后：单曲 / 群星（群星为 Apple 简体中文用词），首字占位按完整汉字取，旧资料库载入时自动改名。灰色全部改为偏暖的灰（OKLCH C≈0.007，h=75°）。


改前 Before

改后 After

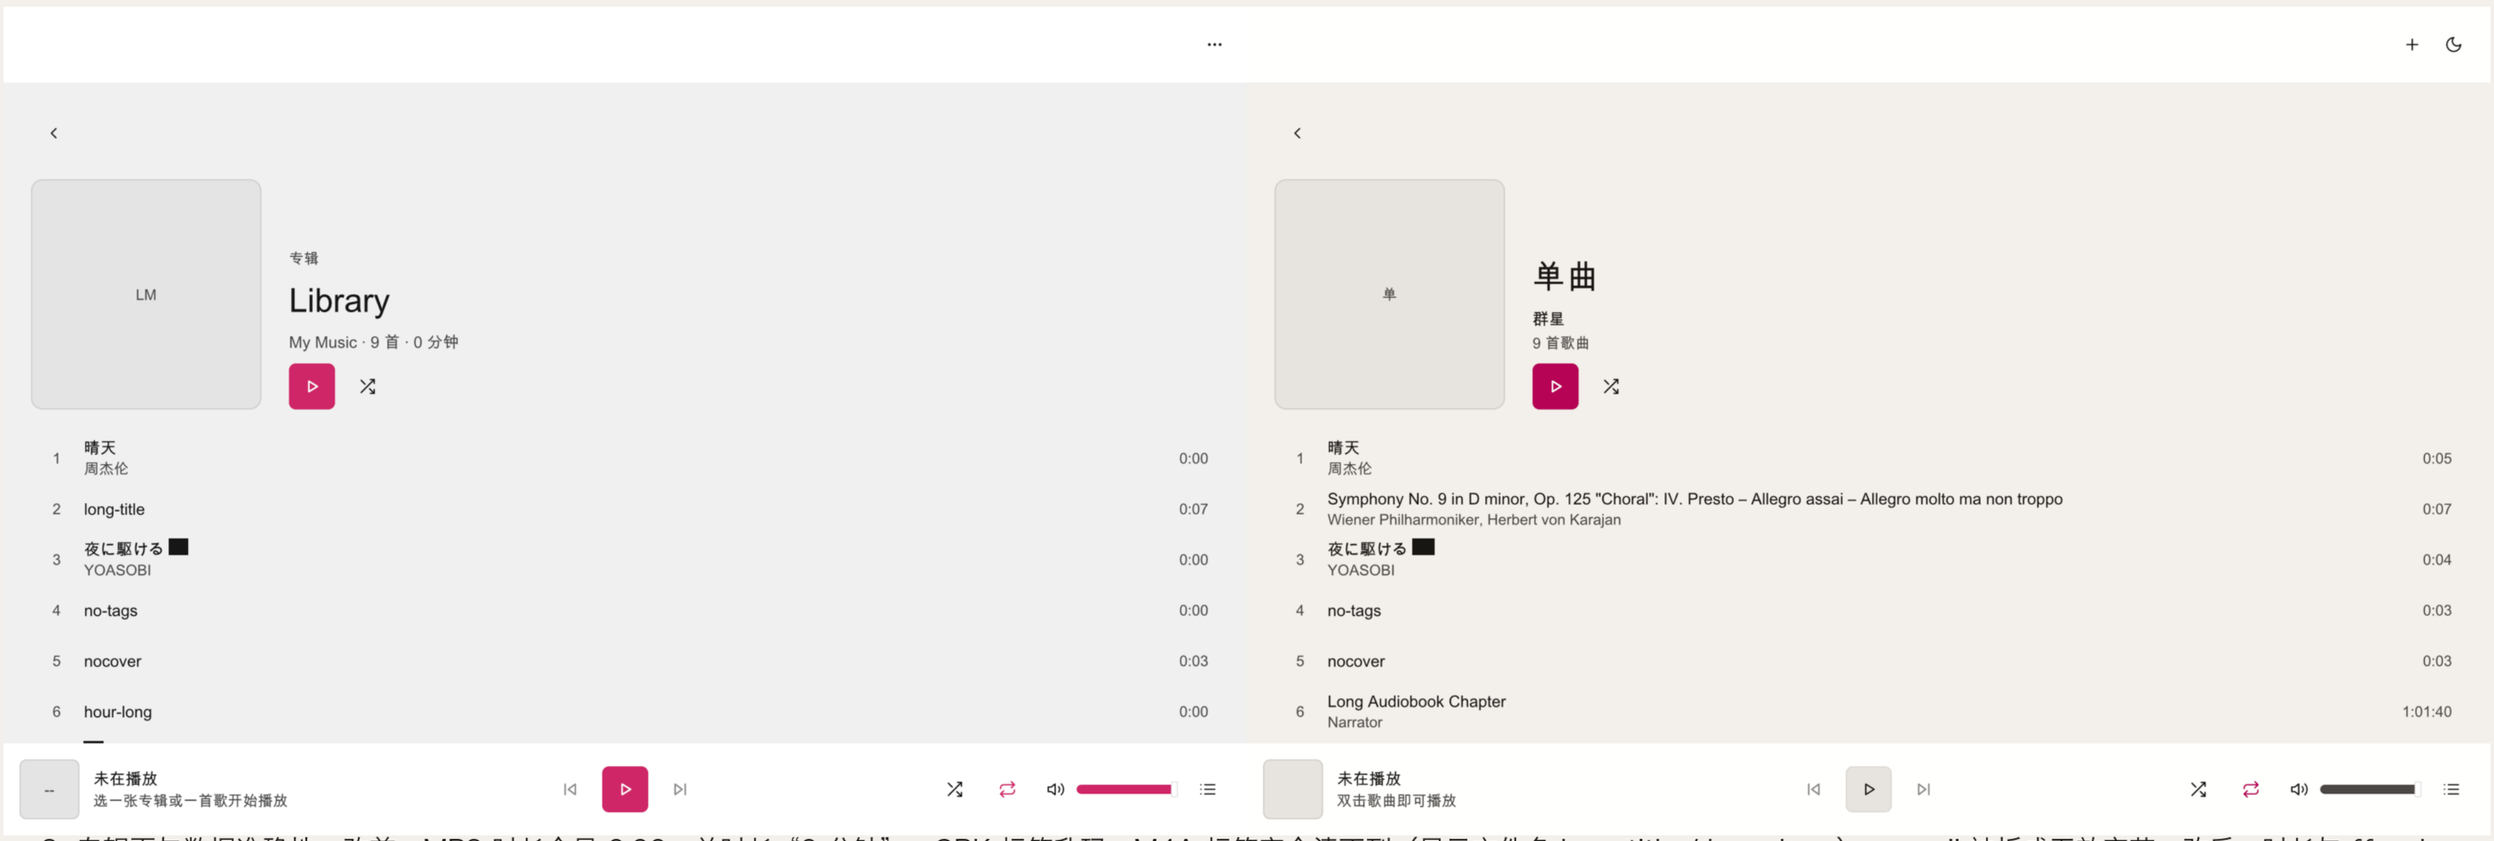


3 专辑页与数据准确性。改前：MP3 时长全是 0:00，总时长“0 分钟”；GBK 标签乱码；M4A 标签完全读不到（显示文件名 long-title / hour-long）；emoji 被拆成无效字节。改后：时长与 ffprobe 一致到毫秒（1:01:40 的有声书也对）；只要有一首时长未知，就只显示“9 首歌曲”，不给偏小的假总时长；去掉多余的“专辑”眉题。注：截图渲染器没有彩色 emoji 字体，方块在真机上显示为（无障碍树已读到正确字符）。

改前 Before

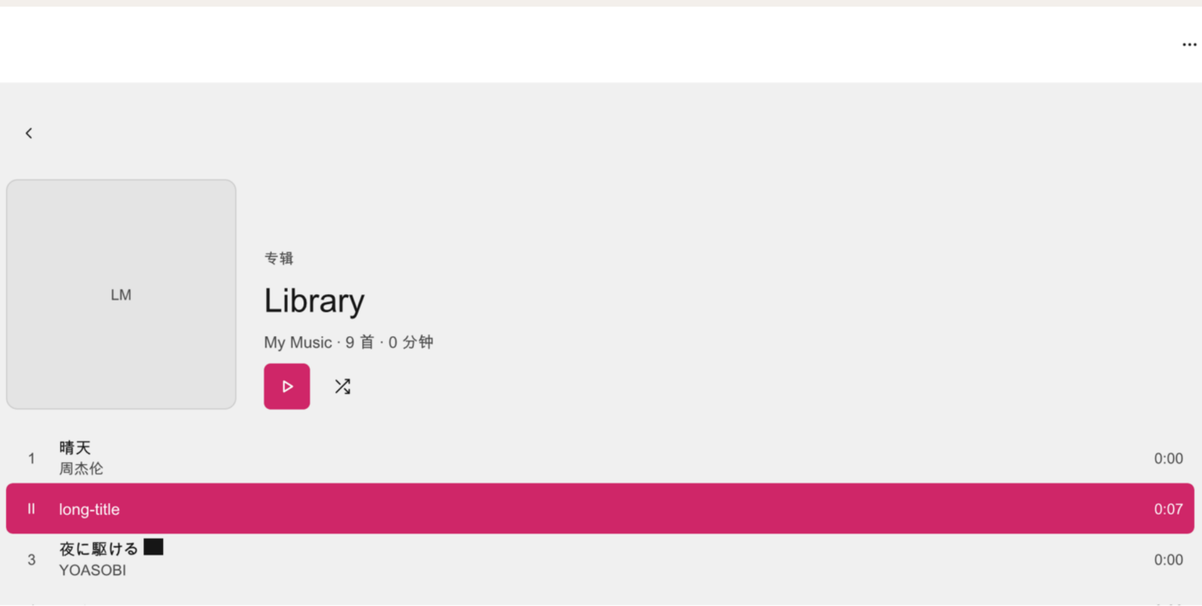


改后 After

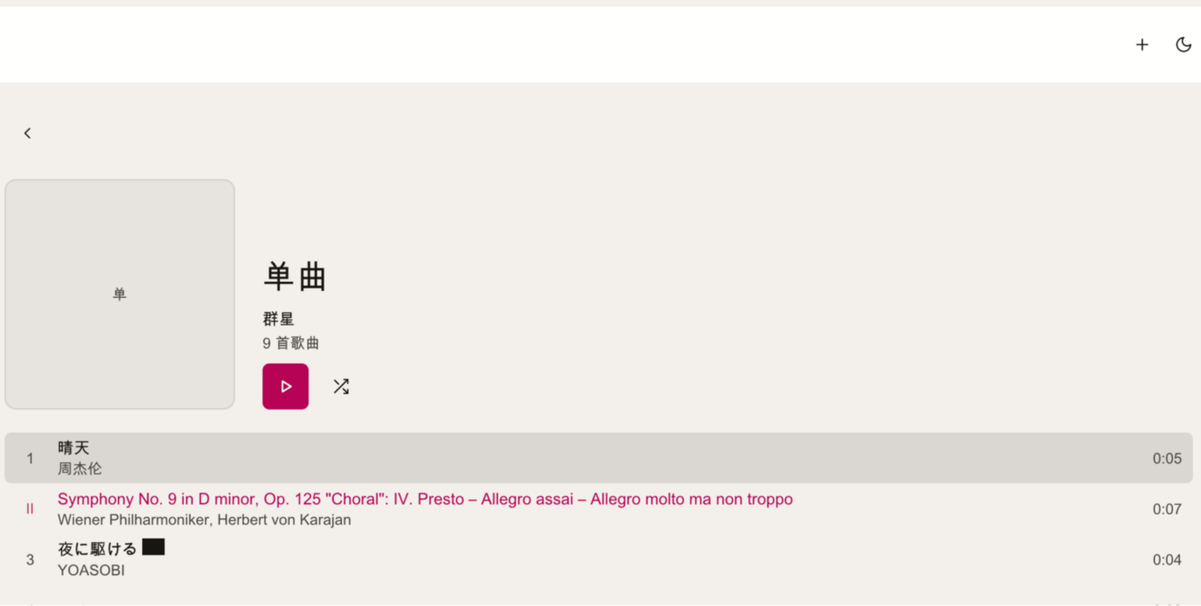


4 播放中 + 播放列表。改前：选中行整行刷满粉色，加上播放键、播放专辑、循环、音量条，一屏 5 处粉色。改后：选中是一层暖灰，粉色只标正在播放的那一首；底栏播放键和音量条改为中性色，页面只剩“播放专辑”一个强调色填充。“播放列表 · 1”改为标题 + 灰色“1 首歌曲”。

改前 Before

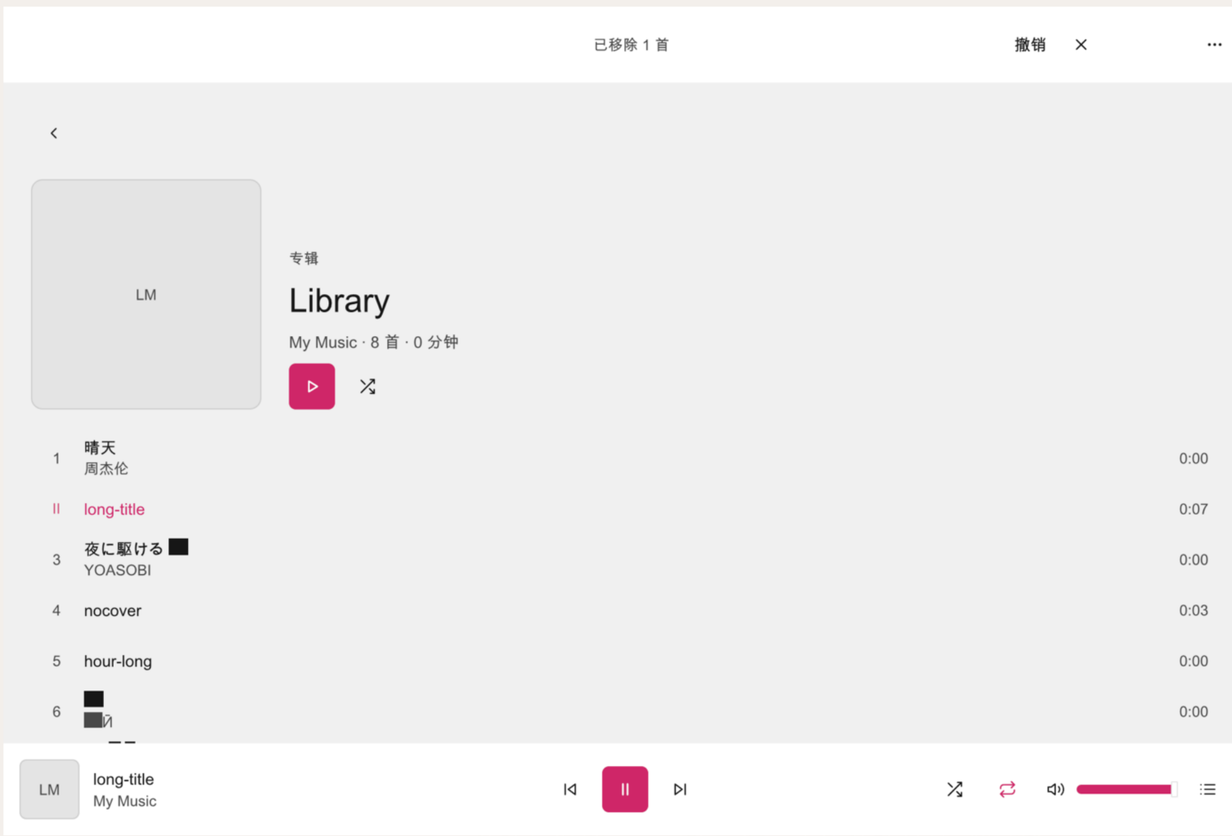


改后 After

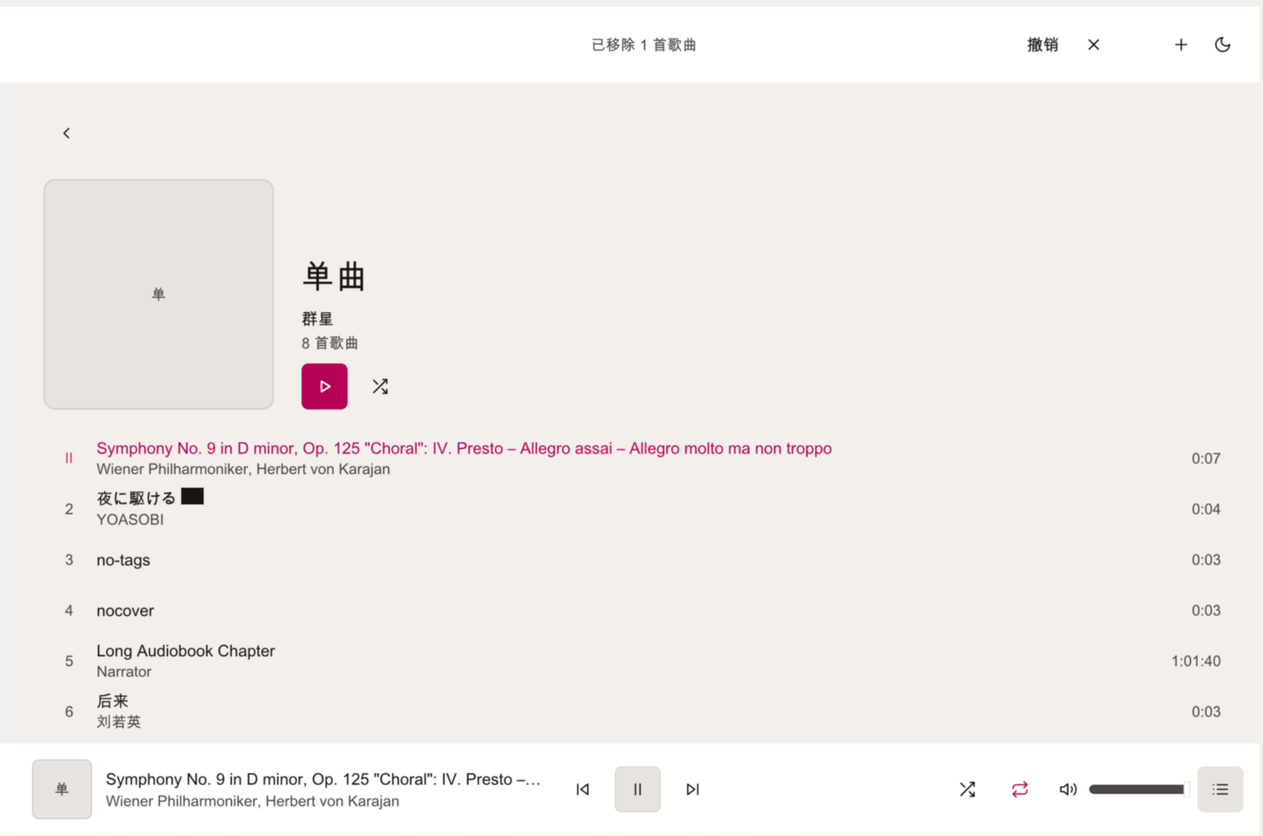


5 移除与撤销。不弹确认框，直接移除并给“撤销”：撤销时间从 6 秒延长到 10 秒（WCAG 2.2.1），新增 Z；文案改为“已移除 1 首歌曲”。导入时被跳过的文件现在会说原因：重复、格式不支持、复制失败、超过 240 首 / 32 张上限、空文件夹——以前要么无声无息，要么都被说成“复制失败”。

改前 Before


改后 After

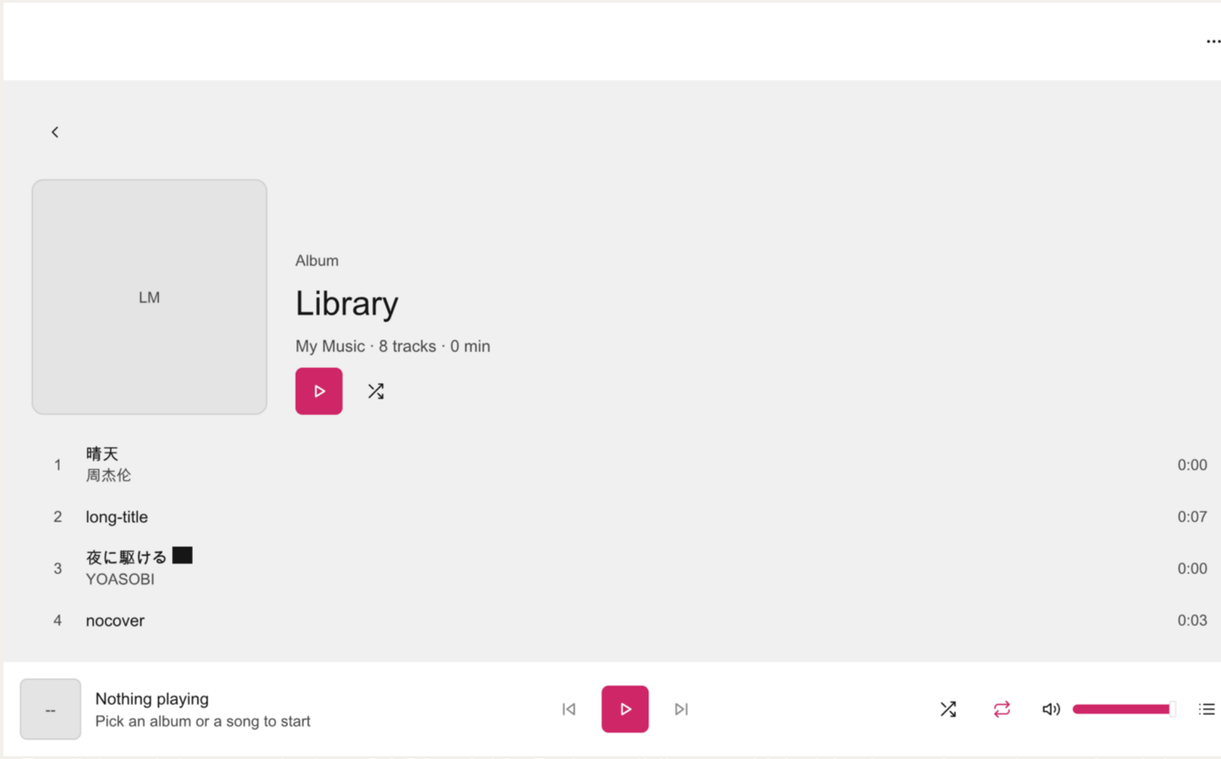

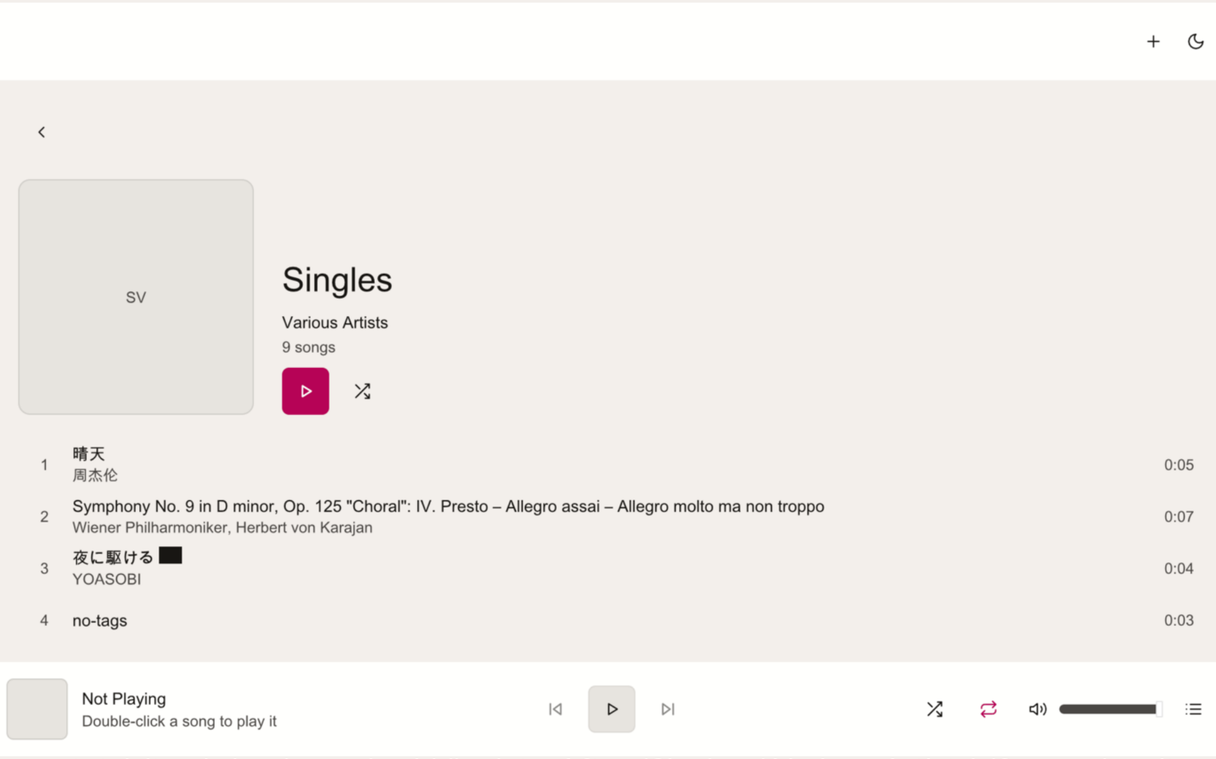


6 English, minimum window 1056×640. Before: 'Library / My Music ・ 8 tracks ・ 0 min' — a wrong total, 'tracks' vs 'songs', middle dots. After: 'Singles / Various Artists', '9 songs' on its own line in Apple Music phrasing; transport play and volume are neutral so Play Album is the one accent.

改前 Before

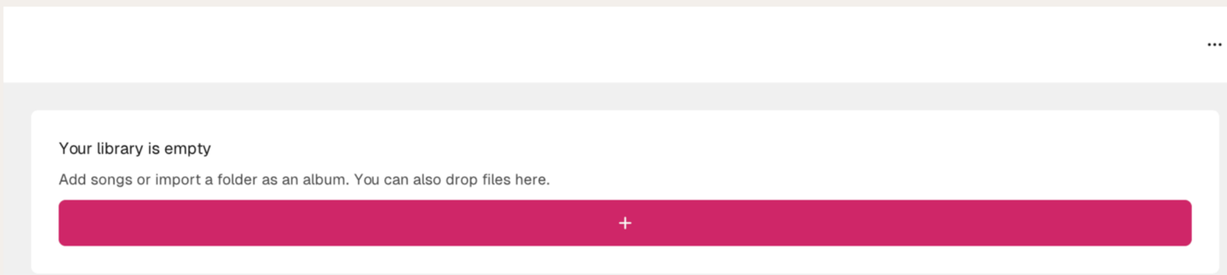

改后 After

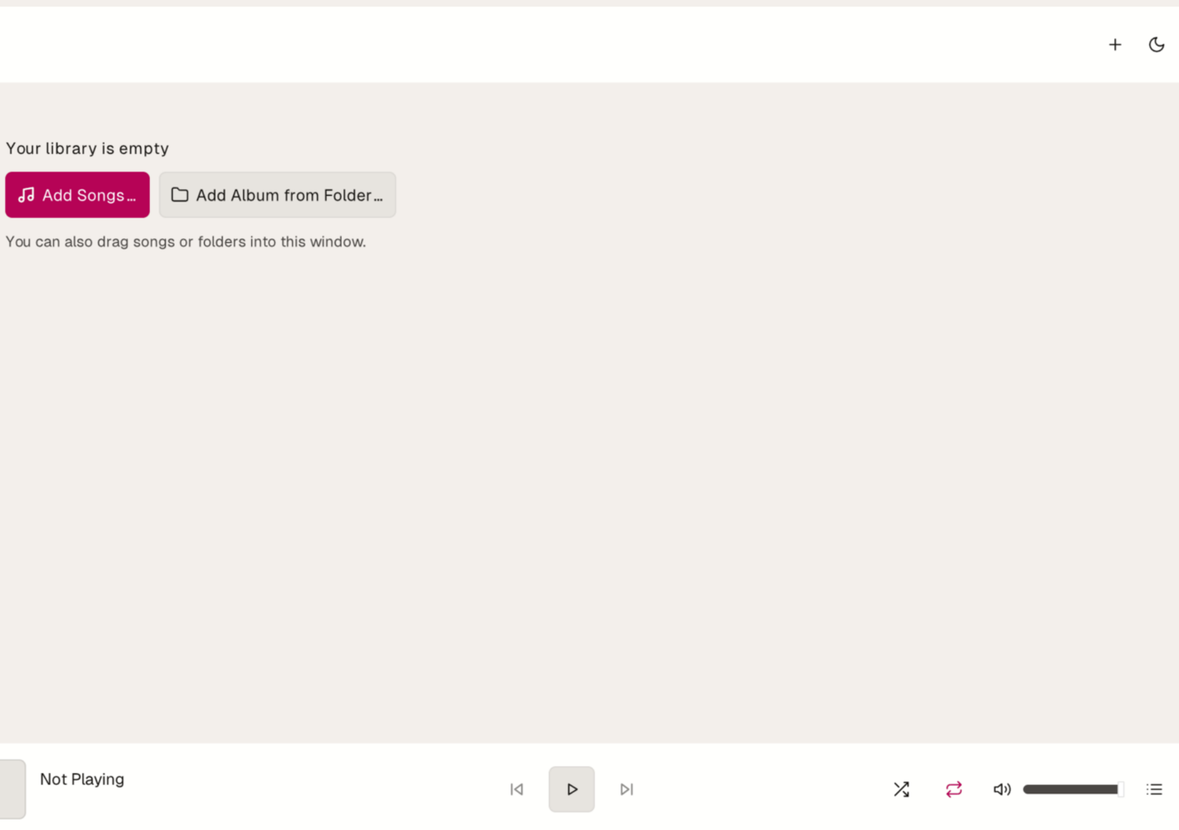

7 English empty state. 'Add Songs…' and 'Add Album from Folder…' (the ellipsis means a dialog follows, per Apple HIG). One verb, Add, everywhere; the old copy mixed Add and Import.

8 深色模式（改后）：暖炭灰；强调色换成更亮的 #f87098 配深色字，正文与粉色文字对比度均 ≥ 4.5:1；空播放列表告诉你下一步。

SV

Singles

Various Artists

9 songs

1	晴天 周杰伦	0:05
2	Symphony No. 9 in D minor, Op. 125 "Choral": IV. Presto – Allegro assai – Allegro molto ma non troppo Wiener Philharmoniker, Herbert von Karajan	0:07
3	夜に駆ける YOASOBI	0:04
4	no-tags	0:03
5	nocover	0:03
6	Long Audiobook Chapter Narrator	1:01:40
7	后来 刘若英	0:03
8	Café Olé Beyoncé	0:03
9	broken	

Queue

The queue is empty

Play an album, or right-click a song and choose Play Next.

Not Playing

Double-click a song to play it

9 1920×1080 外接屏（改后）。另测 1056×640、1470×956、1728×1117：网格按宽度自适应，无截断、无重叠。

