

HOLGA 135 TWIN LENS REFLEX CAMERA

MODELS HOLGA 135TLR & 135BC TLR

OPERATION INSTRUCTIONS

1. Parts of the Camera

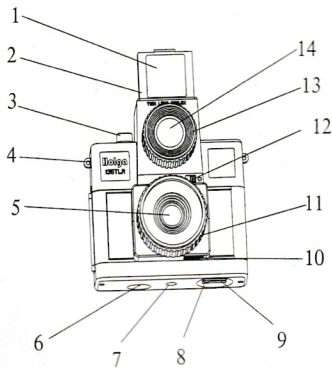


Fig. 1

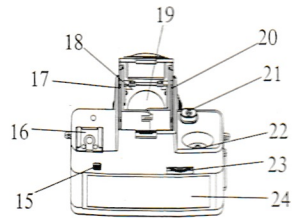


Fig. 2

- | | |
|---------------------------------|----------------------------------|
| (1) : View Finder Centre Flap | (2) : View Finder Cover |
| (3) : Shutter Release Button | (4) : Ring for Carrying Strap |
| (5) : Exposure Lens | (6) : Film Rewind Release Button |
| (7) : Tripod Mounting Hole | (8) : Film Rewind Knob |
| (9) : Focus Ring | (10) : Shutter Mode Selector |
| (11) : Aperture Switch | (12) : View Finder Object Lens |
| (13) : Bezel of Object Lens | (14) : View Finder Base |
| (15) : Latch for Back Cover | (16) : Hot Shoe (Receptacle) |
| (17) : View Finder Left Flap | (18) : View Finder Eyepiece |
| (19) : View Finder Right Flap | (20) : Frame Counter Window |
| (21) : Socket for Release Cable | (22) : Back Cover |
| (23) : Film Advance Gear | (24) : Back Cover |

2. Film to Use

The camera can accommodate all 135 format films. The use of films with exposure speed of ASA 100 on sunny days and ASA 400 on cloudy days or indoor occasions is recommended.

3. Film Loading

- Push the Latch for Back Cover upward to unlatch and let the Back Cover pop open. Pull out the Film Rewind Knob to clear the Film Compartment. (Fig. 3)
- Insert a new film roll into the Film Compartment and push the Film Rewind Knob back to engage the film roll. If the knob cannot be pushed back, turn it slowly until it can be done so.

- (c) Pull on the Film Tongue to pull out the film until the tip of the tongue reaches approximately, but not beyond, the hinge for the Back Cover.
- (d) Insert the tip of the Film Tongue into the slot on the Take-Up Spool. Press the film so that the tip of the film goes into the Take-Up Spool and the film becomes more or less flat. (Fig. 4)
- (e) Turn the Film Advance Gear slightly so that the Film Advance Sprockets will engage into the holes on the two sides of the film.
- (f) Snap the Back Cover back into place.
- (g) Turn the Film Advance Gear to advance the film until it cannot turn any further, then press the Shutter Release Button.
- (h) Repeat (g) again until the number "1" appears in the Frame Counter Window (Fig. 5). The camera is now ready for taking pictures.

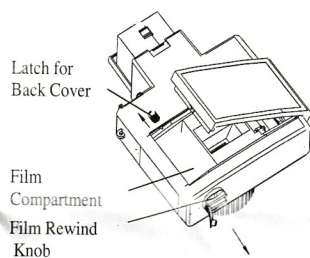


Fig. 3

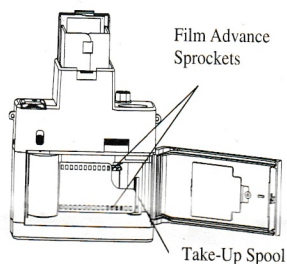


Fig. 4

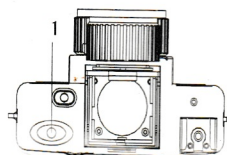


Fig. 5

4. View Finder - Selection of View Finding Mode

The camera is designed with two View Finding Modes - Vertical and Horizontal respectively - which can be easily and quickly switched between each other to provide the greatest flexibility to overcome the restrictions and challenges posed by various occasions that offer photographic opportunities.

The two modes can be selected through following steps -

4.1. Vertical View Finding

(a) Setting Up the Vertical View Finder

When the camera is first removed from the packaging box, the view finding mechanism is in the completely folded-up form as illustrated in Fig. 6 below.

To open up the View Finder, find the catch in the back (see Fig. 6 below) of the View Finder. Pull the catch upwards and let the whole mechanism spring open by itself (see Fig. 7) to expose the View Finder Eyepiece inside.

The vertical view finding mode is now ready. Simply look into the View Finder Eyepiece vertically from above (see Fig. 8) to find the view and compose the picture.

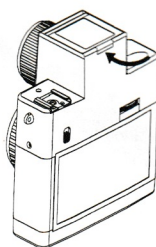


Fig. 6

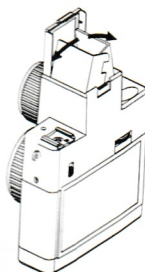


Fig. 7



Fig. 8

Point to Note:

Because of the difference between the vertical positions of the Exposure Lens and View Finder Object Lens, there is unavoidably some difference between the view as seen through the View Finder Eyepiece and the image that would be actually captured. Follow the guidelines below to reduce the difference as much as possible -

- (a) **When object distance is from 1 to 3m** - note that the small circular mark on the View Finder Eyepiece will be the centre of the image to be captured.
- (b) **When object distance is beyond 3m** - note that the view within the rectangular mark on the View Finder Eyepiece will be the image to be captured.

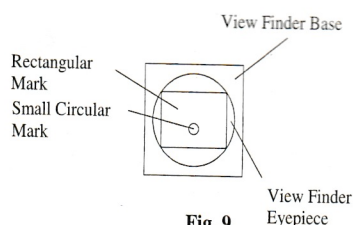


Fig. 9

(b) **Closing the Vertical View Finder**

The various parts of the View Finder has to be closed in the following sequence (see Fig. 10) –

- (i) Press the View Finder Right Flap from outside to fold it;
- (ii) Press the View Finder Left Flap to fold it on top of the right flap;
- (iii) Press down the View Finder Cover until its catch is locked into place.

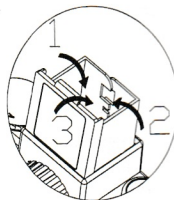


Fig. 10

4.2. Horizontal View Finding

(a) **Setting Up the Horizontal View Finder**

- (i) Open up the Vertical View Finder first as described in **Section 4.1. (a)** above.
- (ii) Press down the View Finder Central Flap **gently** all the way until its top edge is locked in place by the notch on View Finder Right Flap, as can be confirmed by a “click” sound. (see Fig. 11 below)
- (iii) With the Central Flap locked down, the central part of the View Finder Cover is now fully open. Horizontal view finding can now be done through the rectangular hole formed by the View Finder Left and Right Flaps together. (see Fig. 12 below)

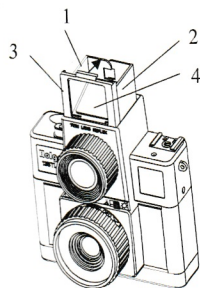


Fig. 11

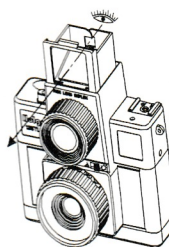


Fig. 12

(b) **Closing the Horizontal View Finder**

- (i) Pull **gently** both the View Finder Left and Right Flaps outward a little bit to unlatch and let the View Finder Central Flap spring back to its upright position.
- (ii) Carry out the steps as described in **Section 4.1. (b)** To close the view finder.

5. Focusing

Although this camera is basically a fixed focus camera, it still offers four choices of object distances. There are four symbols on the Focus Ring (Fig. 14 below) for selecting the following object distances -

- (a)  = 1m or 3.25 ft.
- (b)  = 2m or 6.50 ft.
- (c)  = 6m or 20.00 ft
- (d)  = 10m or 33.00 ft.

More precise setting for object distances can be achieved by setting the Focus Ring at positions in between two symbols.

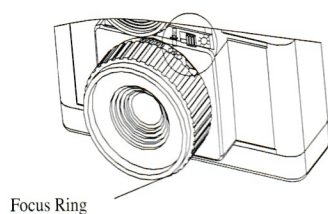


Fig. 13

Aperture Selection Switch

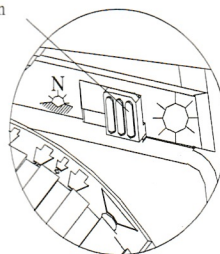


Fig. 14

6. Choice of Aperture

By setting the Aperture Selection Switch (Fig. 13 above), two choices are available for selection as follows -

- (a)  = f/11 for use on sunny days; and
- (b)  = f/8 for use on cloudy days.

7. Picture Taking

- (a) Make sure that the lens cover is removed.
- (b) Unless it is desired to manually control the exposure time (see section on Night Time Exposure without Flash below), always set the Shutter Mode Selector to the "N" position.
- (c) Set the aperture according to the weather/environmental conditions :-
 - Sunny symbol for sunny outdoor occasions; and
 - Flash/Cloudy symbol for cloudy outdoor or insufficiently lit-up indoor occasions.
- (d) Estimate the object distance and turn the Focus Ring to set the object distance accordingly.

- (e) Look through the View Finder and compose the picture. Then press down the Shutter Release Button gently without jerking the camera to capture the image. The movement of the shutter will make a clicking sound.
- (f) Turn the Film Advance Knob slowly until the number for the next frame appears in the centre of the Frame Counter Window. The camera is now ready for taking the next picture.

8. Night Time Exposure without Flash - Use of "B" Exposure Setting

This function is for taking extended-exposure pictures at night time or indoors without using flash or to create special effects. The steps to be taken are as follows -

- (a) Mount the camera on the top of a tripod. This is necessary to avoid unnecessary motion of the camera, which can occur even due to the breathing action of the photographer, during the extended exposure.
- (b) Set the Shutter Mode Selector to the "B" position.
- (c) Push down the Shutter Release Button very gently and keep it down for 1 to 5 minutes, as desired. Then, release the button to close the shutter to complete the picture taking cycle.
- (d) It is strongly recommended to use a shutter cable (available separately as an option) to control the opening/closing of the shutter in order to avoid unnecessary motion of the camera during the exposure period. See Section 12 below.

9. Multiple-Exposure Effect

As film is advanced manually, this camera can help achieve special effects through multiple exposure by NOT advancing the film after a frame has been exposed. Each depression of the Shutter Release Button will bring about another exposure. This feature will provide more latitude for the photographer to try out his/her imagination.

To achieve multiple exposure is very easy - simply do NOT advance the film after a picture has been taken. This can be done repeatedly for as many times as one wants. However, it must be noted that if the lighting of the environment is bright, multiple exposure may cause the film to be overly exposed.

10. Removal of Film

When a film roll is finished, take following steps to remove it from the camera -

- (a) To avoid inadvertent double-exposure of already taken pictures, put on the Lens Cap for protection first.
- (b) Push down the Film Rewind Release Button on the bottom of the camera. (Fig. 15)

- (c) Flip out the Film Rewind Handle and turn it in the direction of the arrow indicated on the handle (Fig.16). A sense of tension would be felt when turning the handle to rewind the film. Keep turning the knob until the sense of tension disappears, indicating that the whole film has already been rewound.
- (d) Pull out the Film Rewind Knob to disengage the film rewind mechanism from the film and then push up the Latch for Back Cover to unlatch and make the Back Cover pop open. (Fig. 17)
- (e) Remove the rewound film roll from the Film Compartment.

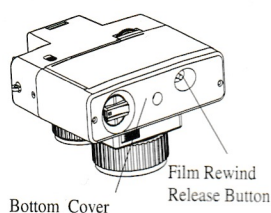


Fig. 15

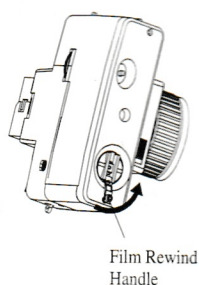


Fig. 16

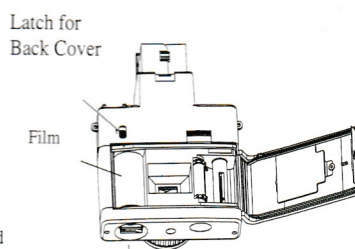


Fig. 17

11. Use of Flash

When taking pictures at night or in dark environments, it is necessary to install a flash unit (a model Holga-160 is available separately as an option). Simply insert the hot shoe of the flash unit into the Hot Shoe (Receptacle) on the top of the camera and the camera is ready to be operated with the flash.

12. Use of Shutter Release Cable

When extended exposure is desired or when even any slight jerking of the camera during the depression of the Shutter Release Button is to be avoided, it will be necessary to install a Shutter Release Cable (model SC-30), which is available separately as an option. To install the optional Shutter Release Cable, simply screw the screw-threaded end of the cable into the Socket for Shutter Release Cable.

13. Some Suggestions

- (a) Always put on the Lens Cap when the camera is not in use.
- (b) Always check to see that the lens cap has been removed before taking a picture.
- (c) Always take pictures with the sun behind the camera.
- (d) Always hold the camera steadily and firmly and use a tripod where necessary.
- (e) Always press the Shutter Release Button gently to avoid jerking the camera and press it all the way down until the clicking sound is heard.
- (f) Always remember to advance the film after taking a picture, except for multiple exposures.

- (g) Always load or remove films in a dark place.
- (h) Always clean the lens with a piece of soft and smooth cloth only.
- (i) Always use a flash unit when light is insufficient.
- (j) Never take pictures with an object distance of less than 1 meter (3.25ft).
- (k) Never touch the Latch for Back Cover if the film inside is not yet fully rewound to avoid inadvertently opening the Back Cover to cause over-exposure to images taken.

14. Specifications

Type	135
Lens	Optical lens, f/8, 47mm
Shutter	Leaf shutter, speed 1/100sec.
Film to be Used	Suitable for 135 type color or black/white films of ASA 100 /ISO 21 or ASA 400/ISO 27 speed
View Finder	Vertical and Horizontal
Focusing	Adjustable
Dimensions	122 x 118 x 69.5mm
Weight	Approx. 230g
Accessories Included	1 Piece of Carrying Strap

15. Optional Accessories - Lens/Filter Holder for Lens/Filter of Special Effects

There is a Lens/Filter Holder (model LFH-120/135) available as an optional accessory. Lenses/filters for different effects, also available as optional accessories, can be inserted into the Lens/Filter Holder. The Lens/Filter Holder is then installed by being slid over the bezel of the lens of the camera.

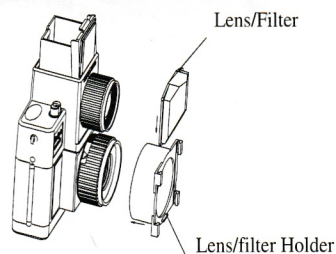


Fig. 18

There are several types of lenses/filters available as optional accessories as follows –

(a) **Color Filters (CFS-120/135)**

Four different filters are available as a set for changing color temperatures as follows –

- Blue To raise the color temperature e.g. to simulate moon light when taking pictures in the country side.
- Red To reduce the absorption of green and yellow lights.

Yellow	To absorb blue light to correct the sensitivity of full color films to bluish and purple lights.
Light Orange	To lower the color temperature to remove the cold tone of flashes to accomplish warmer lighting effects.

(b) Soft Surround Filters (SSFS-120/135)

These filters have a clear circular area in the middle and the remaining areas frosted. They are for standing out the object to be taken to make the theme of the picture more prominent. Filters of the four colors blue, red, orange and grey are available as a set.

(c) Split-Image Lenses (SILS-120/135)

Each set is made up of three lenses as follows –

Quintuple Image	Five images splitting.
Horizontal Triple Image	Three images lined up horizontally.
Triangular Triple Image	Three images arranged in a triangular fashion.

(d) Color Gradation Filters (CGFS-120/135)

Half of the filter is clear and the other half is colored. The colored half gradates into the clear half where the two halves meet. These filters are for emphasizing the color of the object to be photographed, strengthening the blue sky, suppressing excessive exposure, etc. Filters of the four colors of red, yellow, blue and grey are available as a set.

(e) Dual Color Filters (DCFS-120/135)

The filter is made up of two halves of two different colors. It provides the photographer with more room for color manipulations to generate effects which are limited only by the photographer's own imagination. There are six filters in a set with the color combinations of red + yellow, red + blue, red + grey, yellow + blue, yellow + grey and blue + grey respectively.