
CUSTOMER GUIDE

LINK COMMANDER

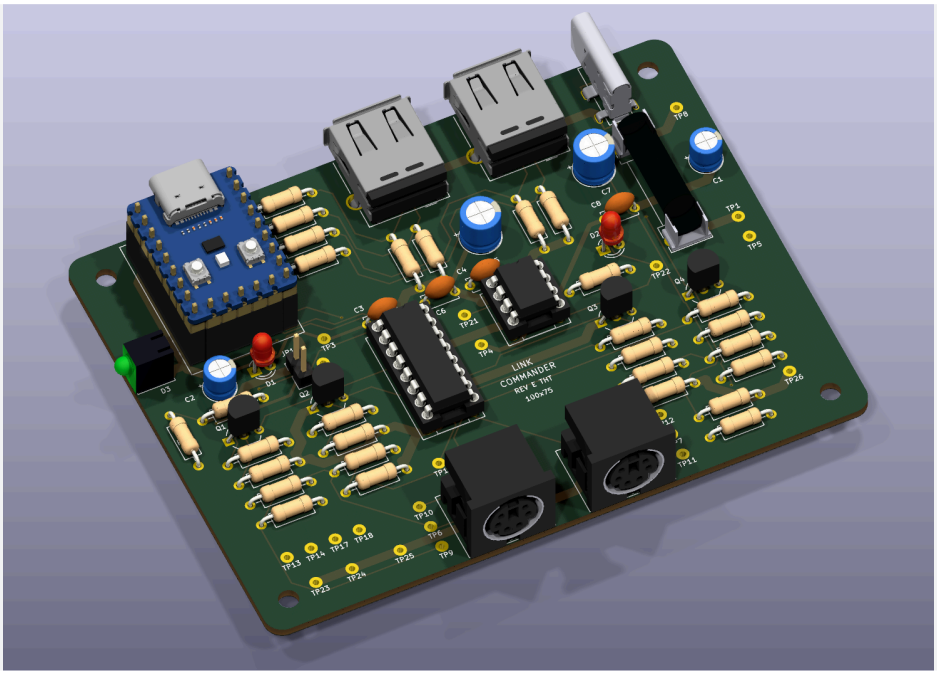

Modern inputs. A classic computer.

An RP2040-based keyboard and mouse interface being developed for the Commander X16. The current board revisions share a compact layout and a common snap-fit enclosure.

Engineering prototype

Hardware is in development. The CAD has passed saved connectivity and design-rule checks; a working bridge firmware release and physical functional testing are still required. This guide is a project reference, not a claim of tested peripheral compatibility.

02 / LINK COMMANDER

Know your board

Front and rear

Front: two six-pin mini-DIN PS/2 sockets, for keyboard and mouse connections to the target computer. Use straight-through six-pin male-to-male PS/2 cables; the historical seven-pin DIN cable does not apply.

Rear: two USB-A inputs and the board USB-C power connector. The removable RP2040 module also has its own inset USB-C programming socket; it is not the rear power input.

Shared mechanical layout

Rev E: through-hole carrier components with socketed chips and leaded passives. Rev F: SMT components with through-hole connectors. Both use a 100 × 75 mm PCB outline. The current shell is 113.6 × 88.6 × 30 mm.

A green power indicator sits at the board edge. It indicates power, not firmware readiness or USB compatibility.

Power and service

Use a regulated 5 V supply through the rear USB-C power connector. Do not apply a higher voltage. Current requirements depend on the actual peripherals and must be verified during prototype testing.

Disconnect power and cables before opening the case or moving the module. Remove JP1 before connecting the module’s USB programming supply as required by the board service instructions. Do not assume that combining both USB power sources is safe.

What is still being tested

Connector and cable fit, exact module dimensions, printed latch fit, USB behavior, temperatures and receiver compatibility need physical validation. Wireless support means compatible external USB receiver dongles; there is no onboard radio.

Print the enclosure

Download the free enclosure files from the Link Commander enclosure listing on roddy.world. Its separate PDF explains print orientation, fit coupons and assembly. Contact support@roddy.world with your revision and question before making changes you are unsure about.