
CUSTOMER GUIDE

LINK COMMANDER

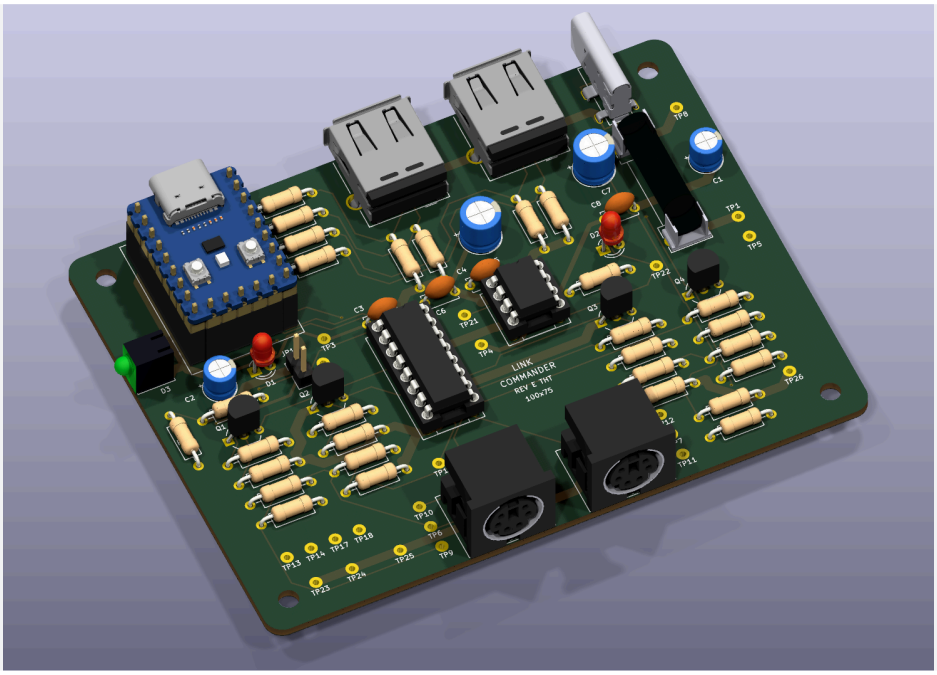

Modern inputs. A classic computer.

An RP2040-based keyboard and mouse interface being developed for the Commander X16. The current board revisions share a compact layout and a common snap-fit enclosure.

Engineering prototype

Hardware is in development. The CAD has passed saved connectivity and design-rule checks; a working bridge firmware release and physical functional testing are still required. This guide is a project reference, not a claim of tested peripheral compatibility.

02 / LINK COMMANDER

Know your board

Front and rear

Front: two six-pin mini-DIN PS/2 sockets, for keyboard and mouse connections to the target computer. Use straight-through six-pin male-to-male PS/2 cables; the historical seven-pin DIN cable does not apply.

Rear: two USB-A inputs and the board USB-C power connector. The removable RP2040 module also has its own inset USB-C programming socket; it is not the rear power input.

Shared mechanical layout

Rev E: through-hole carrier components with socketed chips and leaded passives. Rev F: SMT components with through-hole connectors. Both use a 100 × 75 mm PCB outline. The current shell is 113.6 × 88.6 × 30 mm.

A green power indicator sits at the board edge. It indicates power, not firmware readiness or USB compatibility.

Power and service

Use ONLY the rear USB-C power socket marked 5V POWER, with a qualified regulated 5 V supply. Do not use the USB-C connector on the internal RP2040 module as a power inlet. Never apply a higher voltage.

The planned assembled edition arrives with the module installed and programmed and JP1 fitted for normal operation. Customers do not need to program, remove or connect directly to the module, or change a jumper.

The module USB and JP1 are internal service features. Do not open the case or alter them for normal use. Disconnect all power before connecting or disconnecting PS/2 cables. Contact RODDY for service.

What is still being tested

Connector and cable fit, exact module dimensions, printed latch fit, USB behavior, temperatures and receiver compatibility need physical validation. Wireless support means compatible external USB receiver dongles; there is no onboard radio.

Print the enclosure

Download the free enclosure files from the Link Commander enclosure listing on roddy.world. Its separate PDF explains print orientation, fit coupons and assembly. Contact support@roddy.world with your revision and question before making changes you are unsure about.