
RONE PLUGINS

USER MANUAL

PROFESSIONAL MEASUREMENT SUITE

RONE Analyzer

A DIGICheck-style measurement suite: 30-band third-octave analyser with reference corridors, vectorscope with phosphor afterglow, level meters, EBU R128 loudness and a waveform scope locked to the bar, reading ASIO, loopback, a live input, a file or your DAW's master bus.

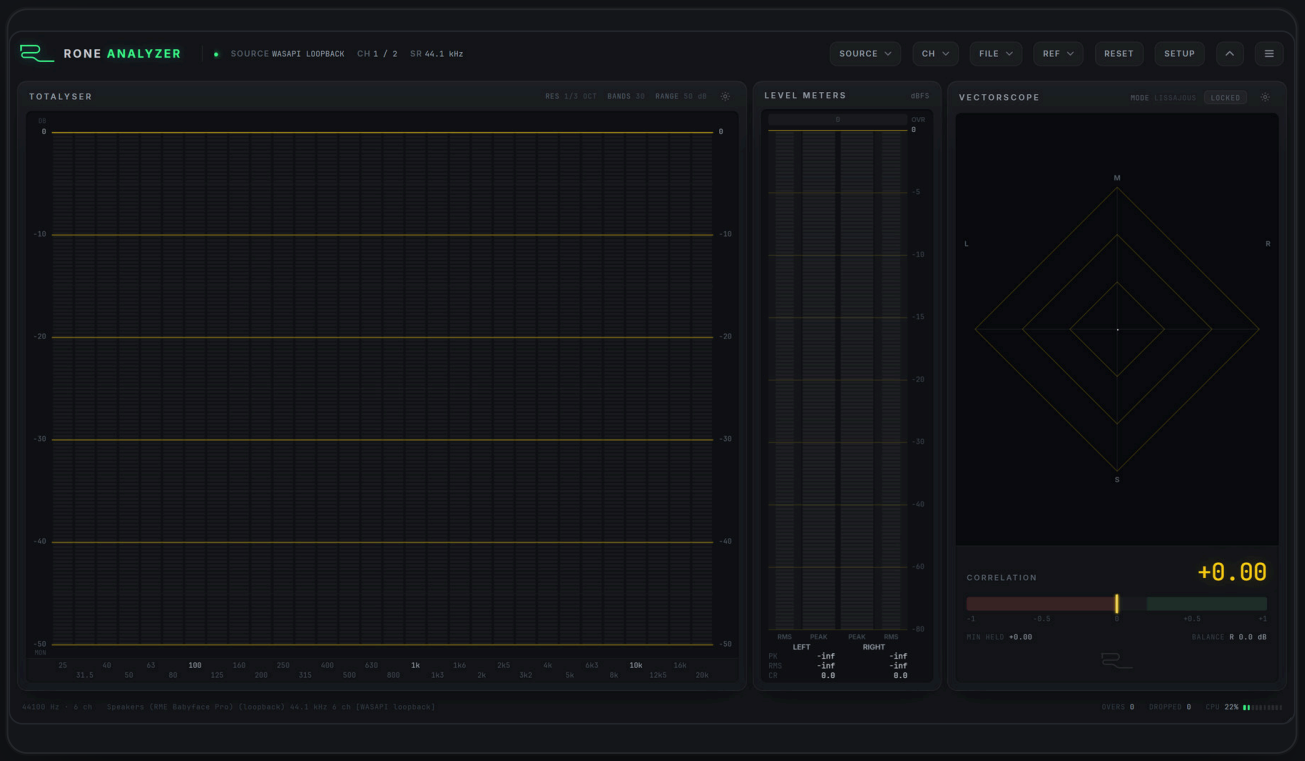

VERSION 1.0 · STANDALONE · VST3 BRIDGE

RONEAUDIO.COM

Contents

1	Welcome to RONE Analyzer	what it measures and why it is built this way
2	Installation with the RONE Plugins Center	Center, account, file locations
3	Quick start	seeing your mix in the analyser
4	Interface tour	every element on screen
5	Instruments reference	how to read each one
6	Step-by-step workflows	how a session with the analyser looks
7	Recommendations	reading meters well
8	Interface conventions	panels, menus, shortcuts
9	Troubleshooting, specifications and support	when something is off

1 Welcome to RONE Analyzer

RONE Analyzer is a standalone measurement application in the shape of the classic RME DIGICheck: modular instruments in a panel grid, a real bandpass spectrum analyser rather than an FFT, a vectorscope with proper phosphor afterglow and EBU R128 loudness. It reads audio from an ASIO interface (alongside your DAW), from whatever Windows is playing (loopback), from a live input, from a file, or from your DAW's master bus through the included **RONE Analyzer Bridge** VST3.

The point of a separate application is that it is always on screen, always measuring the same thing, whatever project or plugin you have open. The point of the bridge is that you can also put the analyser exactly where a plugin would sit: on your master, after your limiter.

The instruments

- **Totalyser** - 30-band ISO third-octave analyser (also 1/1 and 1/6 octave), PEAK / HOLD / RTA traces, L/R or Mid/Side, per-band stereo strip, hover readout, band solo by ear, and a *reference corridor* built from your reference tracks.
- **Level Meters** - peak and RMS per channel, crest factor, configurable over detection.
- **Stereo Vectorscope** - goniometer with bright / dim afterglow, correlation meter with a low-water mark.
- **Loudness (EBU R128)** - momentary, short-term, integrated, LRA, true peak, max RMS, target deviation.
- **Bar Scope** - the waveform locked to your DAW's bar, from four bars down to an eighth, with hold-to-zoom.

The 10-second version


1. Open RONE Analyzer.
2. SOURCE → pick the endpoint with the live meter next to it.
3. Read the spectrum, the meters and the scope.
4. Put the RONE Analyzer Bridge on your DAW master to measure the mix itself.

Why bandpass, not FFT

An FFT has linear bins; an ear does not. The Totalyser runs thirty real bandpass filters on the ISO 266 centres (25 Hz to 20 kHz), so every band is a third of an octave wide and a tone reads its own level. It is the same axis you see on DIGICheck and on every third-octave RTA in a mastering room.

2 Installation with the RONE Plugins Center

Every RONE product is installed, updated and licensed through one application: the **RONE Plugins Center**. You never download individual installers by hand, and you never enter serial numbers into the plugin itself.

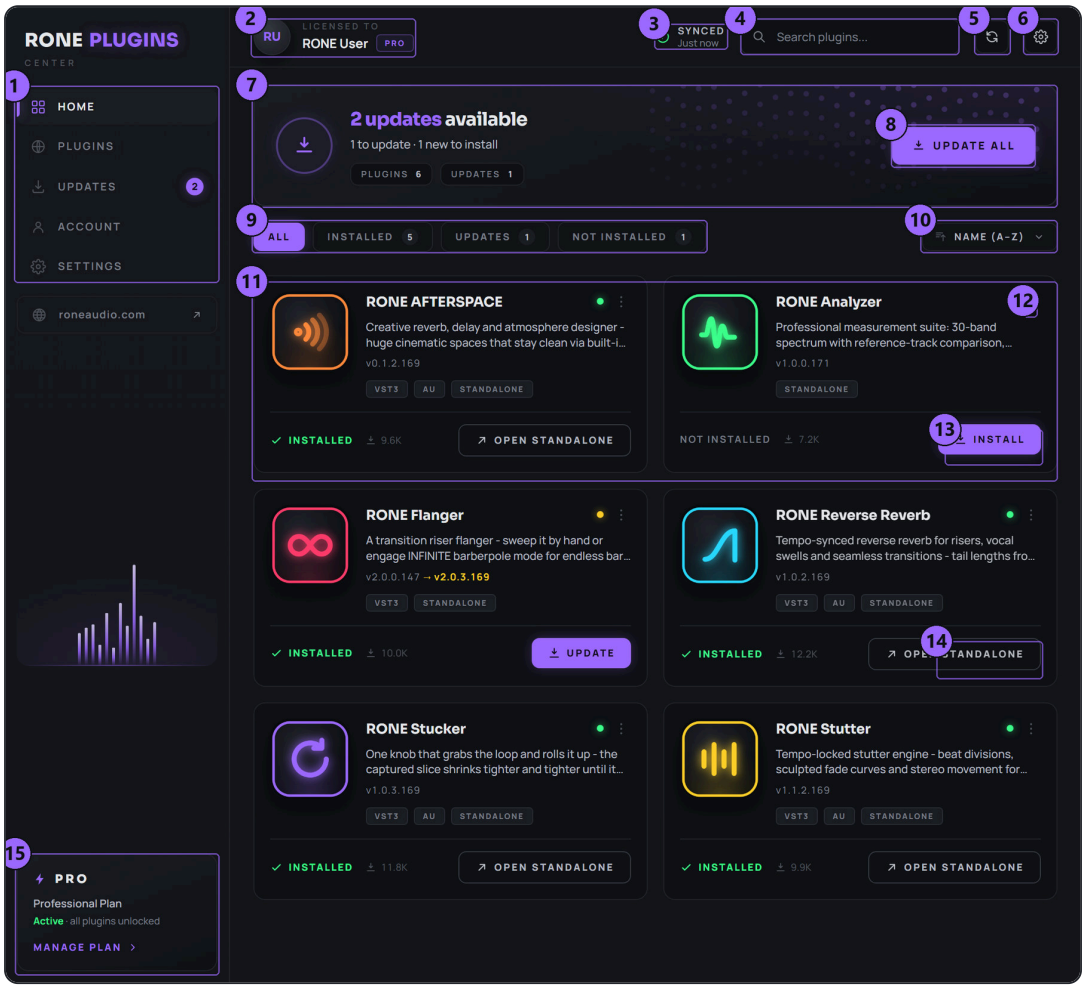

RONE Plugins Center. 1 Navigation · 2 Your account and licence · 3 Sync status · 4 Search · 5 Refresh · 6 Settings · 7 Updates summary · 8 UPDATE ALL · 9 Filters · 10 Sort · 11 A plugin card · 12 Card menu (Details, Open, Manual) · 13 OPEN the standalone app · 14 INSTALL · 15 Your plan

Step by step

1. Download the Center from roneaudio.com and run the installer (Windows: `RONE_Plugins_Center_Installer.exe`, macOS: `RONE_Plugins_Center.dmg`). On Windows the installer also adds the Microsoft WebView2 runtime if your PC does not have it yet; it is required for the plugin interfaces. On macOS (10.15 Catalina or later, Intel and Apple Silicon) the first launch may be blocked because the installer is not yet Apple-notarized: open **System Settings → Privacy & Security**, scroll to the message about the blocked app and press **Open Anyway**, then confirm. If macOS calls the file *damaged*, run `xattr -cr "/Applications/RONE Plugins Center.app"` in Terminal once.

2. Open the Center and sign in with your **roneaudio.com account** (the same e-mail and password you used on the website). Your licences and device slots are checked automatically: an active **ALL ACCESS** plan unlocks every plugin, and a **lifetime licence** unlocks the plugin it was bought for — so RONE Analyzer opens either way.

3. Find **RONE Analyzer** in the list and press **INSTALL**. The Center downloads the signed installer, verifies its checksum, installs it silently and registers the version.

4. When the card shows **INSTALLED**, start (or restart) your DAW and rescan plugins if it does not pick up new plugins automatically. All RONE plugins appear next to each other in your plugin list because every name starts with **RONE**.
5. Updates appear on the same card. Press **UPDATE** on one plugin or **UPDATE ALL** at the top. Close the standalone version of a plugin before updating it.

Where the files go

WINDOWS

FILE	LOCATION
Standalone app	`C:\Program Files\RONE Plugins\RONE Analyzer.exe`
This manual	`C:\Program Files\RONE Plugins\Manuals\`

MACOS

FILE	LOCATION
Standalone app	`/Applications/RONE Analyzer.app`
This manual	`/Users/Shared/RONE Plugins/Manuals/`

> **MANUAL INSIDE THE CENTER**
> Every installed plugin has a **Manual** entry in its card menu (the three dots on the card). It opens this PDF from the install folder, or from roneaudio.com if the local copy is missing.

Licence and activation


Licensing is tied to your account, not to a key. The plugin checks the licence file that the Center writes when you sign in. There are two ways to own it: an **ALL ACCESS** plan, which unlocks every RONE plugin for as long as it is active, or a **lifetime licence** for this plugin alone, which never expires. Either one opens RONE Analyzer, and buying the lifetime licence later does not disturb a plan you already have.

If a plugin ever shows a *RONE Bundle License Required* screen, open the Center, make sure you are signed in and the plugin shows as licensed, then reopen it. Two devices can be signed in at the same time on either kind of licence; sign out on an old machine from the Center's Account page to free a slot. A lifetime licence keeps working offline for far longer than a plan does — there is nothing for it to expire against — but the Center still needs to reach the internet occasionally to confirm it.

Uninstalling

Windows: Settings → Apps → *RONE Analyzer (RONE)*. macOS: delete the bundles listed above. Presets and settings in your user folder are kept.

3 Quick start

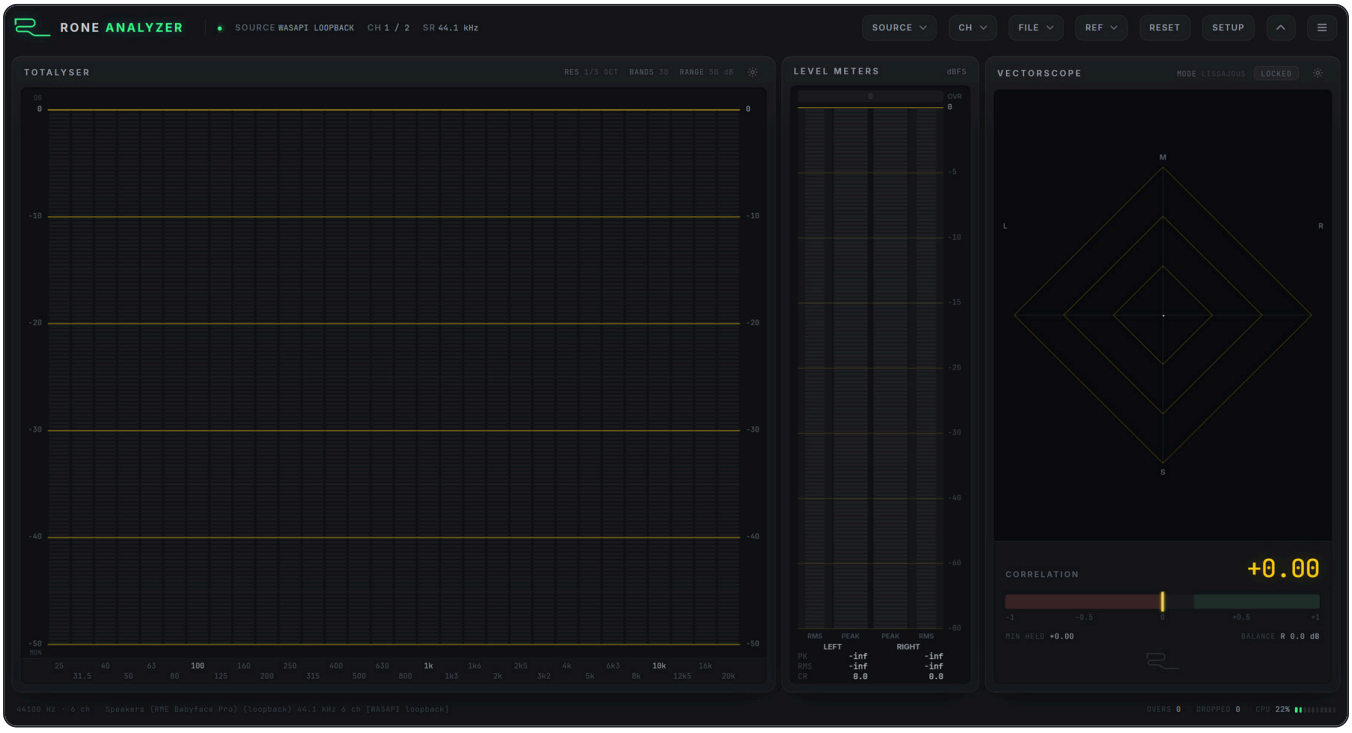

RONE Analyzer: Totalyser, Level Meters, Vectorscope.

1. **Start** RONE Analyzer from the Start menu (Windows) or Applications (macOS). It remembers its source, its settings and its window position between runs.

2. **Choose a source.** Click **SOURCE**. The menu lists every audio endpoint on the machine with a small live meter next to each - the one that moves is the one carrying your mix. Pick an ASIO device to read your interface's inputs (works alongside a running DAW on multiclient drivers such as RME), a loopback endpoint to read whatever Windows is playing (Spotify, YouTube, references), or a live input for a microphone or line signal.

3. **Or open a file.** **FILE** → *Open and play (real time)* to hear and measure it, or *Open and scan (fast, whole file)* to push the whole file through the meters in seconds. You can also drop a file on the window.


4. **Measure inside the DAW.** Insert **RONE Analyzer Bridge** on your master bus (last in the chain). Then choose *DAW master (RONE Bridge plugin)* in the SOURCE menu. The bridge taps the master and sends it to the analyser; band solo and mono fold then act inside the DAW's own signal path.

5. **Give it the whole screen.** The chevron at the right of the header, or **H**, takes the header and the status bar away and leaves the three instruments edge to edge. It is the way to use the analyser on a second monitor. **Escape**, or the small chevron in the top corner, brings the chrome back.

6. **Set it up.** **SETUP** holds everything about how the instruments behave: band resolution and range, rise and release times, hold times, the mono fold, and the goniometer's afterglow and AGC. **Appearance** in the app menu (or **F4**) picks a theme and every colour in it.

> **ZERO OUTPUT CHANNELS**
>
> The analyser opens your device with no output channels so it can sit beside your DAW without fighting for the outputs. Monitoring (band solo by ear) needs an output and therefore reopens the device; it is never on at start-up and is only offered on hardware sources.

4 Interface tour

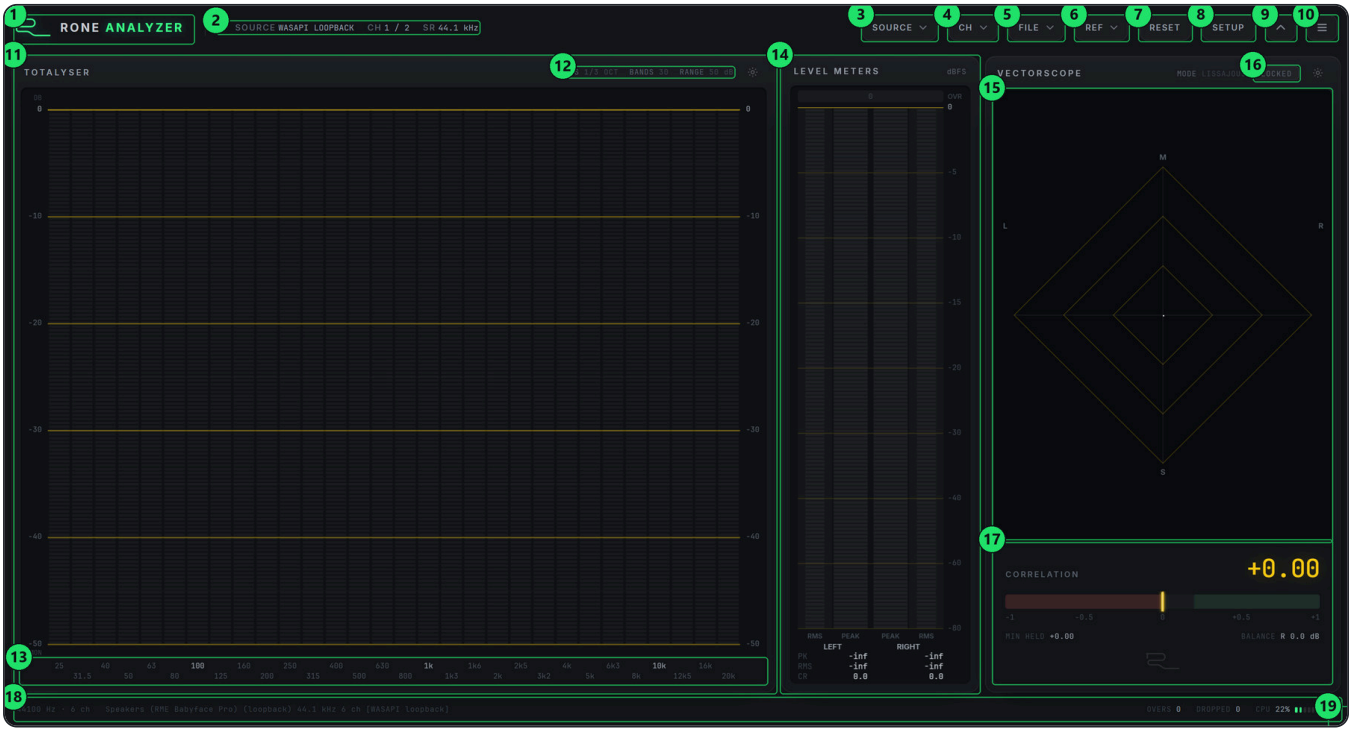

The application window.

1. **Logo** — the R mark opens About - there is no ABOUT button
2. **Source readout** — current source, channel pair and sample rate; the dot lights while audio is arriving
3. **SOURCE** — choose the input: ASIO, loopback, live input or DAW master
4. **CH** — which pair of a multichannel device to analyse
5. **FILE** — open and play in real time, open and scan a whole file in seconds, or loop
6. **REF** — add reference tracks and show or clear the reference corridor behind the analyser
7. **RESET** — clear every accumulating measurement: peak holds, the over counter, integrated loudness
8. **SETUP** — range, scale, ballistics, hold times, mono fold, goniometer release and AGC
9. **Full screen** — takes the header and status bar off so the instruments have the whole screen. H toggles it; Escape comes back
10. **App menu** — Appearance, Totalyser Setup, Bridge bypass (A/B), Start with Windows, About, Quit
11. **Totalyser** — the spectrum analyser: thirty third-octave bands on 6th-order Butterworth filters, not an FFT
12. **Resolution, bands, range** — what the analyser is currently set to; change it in SETUP
13. **Frequency axis** — ISO 266 third-octave centres, 25 Hz to 20 kHz, staggered over two rows
14. **Level Meters** — RMS L, Peak L, Peak R, RMS R, with the OVR counter above and peak / RMS / crest printed below
15. **Vectorscope** — the goniometer, rotated 45 degrees so mono is a vertical line
16. **LOCKED / FREE** — LOCKED holds the trace inside the graticule, so a full signal reads as a diamond; FREE lets it run to the corners. V toggles it
17. **Correlation** — -1 to +1 with the minimum held, and the L/R balance
18. **Status bar** — sample rate, device, over count, dropped frames, CPU
19. **Resize grip** — drag to resize the window

5 Instruments reference

Spectrogram (the Totalyser)

The left panel, titled SPECTROGRAM: thirty real bandpass filters, drawn as bars. Its title row carries only the FROZEN badge and the Setup gear; everything it used to print there is in Setup.

Bands

`1/1 (10) · 1/3 (30) · 1/6 (60) octave default 1/3`

Third-octave bands on the ISO 266 series: 25, 31.5, 40, 50, 63, 80, 100, 125, 160, 200, 250, 315, 400, 500, 630, 800, 1k, 1k25, 1k6, 2k, 2k5, 3k15, 4k, 5k, 6k3, 8k, 10k, 12k5, 16k, 20k. Labels alternate between two rows so all thirty stay legible.

PEAK / HOLD / RTA

`trace`

PEAK shows the instantaneous peak per band; **HOLD** adds peak-hold caps; **RTA** shows the averaged (RMS) spectrum, which is the trace to compare against a reference.

Stereo link

`sum · L/R · M/S`

Bars show the summed spectrum, both channels, or Mid and Side. Under the plot a per-band **stereo strip** shows width or mono damage: mono content loses nothing when summed, hard-panned content loses 3 dB (the panning law, not a fault), and anything worse than -3 dB is real cancellation and is coloured as such.

Hover readout

Hover a band to read its level, crest factor, nearest note, Mid/Side split and mono delta in one box.

Band solo

`press and hold a band`

Hear only that band. Drag while holding to sweep between centres; the mouse wheel changes Q while holding and the highlighted width is the filter's own -3 dB width. Double-click latches the solo; Escape or another double-click releases it. The other bands go dark while soloing, so eyes and ears agree. With **RONE Analyzer Bridge** on your DAW's master the solo is rendered inside the DAW's own signal path; without it the solo is on screen only and the analyser says so.

Tip: Soloing a band around 200-400 Hz while comparing to a reference is the quickest way to hear mud.

Reference corridor

`REF menu`

Add several reference tracks and the analyser reduces them to a *range* per band rather than a single curve - two records you admire will disagree by several dB in any given band, and the shape they share is the only part worth aiming at. The corridor is drawn as a tint behind the bars with edges in front; a white curve shows your live average spectrum, which is what is actually comparable, and a legend in the plot names the record or counts them. REF lights while the corridor is shown. The hover readout reports distance outside the corridor and *in* anywhere inside it.

Setup (gear / SETUP)

`Source, Mode, range, Top L., Res., Size, Freeze, Rise T., Release, Hold T., FSC for OVR, Display, Range comp / full, Correlator Int., Release 1 / 2, AGC`

DIGICheck's own setup dialog with DIGICheck's own words, so existing users can type their numbers straight in, and every value applies at once. **Source** picks what the bars measure (Max. L/R, L+R, Left, Right, Mid, Side); **Mode** picks the trace (Peak, Peak Hold, RMS); **Top L.** and **Range** set the scale; **Res.** is decibels per LED and **Size** the bar width; **Freeze** (or F) holds the bars. Rise T. is the band detector attack (0 = instant, 15 ms = RME default). Analyser release is in seconds to fall the whole range; meter release is in dB per second - both as in DIGICheck. The Totalyser's title names a Source or Mode that is not the default.

Level Meters

Layout

`RMS L | Peak L | Peak R | RMS R`

Inner bars are peak (AC+DC), outer bars are RMS (AC only). The width of the coloured region between them is the crest factor, also printed underneath with peak and RMS. 0 dBFS is referenced to a full-scale sine, so RMS carries the +3.01 dB the RME convention requires. The scale is DIGICheck's non-linear one, with the top 20 dB stretched.

Overs

`N consecutive samples, 1-20`

An *over* is a run of N consecutive full-scale samples - one clipped sample is not an over. Overs are counted next to the OVR cap and in the status bar; RESET clears them. In Setup, **FSC for OVR** sets N, and **Hold Time** (0.1 to 10 s, or Infinite Hold) and **Release** set the peak hold.

Stereo Vectorscope

Goniometer

`45° rotated: mono is a vertical line`

Draws continuous lines between successive samples with intensity inversely proportional to segment length, the way a real beam deposits energy - transients leave a faint streak, sustained tones a bright figure. Afterglow has separate decay rates for bright and dim pixels (Release 1 / Release 2, in seconds) plus AGC. **MODE** in the title switches the frame between the diamond and a circle: the diamond shows the legal L/R square exactly (full-scale mono on the M tip, a hard-panned channel on the rim under its own L or R label), the circle stretches the same picture onto a disc, DIGICheck's Polar. The choice is remembered.

Correlation

`-1 to +1`

The figure, then an LED bar lit from zero to the reading in its zone colour - red where the pair cancels in mono, amber around zero, green where it folds safely. A white tick holds the lowest reading of the last few seconds (MIN HELD), so a dip you did not see is still reported. Under it, the last ten seconds as a trace: a dip that returns on every bass note is a pattern a needle cannot show. BAL is the left / right energy balance on a small centre-zero bar, a full side at 6 dB.

Tip: Watch the ten-second trace while the drop plays. If it dives below the line on every bass hit, the low end is not mono.

STEREO / MONO

the chip in the vectorscope's title, or M

Folds every instrument to mono at once - the level meters drop wherever the channels were fighting, the spectrum changes shape, the trace stands as a line and the correlation reads +1, because that is what mono *is*. With **RONE Analyzer Bridge** on your DAW's master the DAW plays the fold too, and a lit dot on the chip says the bridge is there; without it the fold is on screen only. It sits on the vectorscope because that is where you are looking when you want it, and it never survives a restart.

Tip: Press M while the bass plays. If it thins out, the low end is not mono.

Loudness (EBU R128)

Closed until you ask for it: the small arrow in the bottom-right corner of the Spectrogram (or L) opens the strip under it, and the same arrow puts it away. It measures all the time, open or closed.

Readings

M · S · I · LRA · True Peak · Max RMS

Momentary (400 ms), short-term (3 s) and gated integrated loudness in LUFS, loudness range in LU and 4× oversampled true peak in dBTP. **MAX RMS** is the highest RMS since the last reset, read the way StandardCLIP reads it, to the hundredth: the louder channel, unweighted, averaged over 217 ms (the power falls 20 dB a second). It is plain RMS - a sine at -6 dBFS reads -9.01. Click the cell to reset it on its own. Targets for streaming, podcast and broadcast show the deviation in LU. The K-weighting filter is rebuilt for every sample rate from BS.1770's design, so 44.1, 88.2 and 96 kHz measure exactly as 48 kHz does.

Tip: Press RESET when the song starts so the integrated value covers only the material you mean.

BAR SCOPE

The waveform locked to the bar. SCOPE in the header (or O) opens a strip along the bottom, the full width of the instrument; the panels above make room for it and the window keeps its shape. Every sample is filed under its musical position from your DAW's playhead, so the same beat always lands in the same place: a kick that drifts, a tail that runs into the next beat or a clipped transient shows at a glance.

Window

4 BARS · 2 · 1 BAR · 1/2 · 1/4 · 1/8

How much of the bar the strip shows. The trace is a thin line for the wave with a faint fill down to the zero line, so every half cycle reads as a lobe.

Channels

SUM · L / R · M / S

SUM draws one trace. L / R and M / S draw the first channel in the trace colour and the second in white.

HOLD

on by default

A quiet pass fades the picture instead of erasing it, so a beat without a kick still shows the last one.

Zoom and scroll

hold the mouse on the plot

Hold, then drag up or down to zoom around the point you hold and sideways to scroll. Double-click (or right-click) shows the whole window again. Shift-drag slides the trace onto the grid; shift-double-click puts it back. The strip's own line reads the zoom, the offset and the tempo.

IT NEEDS THE BRIDGE

The bar comes from the DAW's playhead, which only **RONE Analyzer Bridge** on the master can hand over. Without it the strip reads NO PLAYHEAD. With the transport stopped it holds the last pass.

6 Step-by-step workflows

Compare your mix to references

Mixing and mastering

1. REFERENCE → *Add reference tracks...* and pick three to five commercial tracks in your genre. Each is scanned in a few seconds.
2. Enable *Show reference*. The corridor appears behind the Totalyser bars.
3. Set the trace to RTA and play your mix. Watch the white average curve against the corridor: inside is fine, outside is where to look.
4. Press and hold a band that sits outside the corridor to hear it in isolation, then fix it in your EQ.

Measure the master through the bridge

Final checks before export

1. Insert **RONE Analyzer Bridge** last on the DAW master (after the limiter).
2. In the analyser choose SOURCE → *DAW master (RONE Bridge plugin)*.
3. Put Loudness in one panel and Level Meters in another. Press RESET, play the whole song, read Integrated, LRA and True Peak.
4. Use the app menu's *Bridge bypass (A/B)* to compare with and without your master chain while watching the meters.

Check a delivered file

Mastering QC

1. FILE → *Open and scan (fast, whole file)*. The whole file runs through every instrument in seconds.
2. Read Loudness (integrated, true peak, max RMS) and the Level Meters' over count and crest factor.
3. Switch to *Open and play (real time)* to listen to any section that looked suspicious.

Mono compatibility

Any mix

1. Watch the correlation meter and its low-water mark through the chorus.
2. Look at the stereo strip under the Totalyser: bands coloured for mono damage are cancelling, not just wide.
3. Press STEREO on the vectorscope panel to fold everything to mono and listen.

7 Recommendations

DO

- Use the RTA trace when comparing tonal balance; PEAK is for transient checks.
- Build the reference corridor from several tracks, not one. One master's accidents are not a target.
- Reset before measuring integrated loudness, and let the whole track play.
- Put it on a second monitor and press `H`. The instruments are then as large as the screen allows, which is the whole point of a meter you keep open all session.
- Keep the bridge last in the master chain, after the limiter, so you measure what leaves the DAW.

AVOID

- Reading the loopback source while an ASIO application bypasses Windows audio - it will read silence. Use the ASIO source instead.
- Judging width by correlation alone; the per-band strip tells you where it is coming from.
- Leaving band solo latched. It blanks the display and changes what you hear; a single press releases it.

Reading tips

- A mix that is too bright by the crest factor of its top end will look fine against the corridor with the PEAK trace and wrong with RTA. RTA is the honest one.
- Hard-panned elements show -3 dB in the mono delta. That is physics, not a problem; below -3 dB is.

8 Interface conventions

GESTURE	WHAT IT DOES
Gear on a panel	Open Setup.
`H`, or the chevron at the right of the header	Take the header and status bar away so the instruments fill the screen. `Escape`, or the small chevron in the top corner, brings them back.
`M`, or STEREO / MONO on the vectorscope	Fold to mono - on screen, and in the DAW when RONE Analyzer Bridge is on the master.
`V`	Hold the vectorscope's trace inside the graticule diamond (LOCKED), or let it run to the corners of the frame (FREE).
`F`	Freeze the Totalyser's bars where they are; press again to let them go. The meters and the scope keep running.
`L`, or the arrow under the Spectrogram's right scale	Show or hide the LOUDNESS strip. It starts closed.
`O`, or SCOPE in the header	Open or close the BAR SCOPE strip along the bottom.
MODE on the vectorscope	Switch the frame between the diamond and the circle.
`Space`, or PLAY / STOP in the header	Start or stop the file that is the source. SCAN pushes the whole file through again; the status bar shows the position.
RESET	Clear the overs, the held peaks and every cap, and restart the loudness integration.
Press and hold a Totalyser band	Solo that band by ear (hardware sources). Drag to sweep; wheel for Q; double-click to latch.
Drop an audio file on the window	Scan it.
Close the window	Quit. The source, the window and the layout come back as they were the next time it opens.
Start with Windows (app menu)	Launch at login.
Command line	`--file <path>`, `--scan <path>`, `--loopback [name]`, `--bridge`, `--asio [device]`, `--input <device>`, `--add-references <paths...>`. Without arguments it reopens the last source.

APPEARANCE

The app menu's *Appearance...* (or F4) opens the theme drawer on the right. On a wide window the instrument moves aside so every panel stays in view and changes as you choose - the instrument is the preview; on a narrow one the drawer floats over the right-hand side. **Themes**: six built-in themes and your own, each shown as it will look. Nothing is kept until *Apply theme*; Cancel or Escape puts everything back. **Meter colour** is the level ramp or the theme's own colour; **Meter style** is LED segments or solid bars. **Customize** sets every colour - surfaces, graticule, meter, RMS, peak hold, accent, text, scope trace and reference - by swatch or hex, and every row has **Copy** and **Paste** so one colour can be matched across panels (copy Background, paste it into Panels). *Save as new theme* keeps your colours under a name, *Set as default* marks the theme that *Reset to default* returns to (Graphite until you choose one).

SETTINGS

Source, channel pair and every Setup and Appearance value persist between runs in your user folder.

9 Troubleshooting, specifications and support

Troubleshooting

SYMPTOM	WHAT TO DO
The analyser shows silence on a device that is playing	Windows applications that use ASIO or WASAPI exclusive mode bypass the loopback path. Choose the ASIO source and, on RME hardware, enable a Loopback on that submix in TotalMix so the playback appears as an input.
A source is greyed out or reads 'something else is holding this device'	Another application has the endpoint in exclusive mode. Close it, or pick a different endpoint.
No 'DAW master' entry appears	The RONE Analyzer Bridge is not loaded in the DAW, or the DAW has not scanned it yet. Rescan plugins; the bridge is at `C:\Program Files\Common Files\VST3\RONE Analyzer Bridge.vst3`.
Monitoring (band solo) is not offered	Only hardware sources can monitor. Loopback capture has no output half and a file is pushed by its own thread.
The window opened off-screen or at a strange size	Use the app menu's *Restore default layout*, or delete the window state from the settings file in your user folder while the app is closed.
The plugin does not appear in the DAW	Rescan plugins. On Windows the VST3 lives in `C:\Program Files\Common Files\VST3\RONE`; make sure that folder (or its parent) is in the DAW's VST3 search path. On macOS restart the DAW after installing; Logic and GarageBand may need a full AU rescan.
The window is blank or shows an error page (Windows)	The Microsoft WebView2 runtime is missing or damaged. Reinstall the RONE Plugins Center; it repairs WebView2. Also check that `WebView2Loader.dll` sits next to the standalone executable.
A licence screen appears	Open the RONE Plugins Center, sign in, confirm your plan is active, then reopen the plugin. Check that you have not exceeded your device limit.
The plugin shows an older version than the Center	Close every DAW and standalone RONE app, then press UPDATE again. A running standalone keeps the old executable locked.
Crash	RONE plugins write a crash report to your user folder; the Center uploads it the next time it runs. Please also tell us what you did right before the crash.

Specifications

Product	RONE Analyzer
Version	1.0 `(manual revised October 2026)`
Formats	Standalone · VST3 bridge
Systems	Windows 10 / 11 (64-bit) · macOS 11 or newer (Intel and Apple silicon, universal)
Channels	Any stereo pair of the selected source; mono fold available
Sample rates	44.1 kHz to 192 kHz
Latency	Not applicable (measurement only; the bridge plugin is transparent)
Engine	JUCE 8, native interface (no WebView needed)

Support

Website, presets, updates and support: roneaudio.com. When writing to us, include the plugin version (shown on the back panel), your DAW and operating system, and the steps to reproduce.

RONE Analyzer is designed and coded in Israel by Liran “RONE” Kalifa. © 2024–2026 RONE PLUGINS. All rights reserved. All product names are trademarks of their respective owners.