coolinkey

Coolinkey Smart Chain Lock

User Manual



CLX1 / CLX2

Please read the user manual carefully before use

Welcome to Coolinkey

A great ride deserves a lock you can trust.

Ride on. Leave the worrying to us.

You focus on the ride. We focus on the lock.

Lock it and forget it — that's the confidence Coolinkey gives you.

No more peeking through the window while you eat.
No more losing sleep over where you parked.

Peace of mind, every ride.

Coolinkey is more than just a lock. Whenever you need us, we're here.

Hardware ages. Our support doesn't.

Table of Contents

Packing List 2

Product Specifications 3

Product Overview 4

Device Charging 5

APP Onboarding 6

Device Pairing 6-7

Adding Fingerprints 8

Fingerprint Unlocking 9

Key Unlocking 10


Bluetooth Unlocking 11

Bluetooth Locking 12


Factory Reset 13

Frequently Asked Questions (FAQ) 14


Packing List

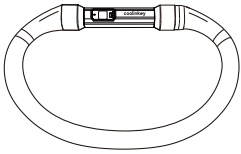

Chain Lock *1




USB Cable *1



Key *2


Note	CLX1: Includes 2 keys ; CLX2: No key included

Product Specifications

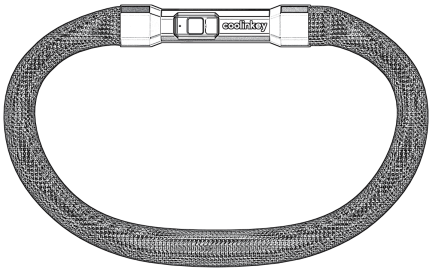

Model	CLX1 / CLX2
Lock Body Material	Zinc Alloy, Stainless Steel, Nylon
Chain Material	Stainless steel， PET
Gross Weight	1.3 kg
Net Weight	1.1 kg
Circumference	100 cm
Battery Type	Rechargeable Lithium Battery
Battery Capacity	400 mAh
Battery Life (Fully Charged)	10 Months
Charging Port / Jump Start	Type - C / USB
Waterproof Rating	IP67
Certifications	CE,FCC,UN38.3
Communication Protocol	Bluetooth 5.0
Application Scenarios	Indoor, Outdoor
Fingerprint Capacity	60 Fingerprints


Product Overview

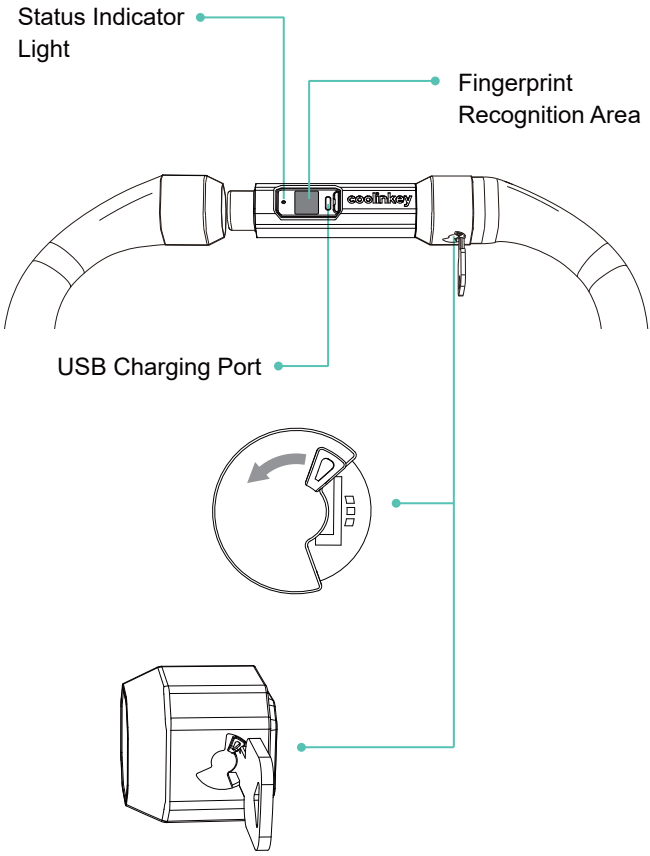


Note	The above picture is for reference only. Please refer to the actual product in the packaging box.


Device Charging

1. Slide the cover all the way back to expose the USB-C port.

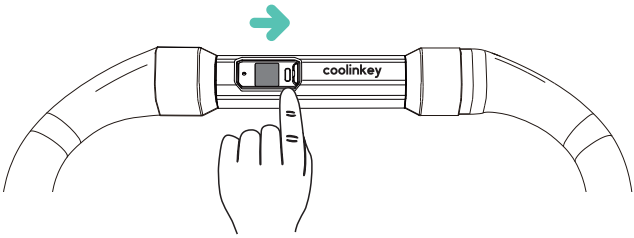

2. Connect one end of the Type-C cable to the adapter, and insert the other end into the Type-C charging port of the lock.

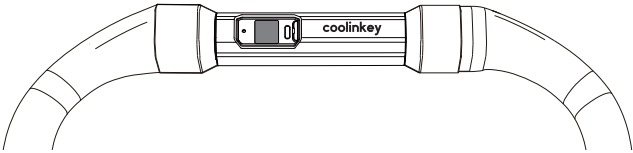

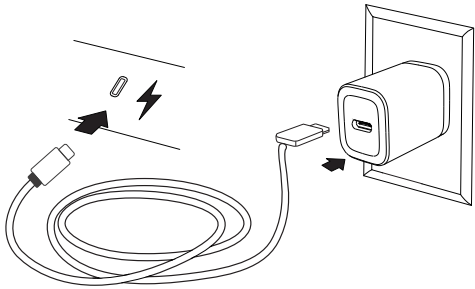

3. The LED indicator flashes slowly in red during charging, and flashes slowly in green when charging is complete.

Note	It is recommended to fully charge the battery before first use.


app Onboarding

1. Open the app Store (for iOS) or Google Play (for Android) on your phone.
2. Search for "Tuya Smart" and download and install it, or directly scan the QR code below to download.
3. Log in with your email or phone number, then click "Get Verification Code".


(Tip: You can select your country/region as needed, and the system will provide a default based on your settings.)

Device Pairing


1. Touch the fingerprint sensor with any finger to wake the device and enter pairing mode. The device will beep, and the LED will breathe blue.

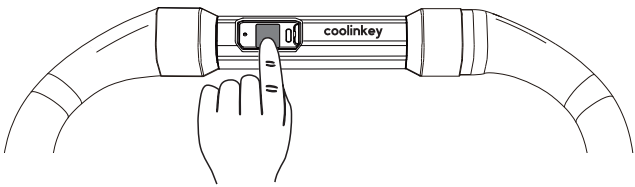

2. On the app homepage, tap the【+】icon in the upper right corner, select【Add Device】, and the app will automatically search for nearby devices to bind.

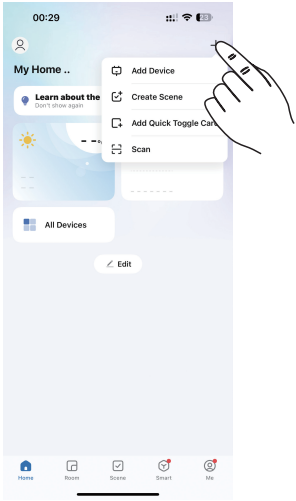

3. In the search results list, tap the corresponding product icon【Coolinkey Chain Lock】. After the pairing progress bar is complete, tap【Done】to enter the device main interface.

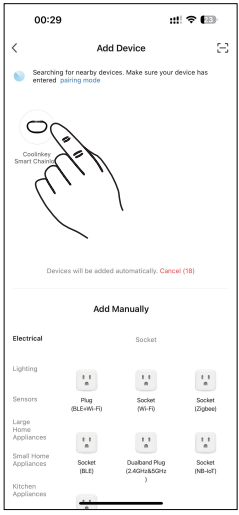



Adding Fingerprints


1.On the app main interface, tap[Member Management] to enter the member management inter face

2. Select the target member from the member list.


3. Locate the【Fingerprint】section and tap【Add】, then follow the on-screen instructions to navigate to the fingerprint enrollment interface.

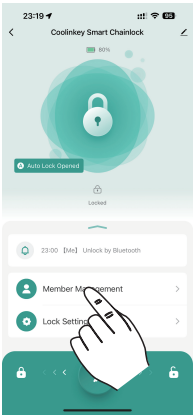


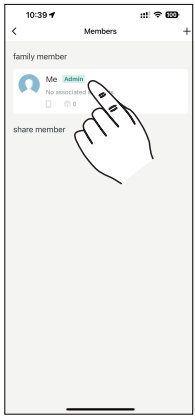

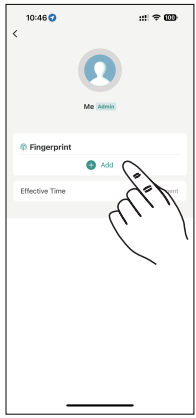


4. 4.Follow the prompts to steadily press your finger 6 times to complete fingerprint registration. During the process, there will be light and sound indications.

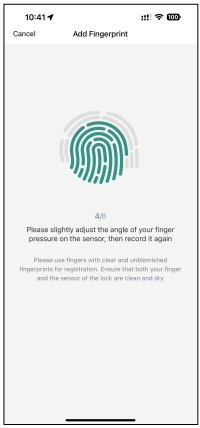

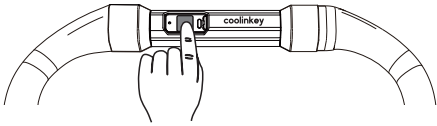


Fingerprint Unlocking

1. Slide the fingerprint cover back one notch to fully expose the fingerprint sensor area

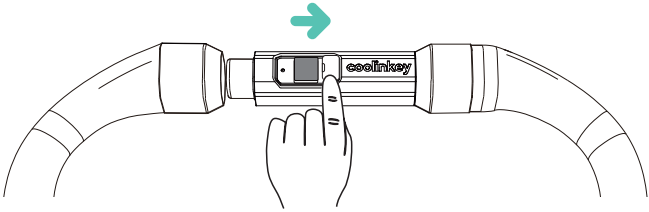


2. Place your finger on the fingerprint sensor area. The lock will immediately activate and start recognizing your fingerprint

Recognition Success: Green light flashes twice, buzzer plays a low-medium-high tone.
Recognition Failure: Red light flashes twice, buzzer plays beep-beep-beep.

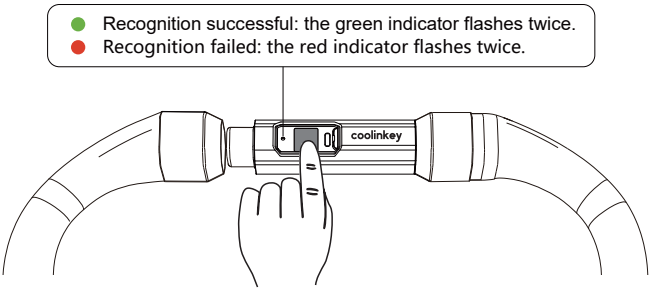


3. Once recognized, pull the shackle out to open the lock.

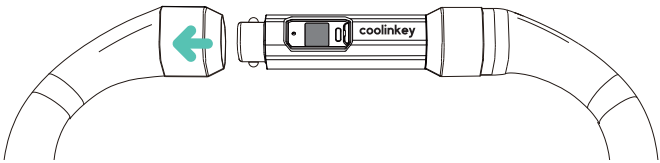


Key Unlocking

1. Rotate the round slider on the side of the lock cylinder counterclockwise to fully expose the keyhole.

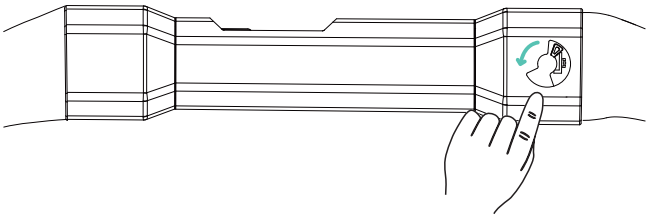


2. Insert the key and rotate it clockwise to unlock, then remove the shackle.

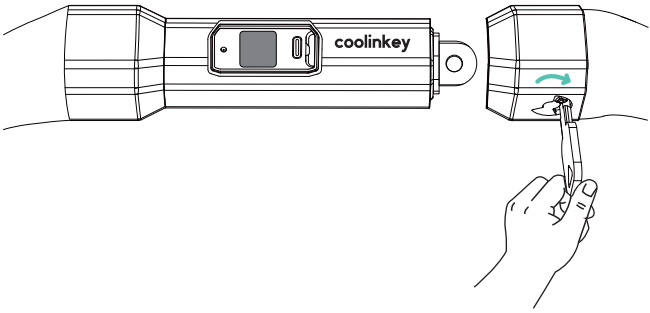


Note	CLX1 Supports: Fingerprint unlock + key unlock CLX2 Supports: Fingerprint unlock

Bluetooth Unlocking


1. Touch the fingerprint sensor area with any finger to wake up the device. The device will emit a sound prompt, and the blue indicator will show a breathing effect, entering Bluetooth waiting-for-connection status.

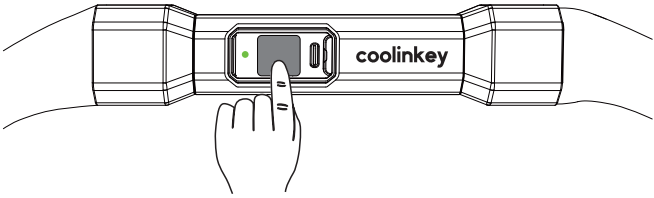

2. If the app shows Bluetooth not connected, tap the corresponding area to trigger the APP to establish a Bluetooth connection with the device.

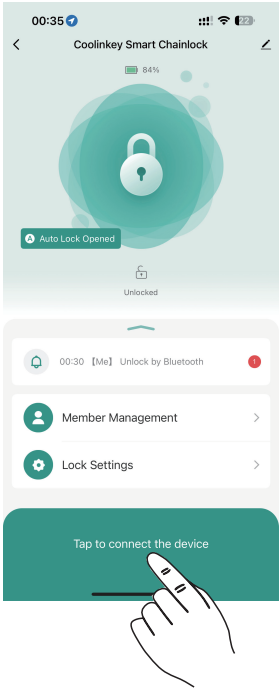


3. After the app successfully connects to the device, swipe the key icon at the bottom of the APP interface to the right to complete the unlocking operation.

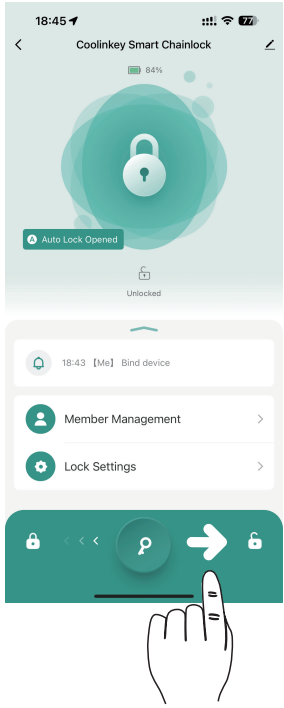


Bluetooth Locking

Similar to Bluetooth unlocking, swipe the key icon at the bottom of the app to the left to complete the locking operation.

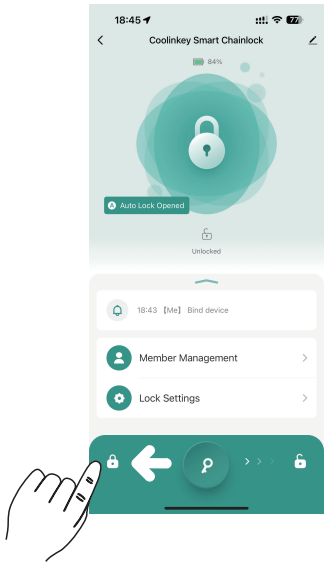

Auto Lock


After enabling the Auto-lock function in the app, the lock will automatically lock a few seconds after the lock bolt is closed.

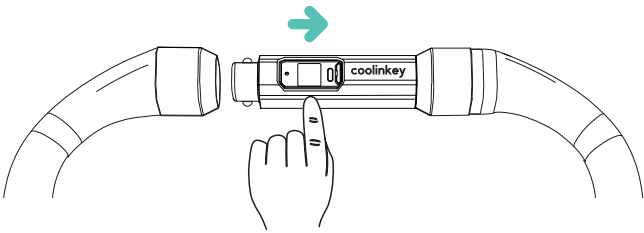


Factory Reset

This product provides two unpairing methods:
Unbind: Only disconnect the device, and all data stored in the lock will be retained.
Unbind & Clear Data: Disconnect the device and restore factory settings, which will completely erase all data.
(*Unbind & Clear Data is recommended.)


1. Tap the Edit icon in the upper right corner of the device main interface in the app to enter the device editing page.

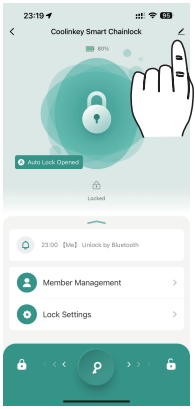

2. Tap the【Remove Device】button

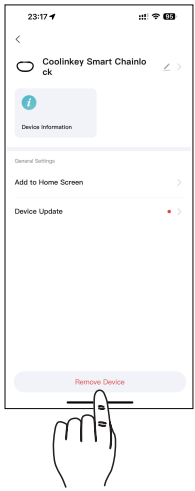

3. Select the Unbind & Clear Data option to remove the device from the app and restore the lock to factory settings.

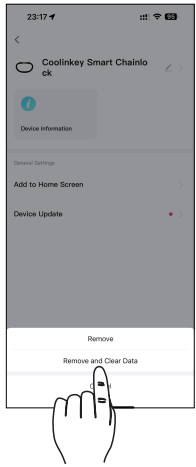

Frequently Asked Questions (FAQ)

Problem	Solution
The app indicates connection failure or timeout.	• Touch the fingerprint identification area and check if the device responds. • If the device responds abnormally or not at all, the battery may be too low or exhausted. Please charge and try again. • If the device responds normally, please ensure that the account logged in the app is consistent with the account used during pairing. • If none of the above issues exist, ensure that the phone and the device are as close as possible, and complete the connection between the mobile phone app and the device within 30 seconds after the device's blue light starts breathing.
Failed to Add Fingerprint	• Ensure your fingers are dry and clean, and try using another finger if needed. • It is recommended to add fingerprints when the device has sufficient power. Charge the device and try again if necessary.
Cannot Find Device When Tapping the app【+】During Device Binding, Unable to Complete Binding	• Touch the fingerprint identification area to ensure the device is in wake-up state, then perform the binding operation. • Check if the device has already been bound to another account. Note: One device can only be bound to one account. • Try the following steps: First turn off the phone's Bluetooth, exit the app, then re-enable Bluetooth, restart the app, and try again.
Auto-Lock Fails After Closing the Lock	• Confirm that the Auto-Lock switch is enabled in More Settings of the app. • You can manually trigger locking via the app or by using an incorrect fingerprint to check if the locking function works normally.

coolinkey

Shenzhen coolinkey Technology Co., Ltd.