

 W/ DOOR LOCK
 W/O DOOR LOCK

The diagram illustrates the electrical circuit for a vehicle's interior lighting system. Key components and connections include:

- Battery Connection:** A 20A DOME fuse connected to the positive terminal (4) and ground.
- Main Power Distribution:** Wires from the battery pass through terminals 1G, 1H, 1E, and 1F, connecting to various components.
- Switches and Relays:**
 - S12 PERSONAL LIGHT [SUN ROOF SW]:** Controls the sun roof light via a red wire (R).
 - I11 INTERIOR LIGHT:** Features a DOOR OFF/ON switch and a cylinder light.
 - D10 DOOR COURTESY SW LH** and **D11 DOOR COURTESY SW RH:** Control the door courtesy lights.
 - J6 INTEGRATION RELAY:** Manages the integration of various lighting functions.
- Lights and Indicators:**
 - D8 DOOR COURTESY LIGHT LH** and **D9 DOOR COURTESY LIGHT RH:** Door courtesy lights.
 - C15 DOOR WARNING LIGHT [COMB. METER]:** A combined meter warning light.
 - L4 LUGGAGE COMPARTMENT LIGHT** and **L3 LUGGAGE COMPARTMENT LIGHT:** Luggage compartment lights.
 - B7 BACK DOOR COURTESY SW** and **L2 LUGGAGE COMPARTMENT DOOR COURTESY SW:** Additional switches for courtesy and luggage compartment lights.
- Wiring Details:**
 - Red (R), Green (G), Blue (B), Yellow (Y), and White (W) wires are used throughout the system.
 - Terminal numbers (e.g., 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11) indicate specific connection points.
 - A note specifies: "B 1 : W/ REAR WIPER" and "B 7 : W/O REAR WIPER".

SERVICE HINTS

INTEGRATION RELAY

(1B) 11-GROUND : APPROX. 12 VOLTS WITH DOOR CLOSED
0 VOLTS WITH EACH DOOR OPEN

D10, D11 DOOR COURTESY SW

1-GROUND : CLOSED WITH DOOR OPEN

L 2 LUGGAGE COMPARTMENT LIGHT SW

1-GROUND : CLOSED WITH LUGGAGE COMPARTMENT DOOR OPEN

B 7 BACK DOOR COURTESY SW

1-GROUND : CLOSED WITH BACK DOOR OPEN

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 7	30 (L/B)	D10	30 (L/B), 31 (C/P)	J 6	29
C15	28	D11	30 (L/B), 31 (C/P)	L 2	31 (C/P)
D 7	30 (L/B), 31 (C/P)	I11	29	L 3	31 (C/P)
D 8	30 (L/B), 31 (C/P)	I13	30 (L/B), 31 (C/P)	L 4	30 (L/B)
D 9	30 (L/B), 31 (C/P)	J 1	29	S12	30 (L/B), 31 (C/P)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1F	18	FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1G	18	ROOF WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1H	18	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2E	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
3B	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC2	36	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IK2	36	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BP1	38 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
BP2	40 (C/P)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	36	LEFT KICK PANEL
BH	38 (L/B)	ROOF LEFT


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 1	38 (L/B)	FLOOR WIRE	B 7	38 (L/B)	FLOOR WIRE
	40 (C/P)			40 (C/P)	
B 5	38 (L/B)	ROOF WIRE	B11	38 (L/B)	LUGGAGE ROOM WIRE
	40 (C/P)			40 (C/P)	

B 7, L 2 GRAY



C15 GRAY

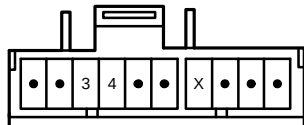

D 7



D 8, D 9




D10, D11




I11



I13




J 1



(HINT : SEE PAGE 7)

J 6

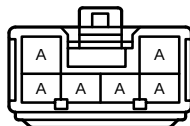

(HINT : SEE PAGE 7)

L 3 GRAY



L 4



S12

