
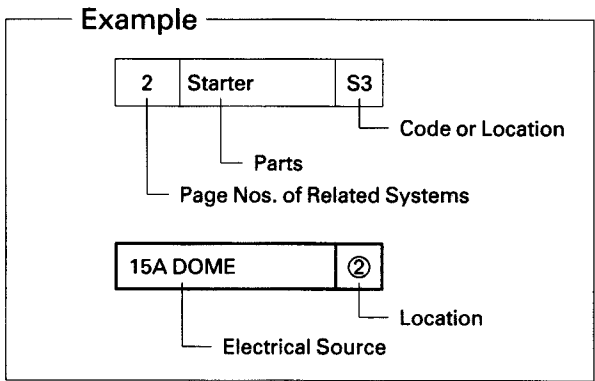



POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

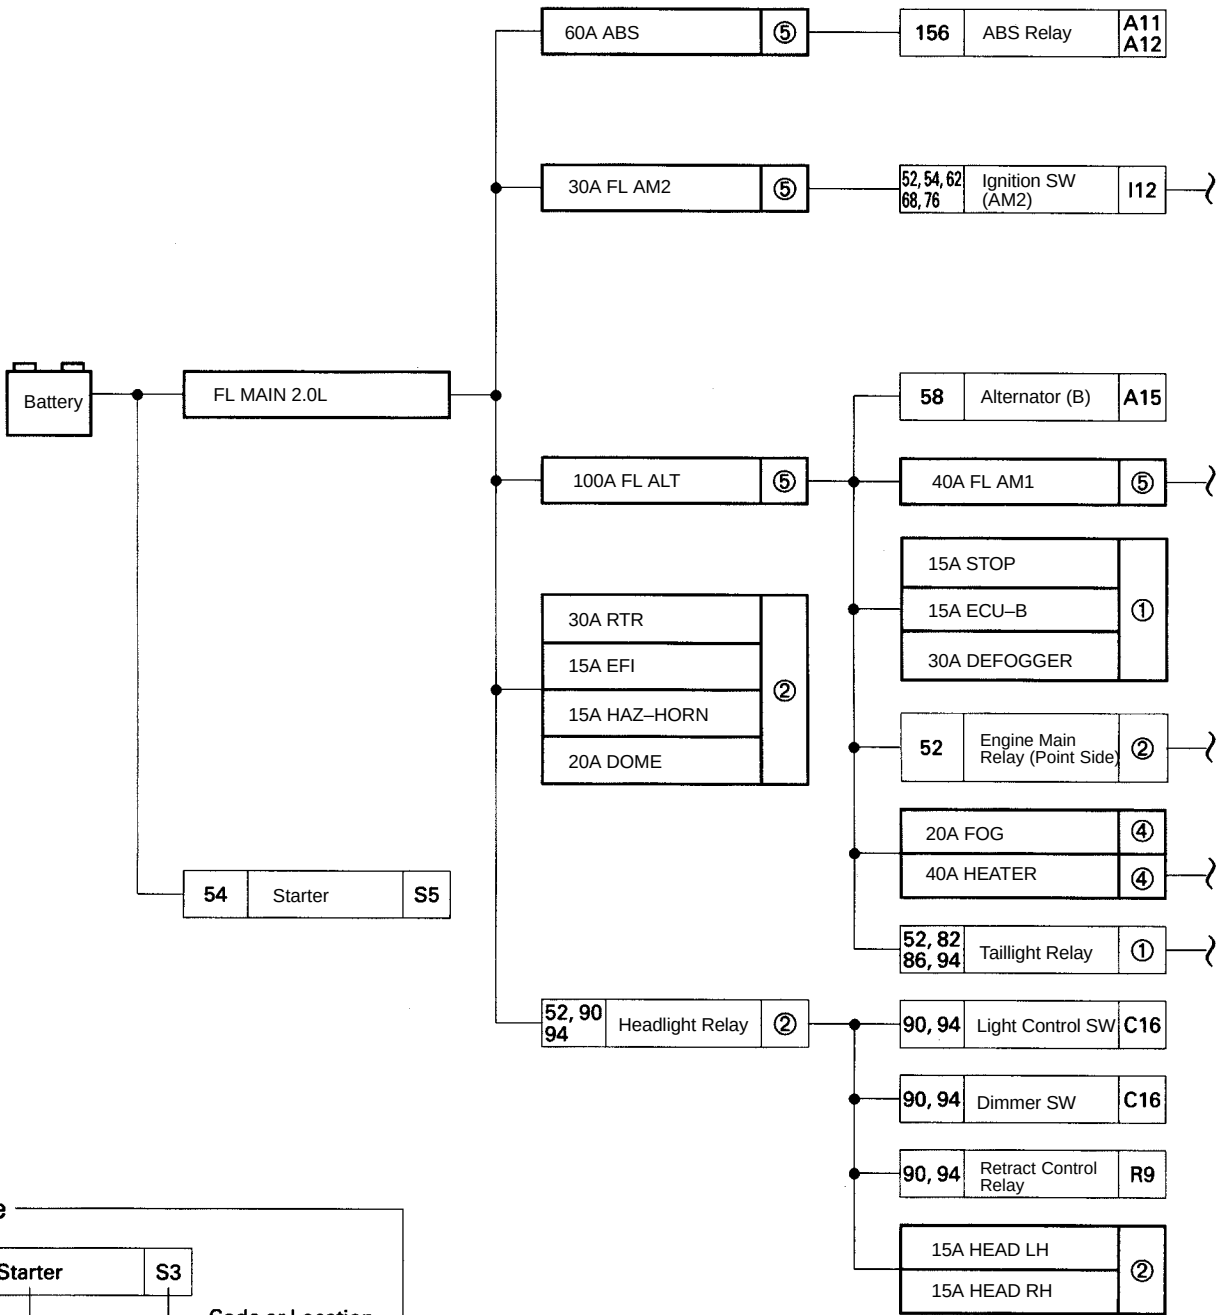

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 2 (See page 24)

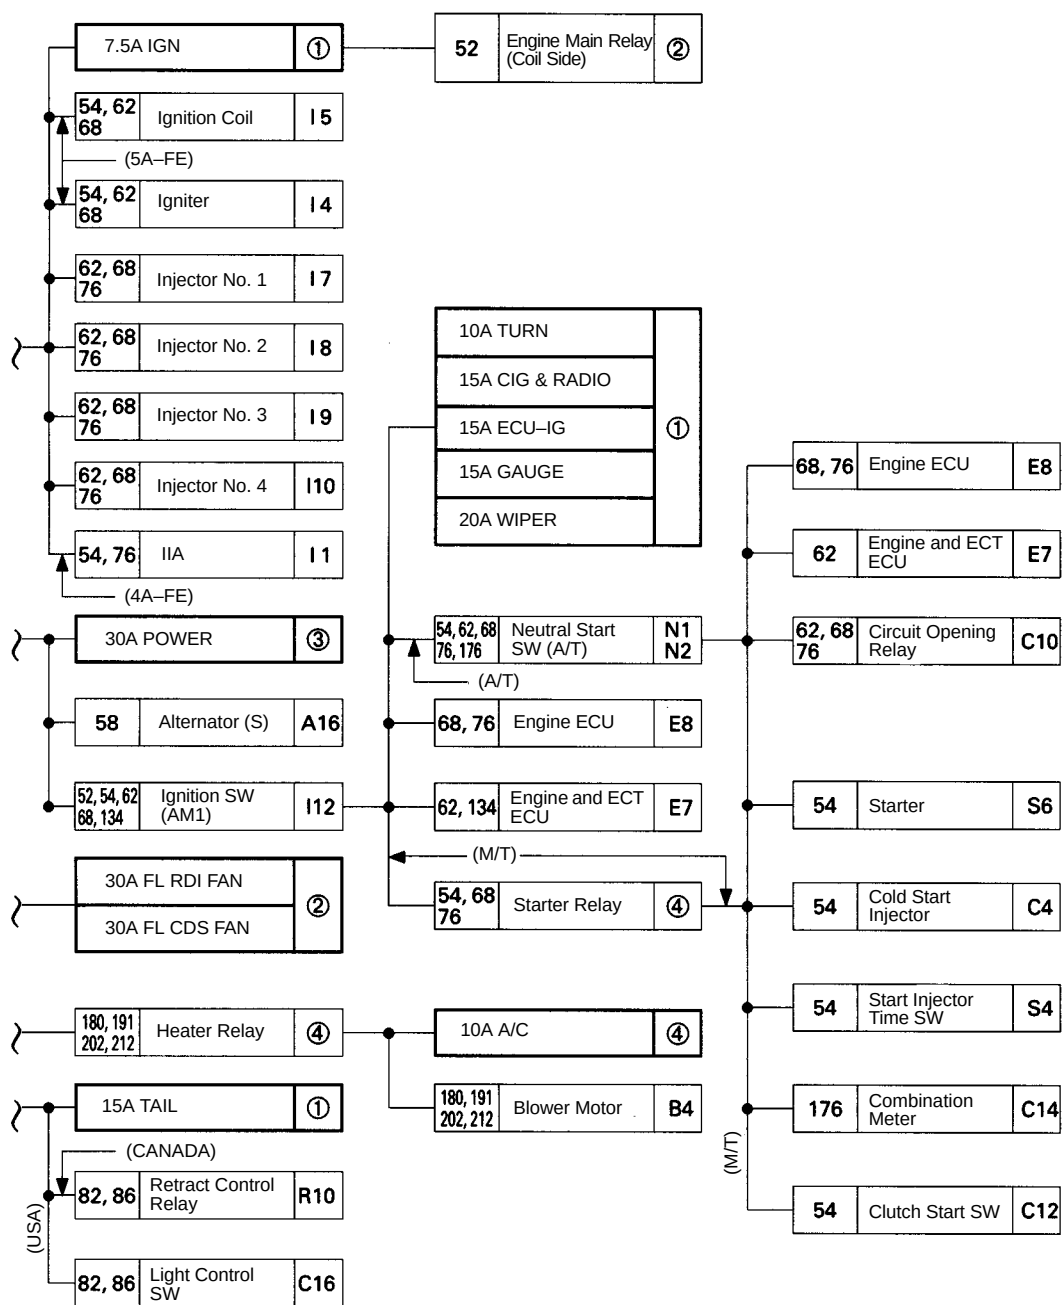

(4) : J/B No. 4 (See page 24)

(5) : Fusible Link Box (F10 See on page 26)

POWER SOURCE (Current Flow Chart)

Location			Page Nos. of Related Systems			Parts			Code or Location			CB or Fuse			180 191 202 212																156	58	180 191 202 212	82 180 191 202 212	82 180	191 202 212	180 191	180 191 202	180 191 202 212	82	180 191	140	156	168	100
															A/C Condenser Fan Motor	A/C Idle-Up VSV	A/C Magnet Clutch	A/C Pressure SW	ABS Actuator	ABS Relay	Alternator	A/C Amplifier	A/C Control Assembly (w/ ECT)	A/C Control Assembly (w/o ECT)	A/C Control Assembly	A/C Power Transistor	A/C System Amplifier	Air Vent Mode Control Servo Motor	Ashtray Illumination	Auto A/C Amplifier	Auto Tilt Away ECU	ABS ECU	Auto Antenna Control Relay and Motor	Back-Up Light SW (M/T)											
			A2	A3	A4	A5	A7	A11	A16	A17	A18	A19	A20	A22	A25	A30	A31	A32	A34	A36	A38	A41	B1																						
①	30A	DEFOGGER																																											
	20A	WIPER																																											
	15A	GAUGE		●	●	●	●	●		●	●		●		●	●		●	●	●	●		●																						
	7.5A	IGN				●			●																																				
	15A	ECU-B																			●																								
	10A	TURN																																											
	15A	CIG & RADIO																●	●			●																							
	15A	TAIL									●	●					●																												
	15A	ECU-IG							●												●	●																							
	15A	STOP																			●																								
②	15A	HEAD LH																																											
	15A	HEAD RH																																											
	30A	RTR																																											
	15A	EFI																																											
	20A	DOME																	●			●																							
	15A	HAZ-HORN																																											
	30A	FL RDI FAN																																											
	30A	FL CDS FAN	●																																										
③	30A	POWER																		●																									
④	20A	FOG																																											
	10A	A/C		●		●				●	●	●																																	
	40A	HEATER											●	●				●	●																										

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) R/B No. 2 (See page 23)

180 191	180 191 202 212	191 212	180 202	104	62 68 74 161	180 191 202 212	161	167	82	62 68 74	167	156	161 176	62 68 74	176	144 150	133	89	133 138	121	102	58 176	82 176	104 176	89 92 94	155	102
Blower Control Relay	Blower Motor	Blower Resistor	Blower Resistor	Back Door Courtesy SW	Check Connector	Check Connector (for Fan Check)	Center Airbag Sensor Assembly	Cigarette Lighter	Cigarette Lighter Illumination	Circuit Opening Relay	Clock	ABS Warning Light [Comb. Meter]	Airbag Warning Light [Comb. Meter]	Check Engine Warning Light [Comb. Meter]	Combination Meter	Cruise Control Indicator Light [Comb. Meter]	ECT Indicator Light (PWR) [Comb. Meter]	High Beam Indicator Light [Comb. Meter]	O/D Off Indicator Light [Comb. Meter]	Seat Belt Warning Light [Comb. Meter]	Turn Signal Indicator Lights [Comb. Meter]	Charge Warning Light [Comb. Meter]	Combination Meter (Illumination)	Door Warning Light [Comb. Meter]	Dimmer SW [Comb. SW]	Horn SW [Comb. SW]	Turn Signal SW [Comb. SW]
B3	B4	B5	B6	B7	C1	C2	C3	C7	C8	C9	C10	C11	C13	C14								C15			C16		
●																											
						●	●	●					●		●	●		●	●			●					
					●			●					●								●					●	
								●	●		●												●				
								●		●																	
●	●	●	●															●	●						●		

(4) : R/B No. 4 (See page 24)

POWER SOURCE (Current Flow Chart)

Location			Page Nos. of Related Systems	118	116	144	150	144	82 124	138	108 126	108 111	104					111		82 133	74 191 212	62	68	62 133 180 202	68	
			Parts	Front Wiper and Washer SW [Comb. SW]	Rear Wiper and Washer SW [Comb. SW]	Cruise Control ECU (Motor)	Cruise Control ECU (Vacuum)	Cruise Control ECU	Defogger SW	Diode (for O/D System)	Diode (for Key Off)	Door Lock ECU	Diode (for Interior System)	Door Courtesy Light LH	Door Courtesy Light RH	Door Courtesy SW LH	Door Courtesy SW RH	Door Lock Motor LH	Door Lock Motor RH	ECT Pattern Select SW	Engine ECU	Engine and ECT ECU	Engine ECU	Engine and ECT ECU	Engine ECU	
			Code or Location																							
			CB or Fuse	C17		C19		C20	D2	D3	D5	D6	D7	D8	D9	D10	D11	D14	D15	E4	E5	E6		E7		
①	30A	DEFOGGER																								
	20A	WIPER	●	●																						
	15A	GAUGE				●	●	●	●	●							●	●					●	●		
	7.5A	IGN																								
	15A	ECU-B																								
	10A	TURN																								
	15A	CIG & RADIO															●						●	●		
	15A	TAIL					●																	●	●	
	15A	ECU-IG				●	●																			
	15A	STOP				●	●																	●	●	
②	15A	HEAD LH																								
	15A	HEAD RH																								
	30A	RTR																								
	15A	EFI																●	●	●	●	●	●	●	●	
	20A	DOME								●	●	●	●	●												
	15A	HAZ-HORN																								
	30A	FL RDI FAN																								
	30A	FL CDS FAN																								
③	30A	POWER							●						●	●										
④	20A	FOG																								
	10A	A/C																								
	40A	HEATER																								

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) R/B No. 2 (See page 23)

180 191 202 212	62 133	68 74	191	94	86	86 102	118	82 92	62 68 74	82	89 92 94	155	82 102	98	62 68 133	104	180 191 202 212	86	104									
Engine ECU	Engine and ECT ECU	Engine ECU	Extra High Speed Relay	Fog Light LH	Fog Light RH	Front Side Marker Light LH	Front Side Marker Light RH	Front Turn Signal Light and Clearance Light LH	Front Turn Signal Light and Clearance Light RH	Front Wiper Motor	Fog Light SW	Fuel Pump	Glove Box Light	Glove Box Light SW	Headlight LH	Headlight RH	Horn LH	Horn RH	Hazard SW	High Mount Stop Light	ISC Valve	Ignition Key Cylinder Light	Interior Light	Junction Connector	Junction Connector (for Heater)	Licence Plate Light	Luggage Compartment Door Courtesy SW (C/P)	Luggage Compartment Light (C/P)
E7	E8	E9	F1	F2	F5	F6	F7	F8	F9	F11	F16	G1	G2	H1	H2	H3	H4	H5	H6	I3	I11	I13	J4	J5	L1	L2	L3	
●	●	●							●														●					
		●																										
							●	●										●										
					●	●	●	●		●		●	●					●							●			
																			●									
										●				●	●													
	●	●									●				●	●					●							
							●	●														●	●			●	●	
				●	●																							
			●																					●				

(4) : R/B No. 4 (See page 24)

POWER SOURCE (Current Flow Chart)

[illegible]

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (6) R/B No. 2 (See page 23)

[illegible]

POWER SOURCE (Current Flow Chart)

Location	Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		Water Temp. SW (for O/D System)		Water Temp. SW (for Fans Control)		Defogger Relay		Diode		Integration Relay		EFI Main Relay		Radiator Fan Relay No. 1		Power Main Relay		Heater Relay		Fog Light Relay		A/C Condenser Fan Relay No. 2		A/C Condenser Fan Relay No. 3		A/C Magnet Clutch Relay		Horn Relay	
①	30A	DEFOGGER																																		
	20A	WIPER																																		
	15A	GAUGE	●		●		●																													
	7.5A	IGN		●																																
	15A	ECU-B																																		
	10A	TURN																																		
	15A	CIG & RADIO																																		
	15A	TAIL																																		
	15A	ECU-IG																																		
	15A	STOP																																		
②	15A	HEAD LH																																		
	15A	HEAD RH																																		
	30A	RTR																																		
	15A	EFI																																		
	20A	DOME																																		
	15A	HAZ-HORN																																		
	30A	FL RDI FAN																																		
	30A	FL CDS FAN																																		
③	30A	POWER																																		
④	20A	FOG																																		
	10A	A/C																																		
	40A	HEATER																																		

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 2 (See page 23)
 (4) : R/B No. 4 (See page 24) (6) : R/B No. 3 (See page 23) (7) : R/B No. 5 (See page 24)