



TAILLIGHT

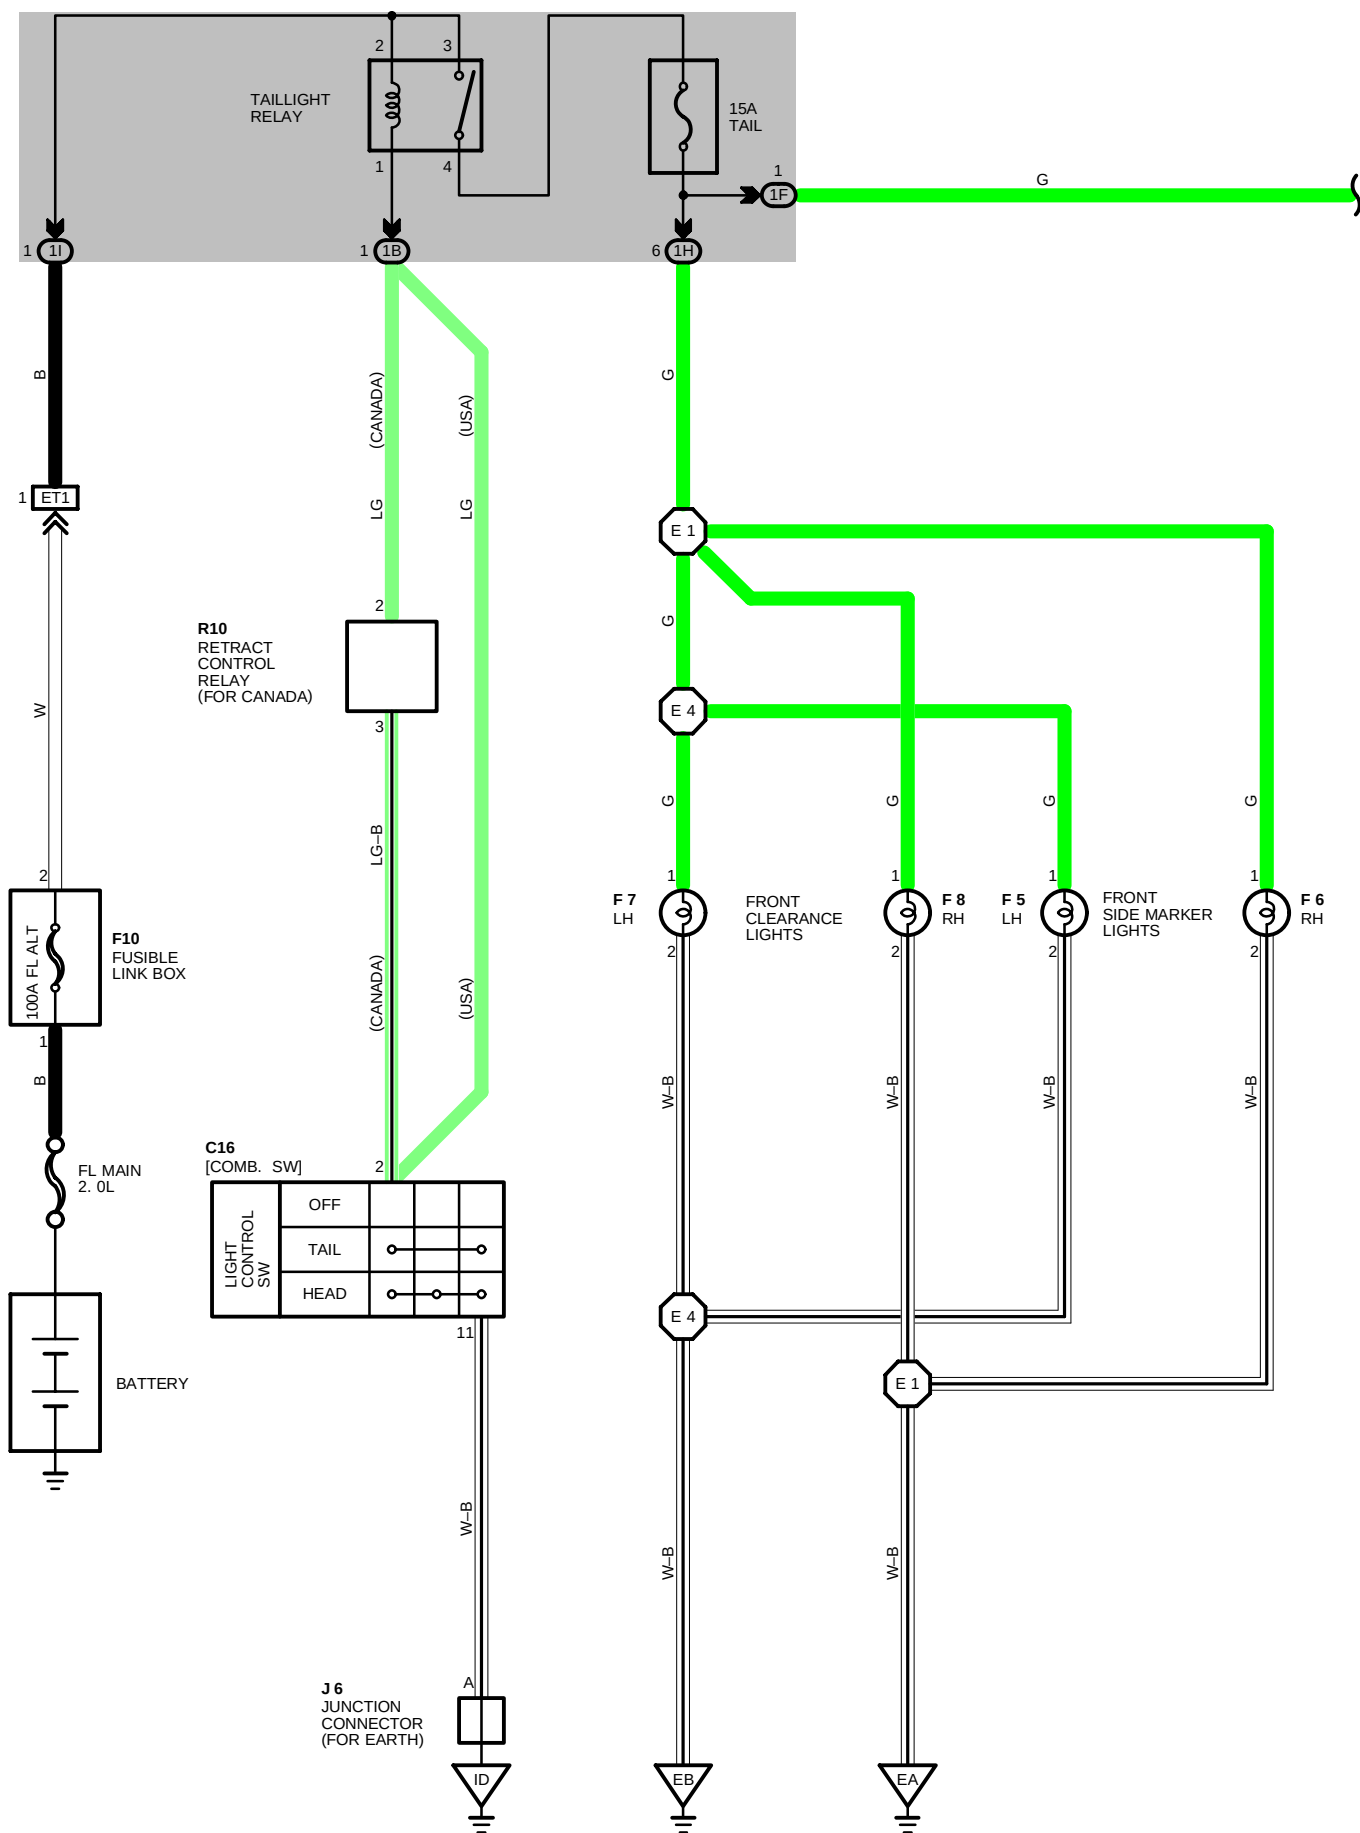

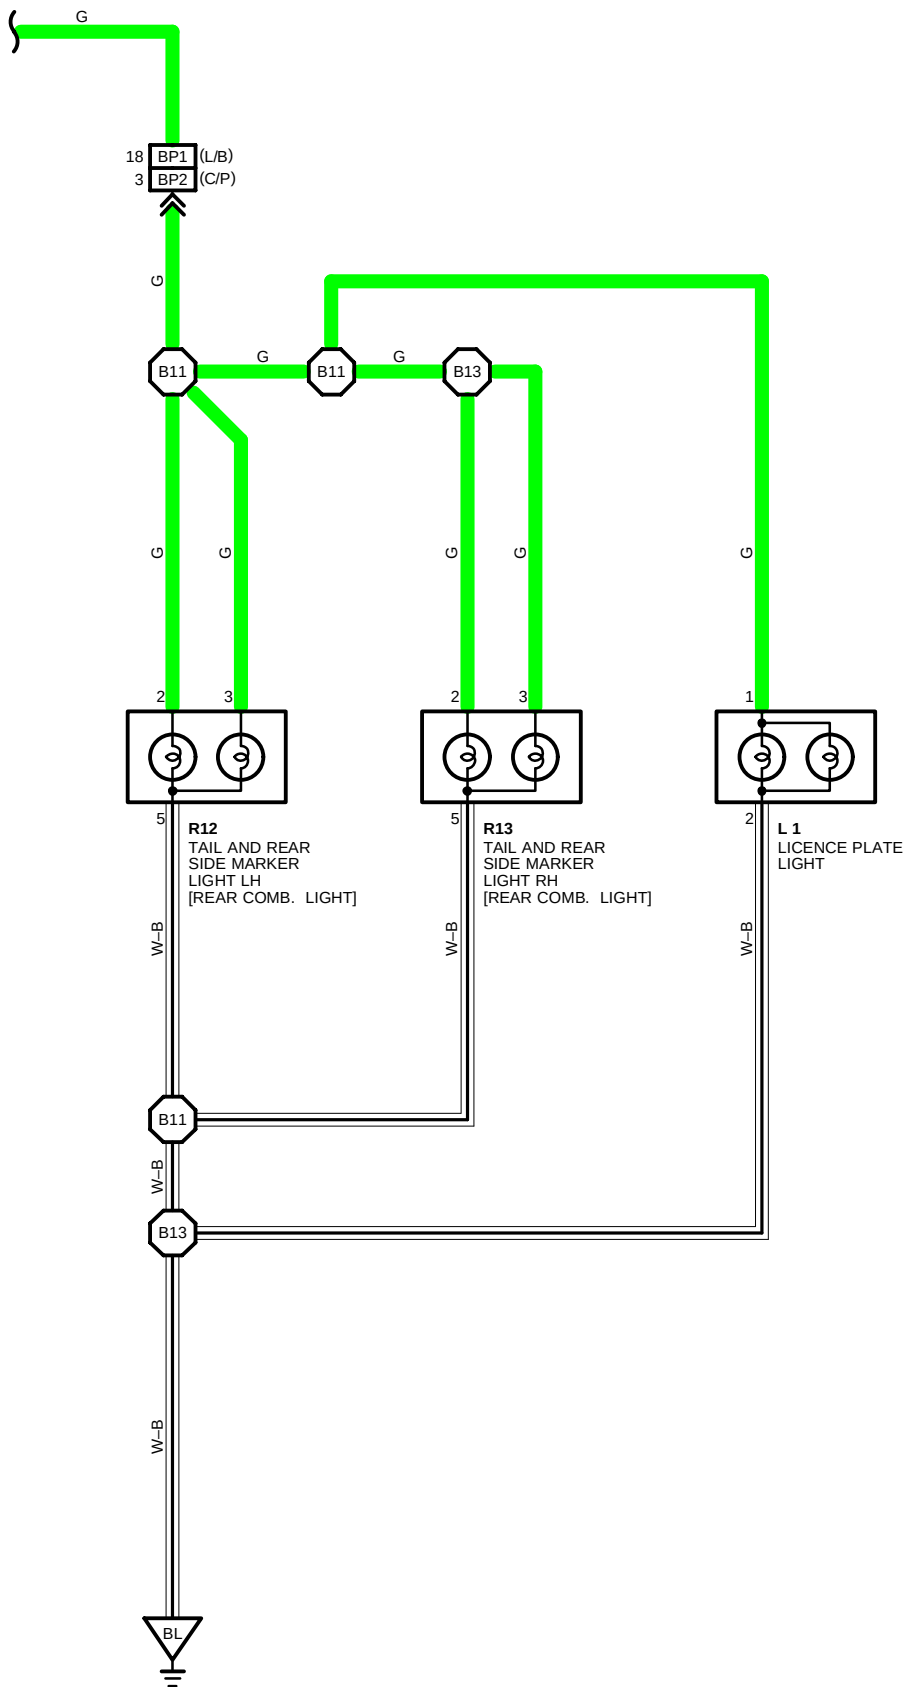

TAILLIGHT

SERVICE HINTS

TAILLIGHT RELAY

1-2 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C16	28	F 8	26 (5S-FE), 27 (4A-FE)	R10	29
F 5	26 (5S-FE), 27 (4A-FE)	F10	26 (5S-FE), 27 (4A-FE)	R12	30 (L/B), 31 (C/P)
F 6	26 (5S-FE), 27 (4A-FE)	J 6	29	R13	30 (L/B), 31 (C/P)
F 7	26 (5S-FE), 27 (4A-FE)	L 1	30 (L/B), 31 (C/P)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1F	18	FLOOR WIRE AND J/B NO.1 (LEFT KICK PANEL)
1H	18	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1I		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ET1	32 (5S-FE) 34 (4A-FE)	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)
BP1	38 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
BP2	40 (C/P)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	32 (5S-FE) 34 (4A-FE)	FRONT RIGHT FENDER
EB	32 (5S-FE) 34 (4A-FE)	FRONT LEFT FENDER
ID	36	LEFT KICK PANEL
BL	38 (L/B) 40 (C/P)	BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	32 (5S-FE) 34 (4A-FE)	ENGINE ROOM MAIN WIRE	B11	38 (L/B) 40 (C/P)	LUGGAGE ROOM WIRE
E 4	32 (5S-FE) 34 (4A-FE)		B13	38 (L/B) 40 (C/P)	


C16 BLACK

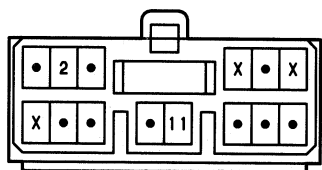


F 5, F 6




F 7, F 8 GRAY

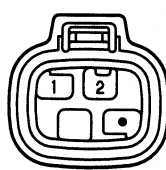

F10 BLACK

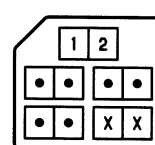

J 6

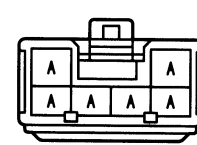


(HINT:SEE PAGE 7)

L 1



R10

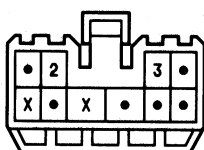

R12, R13

