



FOG LIGHT AND HEADLIGHT (CANADA)

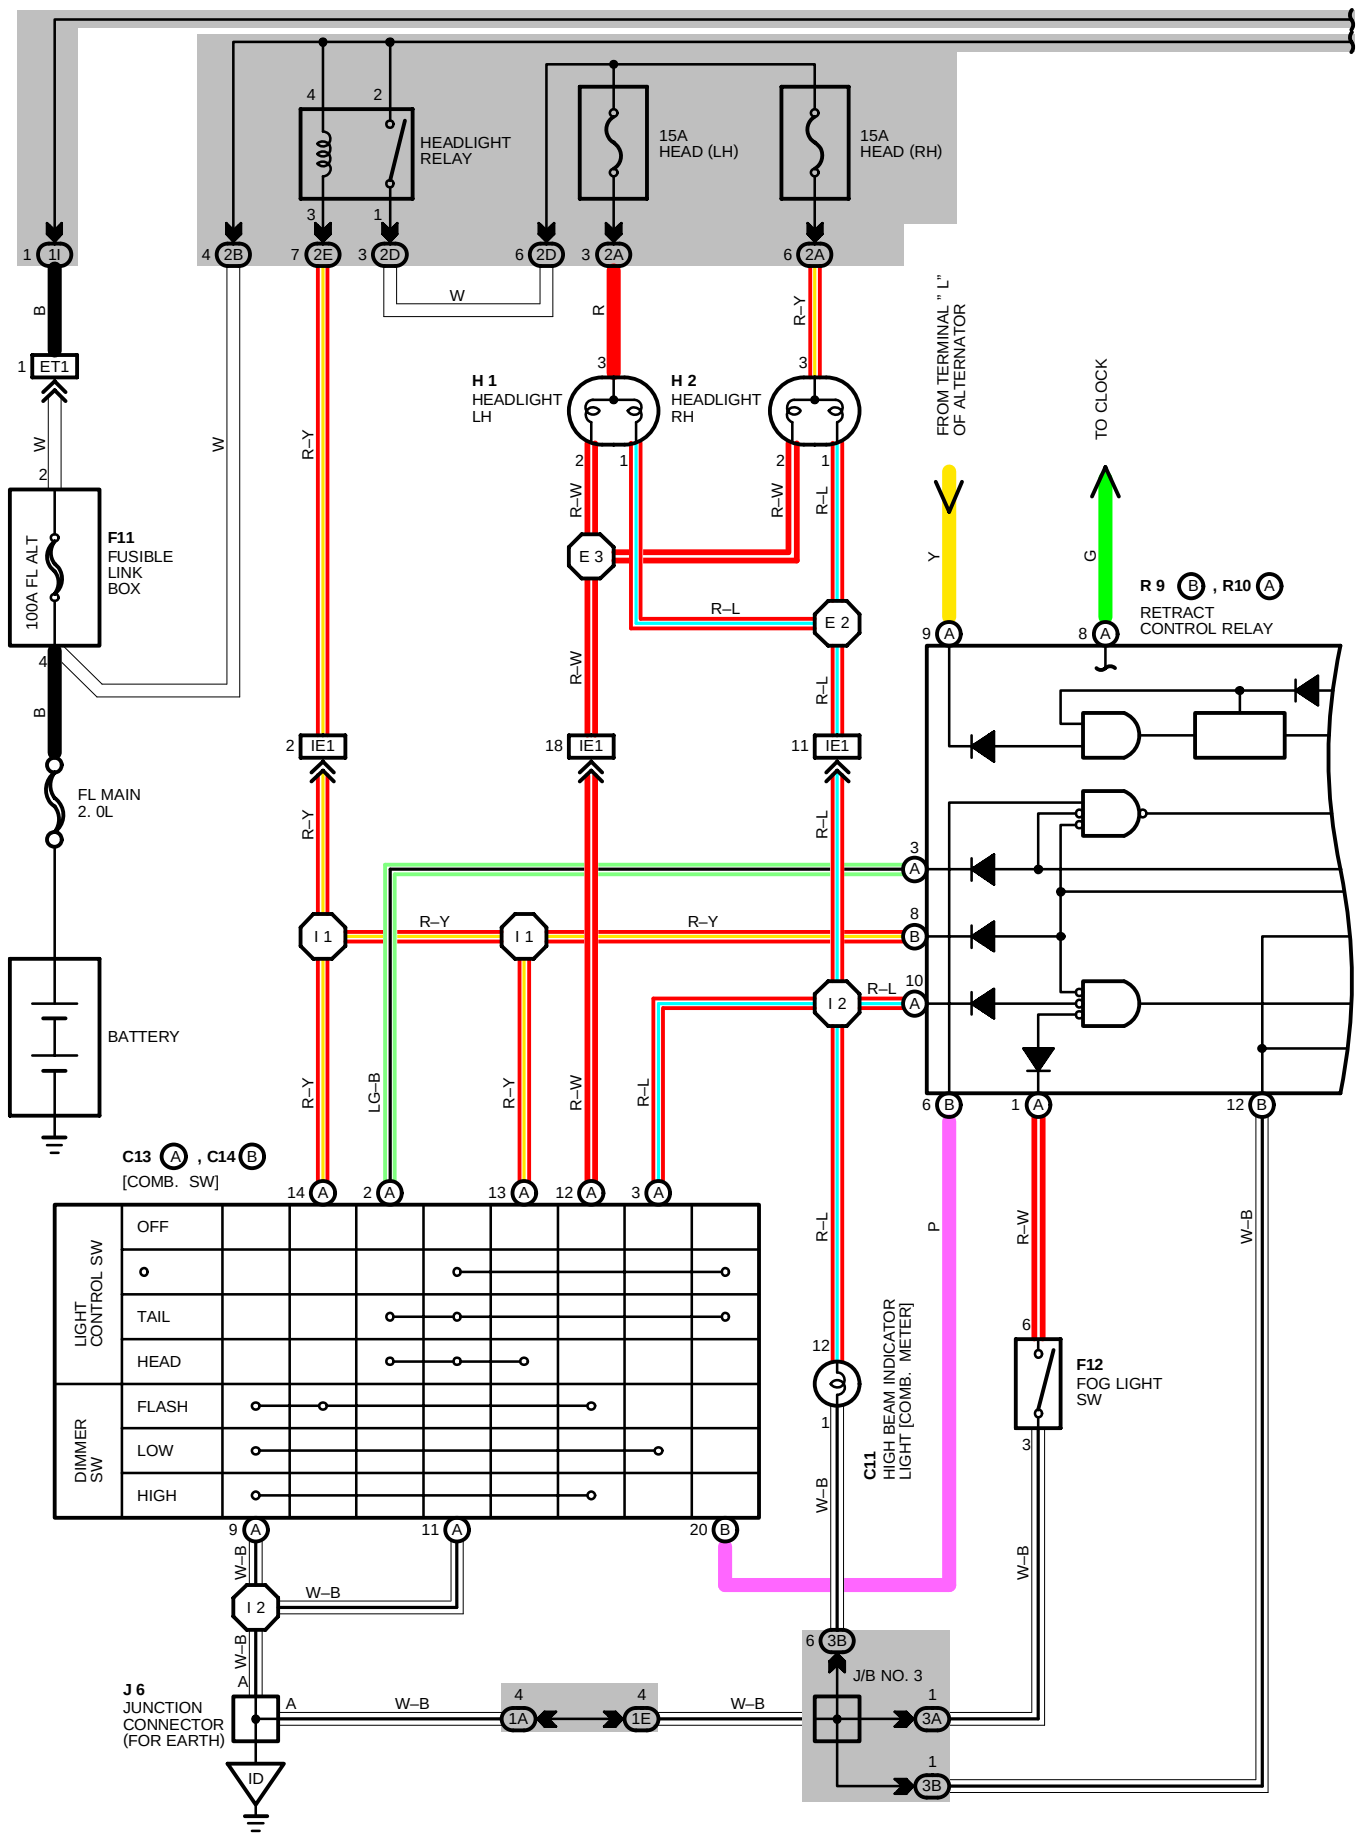

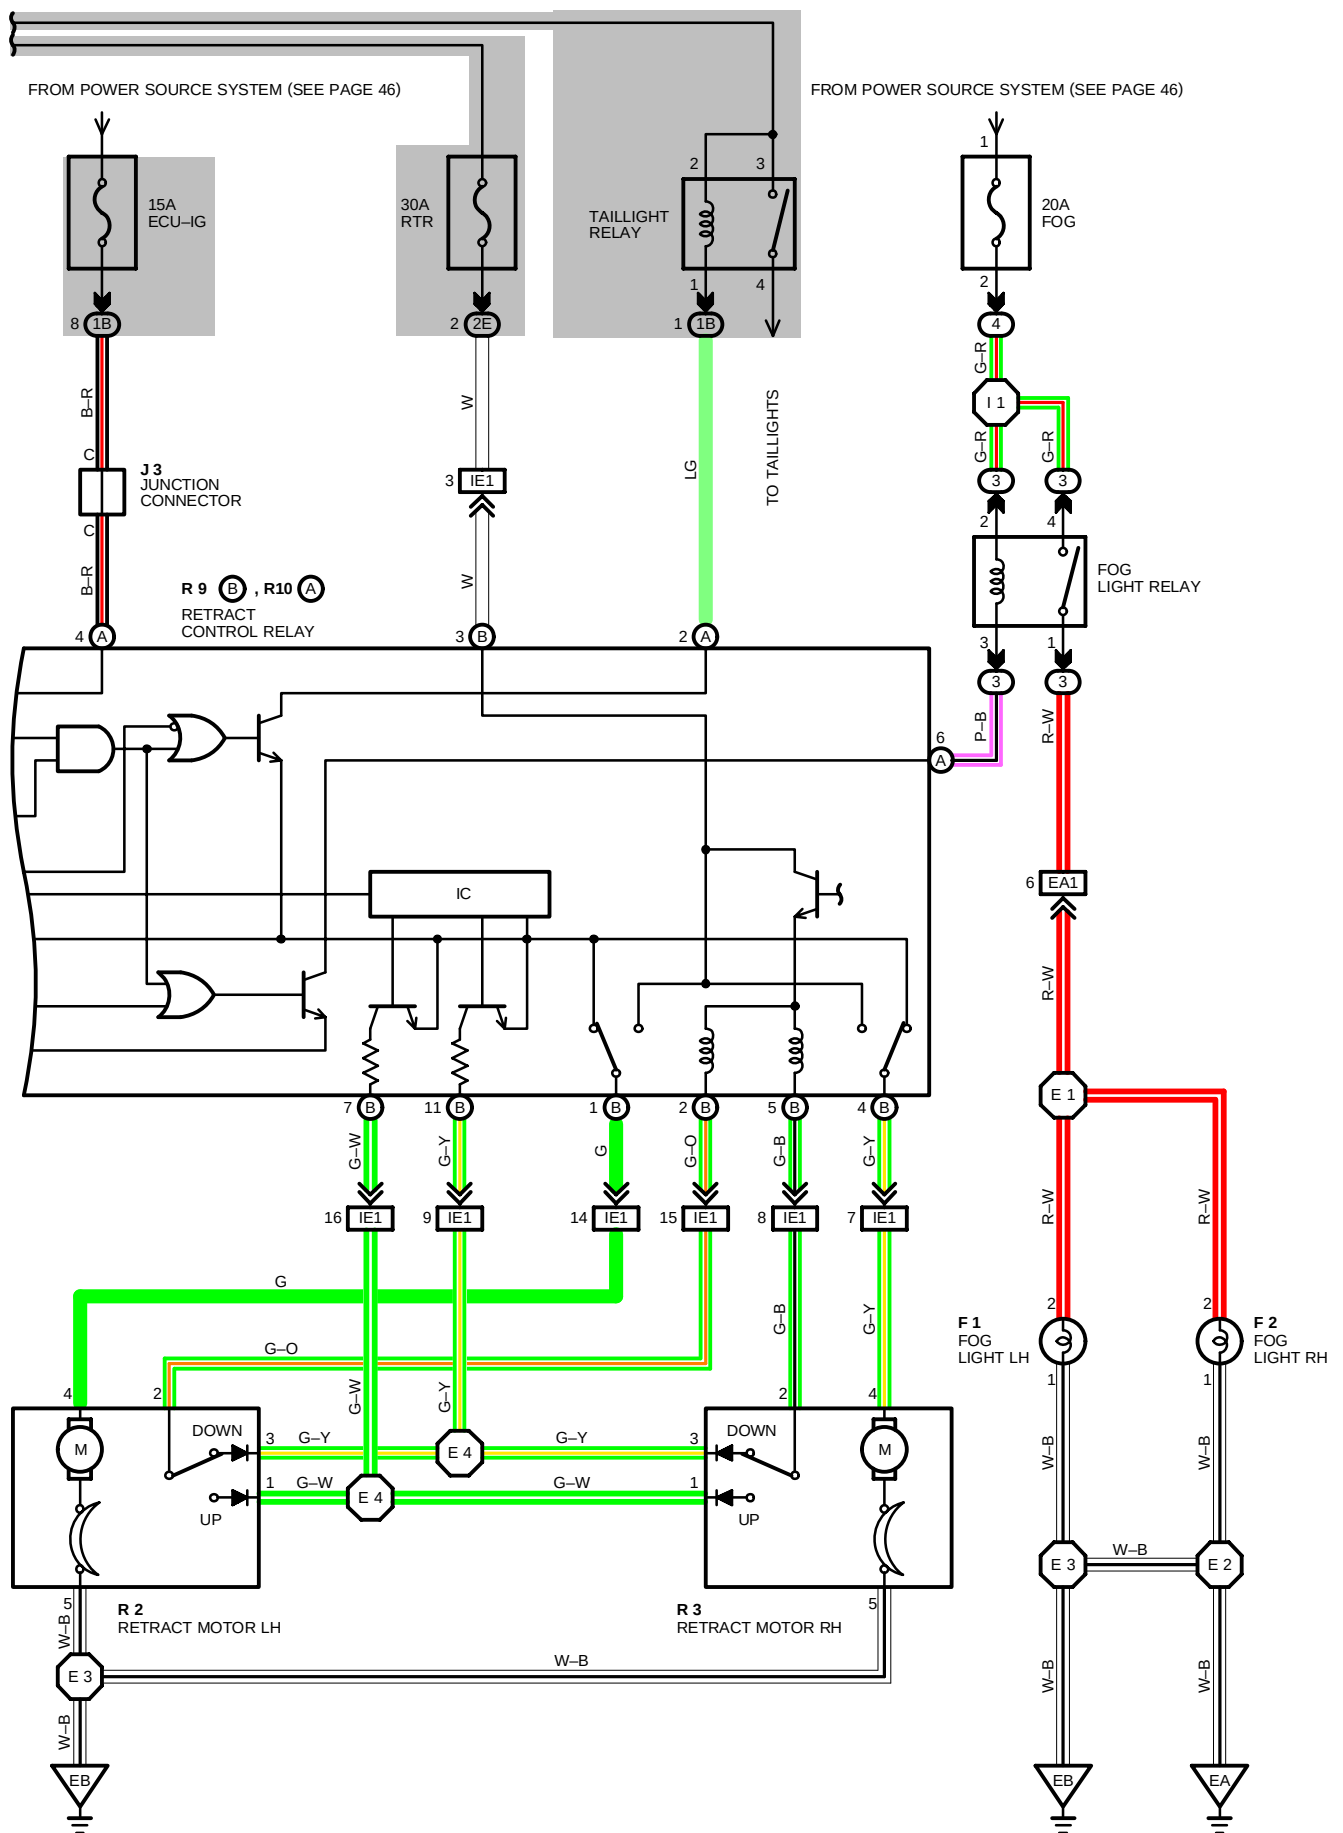

FOG LIGHT AND HEADLIGHT (CANADA)

SYSTEM OUTLINE

CURRENT FROM THE BATTERY FLOWS CONTINUOUSLY FROM FL 2.0L → FL ALT → TAILLIGHT RELAY (COIL SIDE) → **TERMINAL (A) 2** OF RETRACT CONTROL RELAY, FL 2.0L → HEADLIGHT RELAY (COIL SIDE) → **TERMINAL (B) 8** OF RETRACT CONTROL RELAY.

WHEN THE IGNITION SW IS TURNED ON, THE CURRENT FLOWING THROUGH THE ECU-IG FUSE FLOWS TO **TERMINAL (A) 4** OF THE RETRACT CONTROL RELAY.

DAYTIME RUNNING LIGHT OPERATION

WHEN THE ENGINE IS STARTED, VOLTAGE IS GENERATED AT **TERMINAL L** OF THE ALTERNATOR AND VOLTAGE IS APPLIED TO **TERMINAL (A) 9** OF THE RETRACT CONTROL RELAY, CAUSING THE RETRACT CONTROL RELAY TO OPERATE SO THAT THE TAILLIGHT RELAY AND FOG LIGHT RELAY TURN ON. THIS CAUSES CURRENT TO FLOW FROM THE TAILLIGHT RELAY (POINT SIDE) → TAIL FUSE → EACH TAILLIGHT, AND FOG LIGHT RELAY (POINT SIDE) → FOG LIGHTS.

ACCORDINGLY, EVEN WHEN THE LIGHT CONTROL SW IS IN **OFF** POSITION, EACH OF THE LIGHTS JUST MENTIONED LIGHTS UP.

THIS SYSTEM CONTINUES TO OPERATE UNTIL THE IGNITION SW IS TURNED OFF.

SERVICE HINTS

R 9(B), R10(A) RETRACT CONTROL RELAY

(A) 2, (B) 3, (B) 8—GROUND: ALWAYS APPROX. **12** VOLTS

(A) 4—GROUND : APPROX. **12** VOLTS WITH IGNITION SW AT **ON** POSITION

(B) 6—GROUND : NO CONTINUITY WITH LIGHT CONTROL SW AT **OFF** OR **HEAD** POSITION
CONTINUITY WITH LIGHT CONTROL SW AT **HOLD** OR **TAIL** POSITION

(A) 3—GROUND : NO CONTINUITY WITH LIGHT CONTROL SW AT **OFF** OR **HOLD** POSITION
CONTINUITY WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

(B) 8—GROUND : NO CONTINUITY WITH LIGHT CONTROL SW AT **OFF**, **HOLD** OR **TAIL** POSITION
CONTINUITY WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

(B)12—GROUND : ALWAYS CONTINUITY

(B) 2, (B) 5—(B)11 : NO CONTINUITY WITH RETRACT MOTOR AT **LOWERMOST** POSITION
CONTINUITY WITH RETRACT MOTOR AT **ANY** POSITION EXCEPT **LOWERMOST** POSITION

(B) 2, (B) 5—(B) 7 : NO CONTINUITY WITH RETRACT MOTOR AT **UPPERMOST** POSITION
CONTINUITY WITH RETRACT MOTOR AT **ANY** POSITION EXCEPT **UPPERMOST** POSITION

R 2, R 3 RETRACT MOTOR

2-3 : OPEN WITH RETRACT MOTOR AT **LOWERMOST** POSITION

2-1 : OPEN WITH RETRACT MOTOR AT **UPPERMOST** POSITION

C13 (A) DIMMER SW [COMB. SW]

9-12 : CLOSED WITH DIMMER SW AT **HIGH** OR **FLASH** POSITION

FOG LIGHT RELAY

1-4 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION, DIMMER SW AT **LOW** POSITION AND FOG LIGHT SW ON
CLOSED WITH ENGINE RUNNING

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C11	26	F11	25	J 6	26
C13	A 26	F12	26	R 2	25
C14	B 26	H 1	25	R 3	25
F 1	25	H 2	25	R 9	B 26
F 2	25	J 3	26	R10	A 26

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
3	23	R/B NO. 3 (RIGHT KICK PANEL)
4	24	R/B NO. 4 (RIGHT KICK PANEL)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1E		
1I	18	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2A	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2B	20	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2D	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2E		
3A	22	COWL WIRE AND J/B NO.3 (BEHIND COMBINATION METER)
3B		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	28	COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER)
ET1	28	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)
IE1	30	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)


 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	28	FRONT RIGHT FENDER
EB	28	FRONT LEFT FENDER
ID	30	LEFT KICK PANEL


 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	28	ENGINE ROOM MAIN WIRE	E 4	28	ENGINE ROOM MAIN WIRE
E 2			I 1	32	COWL WIRE
E 3			I 2		


C11

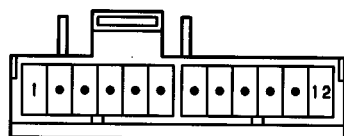

C13 (A) BLACK

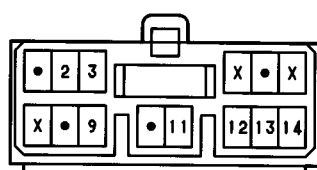


C14 (B) BLACK

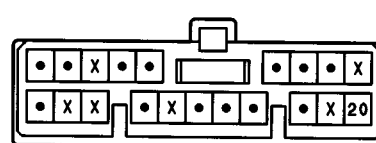

F 1, F 2




F11 BLACK

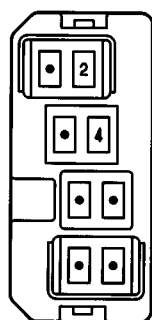


F12 BLACK



H 1, H 2 BROWN

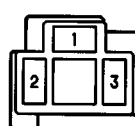


J 3

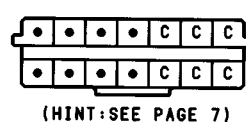

(HINT:SEE PAGE 7)

J 6

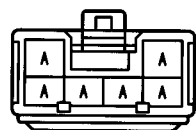


(HINT:SEE PAGE 7)

R 2, R 3 BLACK



R 9 (B)



R10 (A)

