


CIGARETTE LIGHTER AND CLOCK

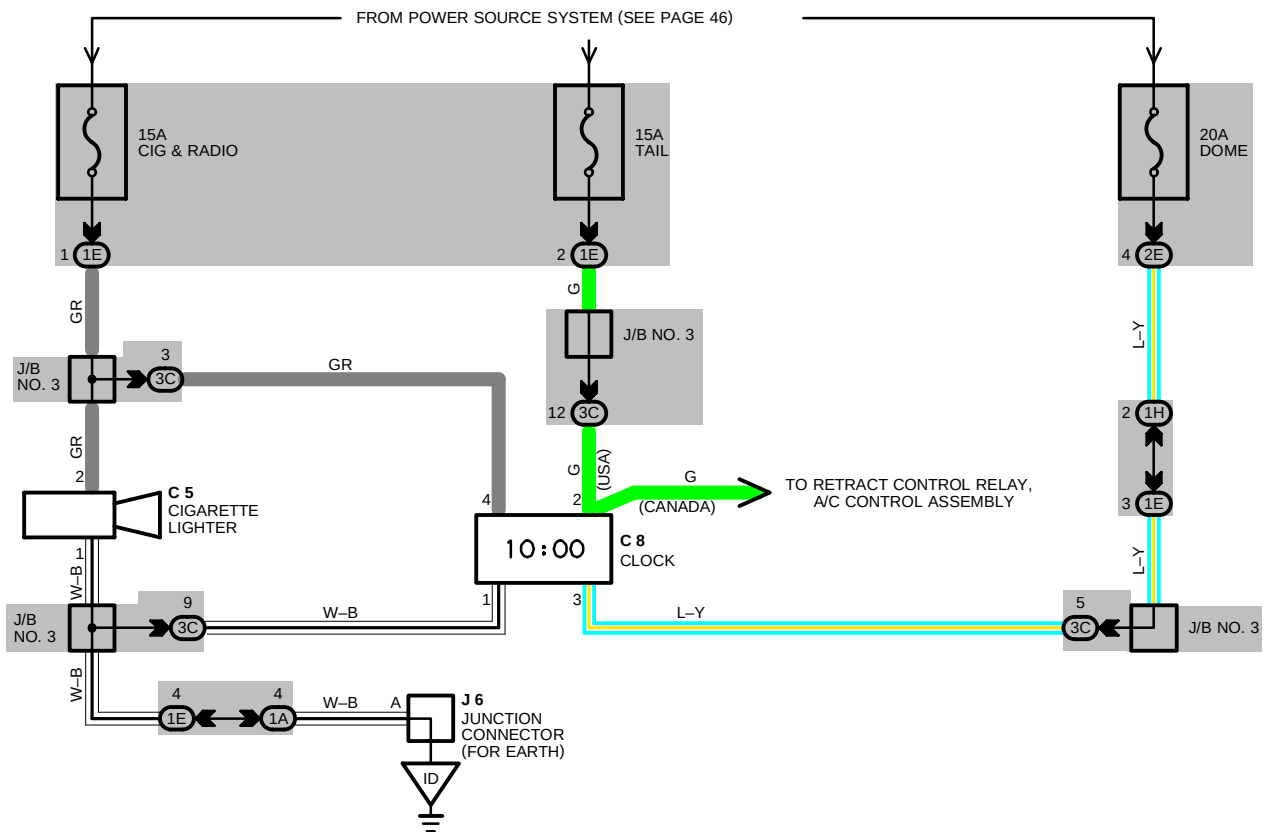

SERVICE HINTS

C 5 CIGARETTE LIGHTER

- 2-GROUND : APPROX. **12** VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
1-GROUND : ALWAYS CONTINUITY

C 8 CLOCK

- 3-GROUND : ALWAYS APPROX. **.12 VOLTS** (POWER FOR CLOCK)
 4-GROUND : APPROX. **.12 VOLTS** WITH IGNITION SW AT **ACC** OR **ON** POSITION (POWER FOR INDICATION)
 2-GROUND : APPROX. **.12 VOLTS** WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
 APPROX. **.12 VOLTS** WITH ENGINE RUNNING (CANADA)
 1-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 5	26	C 8	26	J 6	26

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
1H	18	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2E	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
3C	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	30	LEFT KICK PANEL

