


Position of Parts in Engine Compartment

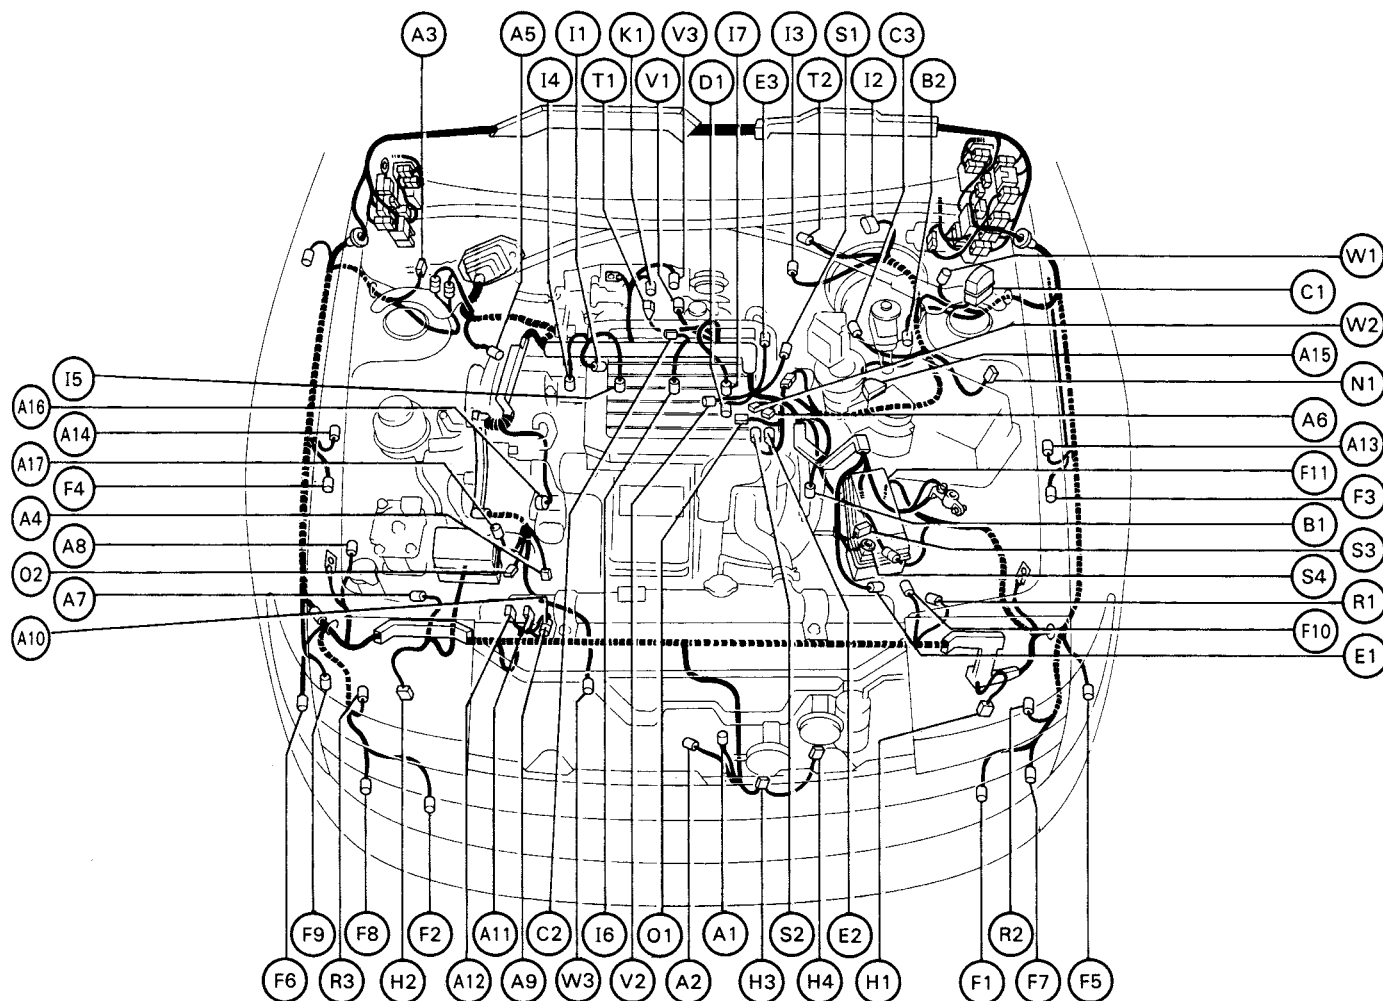

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 3 A/C Idle-Up VSV
 A 4 A/C Magnet Clutch and Compressor Sensor
 A 5 A/C Pressure SW
 A 6 A/C Water Temp. SW
 A 7 ABS Actuator
 A 8 ABS Actuator
 A 9 ABS Check Connector
 A 10 ABS Check Connector
 A 11 ABS Relay
 A 12 ABS Relay
 A 13 ABS Speed Sensor Front LH
 A 14 ABS Speed Sensor Front RH
 A 15 Air Flow Meter
 A 16 Alternator
 A 17 Alternator

B 1 Back-Up Light SW
 B 2 Brake Fluid Level SW

C 1 Check Connector
 C 2 Cold Start Injector
 C 3 Cruise Control Actuator

D 1 Distributor

E 1 EFI Resistor
 E 2 EFI Water Temp. Sensor
 E 3 EGR Gas Temp. Sensor (for California)

F 1 Fog Light LH
 F 2 Fog Light RH
 F 3 Front Airbag Sensor LH
 F 4 Front Airbag Sensor RH
 F 5 Front Side Marker Light LH
 F 6 Front Side Marker Light RH
 F 7 Front Turn Signal Light and Clearance Light LH
 F 8 Front Turn Signal Light and Clearance Light RH
 F 9 Front Wiper Motor
 F 10 Fuel Pump Resistor
 F 11 Fusible Link Box

H 1 Headlight LH
 H 2 Headlight RH
 H 3 Horn
 H 4 Horn

I 1 ISC Valve
 I 2 Igniter
 I 3 Ignition Coil
 I 4 Injector No. 1
 I 5 Injector No. 2
 I 6 Injector No. 3
 I 7 Injector No. 4

K 1 Knock Sensor

N 1 Noise Filter (for Ignition System)

O 1 Oil Pressure SW
 O 2 Oxygen Sensor

R 1 Radiator Fan Motor
 R 2 Retract Motor LH
 R 3 Retract Motor RH

S 1 Speed Sensor (for Cruise Control System)
 S 2 Start Injector Time SW
 S 3 Starter
 S 4 Starter


T 1 Throttle Position Sensor
 T 2 Turbo Charging Pressure Sensor

V 1 VSV (for EGR System)
 V 2 VSV (for Turbo Charging Pressure)
 V 3 VSV (for T-VIS)

W 1 Washer Motor
 W 2 Water Temp. Sender
 W 3 Water Temp. SW (for Fans control)

ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

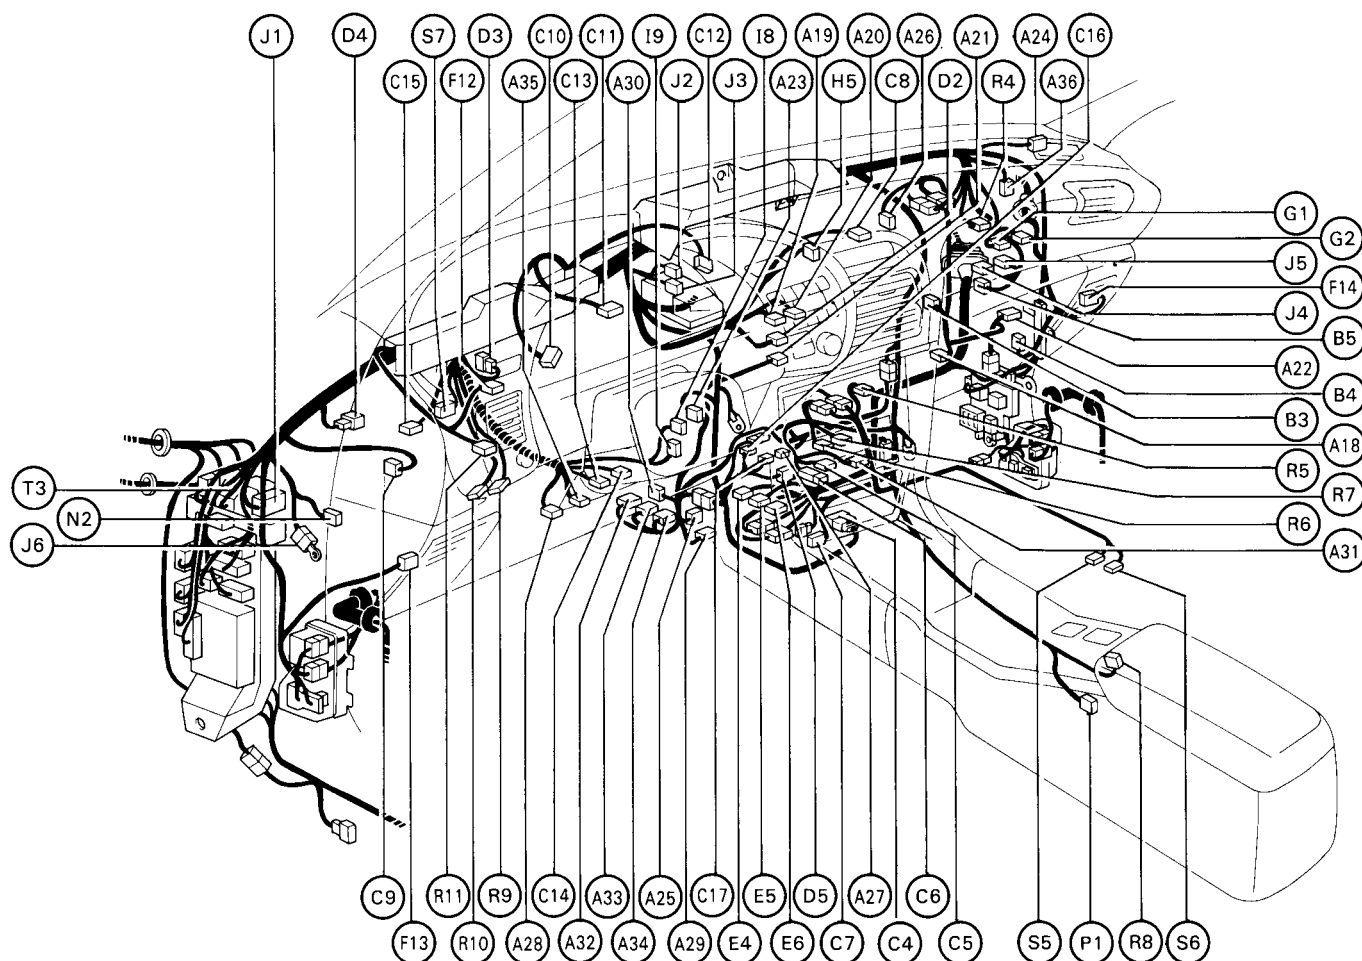

A 18 A/C Amplifier
 A 19 A/C Control Assembly
 A 20 A/C Control Assembly
 A 21 A/C Control Assembly
 A 22 A/C Power Transistor
 A 23 A/C Room Temp. Sensor
 A 24 A/C Solar Sensor
 A 25 A/C System Amplifier
 A 26 A/C Thermistor
 A 27 A/C Water Temp. Sensor
 A 28 Airbag Squib
 A 29 Air Mix Control Servo Motor
 A 30 Air Vent Mode Control Servo Motor
 A 31 Ashtray
 A 32 Auto A/C Amplifier
 A 33 Auto A/C Amplifier
 A 34 Auto A/C Amplifier
 A 35 Auto Tilt Away Actuator
 A 36 Auto Tilt Away ECU

B 3 Blower Control Relay
 B 4 Blower Motor
 B 5 Blower Resistor
 C 4 Center Airbag Sensor Assembly
 C 5 Cigarette Lighter
 C 6 Cigarette Lighter Illumination
 C 7 Circuit Opening Relay

C 8 Clock
 C 9 Clutch Start SW
 C 10 Combination Meter
 C 11 Combination Meter
 C 12 Combination Meter
 C 13 Combination SW
 C 14 Combination SW
 C 15 Cruise Control Clutch SW
 C 16 Cruise Control ECU
 C 17 Cruise Control ECU

D 2 Defogger SW
 D 3 Diode (for Cruise Control System)
 D 4 Diode (for Key Off)
 D 5 Door Lock ECU

E 4 Engine ECU
 E 5 Engine ECU
 E 6 Engine ECU

F 12 Fog Light SW
 F 13 Front Speaker LH
 F 14 Front Speaker RH

G 1 Glove Box Light
 G 2 Glove Box Light SW

H 5 Hazard SW

I 8 Ignition Key Cylinder Light
 I 9 Ignition SW and Unlock Warning SW

J 1 Junction Connector
 J 2 Junction Connector
 J 3 Junction Connector
 J 4 Junction Connector
 J 5 Junction Connector
 J 6 Junction Connector (for Earth)

N 2 Noise Filter (for Defogger System)

P 1 Parking Brake SW

R 4 RECIRC/FRESH Control Servo Motor

R 5 Radio and Player (w/ CD Player)

R 6 Radio and Player (w/o CD Player)

R 7 Radio and Player (w/o CD Player)

R 8 Remote Control Mirror SW

R 9 Retract Control Relay

R 10 Retract Control Relay (for CANADA)

R 11 Rheostat


S 5 Stereo Component Amplifier (w/ CD Player)

S 6 Stereo Component Amplifier (w/ CD Player)

S 7 Stop Light and Cruise Control Stop SW

T 3 Turn Signal Flasher

Position of Parts in Body

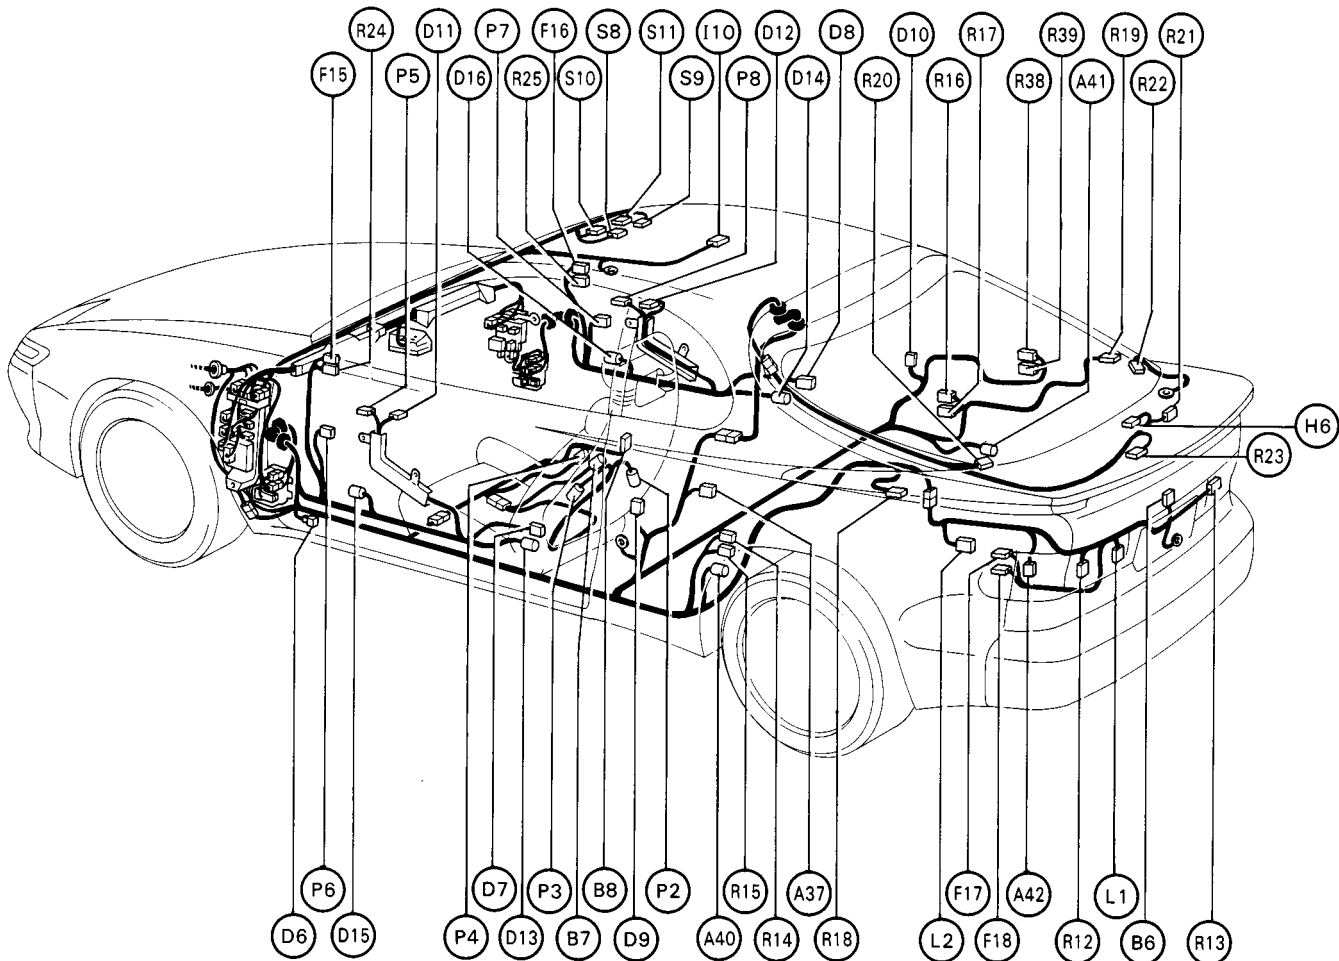

A 37 ABS Deceleration Sensor
 A 38 ABS ECU
 A 39 ABS ECU
 A 40 ABS Speed Sensor Rear LH
 A 41 ABS Speed Sensor Rear RH
 A 42 Auto Antenna Control Relay and Motor

B 6 Back Door Courtesy SW
 B 7 Buckle SW (w/ Power Seat)
 B 8 Buckle SW (w/o Power Seat)

D 6 Diode (for Interior Light System)
 D 7 Door Courtesy Light LH
 D 8 Door Courtesy Light RH
 D 9 Door Courtesy SW LH
 D 10 Door Courtesy SW RH
 D 11 Door Lock Control SW LH
 D 12 Door Lock Control SW RH
 D 13 Door Lock Motor LH and, Key Lock and Unlock SW LH
 D 14 Door Lock Motor RH and, Key Lock and Unlock SW RH
 D 15 Door Speaker LH
 D 16 Door Speaker RH

F 15 Front Tweeter (Speaker) LH
 F 16 Front Tweeter (Speaker) RH
 F 17 Fuel Pump
 F 18 Fuel Sender

H 6 High Mount Stop Light

I 10 Interior Light

L 1 License Plate Light
 L 2 Luggage Compartment Light

P 2 Power Seat Motor (for Lumbar Support)
 P 3 Power Seat Motor (for Side Support)
 P 4 Power Seat SW
 P 5 Power Window Master SW
 P 6 Power Window Motor LH
 P 7 Power Window Motor RH
 P 8 Power Window SW RH


R 12 Rear Combination Light LH
 R 13 Rear Combination Light RH
 R 14 Rear Speaker LH
 R 15 Rear Speaker LH
 R 16 Rear Speaker RH
 R 17 Rear Speaker RH
 R 18 Rear Tweeter (Speaker) LH
 R 19 Rear Tweeter (Speaker) RH
 R 20 Rear Window Defogger (+, w/o Diversity Antenna)
 R 21 Rear Window Defogger (+, w/ Diversity Antenna)
 R 22 Rear Window Defogger (-)
 R 23 Rear Wiper Control Relay and Motor
 R 24 Remote Control Mirror LH
 R 25 Remote Control Mirror RH

S 8 Sun Roof Control Relay
 S 9 Sun Roof Control SW and Personal Light
 S 10 Sun Roof Limit SW
 S 11 Sun Roof Motor


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

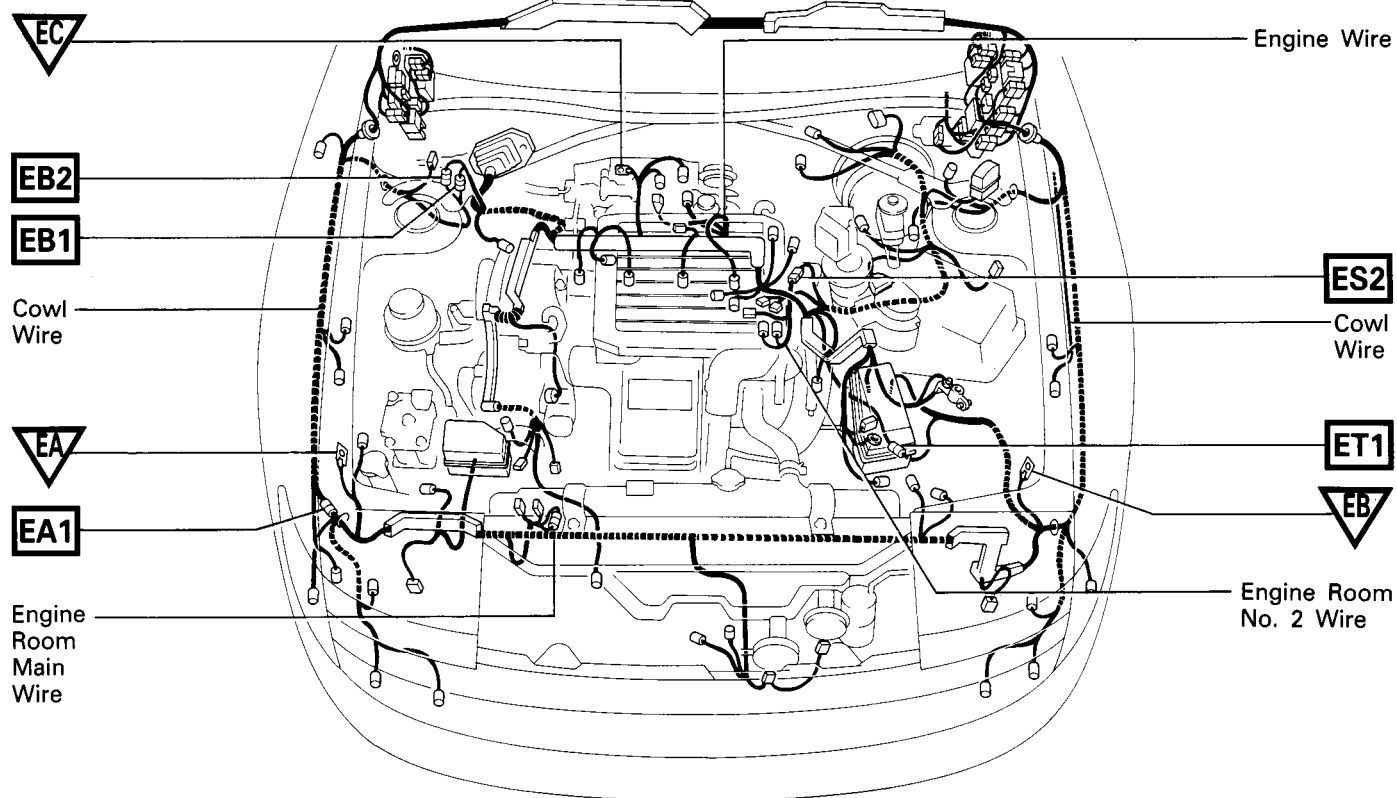

○ : Location of Splice Points

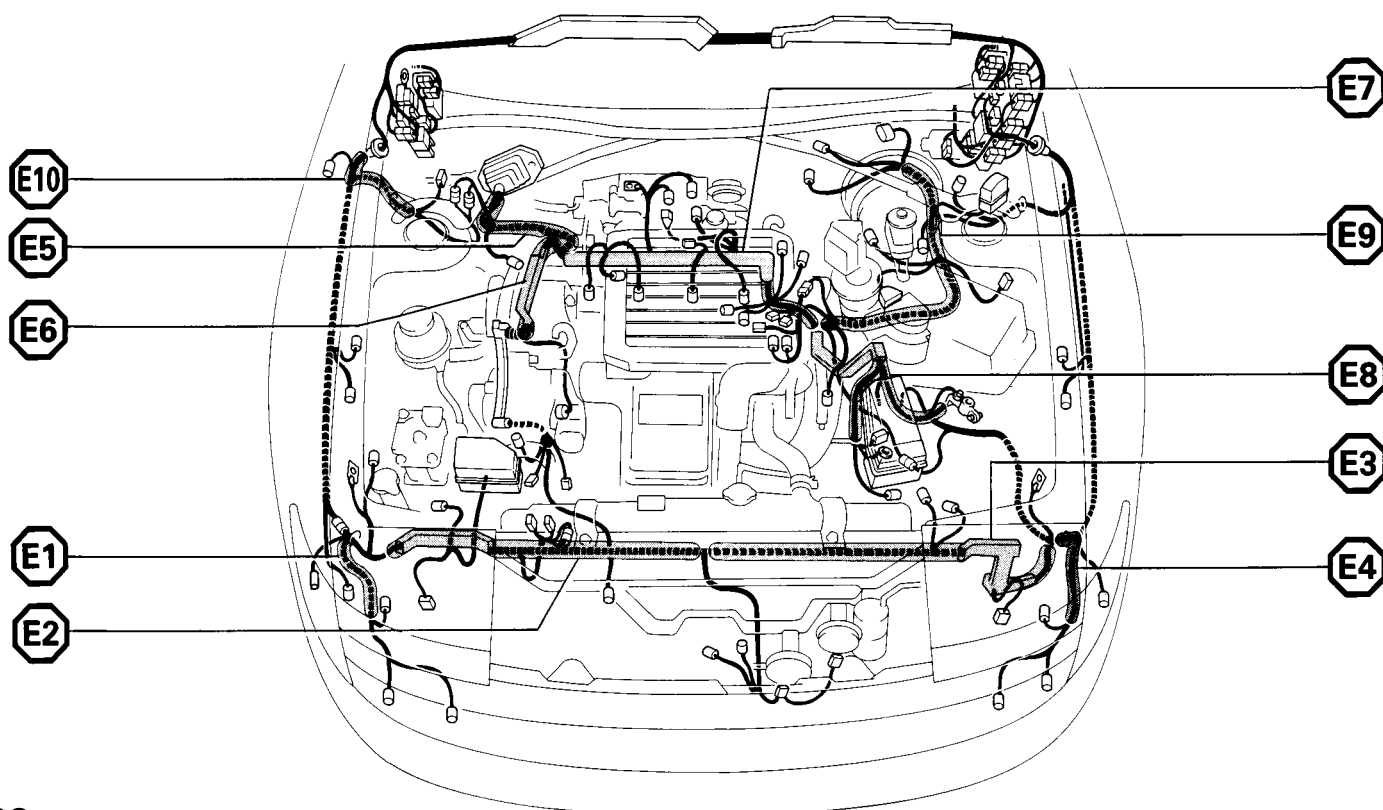


Connector Joining Wire Harness and Wire Harness

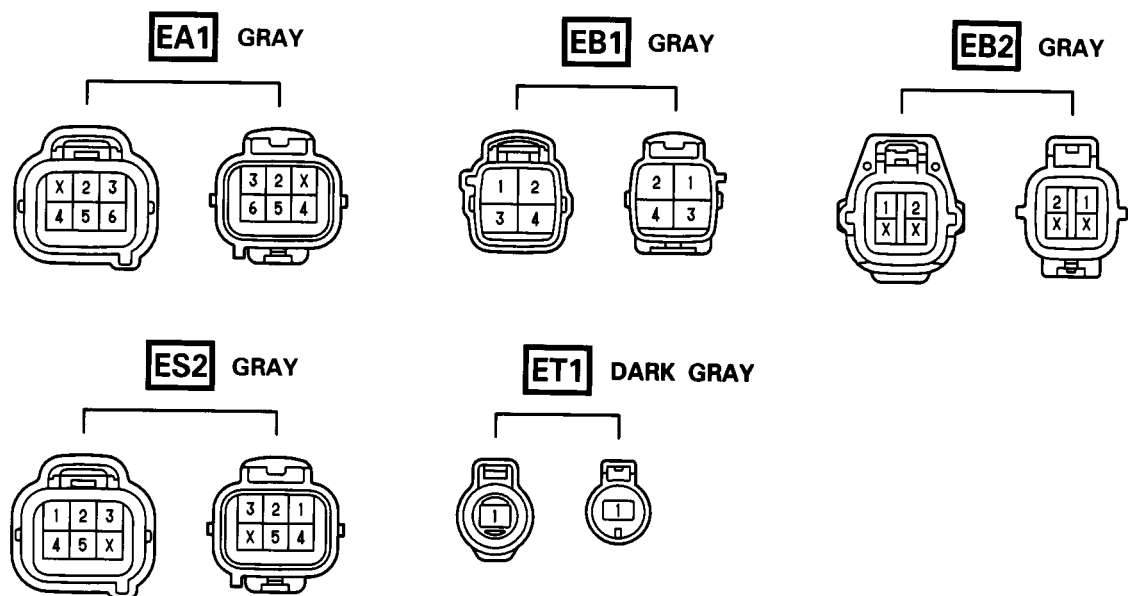


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER)
EB1	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
EB2	
ES2	ENGINE WIRE AND ENGINE ROOM NO. 2 WIRE (NEAR THE DISTRIBUTOR)
ET1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

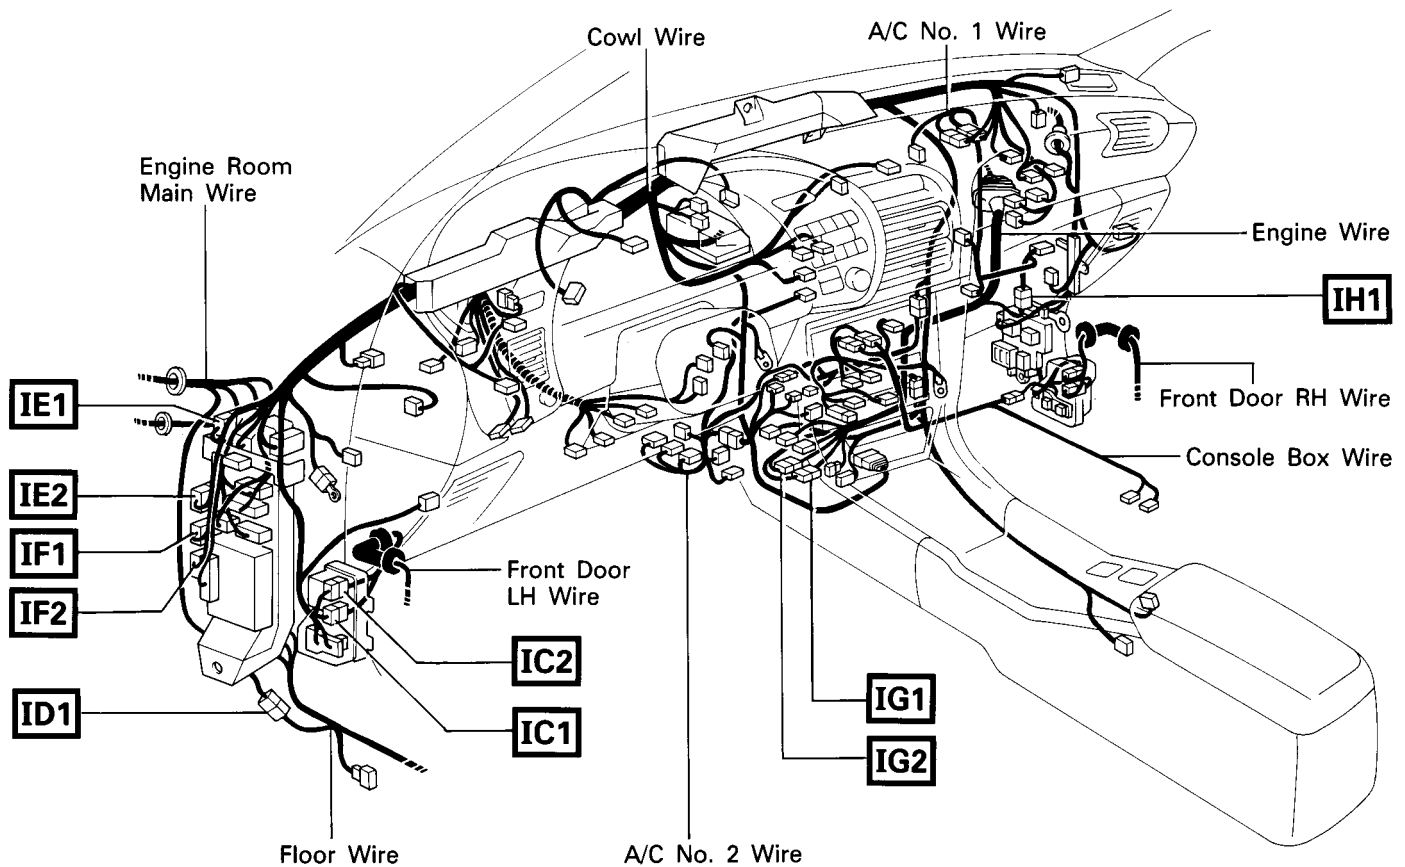

▽ : Location of Ground Points

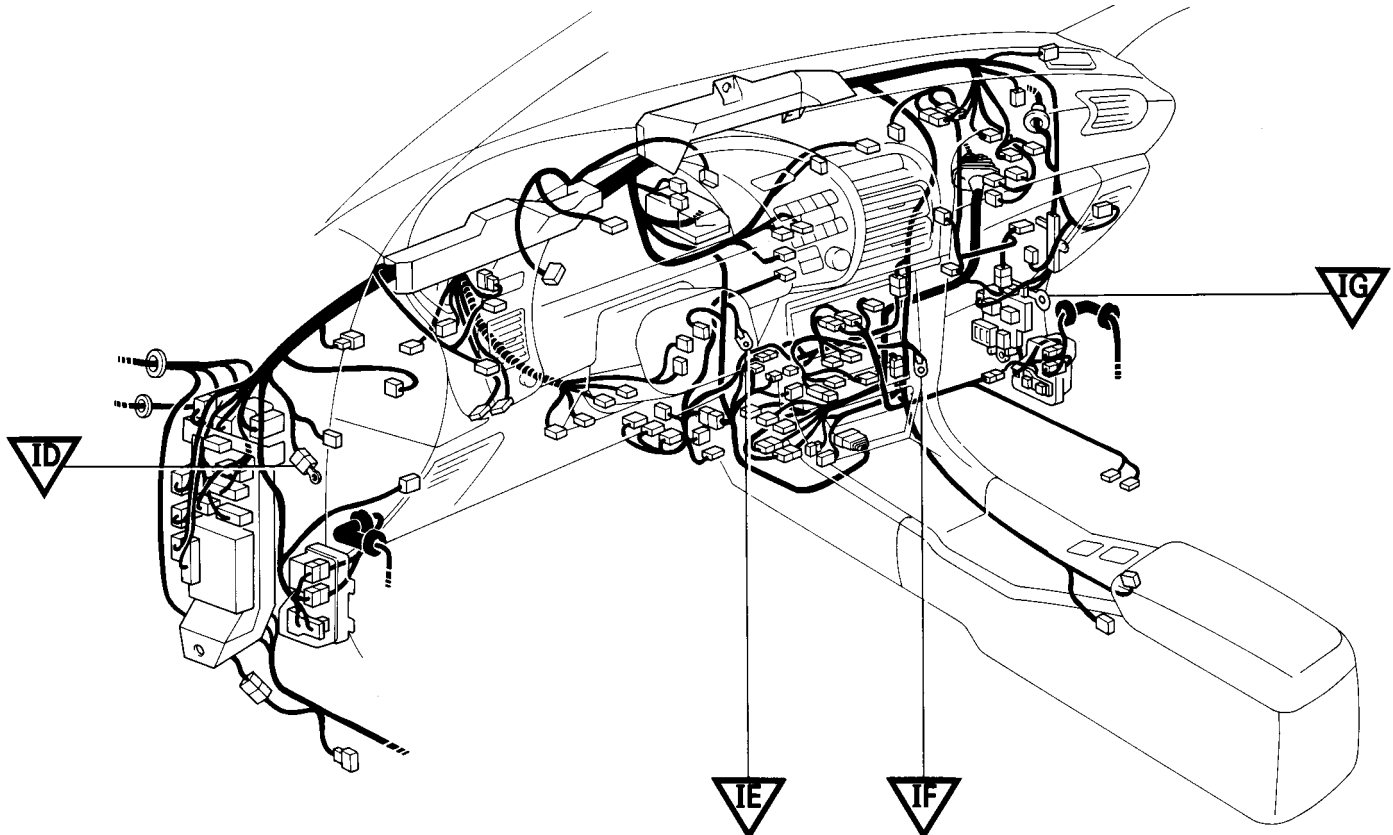

Connector Joining Wire Harness and Wire Harness

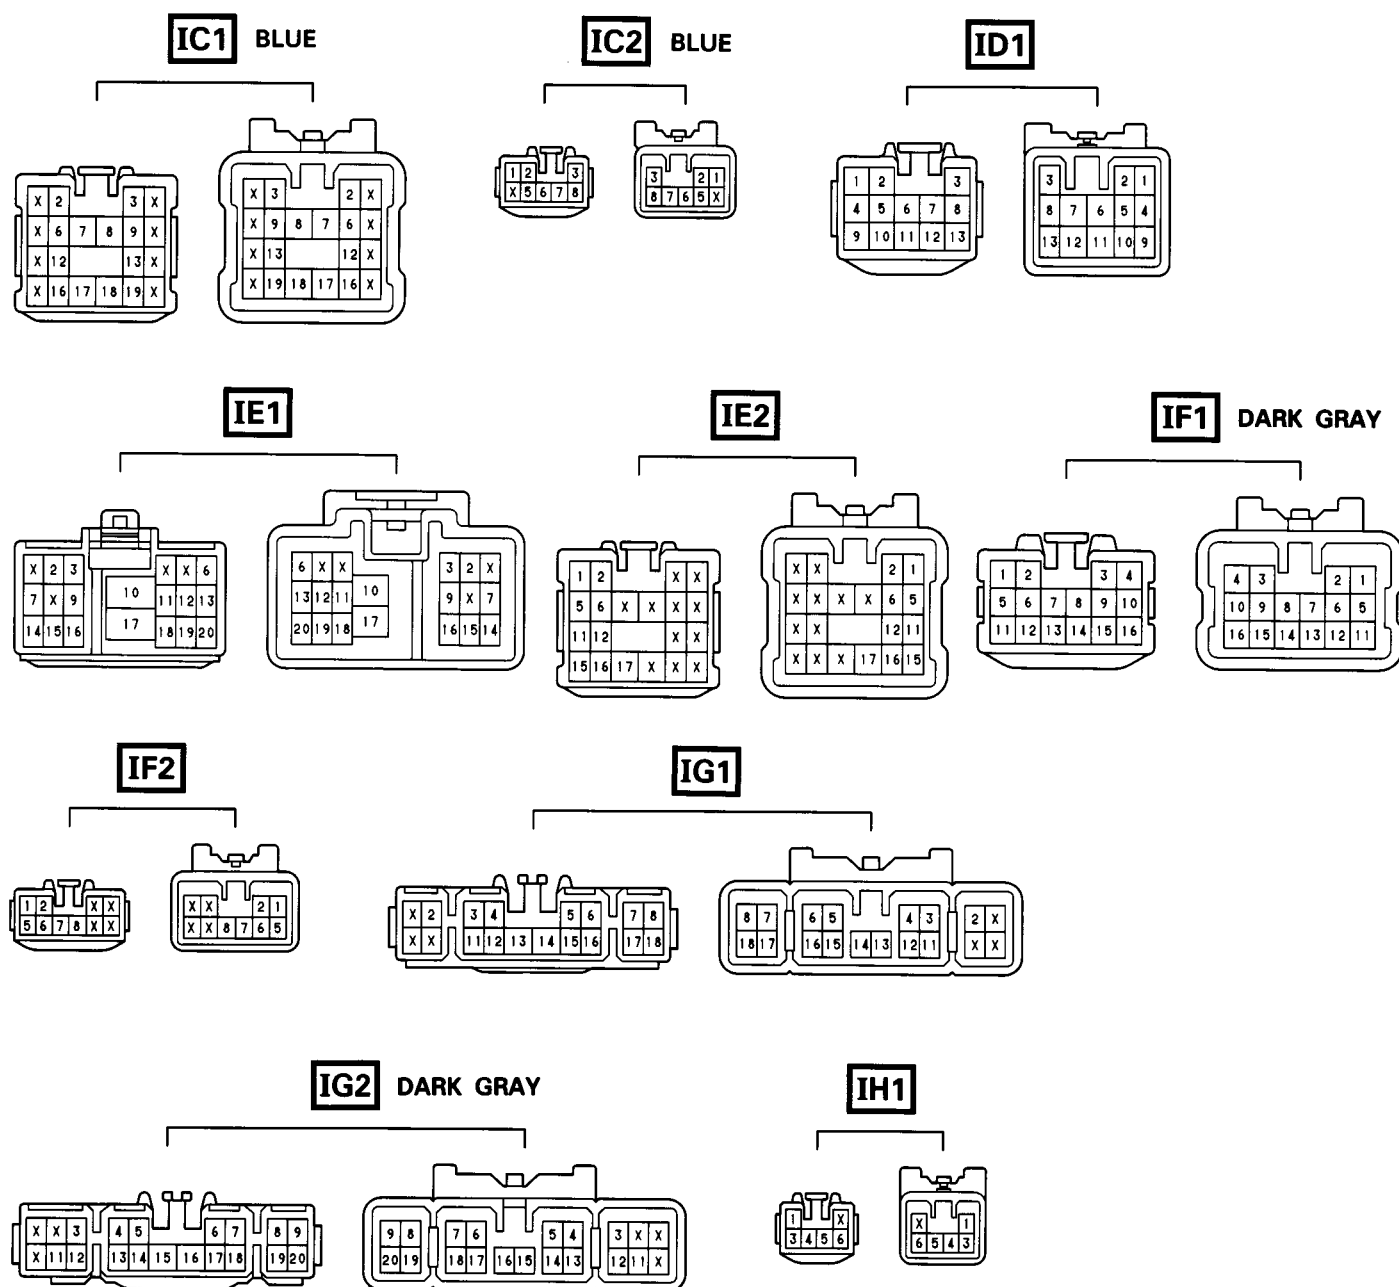


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IC2	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
ID1	ENGINE ROOM MAIN WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IE1	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IE2	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IF2	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
IG2	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
IH1	ENGINE WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

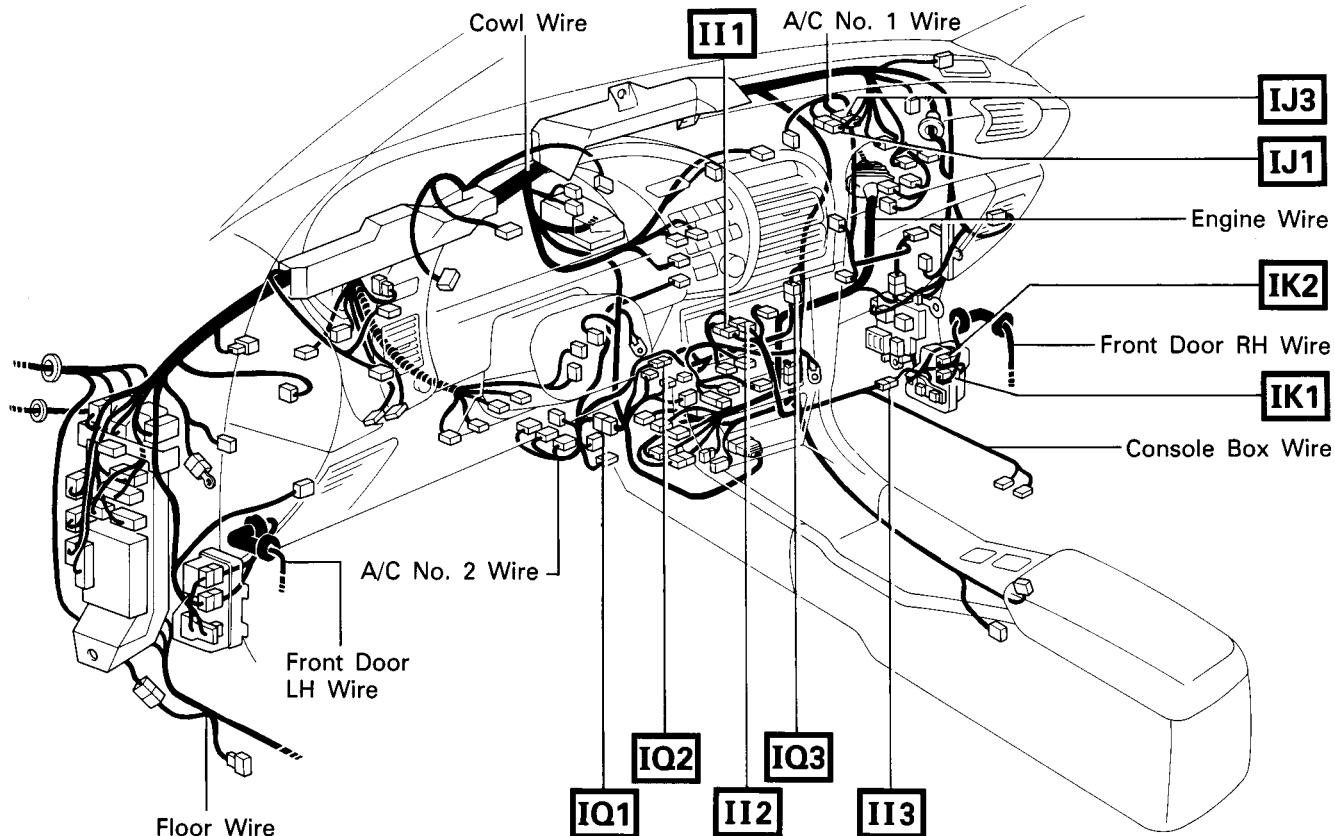

○ : Location of Splice Points

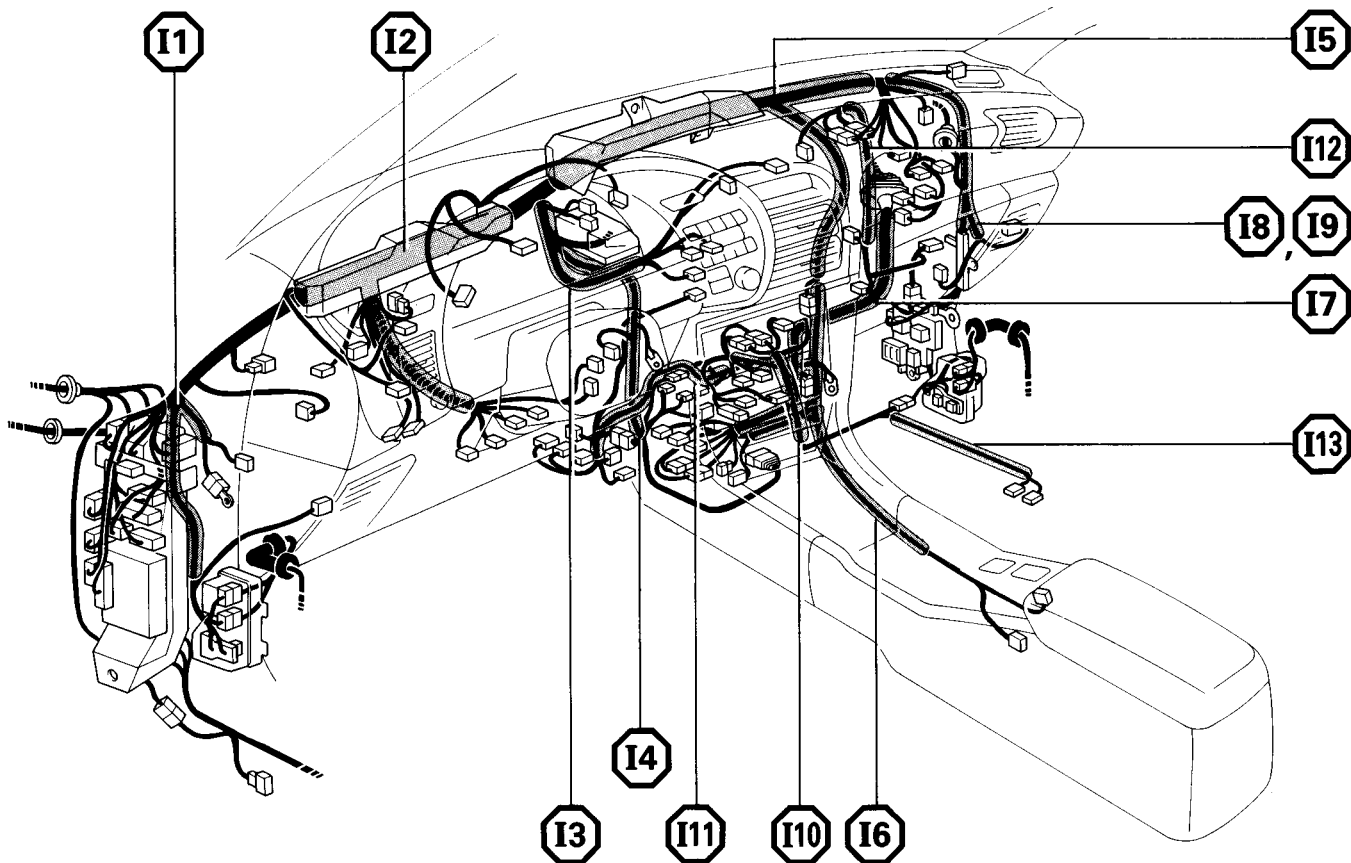

Connector Joining Wire Harness and Wire Harness

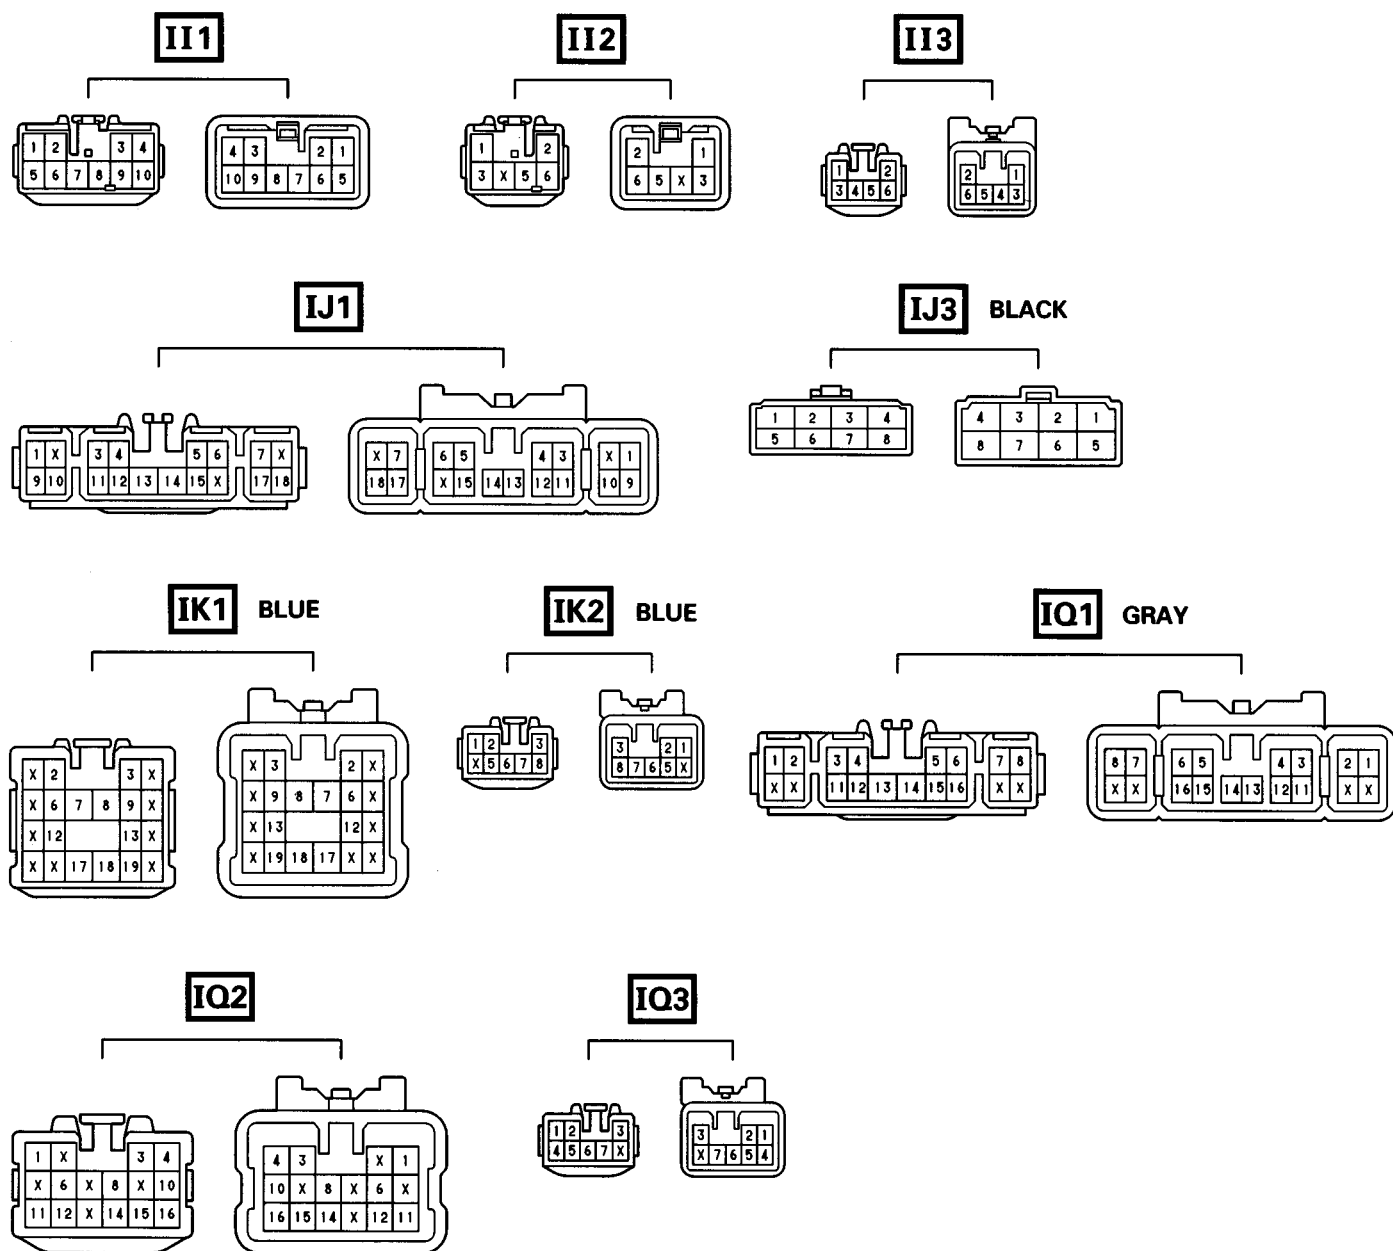


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
II1	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
II2	
II3	
IJ1	COWL WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)
IJ3	
IK1	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IK2	
IQ1	COWL WIRE AND A/C NO. 2 WIRE (BESIDE HEATER UNIT)
IQ2	
IQ3	


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

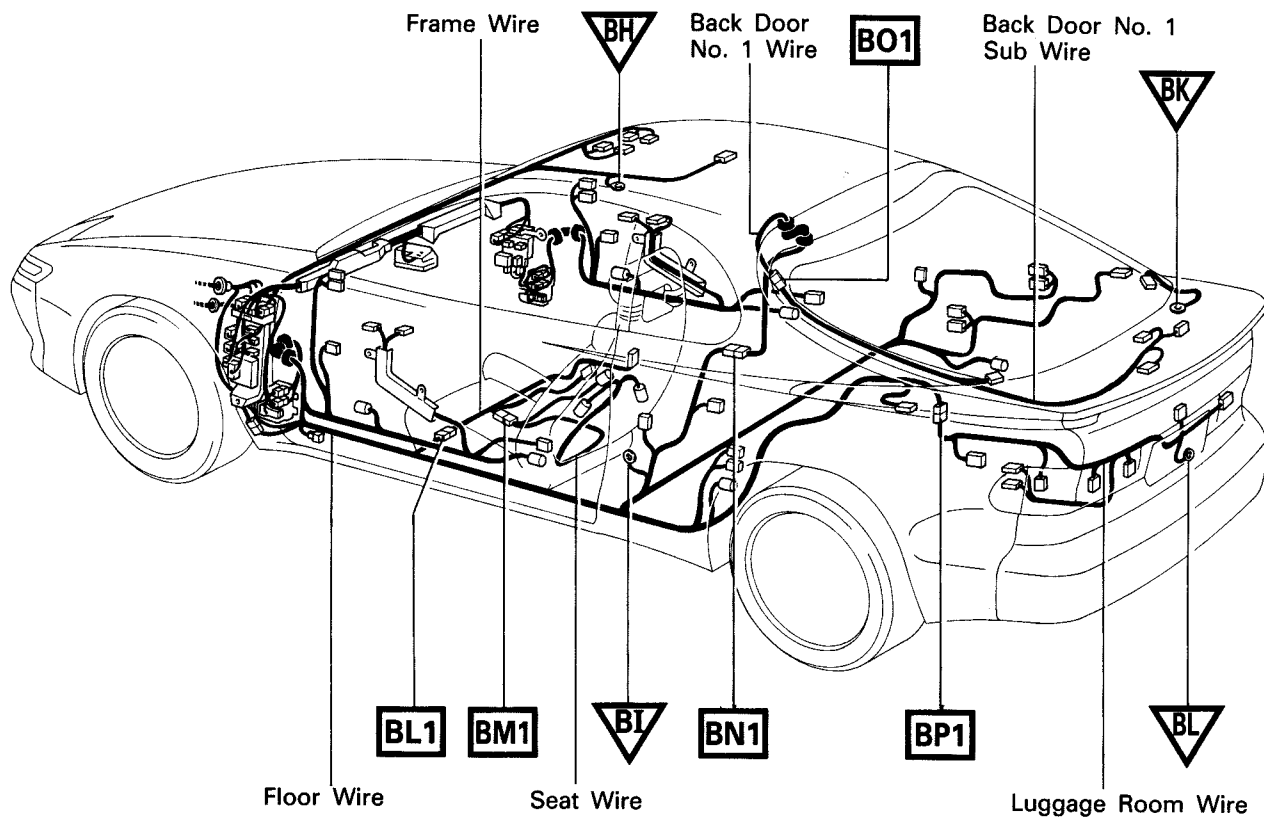

○ : Location of Splice Points

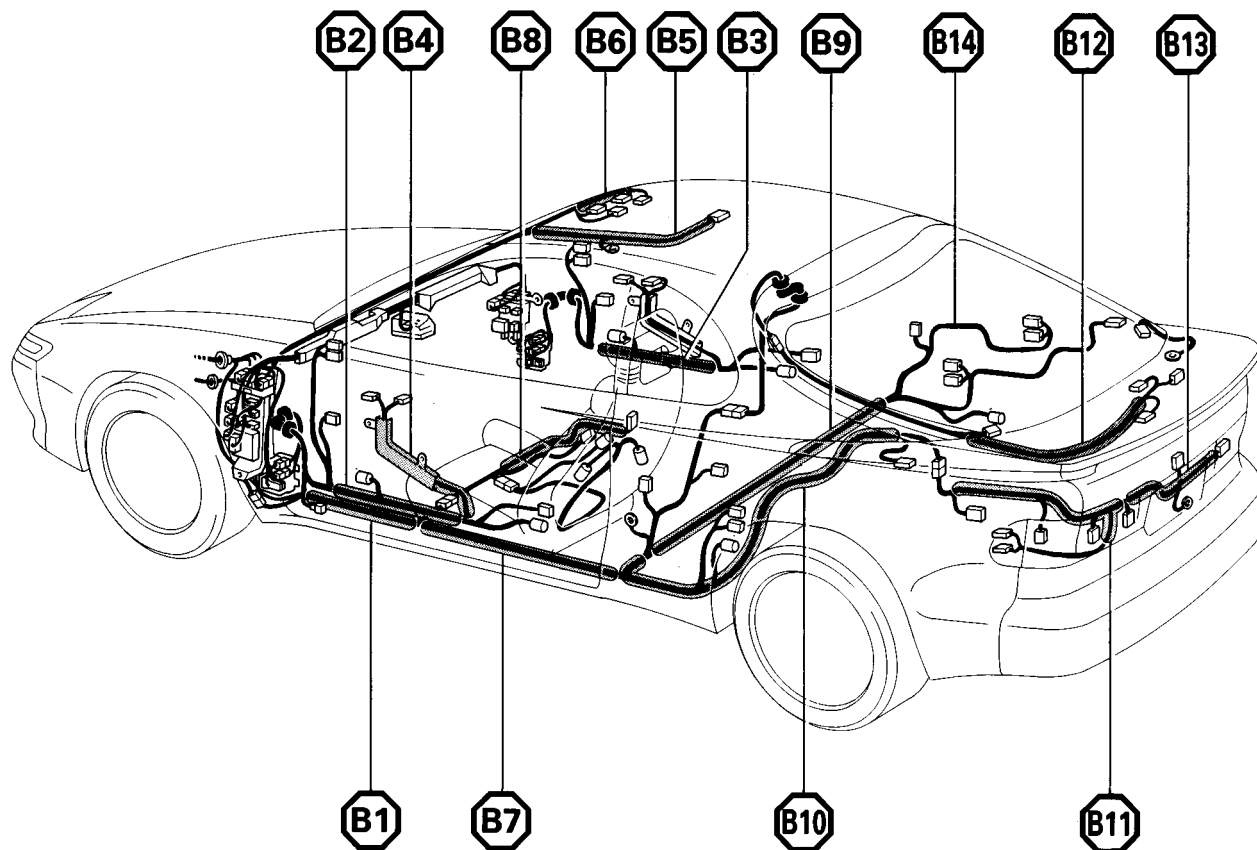

Connector Joining Wire Harness and Wire Harness

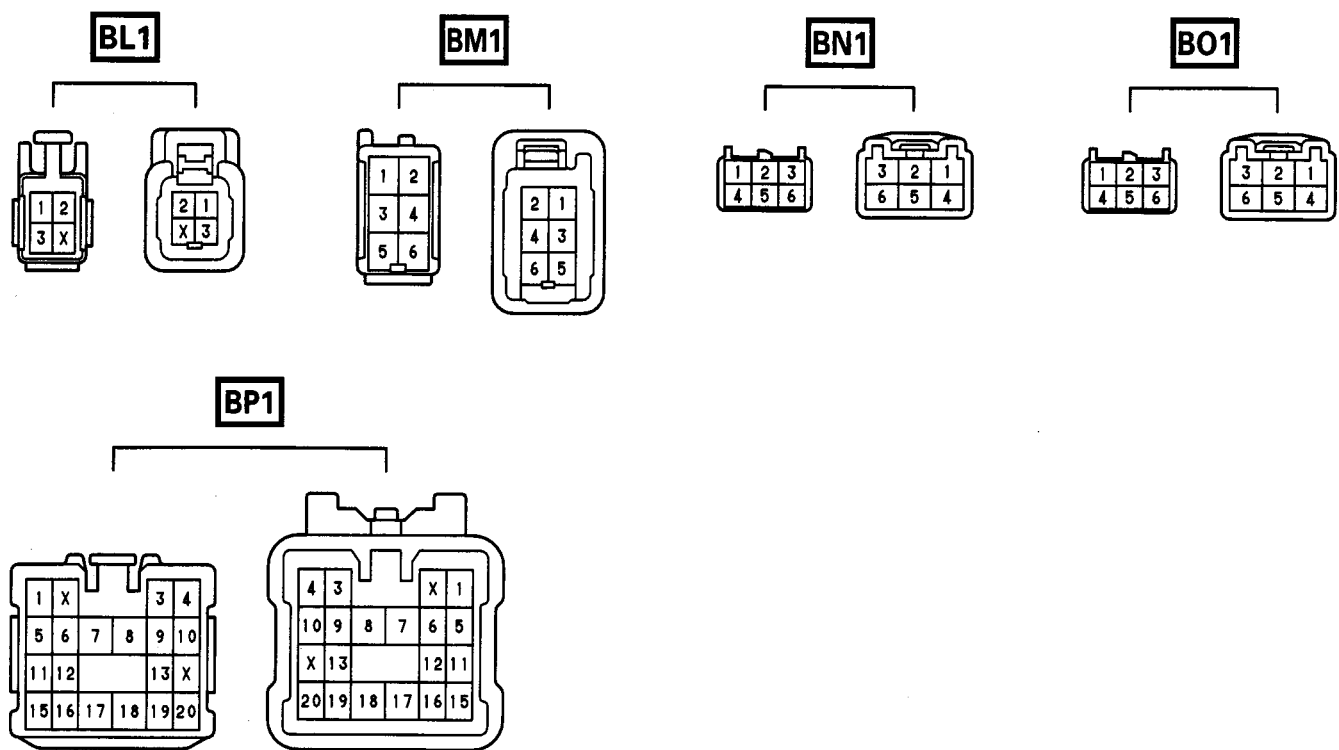

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BL1	FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL)
BM1	FRAME WIRE AND SEAT WIRE (UNDER THE DRIVER'S SEAT)
BN1	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LET SIDE OF PACKAGE TRAY TRIM)
BO1	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)
BP1	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)