




ENGINE CONTROL (5S-FE A/T)

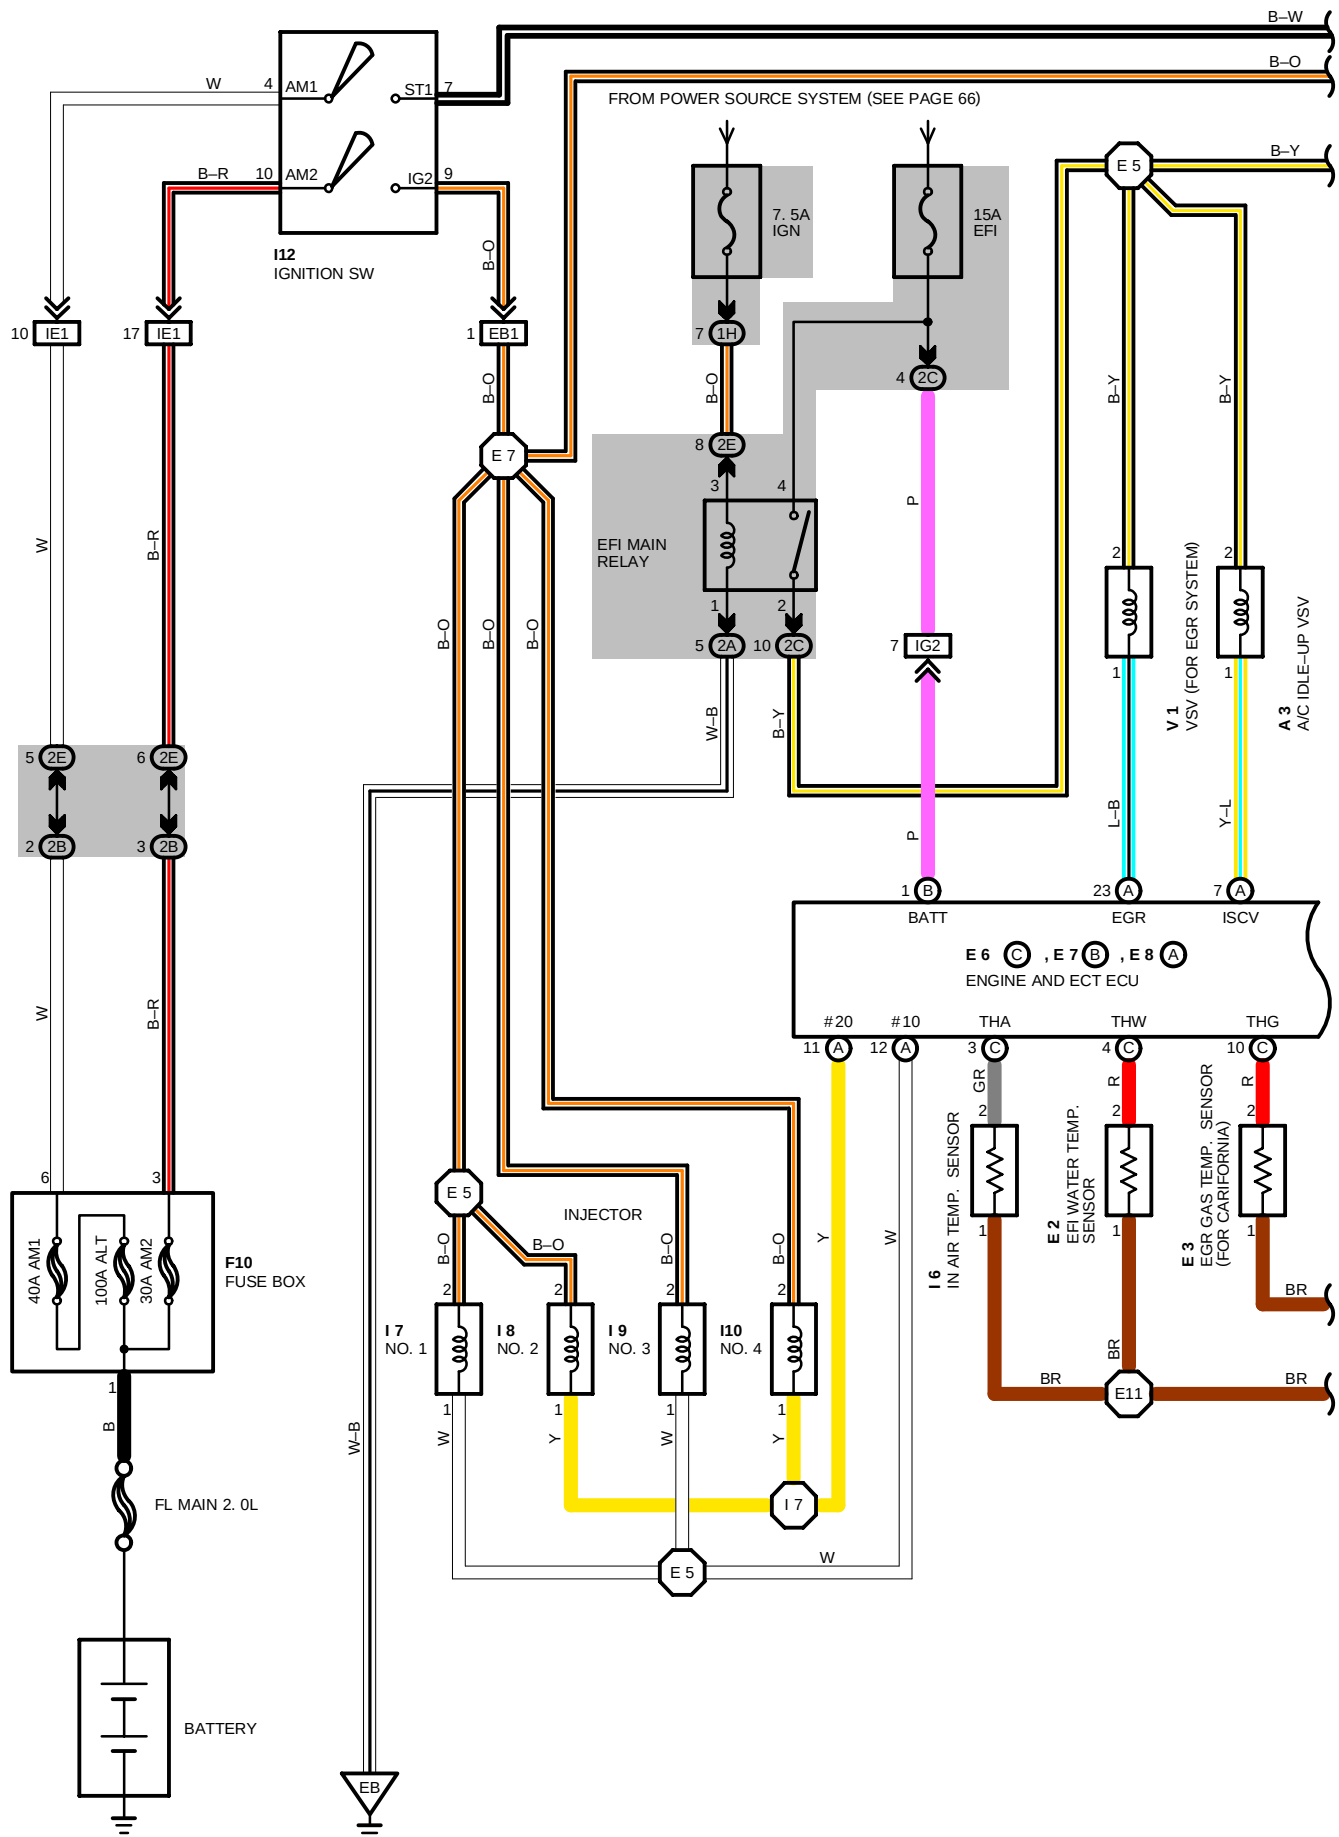


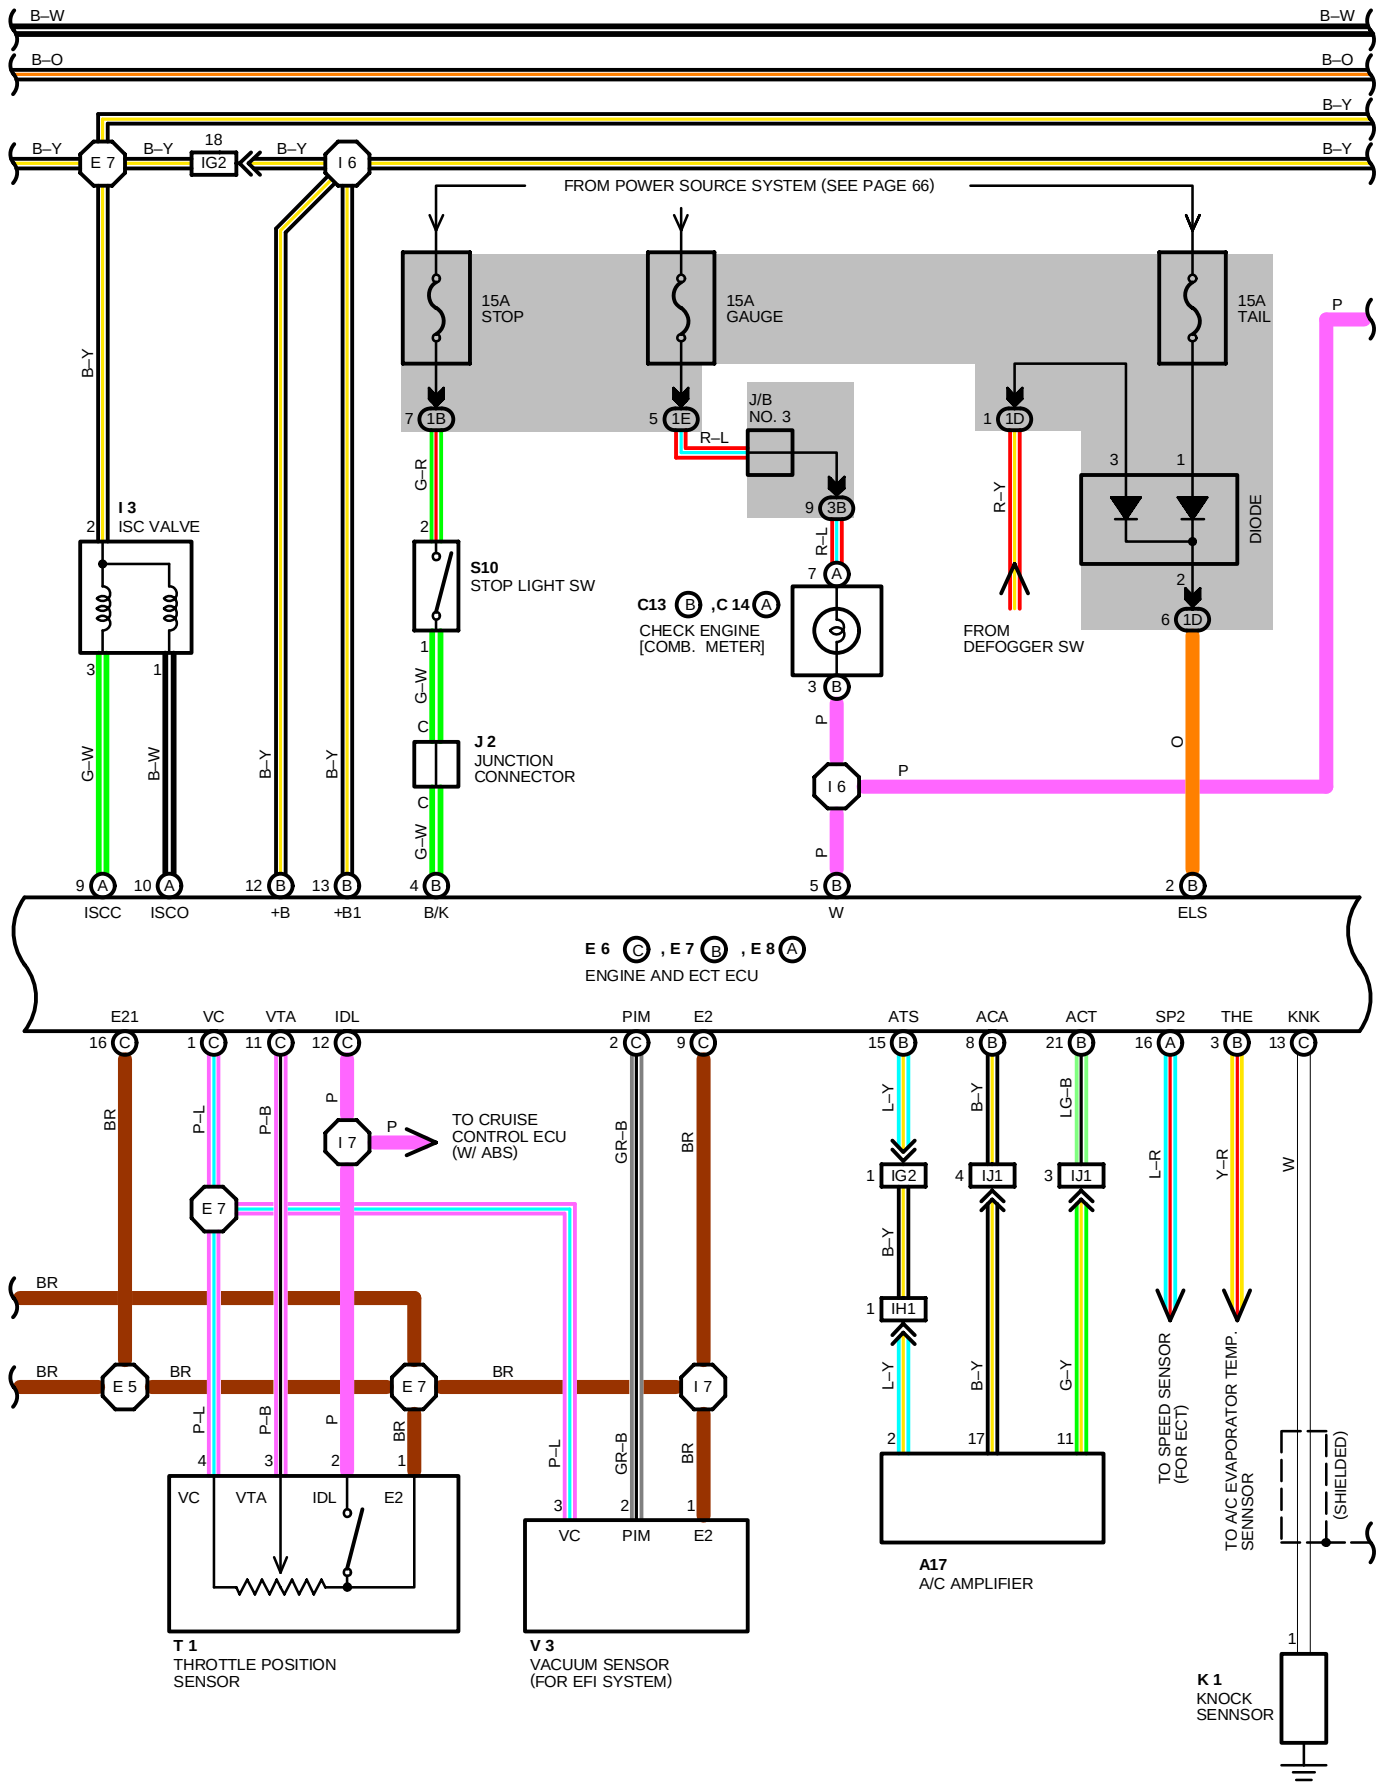


ENGINE CONTROL (5S-FE A/T)

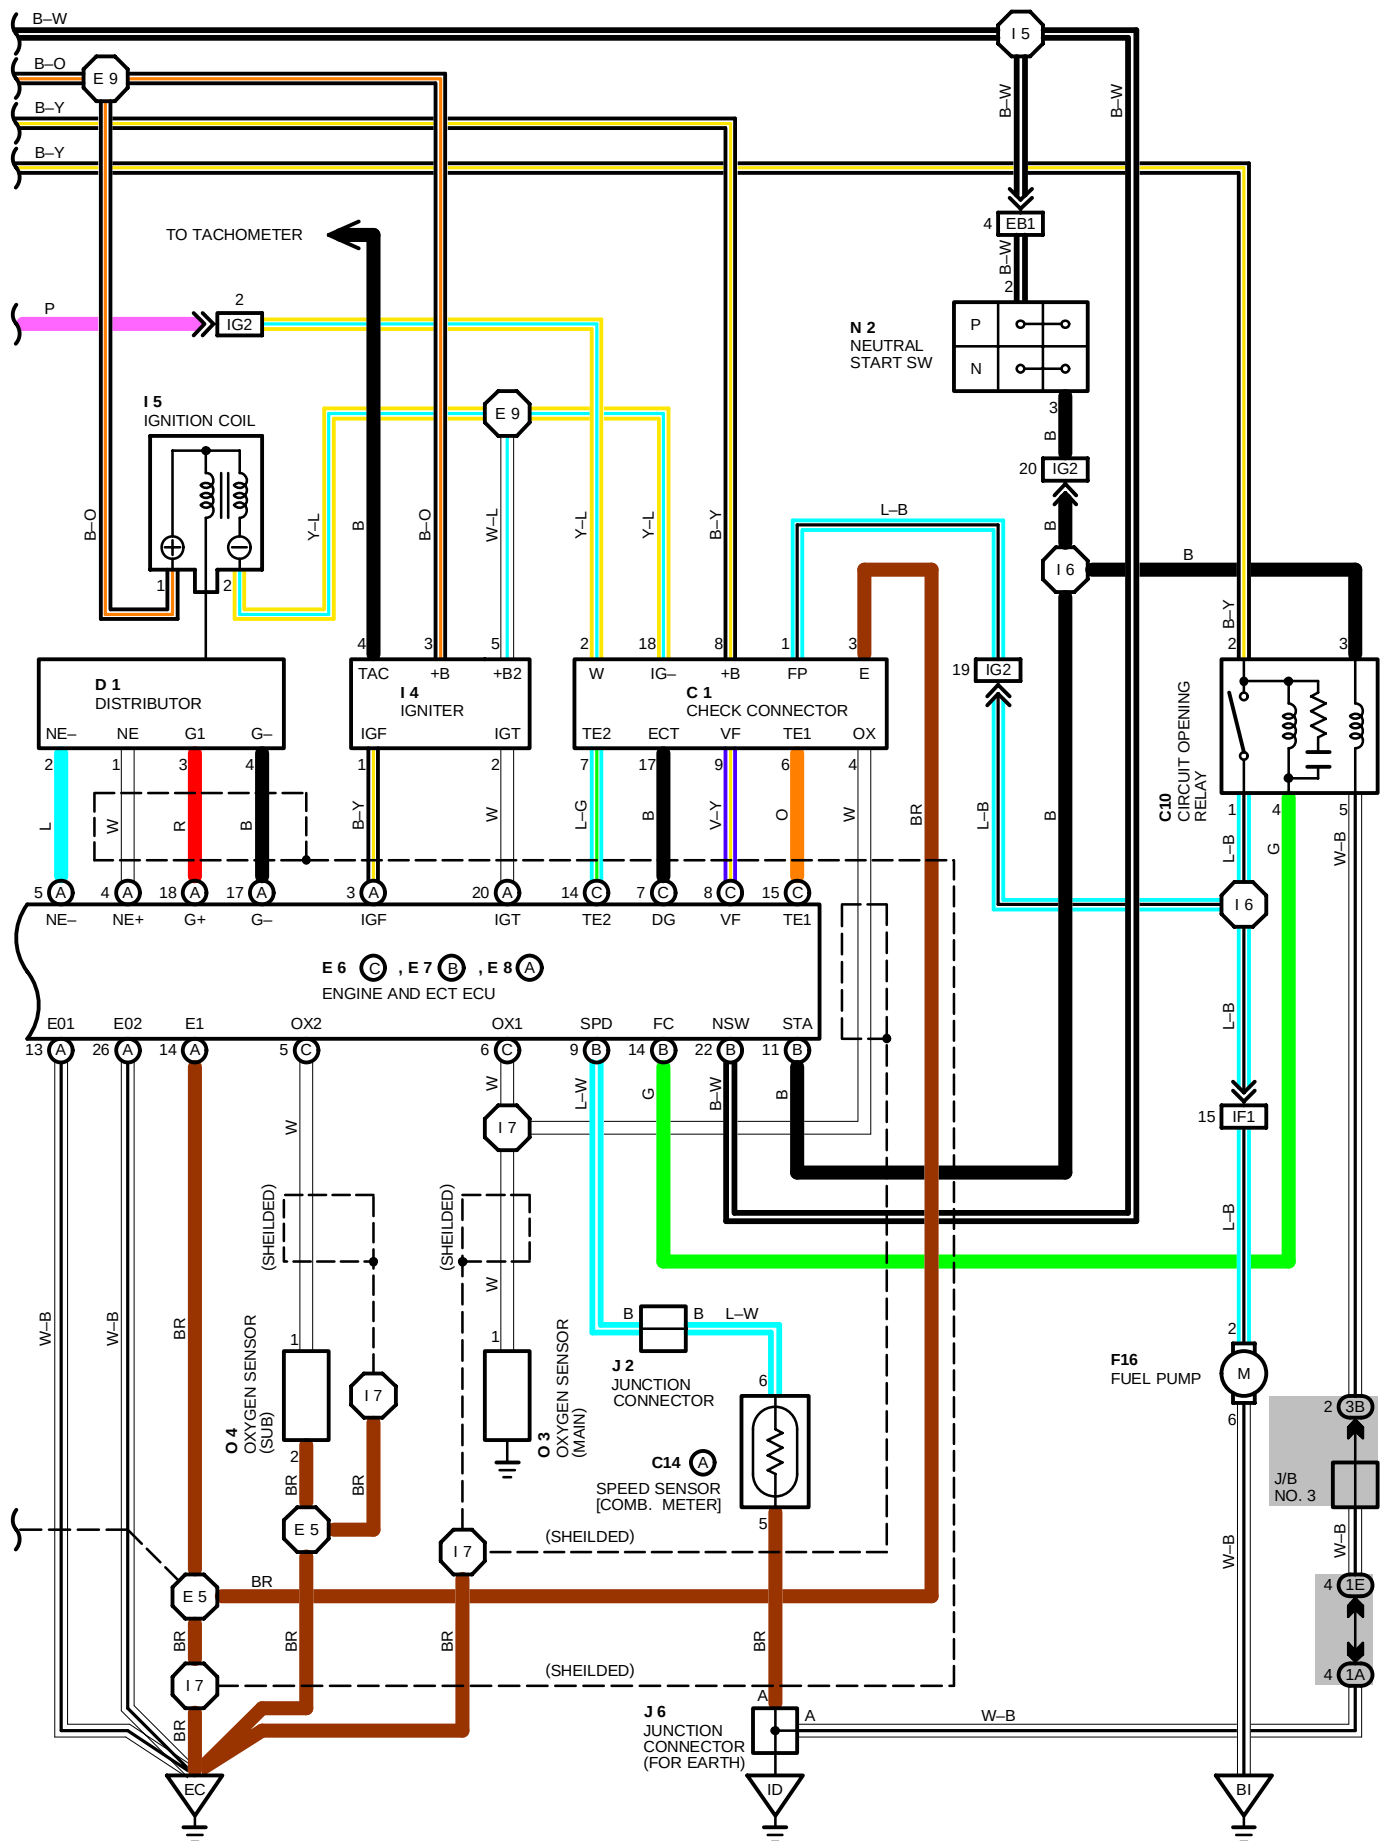


A 3 BLACK

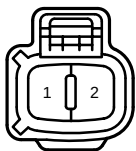


A17

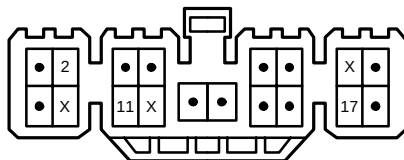


C 1 DARK GRAY

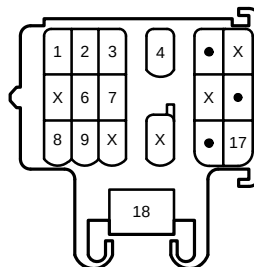


C10 DARK GRAY



C13 (B) BROWN



C14 (A)

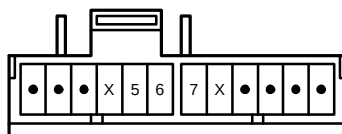

D 1 BLACK




E 2 DARK GREEN




E 3 GRAY




E 6 (C) DARK GRAY

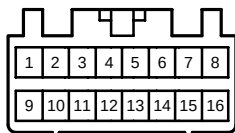


E 7 (B) DARK GRAY

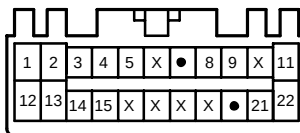

E 8 (A) DARK GRAY

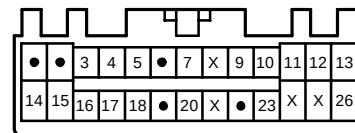

F10 BLACK

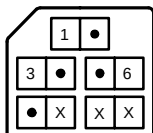


F16 DARK GRAY



I 3 GRAY



I 4 BLACK

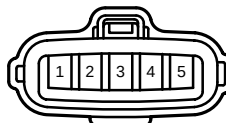

I 5 BLACK




I 6 BLACK




I 7, I 8, I 9, I10 GRAY



I12 BLACK

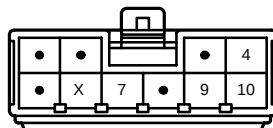


J 2



(HINT : SEE PAGE 7)

J 6

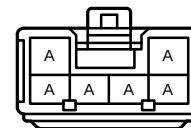


(HINT : SEE PAGE 7)

K 1 DARK GRAY



N 2 GRAY




O 3 DARK GRAY




O 4 DARK GRAY



S10

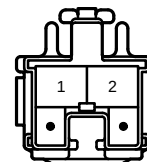


T 1 BLACK



V 1 BLUE



V 3 BLACK

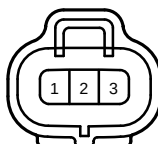

ENGINE CONTROL (5S-FE A/T)

SERVICE HINTS

E 6, E7, E8 ENGINE AND ECT ECU

VOLTAGE AT ECU WIRING CONNECTOR

BATT-E1	: ALWAYS 10.0–14.0 VOLTS
+B-E1	: 10–14.0 VOLTS (IGNITION SW AT ON POSITION)
+B1-E1	: 10–14.0 VOLTS (IGNITION SW AT ON POSITION)
IDL-E2	: 8.0–14.0 VOLTS (IGNITION SW ON AND THROTTLE VALVE OPEN)
VC-E2	: 4.5–5.5 VOLTS (IGNITION SW AT ON POSITION)
VTA-E2	: 0.8–1.2 VOLTS (IGNITION SW ON AND THROTTLE VALVE FULLY CLOSED)
	: 3.2–4.2 VOLTS (IGNITION SW ON AND THROTTLE VALVE OPEN)
PIM-E2	: 3.3–3.9 VOLTS (IGNITION SW AT ON POSITION)
#10, #20 – E01, E02	: 10–14.0 VOLTS (IGNITION SW AT ON POSITION)
THA-E2	: 1.9–2.9 VOLTS (IGNITION SW ON AND INTAKE AIR TEMP. 20°C, 68°F)
THW-E2	: 0.1–1.1 VOLTS (IGNITION SW ON AND COOLANT TEMP. 80°C, 176°F)
STA-E1	: 6.0–14.0 VOLTS (ENGINE CRANKING)
IGT-E1	: 0.8–1.2 VOLTS (ENGINE CRANKING OR IDLING)
W-E1	: 8.0–14.0 VOLTS (NO TROUBLE AND ENGINE RUNNING)
ACT-E1	: 4.5–5.5 VOLTS (IGNITION SW ON AND AIR CONDITIONING ON)
ACA-E1	: 2.0 VOLTS OR LESS (IGNITION SW ON AND AIR CONDITIONING ON)
TE1-E1	: 10–14.0 VOLTS (IGNITION SW ON AND CHECK CONNECTOR T-E1 NOT CONNECTED)
	: 1.0 VOLTS OR LESS (IGNITION SW ON AND CHECK CONNECTOR T-E1 CONNECTED)
NSW-E1	: 0–2.0 VOLTS (IGNITION SW ON AND NEUTRAL START SW POSITION P OR N RANGE)
	: 6.0–14.0 VOLTS (IGNITION SW ON AND EX. NEUTRAL START SW POSITION P OR N RANGE)
B/K-E1	: 10–14.0 VOLTS (BRAKE PEDAL DEPRESSED)

RESISTANCE AT ECU WIRING CONNECTORS

(DISCONNECT WIRING CONNECTOR)

IDL-E2	: INFINITY (THROTTLE VALVE OPEN)
	: 2.3 KΩ OR LESS (THROTTLE VALVE FULLY CLOSED)
VTA-E2	: 3.3–10.0 KΩ (THROTTLE VALVE FULLY OPEN)
	: 0.2–0.8 KΩ (THROTTLE VALVE FULLY CLOSED)
VC-E2	: 3.0–7.0 KΩ
THA-E2	: 2.0–3.0 KΩ (INTAKE AIR TEMP. 20°C, 68°F)
THW-E2	: 0.2–0.4 KΩ (COOLANT TEMP. 80°C, 176°F)
G+, NE+ – G–	: 0.17–0.21 KΩ
ISCC, ISCO–+B, +B1	: 19.3–22.3 Ω

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 3	30	E 8 A	33	I12	33
A17	32	F10	30 (5S-FE)	J 2	33
C 1	30 (5S-FE)	F16	34 (L/B)	J 6	33
C10	32	I 3	30 (5S-FE)	K 1	30
C13 B	32	I 4	30 (5S-FE)	N 2	30 (5S-FE)
C14 A	32	I 5	30 (5S-FE)	O 3	30 (5S-FE)
D 1	30 (5S-FE)	I 6	30 (5S-FE)	O 4	30 (5S-FE)
E 2	30 (5S-FE)	I 7	30 (5S-FE)	S10	33
E 3	30 (5S-FE)	I 8	30 (5S-FE)	T 1	30 (5S-FE)
E 6 C	33	I19	30 (5S-FE)	V 1	30 (5S-FE)
E 7 B	33	I10	30 (5S-FE)	V 3	30 (5S-FE)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1H	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2A	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2B	22 (2WD)	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2C		
2E	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
3B	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	40 (5S-FE)	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
IE1	44	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	44	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG2	44	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
IH1	44	ENGINE WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)
IJ1	46	COWL WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)

 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	40 (5S-FE)	FRONT LEFT FENDER
EC	40 (5S-FE)	INTAKE MANIFOLD
ID	44	LEFT KICK PANEL
BI	48 (L/B)	UNDER THE LEFT CENTER PILLAR

 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 5	40 (5S-FE)	ENGINE WIRE	I 6	46	COWL WIRE
E 7			I 7	46	ENGINE WIRE
E 9					
E11					
I 5	46	COWL WIRE			