


OVERDRIVE (4A-FE, A/T)

FROM POWER SOURCE SYSTEM (SEE PAGE 66)

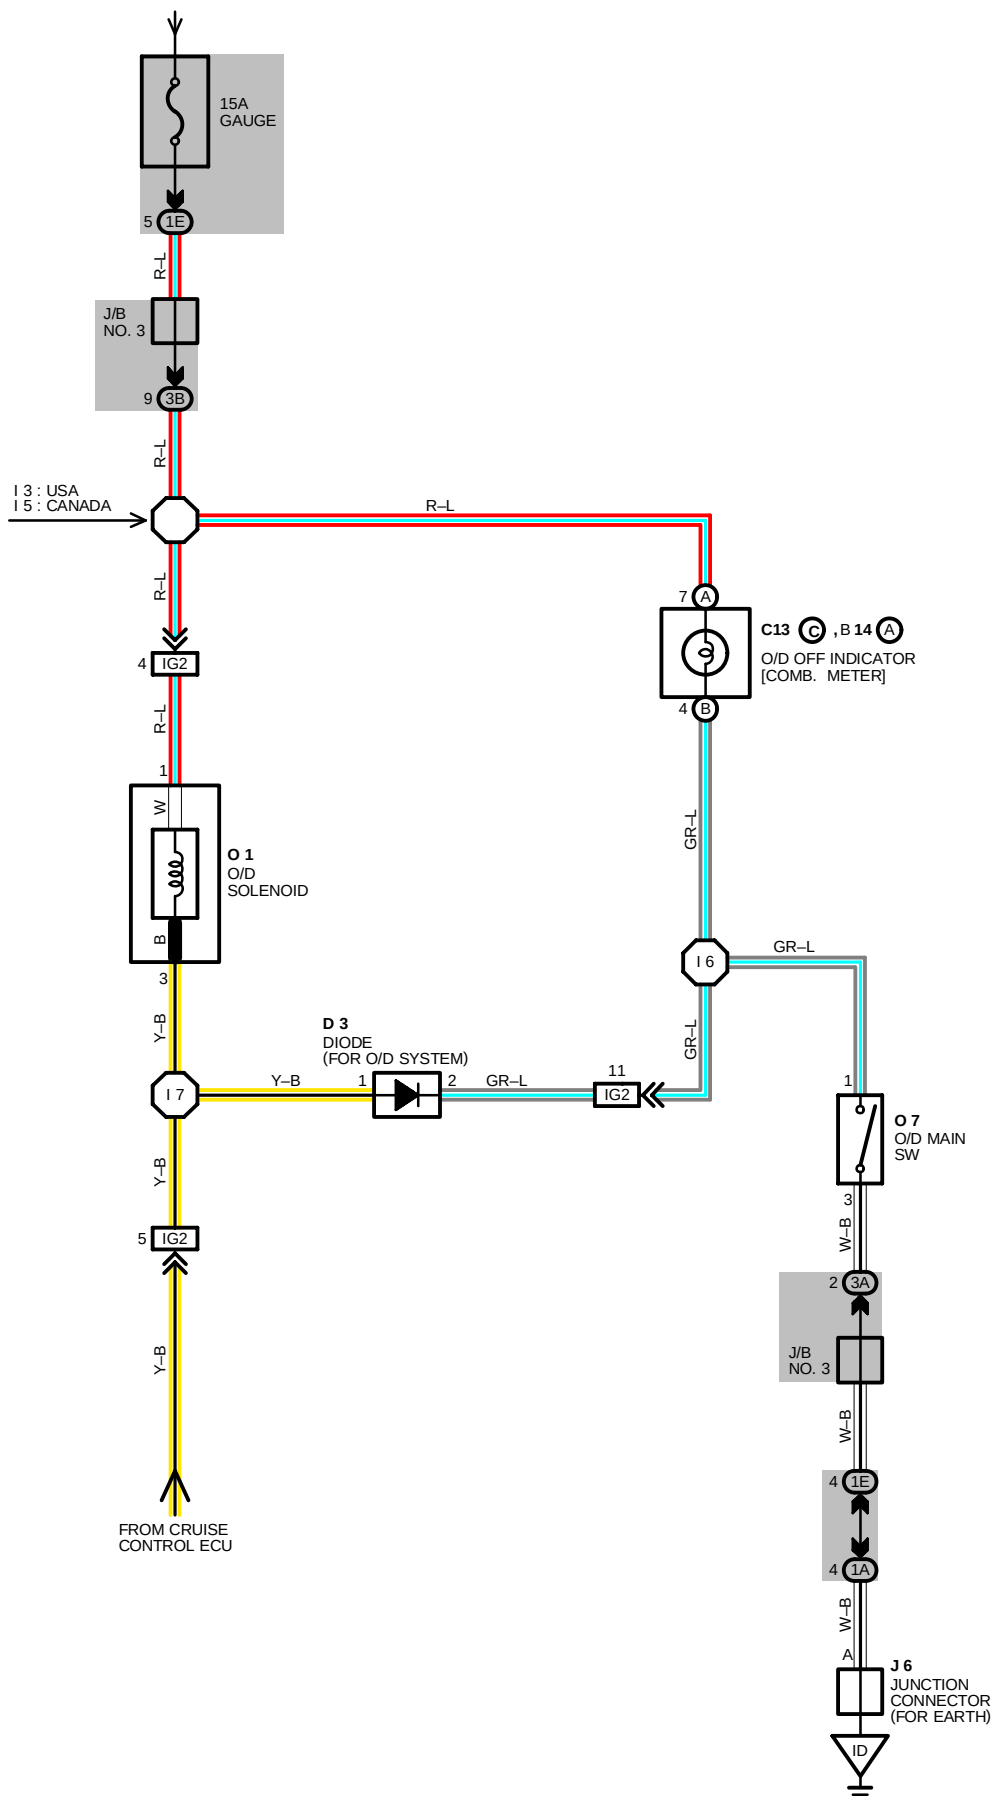

SERVICE HINTS

○ 7 O/D MAIN SW

1-3 : CLOSED WITH O/D MAIN SW OFF, OPEN WITH O/D MAIN SW ON

○ : PARTS LOCATION

CODE		SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13	B	32	D 3	32	O 1	31 (4A–FE)
C14	A	32	J 6	33	O 7	33

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
3A	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3B		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG2	44	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	44	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 3	46	COWL WIRE	I 6	46	COWL WIRE
I 5			I 7	46	ENGINE WIRE

