
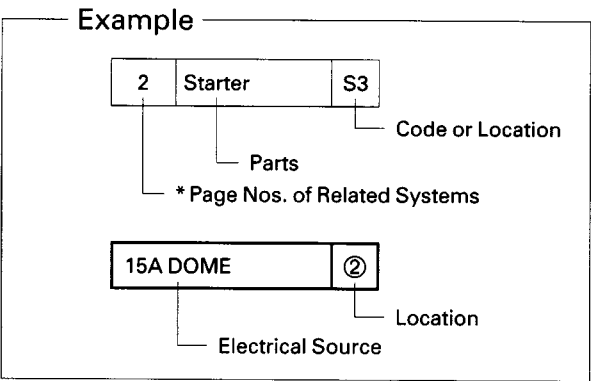


POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

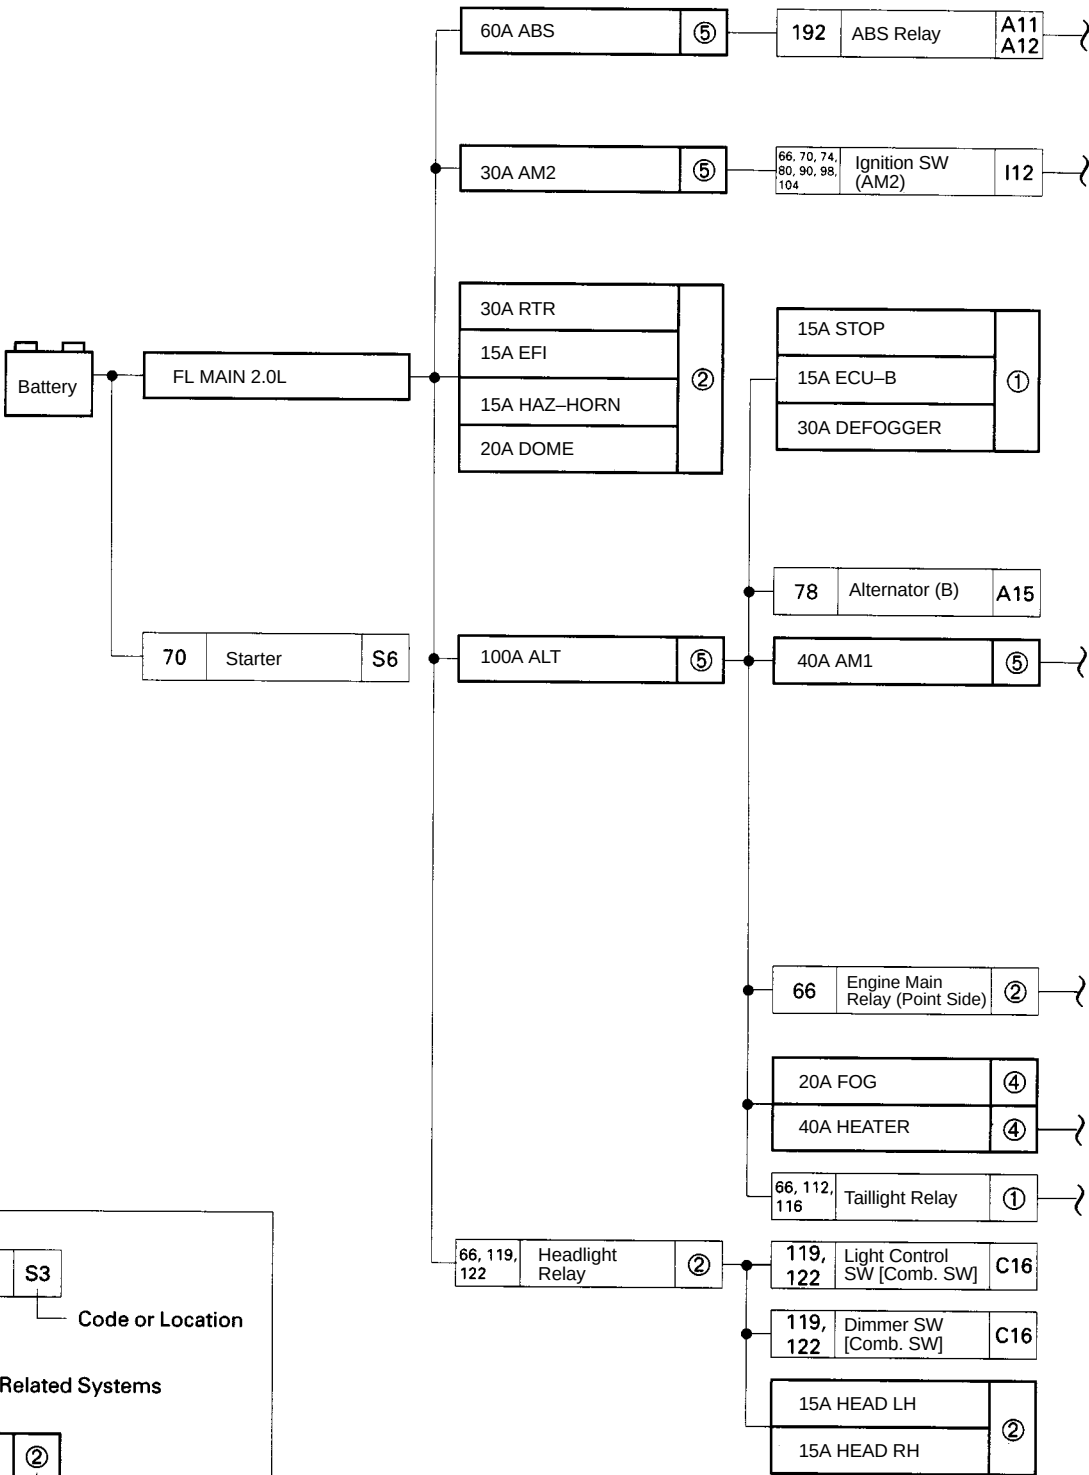

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) : R/B No. 2 (See page 26)

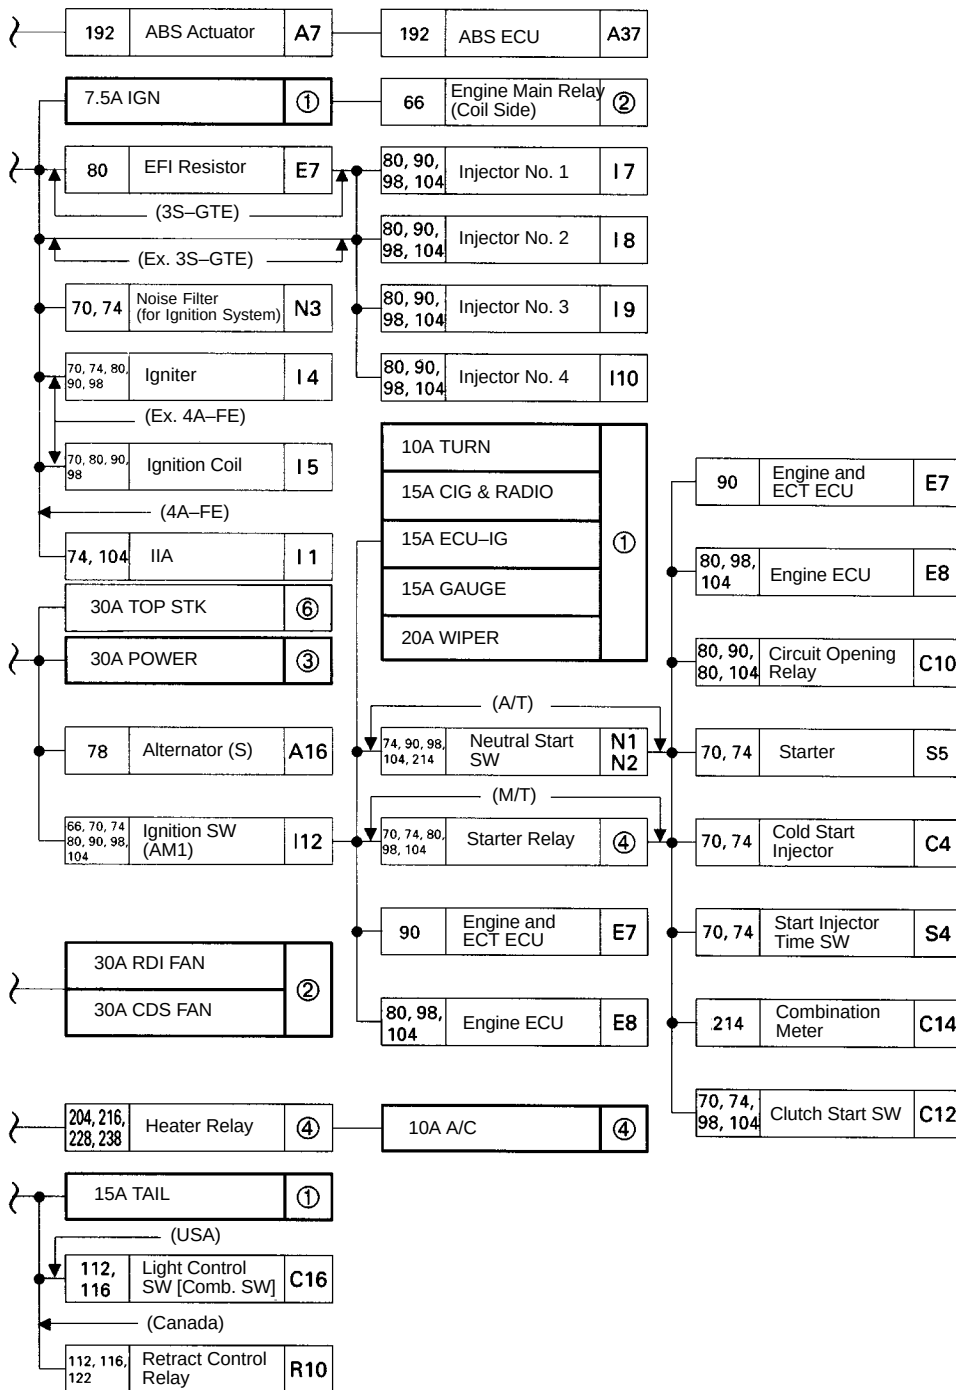

(4) : R/B No. 4 (See page 27) (2) : Fuse Box (F10 See on page 28) (3) : R/B No. 3 (See page 26)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		218 230				192	78	118 230	112 230	112 218	218 230	218	218	218 230	112	218	176	192	206	192																					
					Parts				Code or Location				CB or Fuse																															
					A/C Condenser Fan Motor				A/C Idle-Up VSV		A/C Magnetic Clutch		A/C Pressure SW		ABS Actuator		ABS Relay		Alternator		A/C Amplifier		A/C Control Assembly				A/C Power Transistor		A/C System Amplifier		Air Vent Mode Control Servo Motor		Ashtray Illumination		Auto A/C Amplifier		Auto Tilt Away ECU		ABS ECU		Auto Antenna Control Relay and Motor		ABS Deceleration Sensor (All-Trac/4WD)	
					A2	A3	A4	A5	A7	A11	A16	A17	A18	A19	A20	A22	A25	A30	A31	A32	A34	A36	A37	A38	A41	A43																		
①	30A	DEFOGGER																																										
	20A	WIPER																																										
	15A	GAUGE		●	●	●	●	●		●		●	●	●		●	●		●	●	●	●	●																					
	7.5A	IGN				●			●																																			
	15A	ECU-B																				●																						
	10A	TURN																																										
	15A	CIG & RADIO																	●	●																●								
	15A	TAIL										●	●																															
	15A	ECU-IG							●																												●	●	●					
	15A	STOP																																			●							
②	15A	HEAD LH																																										
	15A	HEAD RH																																										
	30A	RTR																																										
	15A	EFI																																										
	20A	DOME																		●																	●							
	15A	HAZ-HORN																																										
	30A	RDI FAN																																										
	30A	CDS FAN	●																																									
③	30A	POWER																																										
④	20A	FOG																																										
	10A	A/C		●		●				●		●																																
	40A	HEATER													●	●																												

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) R/B No. 2 (See page 26)

[illegible]

The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) R/B No. 2 (See page 26)

[illegible]

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems	116	136	136	136	132	132 169	160	104	214	104	112 169 174	80	162	140	112	138						
			Parts	L1	L2	L3	L4	N1	N2	N4	O1	O2	O6	O7	O8	P2	P3	P4	P5	P6	P7	P8	P9	Q1	Q2
			Code or Location	L1	L2	L3	L4	N1	N2	N4	O1	O2	O6	O7	O8	P2	P3	P4	P5	P6	P7	P8	P9	Q1	Q2
			CB or Fuse	L1	L2	L3	L4	N1	N2	N4	O1	O2	O6	O7	O8	P2	P3	P4	P5	P6	P7	P8	P9	Q1	Q2
①	30A	DEFOGGER								●															
	20A	WIPER																							
	15A	GAUGE					●	●		●	●		●												
	7.5A	IGN																							
	15A	ECU-B																							
	10A	TURN																							
	15A	CIG & RADIO																							
	15A	TAIL	●										●								●				
	15A	ECU-IG																							
	15A	STOP																							
②	15A	HEAD LH																							
	15A	HEAD RH																							
	30A	RTR																							
	15A	EFI										●		●											
	20A	DOME		●	●	●																			
	15A	HAZ-HORN																							
	30A	RDI FAN																							
	30A	CDS FAN																							
③	30A	POWER												●	●	●	●	●	●	●					
④	20A	FOG																							
	10A	A/C																							
	40A	HEATER						●																	

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (6) R/B No. 2 (See page 26)

[illegible]

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		80	90	130	166	136	166	158	134	214	80	90	98	104	80	80	150	152	174	214	218	230	160	80	90	98	136	138	155	80	90	98	104	169	218	230	140	162	164
											80	90	130	166	136	166	158	134	214	80	90	98	104	80	80	150	152	174	214	218	230	160	80	90	98	136	138	155	80	90	98	104	169	218	230	140	162	164
											80	90	130	166	136	166	158	134	214	80	90	98	104	80	80	150	152	174	214	218	230	160	80	90	98	136	138	155	80	90	98	104	169	218	230	140	162	164
											80	90	130	166	136	166	158	134	214	80	90	98	104	80	80	150	152	174	214	218	230	160	80	90	98	136	138	155	80	90	98	104	169	218	230	140	162	164
			Stop Light SW	Sun Roof Control Relay	Personal Light [Sunroof SW]	Sun Roof Motor	Seat Belt Solenoid (Driver's)	Seat Belt Solenoid (Passenger's)	Turn Signal Flasher	Turbo Charging Pressure Sensor	VSV (for EGR System)	VSV (for Electrical Idle-Up System)	VSV (for Turbo Charging Pressure)	VSV (for T-VIS)	Water Motor	Water Temp. SW (for O/D System)	Water Temp. Sender	Water Temp. SW (for Fans Control)	Defogger Relay	Diode	Integration Relay	EFI Main Relay	Radiator Fan Relay No. 1	Power Main Relay																								
			S10	S11	S12	S14	S15	S16	T2	T3	V1	V2	V4	V5	W1	W2	W3	W4		①		②	③																									
①	30A	DEFOGGER																	●																													
	20A	WIPER													●																																	
	15A	GAUGE								●						●	●				●		●																									
	7.5A	IGN																●				●	●																									
	15A	ECU-B																																														
	10A	TURN							●												●																											
	15A	CIG & RADIO																			●																											
	15A	TAIL																	●		●																											
	15A	ECU-IG																																														
	15A	STOP	●																																													
②	15A	HEAD LH																																														
	15A	HEAD RH																																														
	30A	RTR																																														
	15A	EFI									●	●	●	●								●																										
	20A	DOME			●																●																											
	15A	HAZ-HORN							●																																							
	30A	RDI FAN																				●																										
	30A	CDS FAN																																														
③	30A	POWER		●		●																	●																									
④	20A	FOG																																														
	10A	A/C																																														
	40A	HEATER																																														

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : J/B No. 2 (See page 22) (3) : R/B No. 2 (See page 26)
(4) : R/B No. 4 (See page 27) (6) : R/B No. 3 (See page 26) (7) : R/B No. 5 (See page 27)

-Memo-

-Memo-