



RELAY LOCATIONS

[Engine Compartment]

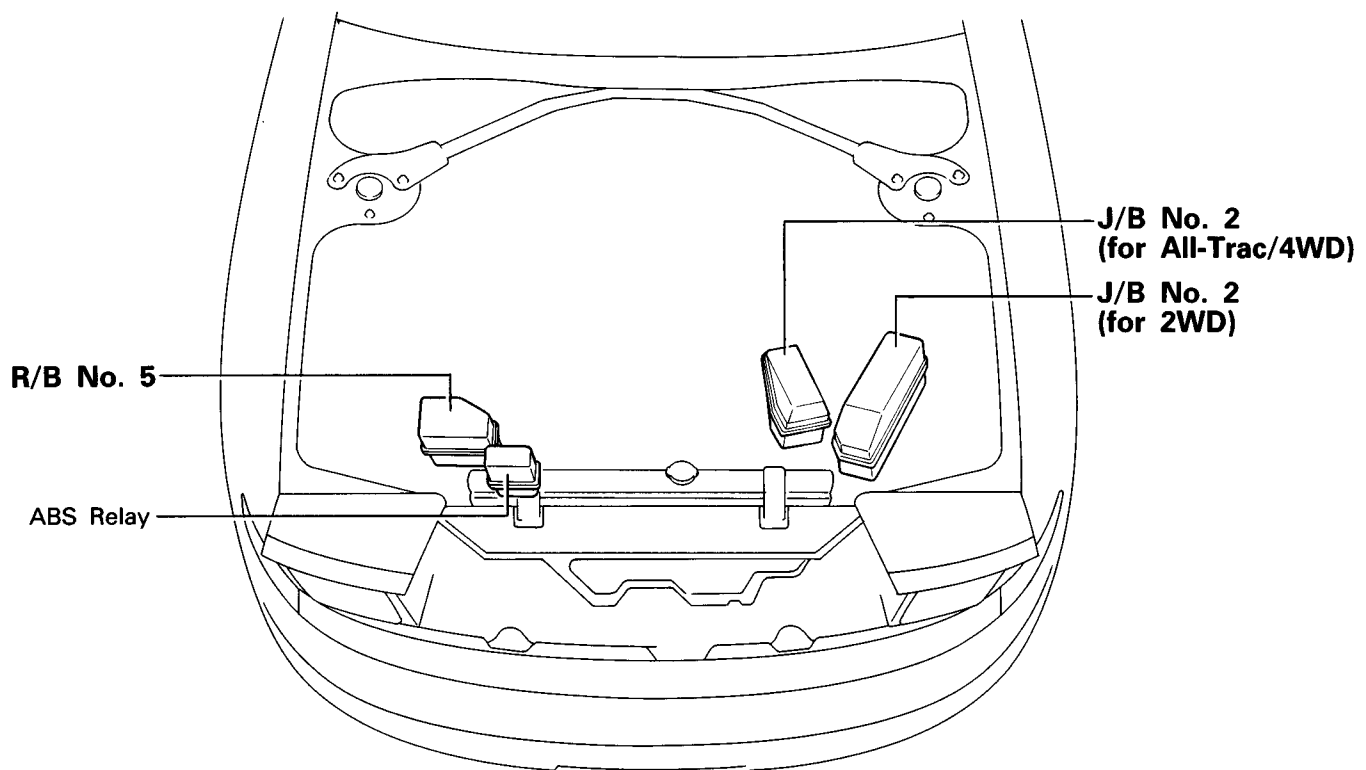


[Instrument Panel]

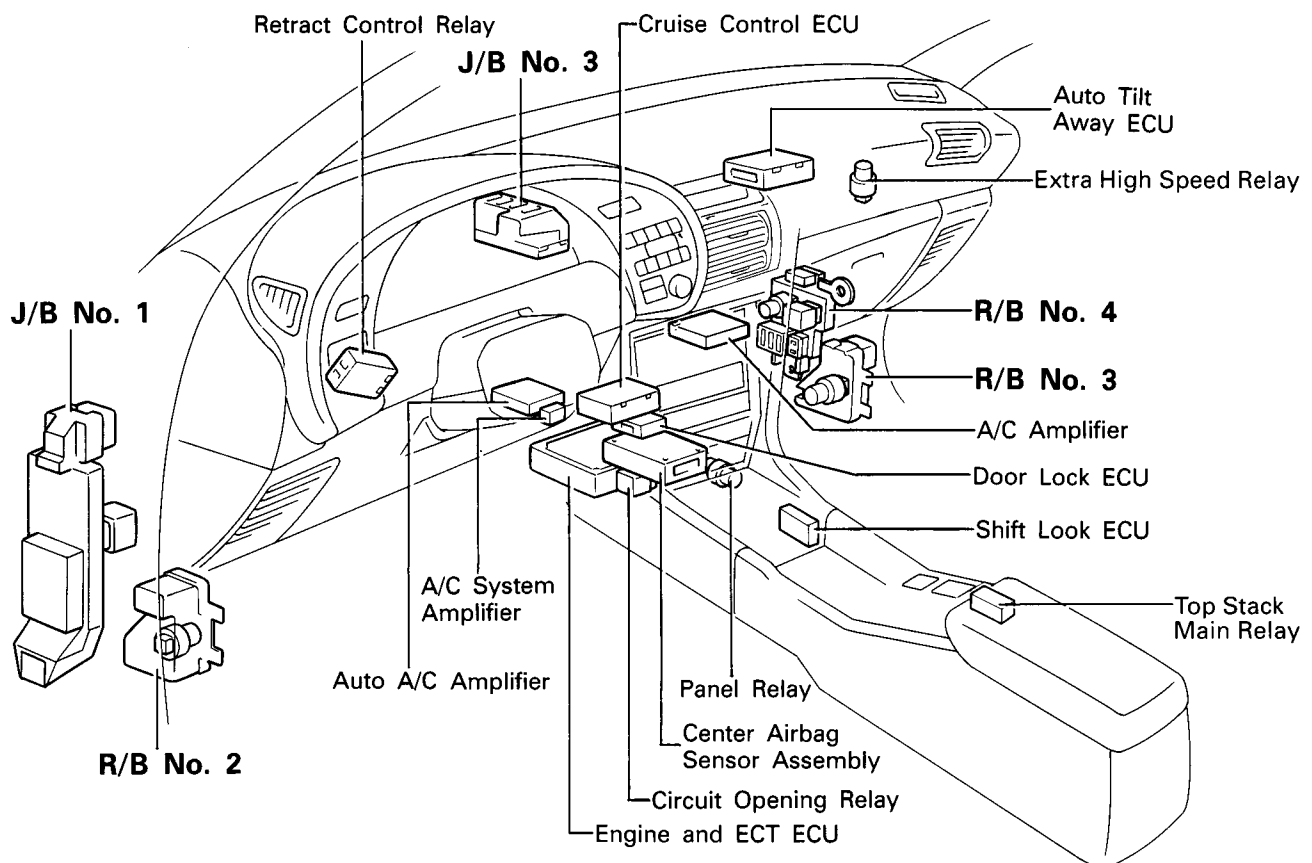


[Body]

[Lift Back]

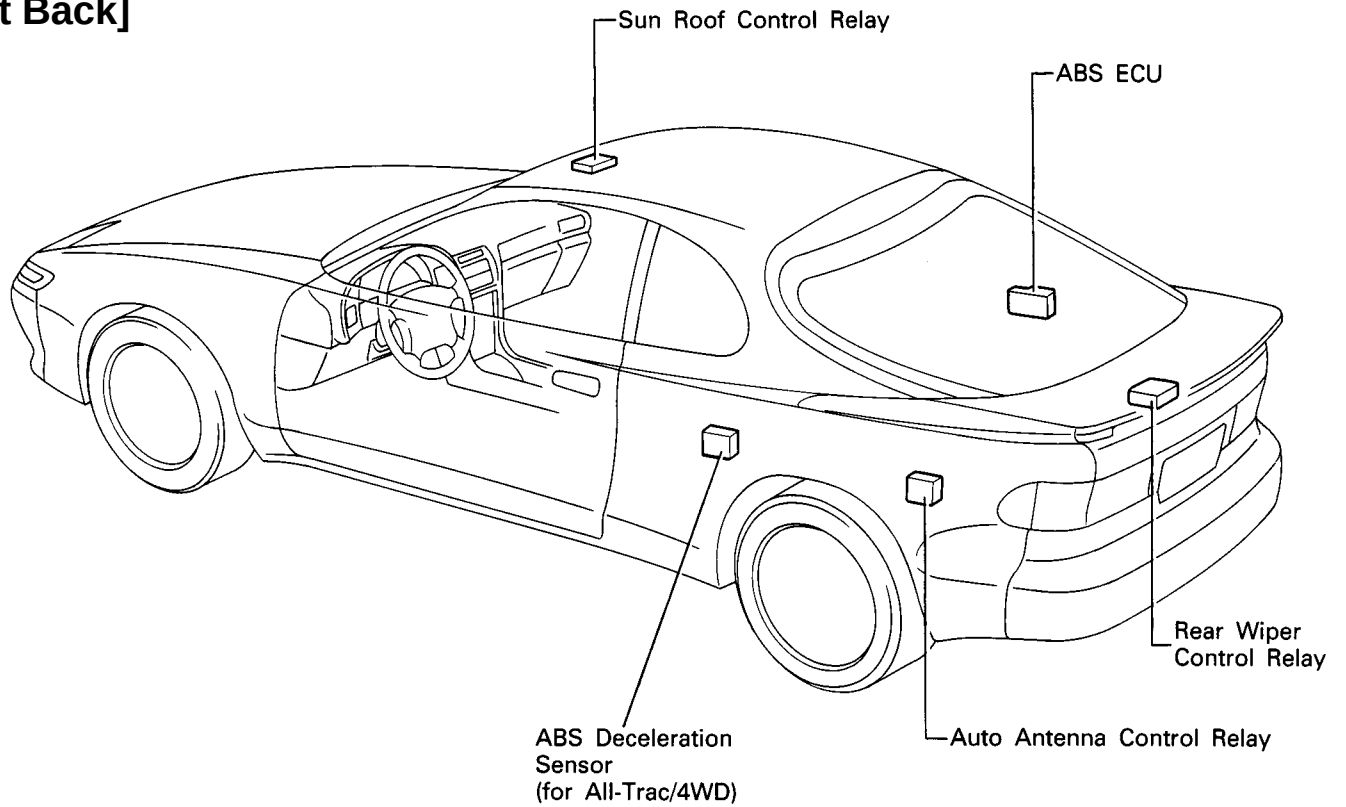


[Body]

[Coupe, Convertible]

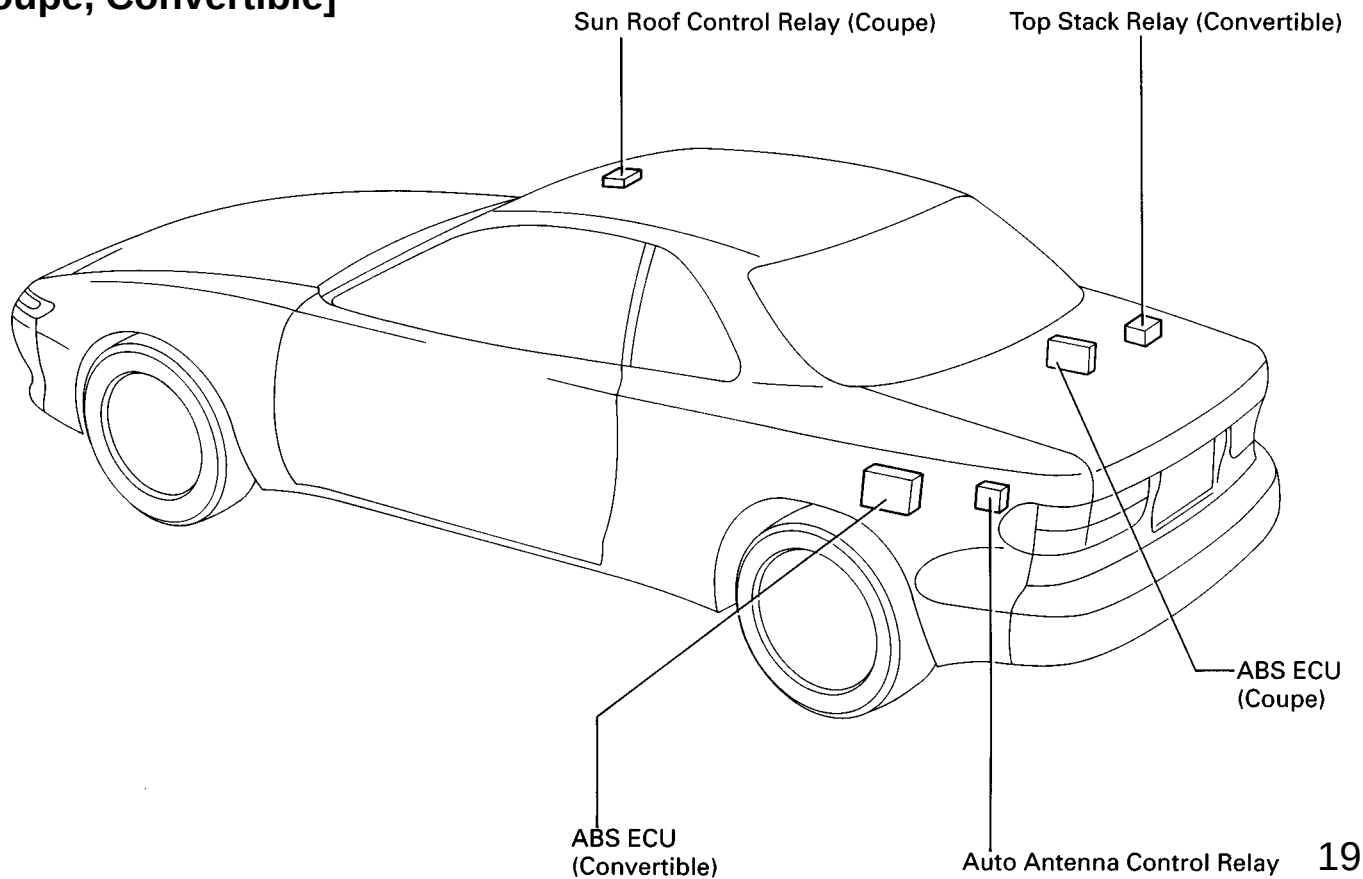


RELAY LOCATIONS

○ : J/B No. 1	Left Kick Panel	(See Page 18)
---------------	-----------------	---------------

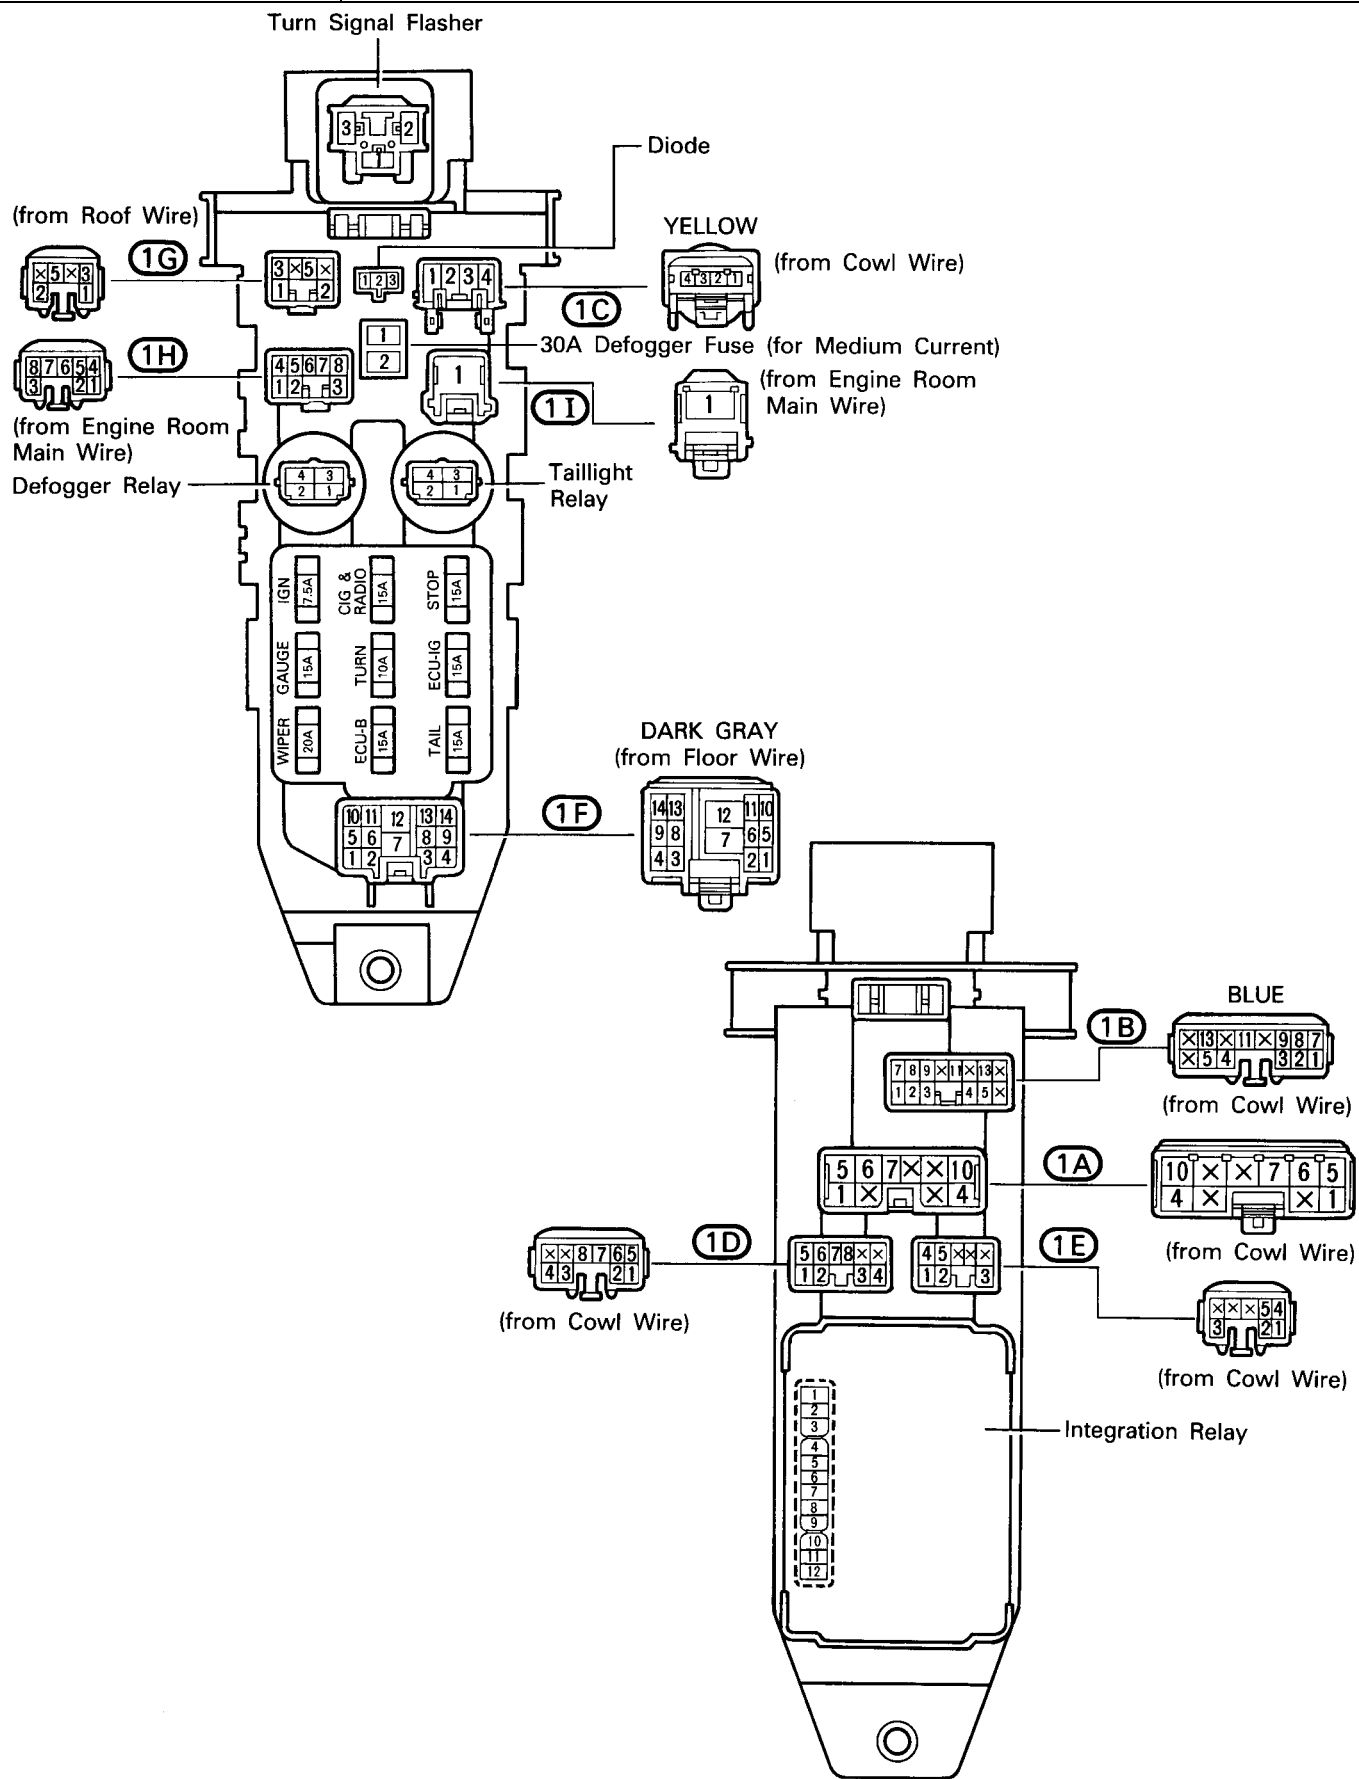

[J/B No. 1 Inner Circuit]

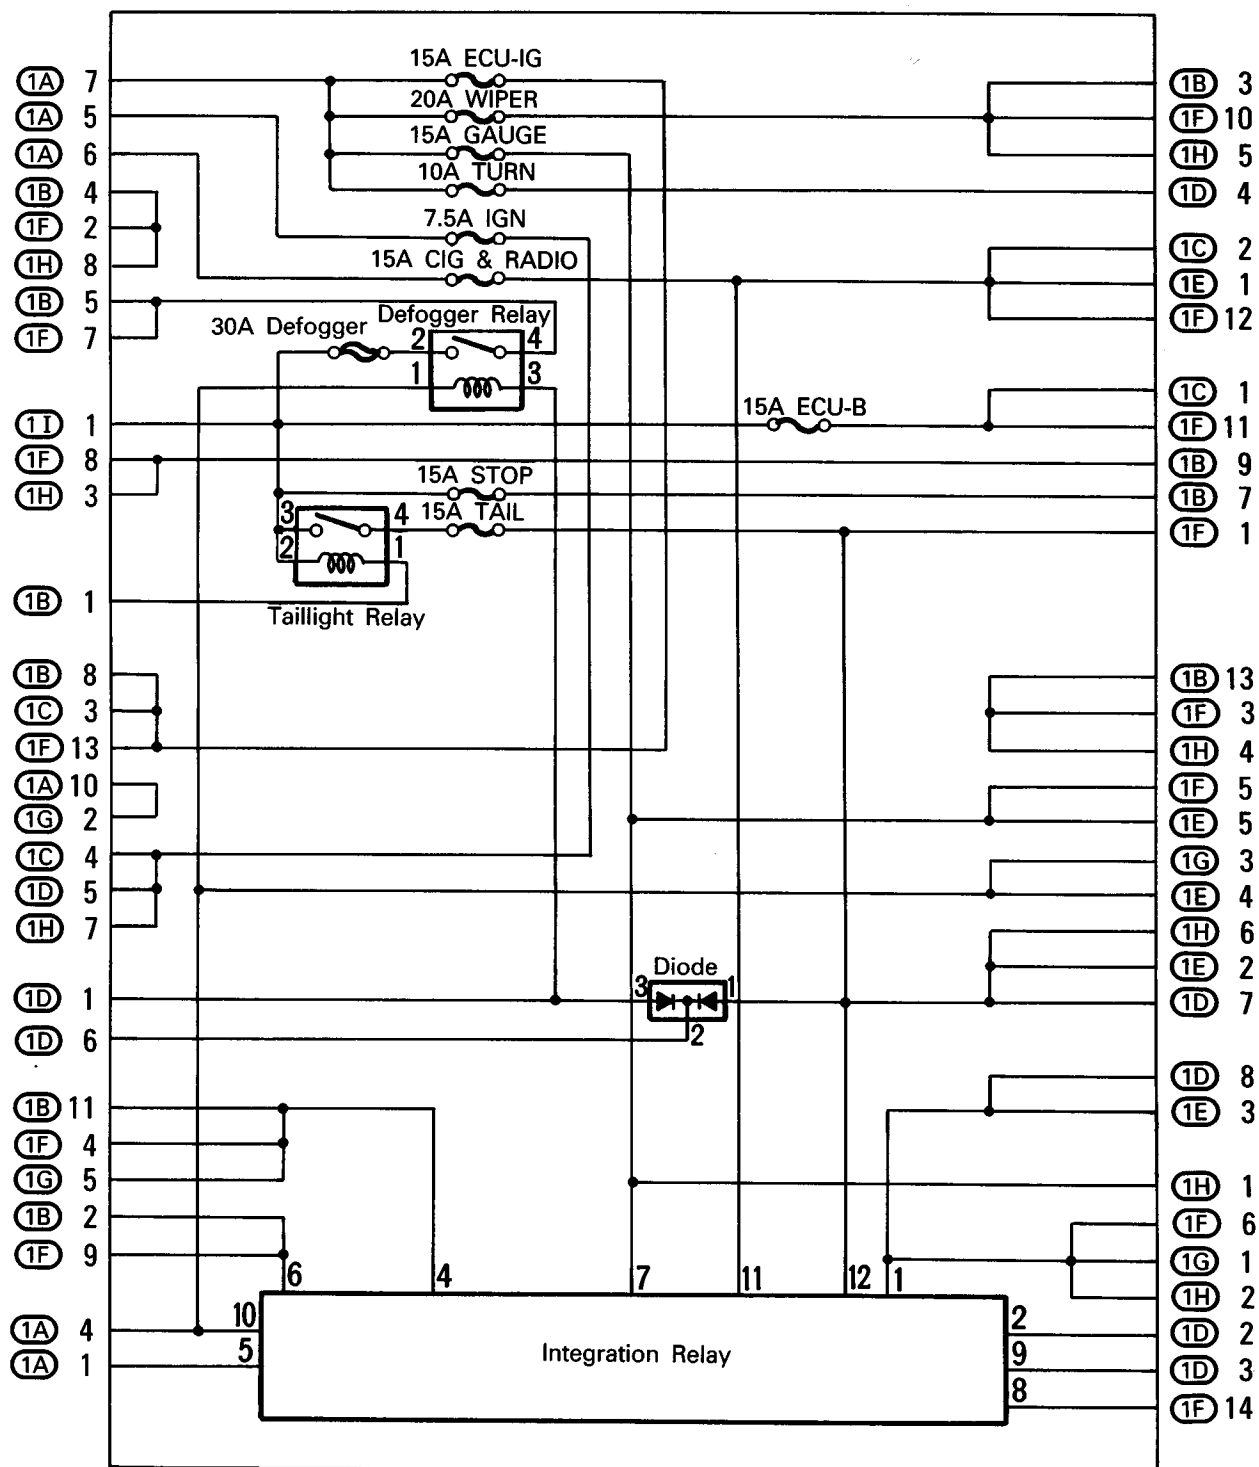



RELAY LOCATIONS

○ : J/B No. 2



Near the Battery

(See Page 18)

[2WD]

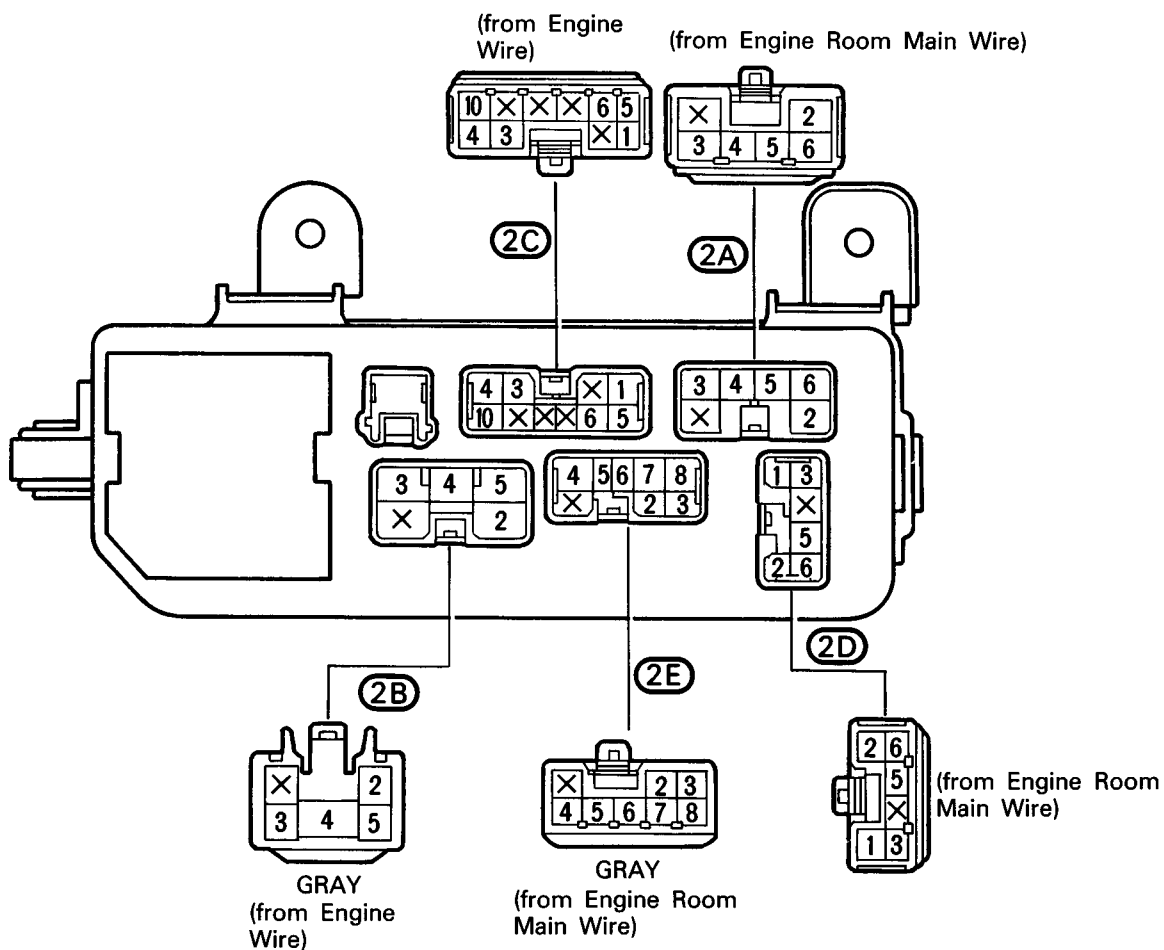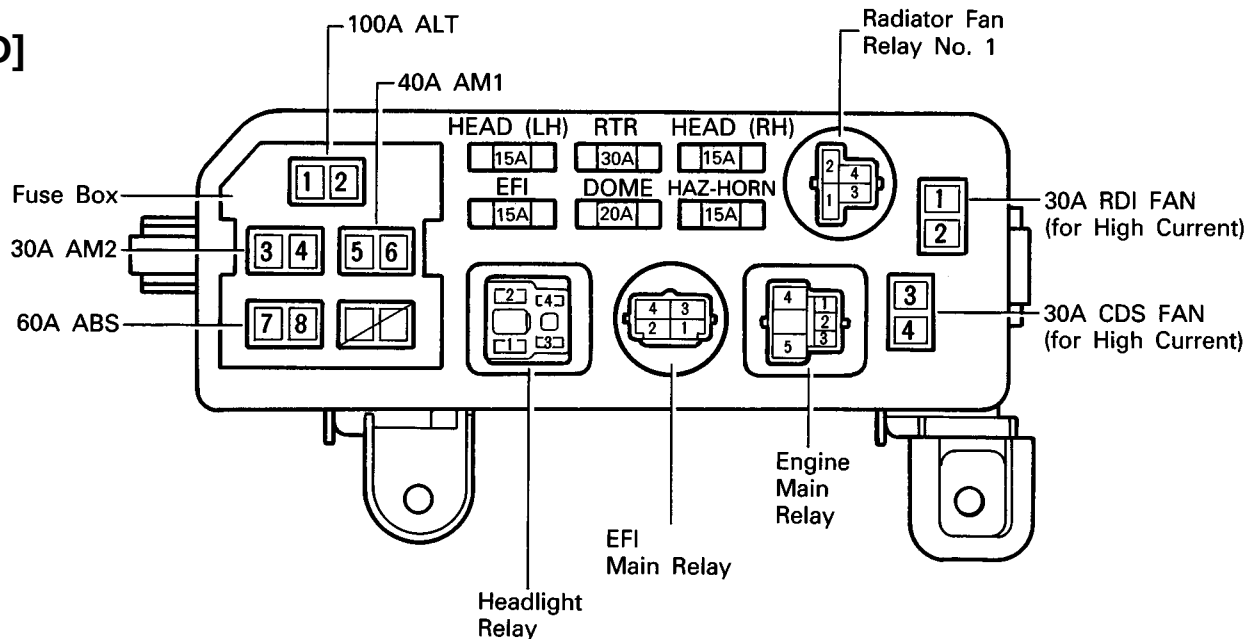


[All-Trac/4WD]

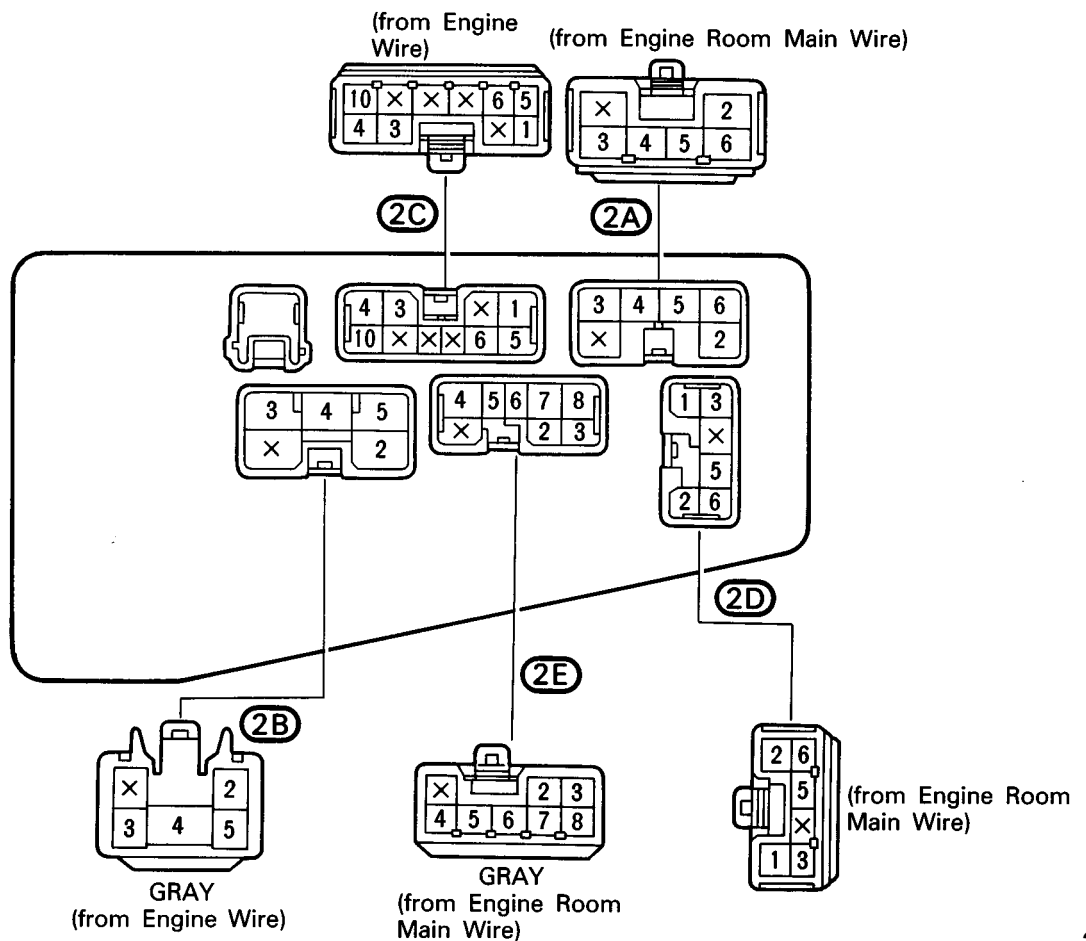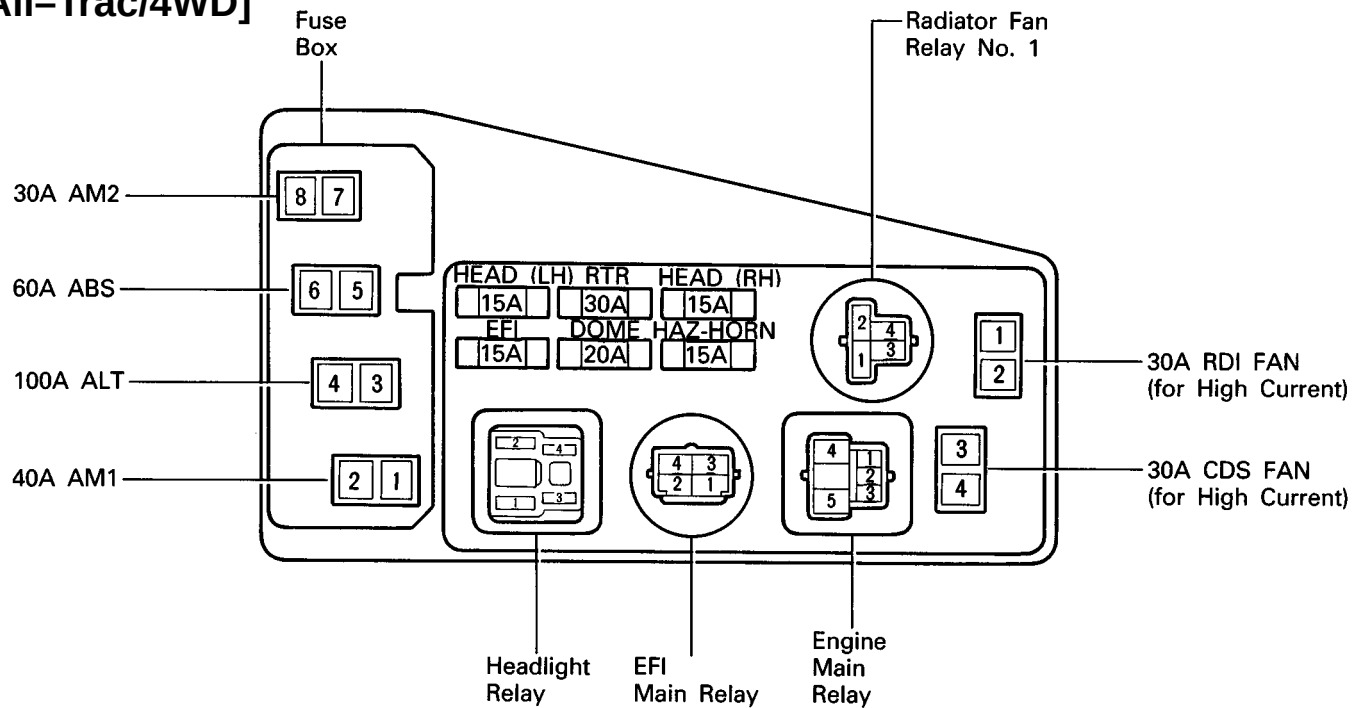


RELAY LOCATIONS

[J/B No. 2 Inner Circuit]

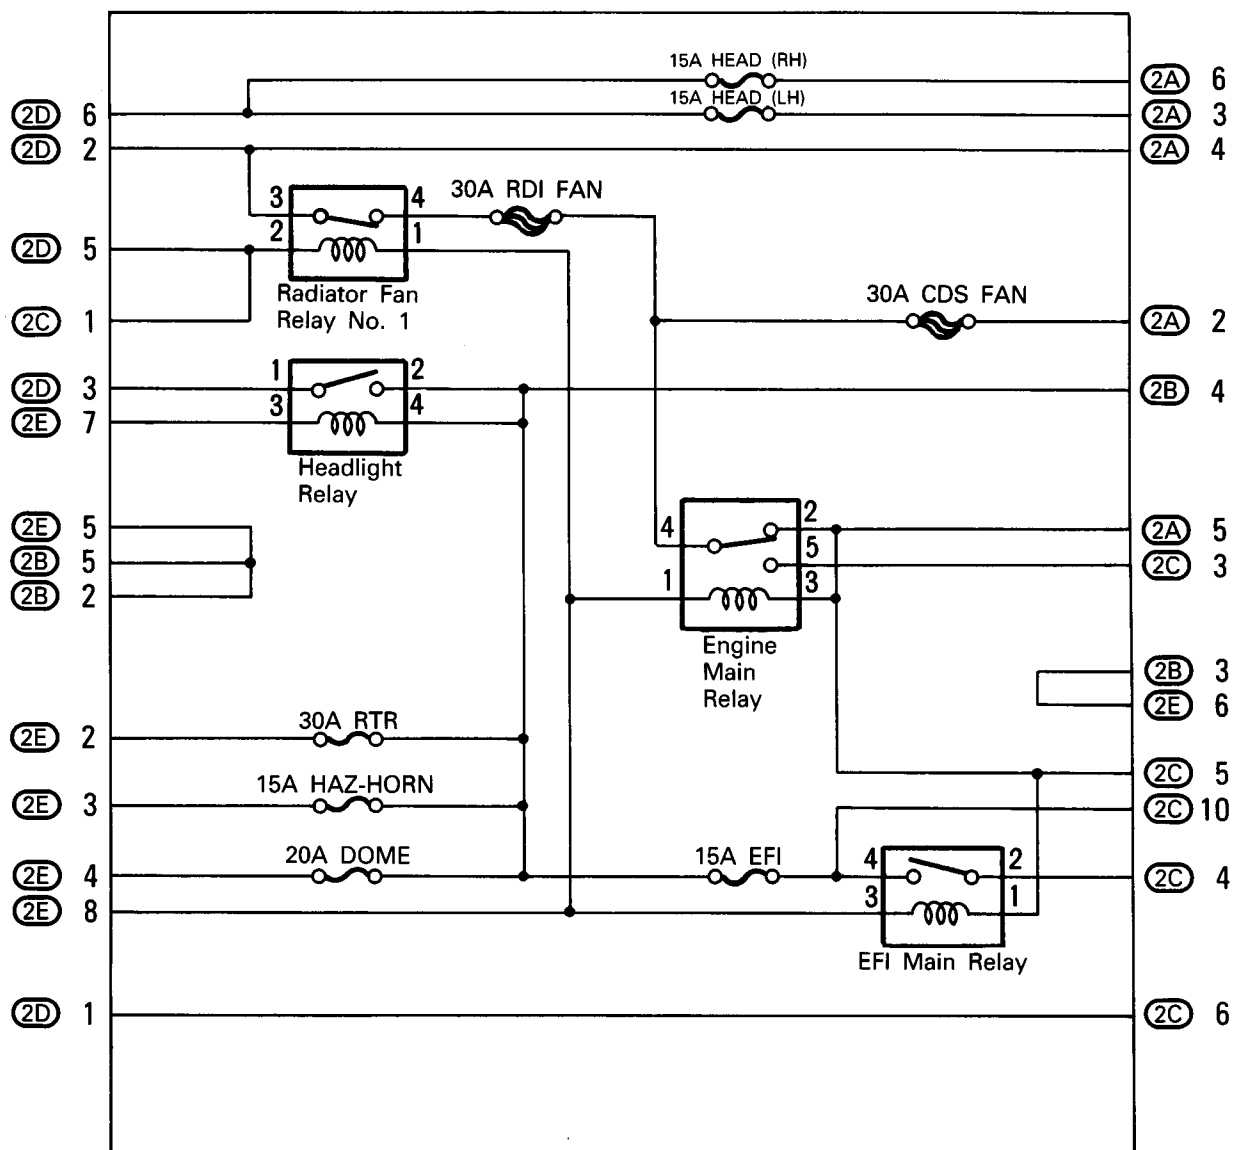


○ : J/B No. 3

Behind Combination Meter (See Page 18)

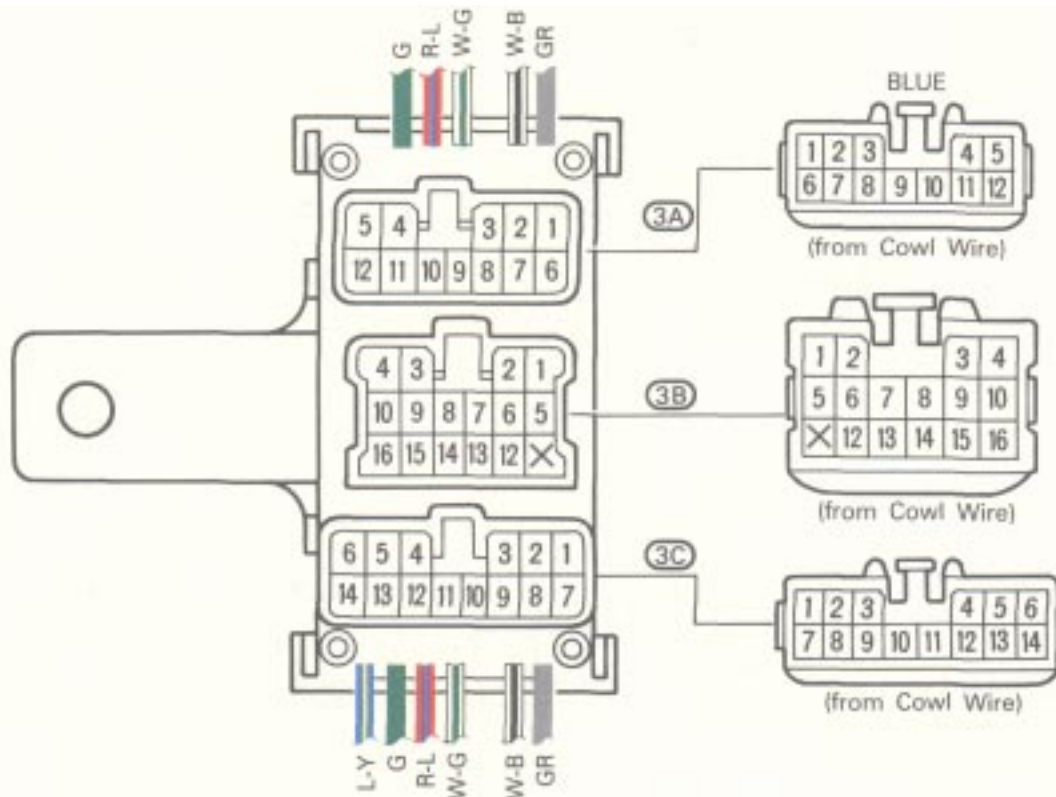


[J/B No. 3 Inner Circuit]

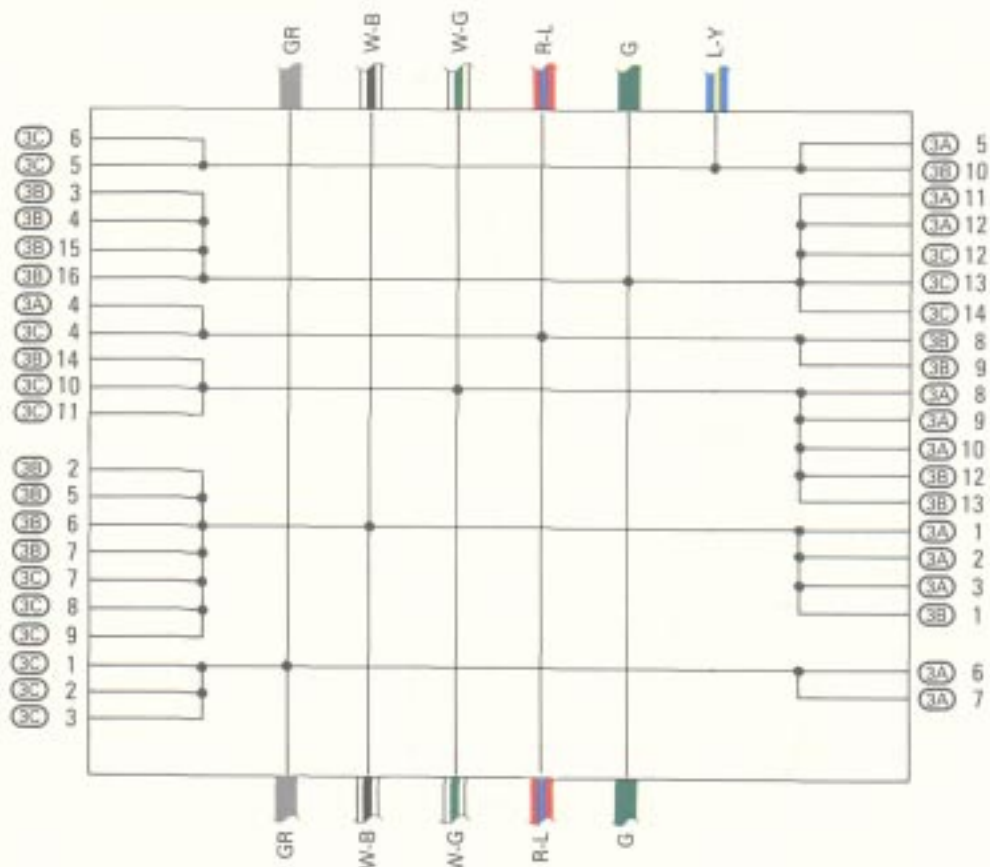


RELAY LOCATIONS

② : R/B No. 2	Left Kick Panel	(See Page 18)
---------------	-----------------	---------------

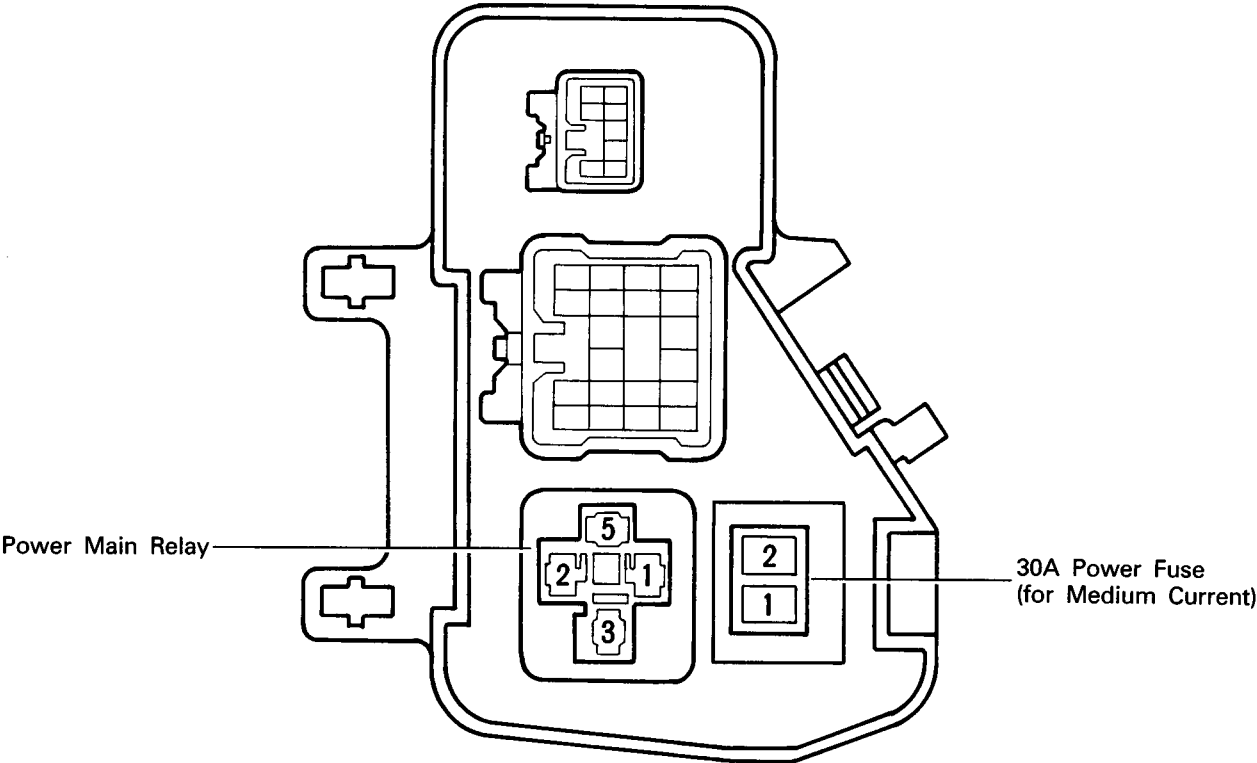


③ : R/B No. 3	Right Kick Panel	(See Page 18)
---------------	------------------	---------------

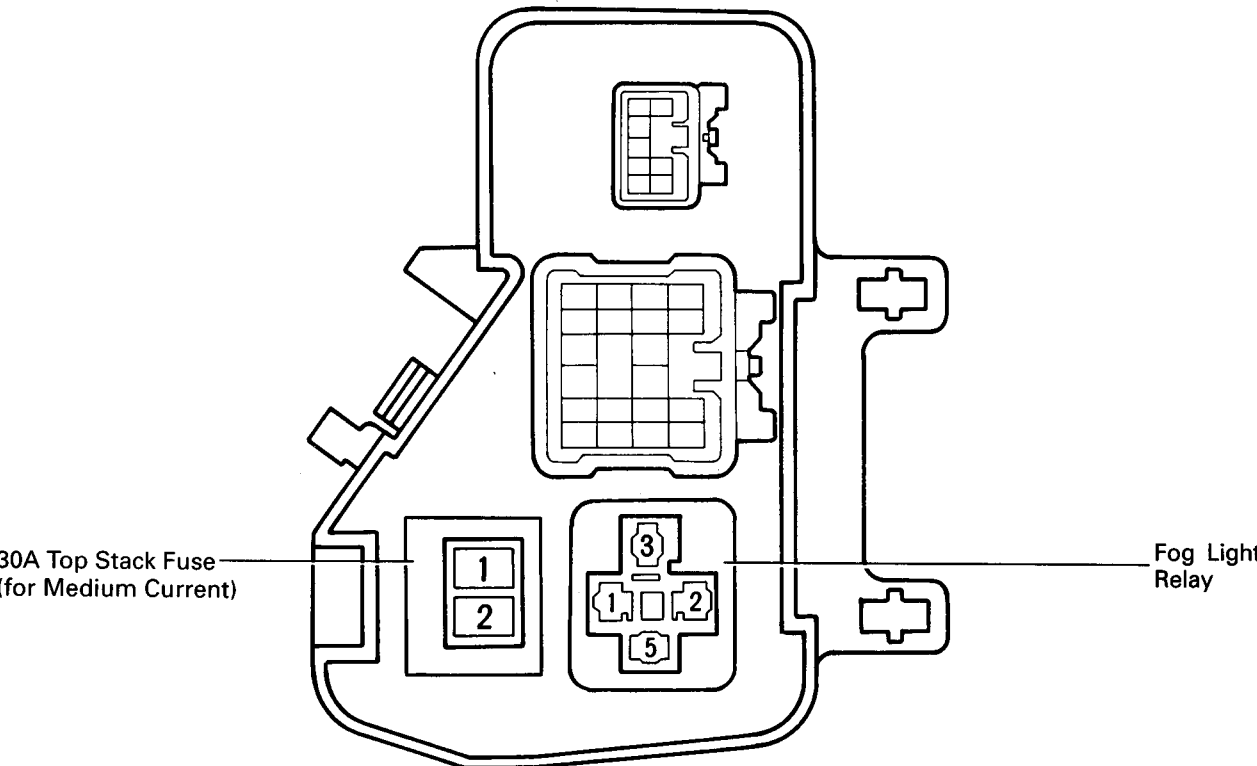

④ : R/B No. 4

Right Kick Panel (See Page 18)

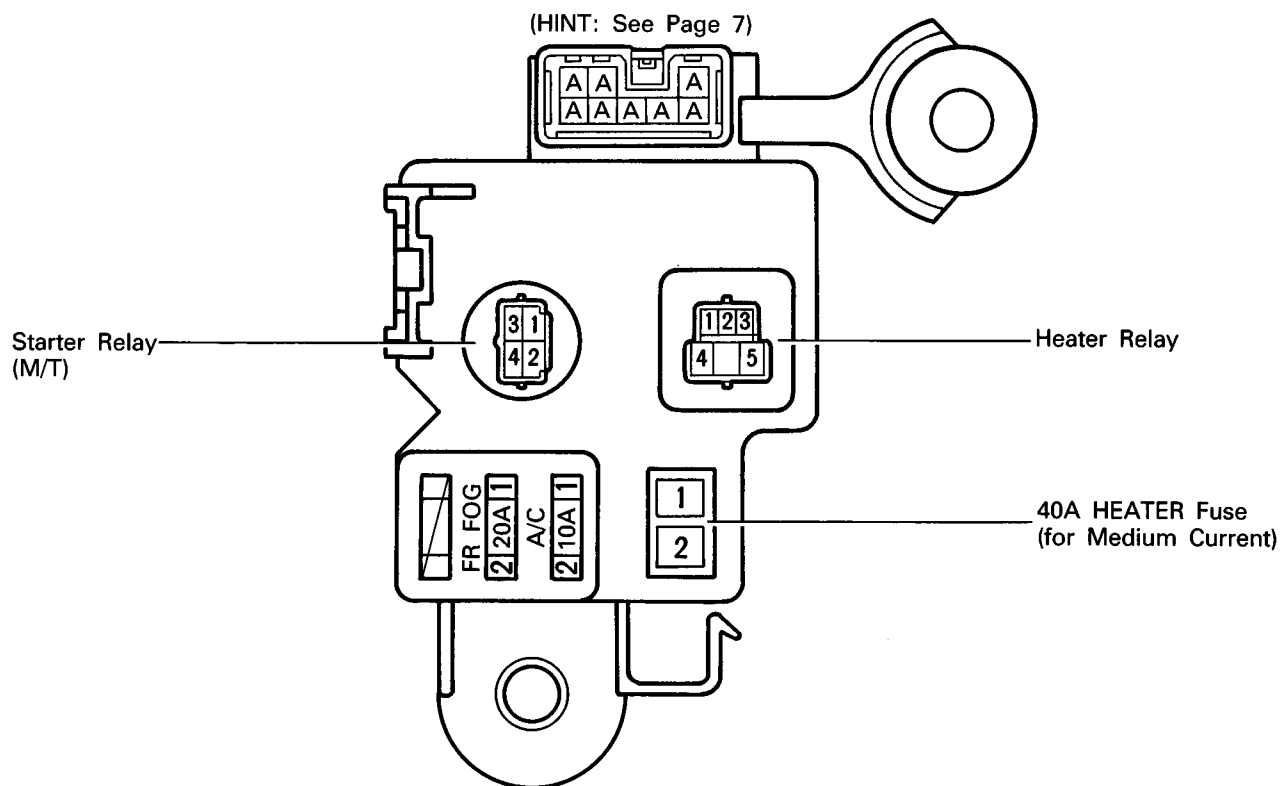

⑤ : R/B No. 5

Engine Compartment Front Right (See Page 18)

