


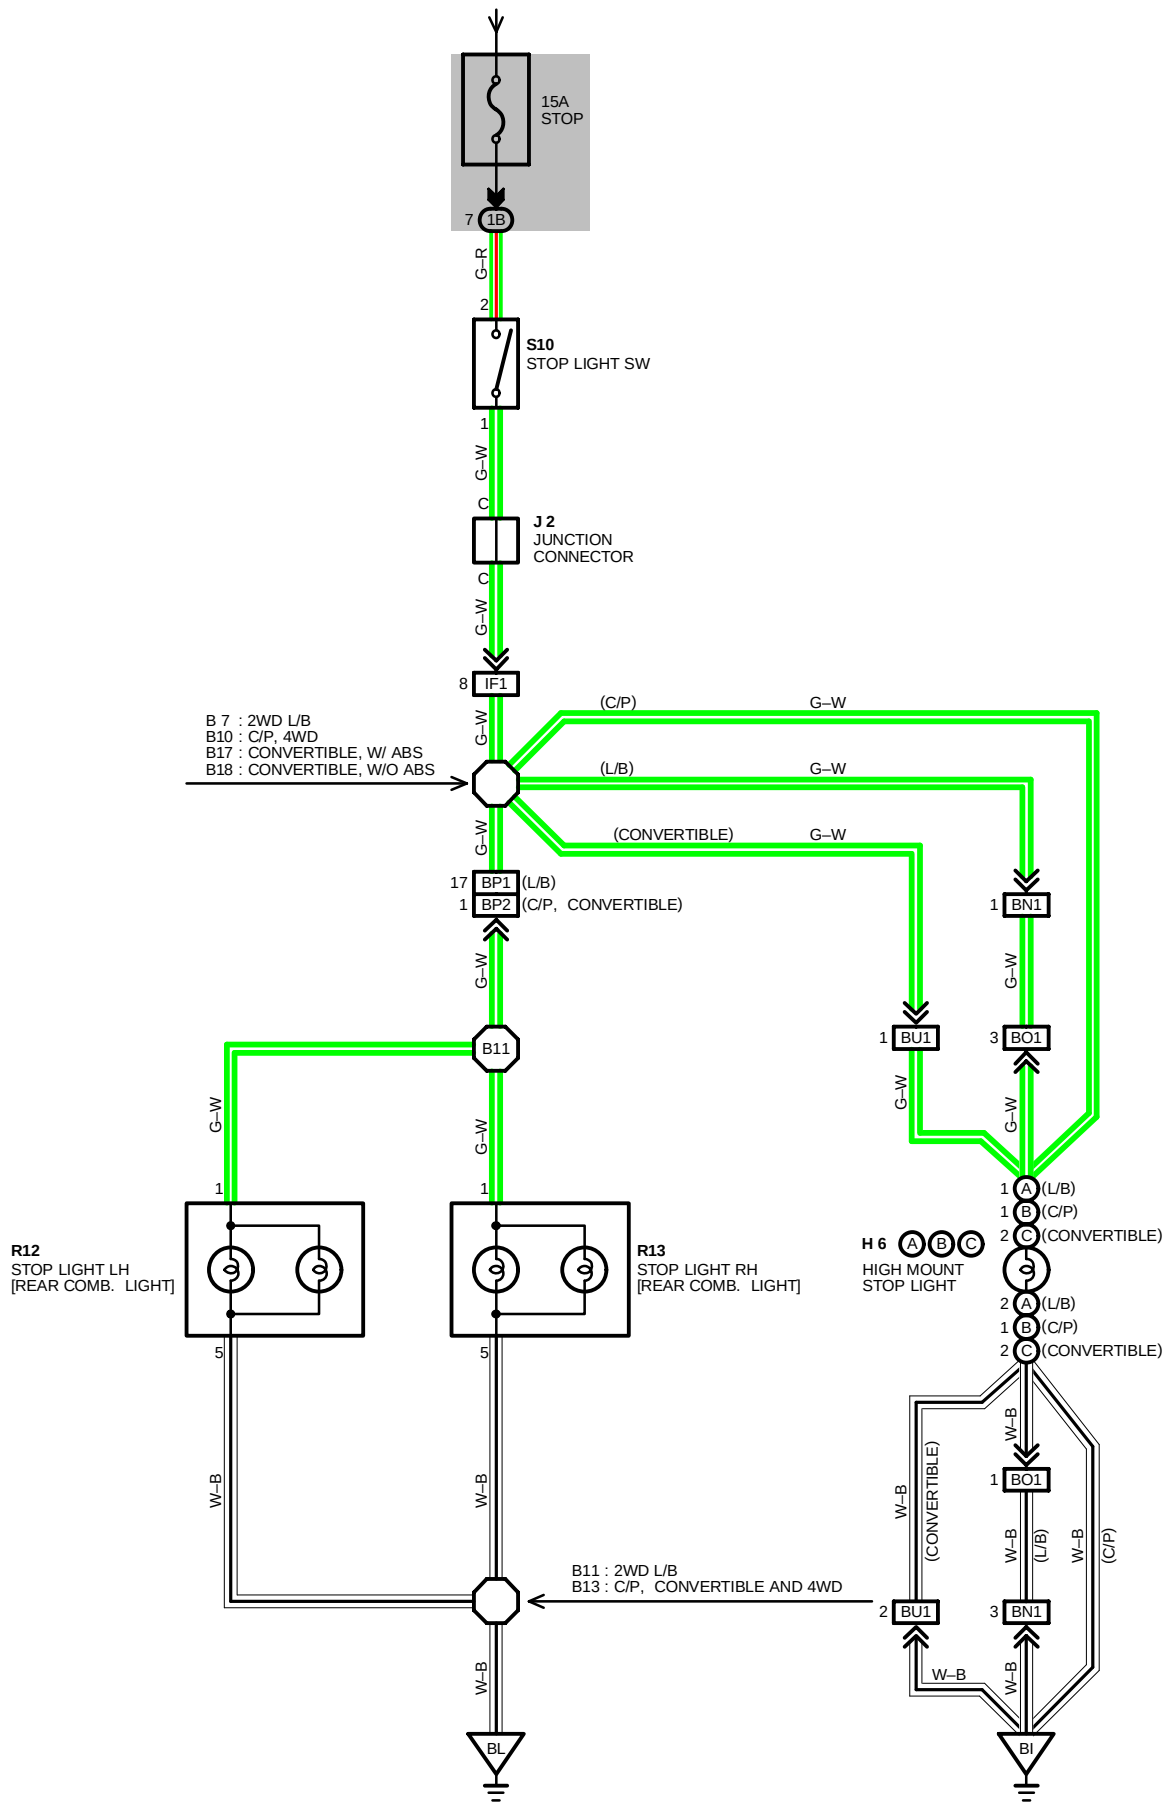

SERVICE HINTS

S10 STOP LIGHT SW

1-2: CLOSED WITH BRAKE PEDAL DEPRESSED

○ : PARTS LOCATION

CODE		SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
H 6	A	34 (L/B)	J 2	33	R10	33
	B	35 (C/P)	R12	34 (L/B), 35 (C/P), 36 (CONVERTIBLE)		
	C	36 (CONVERTIBLE)	R13	34 (L/B), 35 (C/P), 36 (CONVERTIBLE)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF1	44	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
BN1	48 (L/B)	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)
BO1	48 (L/B)	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)
BP1	48 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
BP2	50 (C/P)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)
	52 (CONVERTIBLE)	
BU1	50 (C/P)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)
	52 (CONVERTIBLE)	

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BI	48 (L/B)	UNDER THE LEFT CENTER PILLAR
	50 (C/P)	
BL	48 (L/B)	BACK PANEL CENTER
	50 (C/P)	
	52 (CONVERTIBLE)	

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 7	48 (L/B)	FLOOR WIRE	B13	48 (L/B)	LUGGAGE ROOM WIRE
B10	48 (L/B)			50 (C/P)	
	50 (C/P)			52 (CONVERTIBLE)	
B11	48 (L/B)	LUGGAGE ROOM WIRE	B17	52 (CONVERTIBLE)	FLOOR WIRE
	50 (C/P)		B18		
	52 (CONVERTIBLE)				

(L/B) H 6 A




(C/P) H 6 B



(CONVERTIBLE) H 6 C




J 2



(HINT : SEE PAGE 7)

R12, R13



S10

