



TAILLIGHT

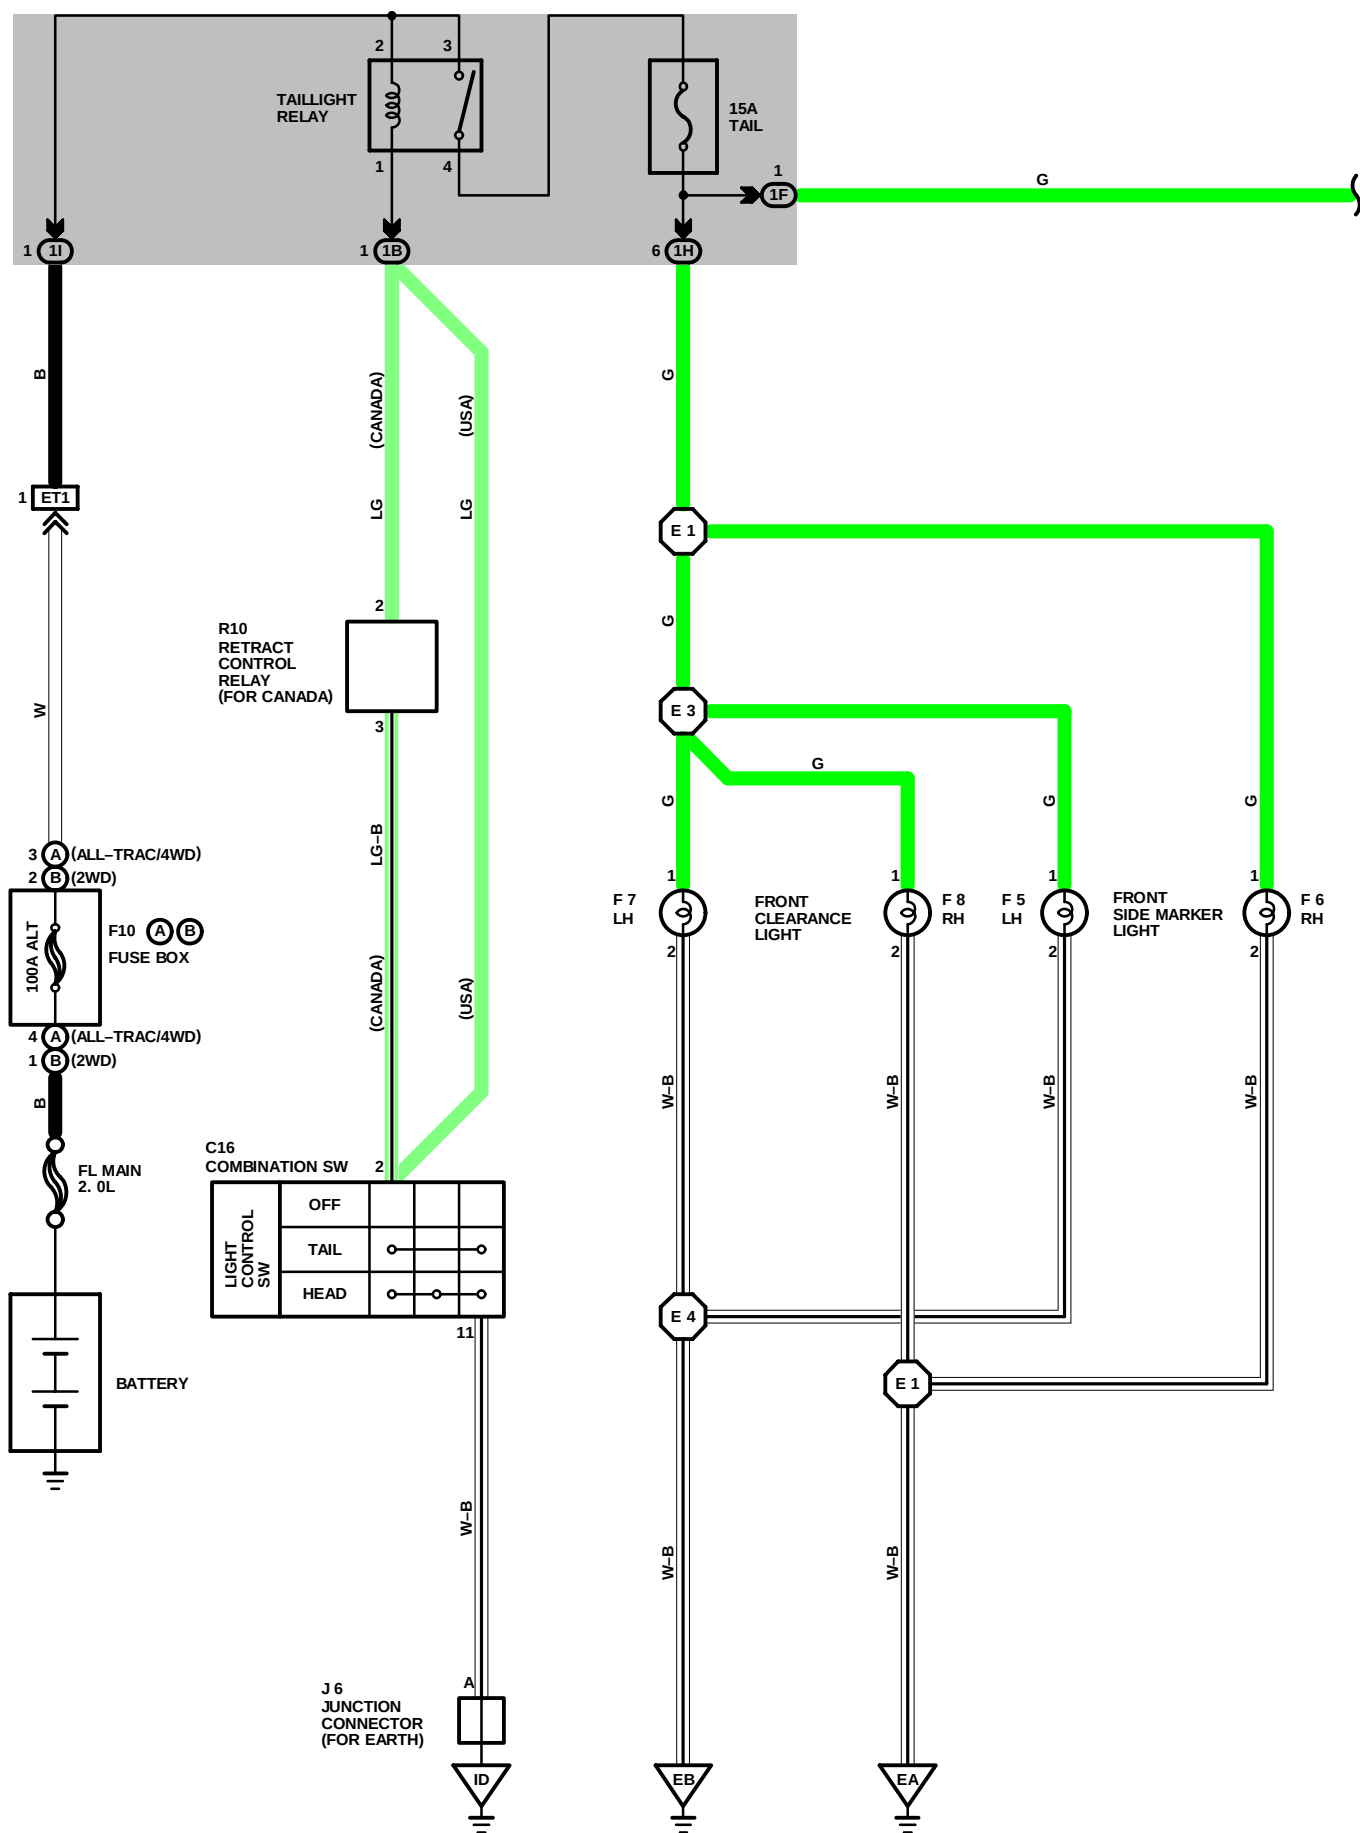

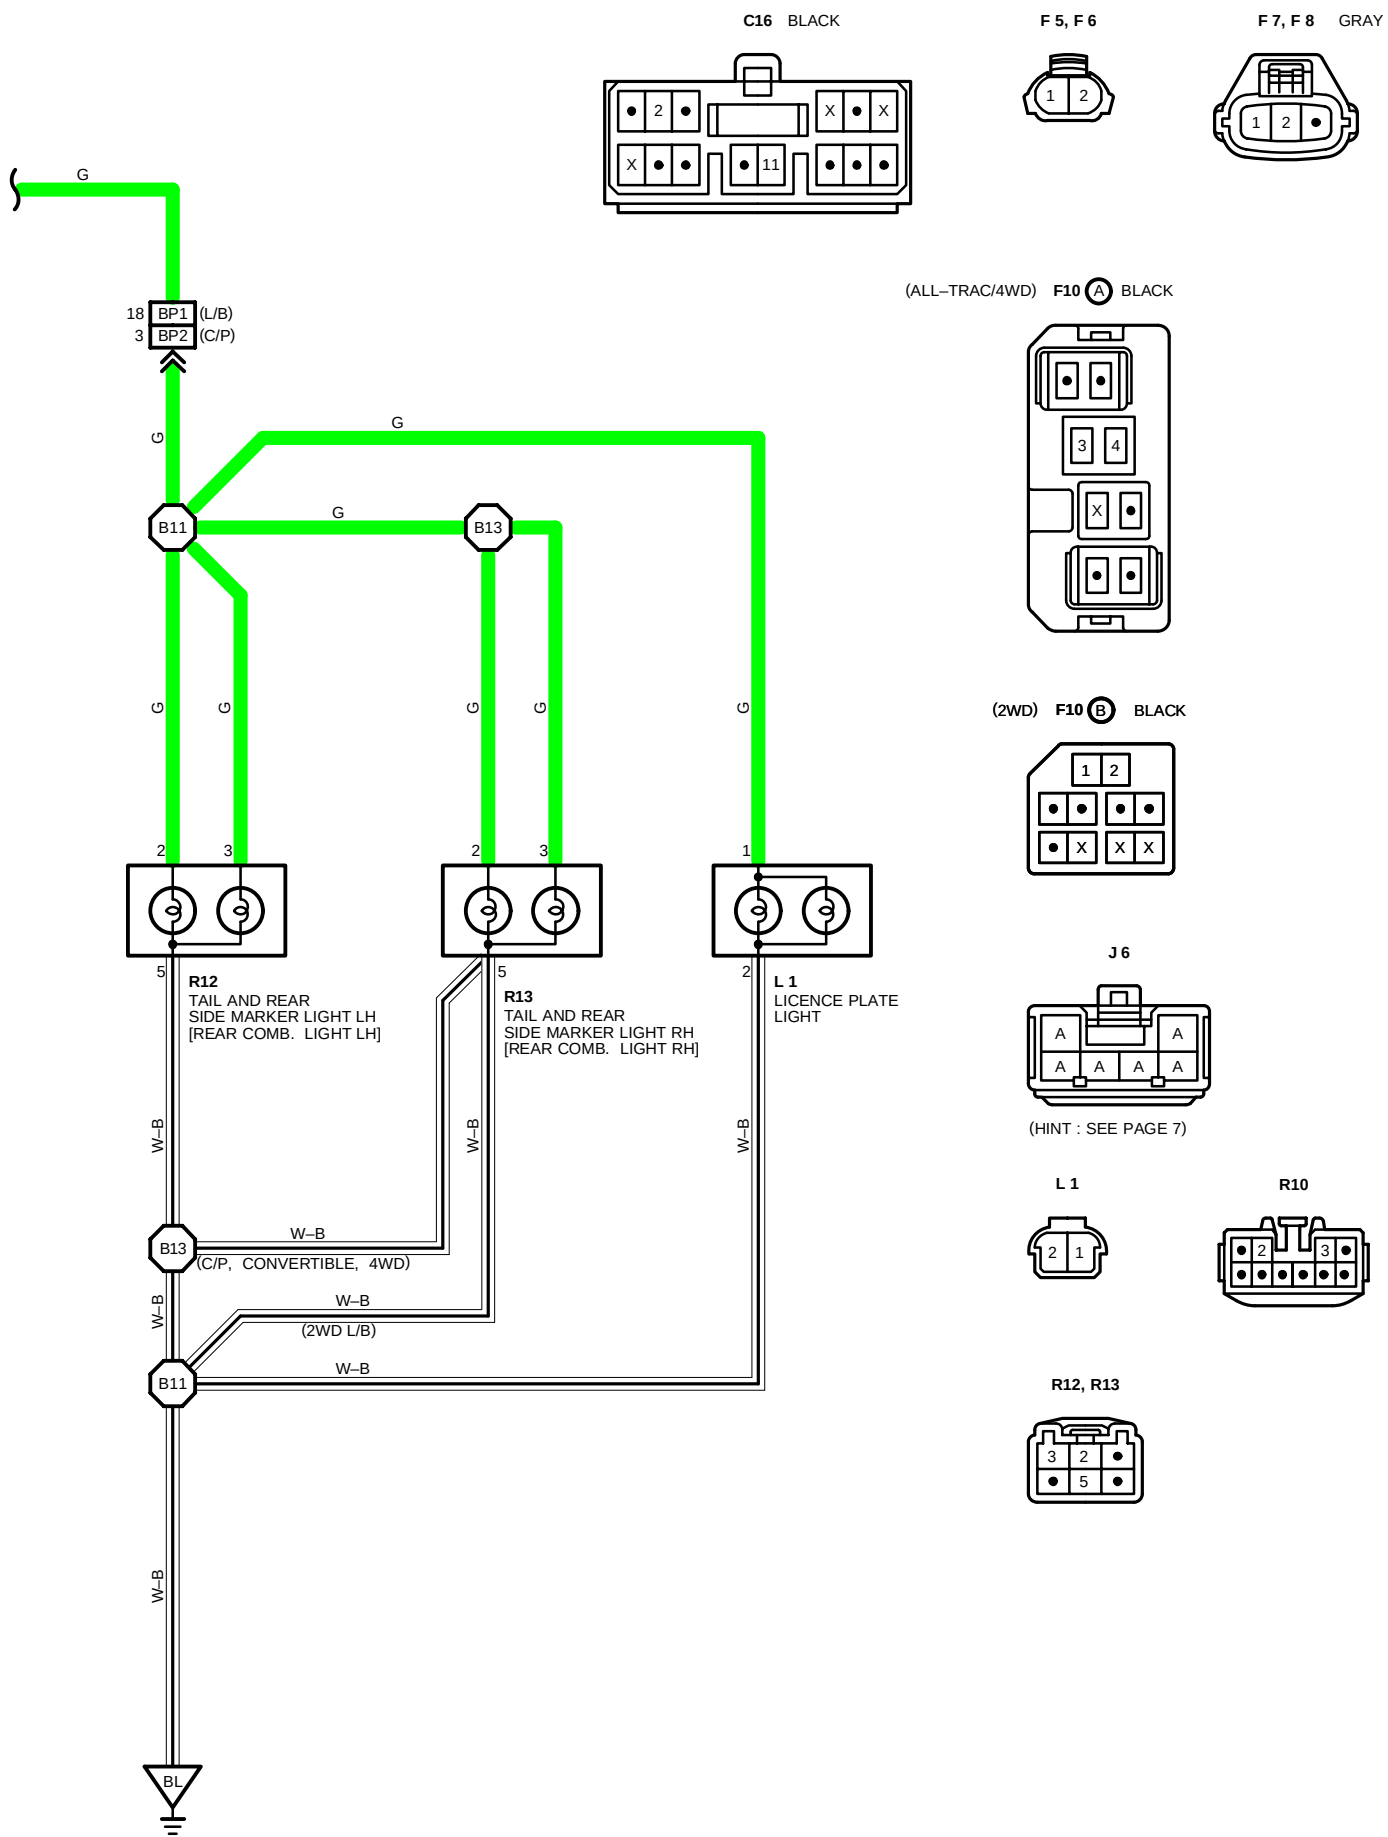

TAILLIGHT

SERVICE HINTS

TAILLIGHT RELAY

3-4 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
CLOSED WITH ENGINE RUNNING AND BRAKE LEVER RELEASED (CANADA)

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C16	32	F 7	31 (4S-FE)	L 1	34 (L/B), 35 (C/P)
F 5	28 (3S-GTE), 30 (5S-FE)	F 8	28 (3S-GTE), 30 (5S-FE)	R10	33
	31 (4S-FE)		31 (4S-FE)	R12	34 (L/B), 35 (C/P)
F 6	28 (3S-GTE), 30 (5S-FE)	F10	28 (3S-GTE)	R13	34 (L/B), 35 (C/P)
	31 (4S-FE)		30 (5S-FE), 31 (4S-FE)		
F 7	28 (3S-GTE), 30 (5S-FE)	J 6	33		

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1F	20	FLOOR WIRE AND J/B NO.1 (LEFT KICK PANEL)
1H	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1I		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ET1	38 (3S-GTE)	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)
	40 (5S-FE)	
	42 (4A-FE)	
BP1	48 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
BP2	50 (C/P)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	38 (3S-GTE)	FRONT RIGHT FENDER
	40 (5S-FE)	
	42 (4A-FE)	
EB	38 (3S-GTE)	FRONT LEFT FENDER
	40 (5S-FE)	
	42 (4A-FE)	
ID	44	LEFT KICK PANEL
BL	48 (L/B)	BACK PANEL CENTER
	50 (C/P)	

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	38 (3S-GTE)	ENGINE ROOM MAIN WIRE	E 4	42 (4A-FE)	ENGINE ROOM MAIN WIRE
	40 (5S-FE)		B11	48 (L/B)	LUGGAGE ROOM WIRE
	42 (4A-FE)			50 (C/P)	
E 3	38 (3S-GTE)			52 (CONVERTIBLE)	
	40 (5S-FE)		B13	48 (L/B)	
	42 (4A-FE)			50 (C/P)	
E 4	38 (3S-GTE)			52 (CONVERTIBLE)	
	40 (5S-FE)				