


TURN SIGNAL AND HAZARD WARNING LIGHT

* 1: ALL-TRAC/4WD

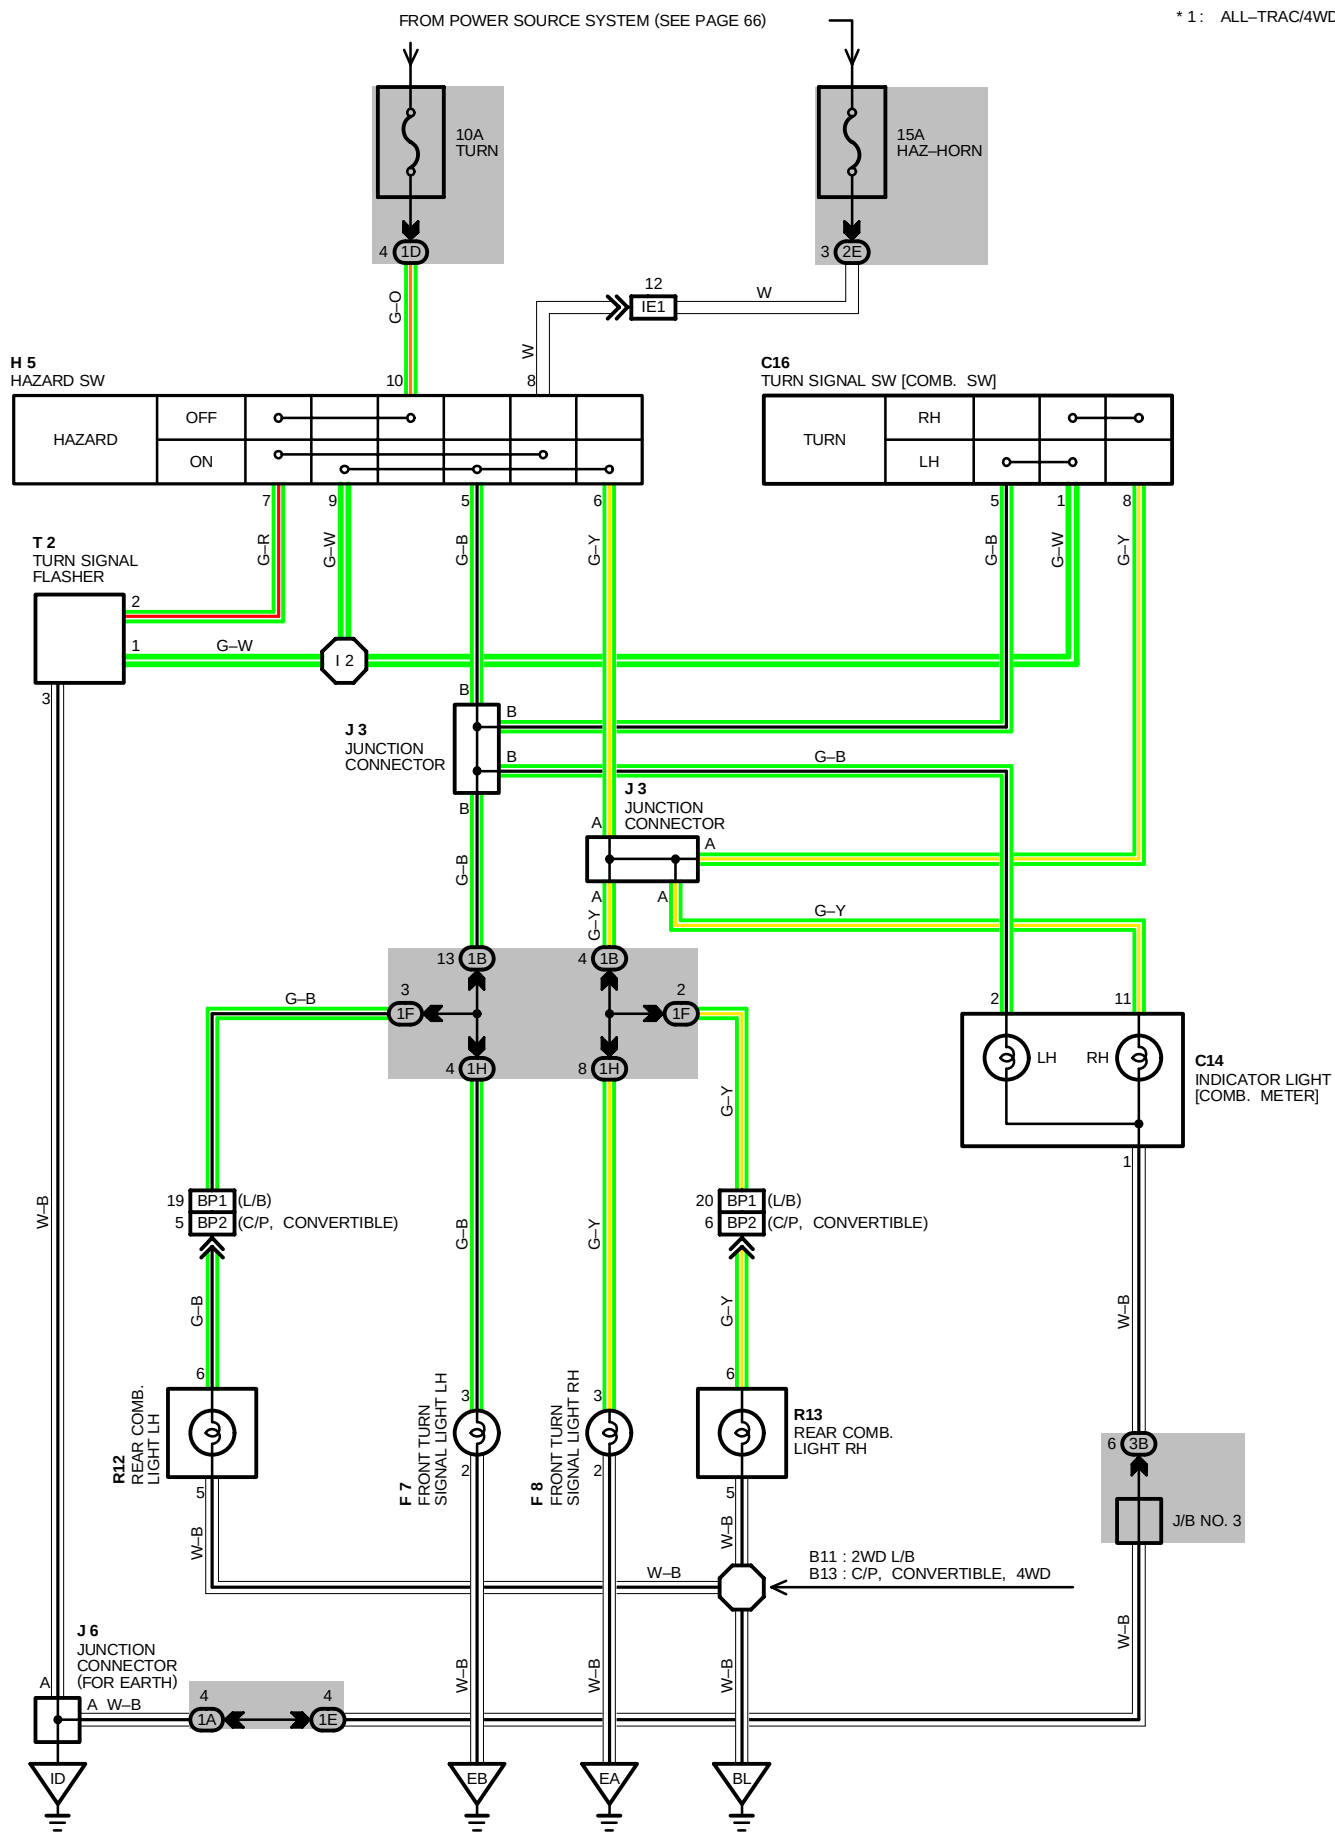

SERVICE HINTS

T 2 TURN SIGNAL FLASHER

- 2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON OR HAZARD SW ON
- 1-GROUND : CHANGES FROM 12 TO 0 VOLTS WITH IGNITION SW ON AND TURN SIGNAL SW LEFT OR RIGHT, OR WITH HAZARD SW ON
- 3-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C14	32	F 8	28 (3S-GTE), 30 (5S-FE)	J 6	33
C16	32		31 (4A-FE)	R12	34 (L/B), 35 (C/P), 36 (CONVERTIBLE)
F 7	28 (3S-GTE), 30 (5S-FE)	H 5	33	R13	34 (L/B), 35 (C/P) 36 (CONVERTIBLE)
	31 (4A-FE)	J 3	33	T 2	33

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1F	20	FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1H	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2E	22 (2WD)	ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY)
	23 (ALL-TRAC/4WD)	
3B	25	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	44	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
BP1	48 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
BP2	50 (C/P)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)
	52 (CONVERTIBLE)	


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	38 (3S-GTE)	FRONT RIGHT FENDER
	40 (5S-FE)	
	42 (4A-FE)	
EB	38 (3S-GTE)	FRONT LEFT FENDER
	40 (5S-FE)	
	42 (4A-FE)	
ID	44	LEFT KICK PANEL
BL	48 (L/B)	BACK PANEL CENTER
	50 (C/P)	
	52 (CONVERTIBLE)	


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2	46	COWL WIRE	B13	46 (L/B), (C/P)	LUGGAGE ROOM WIRE
B11	48 (L/B)	LUGGAGE ROOM WIRE		52 (CONVERTIBLE)	


C14

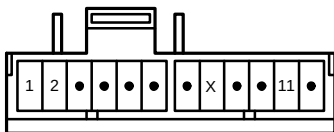


C16 BLACK

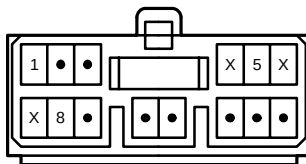


F 7, F 8 GRAY



H 5 BLACK




J 3




(HINT : SEE PAGE 7)

J 6

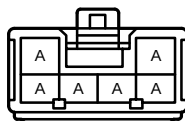

(HINT : SEE PAGE 7)

R12, R13



T 2

